

HPR STOPS.

1. Determine the type of HPR by reading bit positions 100 thru 115 in the upper scale of legend #7 on the display 1 maintenance panel.
2. If the HPR Stop Code explanation requires a SYSDUMP.
 - a. Press 'SYSTEM RESET' and 'RUN' to write SYSDUMP to disk, wait for HPR 9999.
 - b. Reload the same Supervisor by using IPL. Specify 'D' rather than N, A, C, L or H for the Spool recovery option. Specify the same spool volumes that were used before.
 - c. When the listing on the printer of the Spool directories is completed, the following message is displayed.
SPL DEBUG: ENTER SPL DEBUG CMD?
 - d. Reply with 'HALT' which results in the following message.
ENTER SPOOL FILES RECOVERY OPTION (A, C, L, H, N).
 - e. Reply A, C, L, H or N as you normally would at IPL time.
 - f. When the System is ready, run SYSDUMP or SYSDUMPO to print the dump obtained in step a.