

.REM @

IDENTIFICATION

PRODUCT CODE: AC-F612D-MC
PRODUCT NAME: CKKTBD0 11/44 MEM MGMT PRT B
DATE: JANUARY, 1982
MAINTAINER: DIAGNOSTIC ENGINEERING
AUTHOR: DAN P. MILLEVILLE

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

THE SOFTWARE DESCRIBED IN THIS DOCUMENT IS FURNISHED TO THE PURCHASER UNDER A LICENSE FOR USE ON A SINGLE COMPUTER SYSTEM AND CAN BE COPIED (WITH INCLUSION OF DIGITAL'S COPYRIGHT NOTICE) ONLY FOR USE IN SUCH SYSTEM, EXCEPT AS MAY OTHERWISE BE PROVIDED IN WRITING BY DIGITAL.

DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY OF ITS SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL.

COPYRIGHT (C) 1979, 1982 BY DIGITAL EQUIPMENT CORPORATION

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

43
44
45
46
47
48
49
50
51
52
53
54
55

PROGRAM HISTORY

DATE	REVISION	REASON FOR REVISION
OCTOBER, 1979	A	FIRST RELEASE
DECEMBER, 1979	B	ADDITION OF 'CSM' TEST 35
APRIL, 1981	C	USING NEW SYSMAC WITH ^Q CHECKS AND BIT CHECK OF THE POWER MONITOR BIT OF CPUERR REGISTER. MODIFIED CODE TO ACCOMODATE ECO # 8.
JANUARY, 1982	D	ECO # 8 WAS MODIFIED, CODE CHANGED TO REFLECT THE MODIFICATION.

56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88

TABLE OF CONTENTS

1.0	PROGRAM INFORMATION
1.1	ABSTRACT
1.2	REQUIREMENTS
1.3	RELATED DOCUMENTS AND STANDARDS
1.4	PRELIMINARY PROGRAMS
2.0	OPERATING INSTRUCTIONS
2.1	LOADING PROCEDURES
2.2	STARTING PROCEDURES
2.3	OPERATIONAL SWITCH SETTINGS
2.4	LOADING THE SWITCH REGISTER
2.5	EXECUTION TIMES
3.0	ERROR INFORMATION
3.1	ERROR REPORTING PROCEDURES
3.2	INTERPRETING ERROR REPORTS
3.3	SAMPLE ERROR REPORT
3.4	POWER MONITOR BIT ERRORS
4.0	MISCELLANEOUS INFORMATION
4.1	ACT/APT/XXDP COMPATABILITY
4.2	END-OF-PASS MESSAGE
4.3	T-BIT TRAPPING
4.4	POWER FAILURE HANDLING
4.5	PHYSICAL BUS ADDRESS CONSTRUCTION
5.0	PROGRAM DESCRIPTION
5.1	SUBROUTINES USED BY THIS PROGRAM
5.2	PROGRAM LISTING
5.3	USING THE PROGRAM TO DIAGNOSE A FAULT

90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140

1.0 PROGRAM INFORMATION

1.1 ABSTRACT

THIS PROGRAM WAS DESIGNED USING A 'BOTTOM UP' APPROACH STARTING WITH THE SMALLEST SEGMENT OF MEMORY MANAGEMENT LOGIC POSSIBLE AND BUILDING TO COVER ALL OF THE LOGIC. THE DIAGNOSTIC WILL PROVIDE ENOUGH INFORMATION SUCH THAT BY DEDUCTION, THE FAILURE CAN BE ISOLATED TO A SMALL SEGMENT OF THE MEMORY MANAGEMENT LOGIC.

PART A BEGINS BY TESTING SOME OF THE INTERNAL CPU DATA AND ADDRESS PATHS AND ADDRESS DETECTION LOGIC, THEN WORKS OUTWARD THROUGH THE MEMORY MANAGEMENT REGISTERS. AFTER THE REGISTERS ARE FOUND TO BE USEABLE, RELOCATION (CONSTRUCTION OF PHYSICAL ADDRESSES FROM A VIRTUAL ADDRESS AND THE ASSOCIATED PAR/PDR INFORMATION) IS TESTED. PART B BEGINS BY TESTING THE ABORT AND STATUS SEGMENTS OF LOGIC. PART B THEN CHECKS THE SPECIAL ABORT SEQUENCES, THE MFPI/HTPI INSTRUCTIONS AND THE CSM INSTRUCTION.

1.2 REQUIREMENTS

A PDP 11/44 PROCESSOR WITH A MINIMUM OF 16K OF MEMORY AND A CONSOLE TERMINAL ARE REQUIRED TO RUN THE PROGRAM UNLESS THE PROGRAM IS RUNNING UNDER APT OR ACT IN WHICH CASE THE CONSOLE TERMINAL IS NOT NECESSARY.

1.3 RELATED DOCUMENTS AND STANDARDS

1. ACT11/XXDP PROGRAMMING SPECIFICATION
2. STANDARD APT SYSTEM TO A PDP11 DIAGNOSTIC INTERFACE
3. DIAGNOSTIC ENGINEERING STANDARDS AND CONVENTIONS
4. PDP11 MAINDEC SYSMAC PACKAGE
5. XADP USER'S MANUAL

1.4 PRELIMINARY PROGRAMS

BEFORE THIS MEMORY MANAGEMENT DIAGNOSTIC IS RUN, THE FOLLOWING DIAGNOSTICS SHOULD BE RUN:

CKKAAA0 11/4 CPU/EIS
CKKABA0 TRAPS

ALSO, THE MAIN MEMORY DIAGNOSTIC (CZMSD) SHOULD BE RUN TO SCAN AT LEAST THE FIRST 16K TO SEE THAT A PROGRAM CAN BE EXECUTED.

141 2.0 OPERATING INSTRUCTIONS

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

2.1 LOADING PROCEDURES

THE PROGRAM IS SUPPLIED ON THE DIAGNOSTIC LOAD MEDIA. REFER TO THE XXDP USER'S MANUAL FOR FURTHER INFORMATION. FOR USE WITH AC1 OR APT, REFER TO THEIR RESPECTIVE DOCUMENTS. THE PROGRAM CAN ALSO BE DIRECTLY LOADED USING THE ABSOLUTE LOADER AND THE BINARY PAPER TAPE.

2.2 STARTING PROCEDURES

THE PROGRAM IS STARTED BY LOADING ADDRESS 200 AND STARTING. THE SWITCH REGISTER SHOULD BE SET ACCORDING TO SECTION 2.3 BEFORE THE PROGRAM IS STARTED. HOWEVER, IF DESIRED, THE PROGRAM WILL USE THE SOFTWARE SWITCH REGISTER AT LOCATION 176 (LOCATION 174 WILL BE USED AS THE SOFTWARE DISPLAY REGISTER). IN THAT CASE, THE PROGRAM WILL ASK FOR THE INITIAL SWITCH REGISTER VALUE BY TYPING 'SWR= XXXXXX NEW= ' AFTER TYPING THE NAME OF THE PROGRAM (XXXXXX = THE OCTAL CONTENTS OF LOCATION 176). (SEE SECTION 2.4)

ALSO THE PROGRAM CAN BE MADE TO USE THE SOFTWARE SWITCH REG. EVEN IF THE CONSOLE SWITCH REG. IS PRESENT BY LOADING '177777' INTO THE CONSOLE SWITCH REG. BEFORE STARTING THE PROGRAM.

```

170          2.3  CONTROL SWITCH SETTINGS
171          -----
172
173          SWITCH  OCTAL VALUE  USE
174          -----
175          SW15    100000      HALT ON ERROR
176
177          THIS SWITCH WHEN SET WILL HALT
178          THE PROCESSOR WHEN AN ERROR IS
179          DETECTED AFTER THE ERROR MESSAGE
180          HAS BEEN TYPED. PRESSING CONTINUE
181          WILL RESUME TESTING (SEE SECTION
182          3.1 ABOUT LOADING THE SWITCH REG
183          BEFORE CONTINUING).
184
185          SW14    040000      LOOP ON TEST
186
187          THIS SWITCH WHEN SET WILL
188          CAUSE THE PROGRAM TO LOOP ON
189          THE CURRENT SUBTEST.
190
191          SW13    020000      INHIBIT ERROR TYPEOUTS
192
193          THIS SWITCH WHEN SET WILL
194          INHIBIT THE TYPING OF ERROR
195          MESSAGES.
196
197          SW12    010000      INHIBIT TRACE TRAP
198
199          THIS SWITCH WHEN SET WILL
200          INHIBIT T-BIT TRAPPING WHICH
201          NORMALLY TAKES PLACE DURING
202          EVERY OTHER PASS STARTING
203          WITH THE THIRD PASS.
204
205          SW10    002000      BELL ON ERROR
206
207          THIS SWITCH WHEN SET WILL RING
208          THE CONSOLE TERMINAL BELL WHEN
209          AN ERROR HAS BEEN DETECTED.
210
211          SW9     001000      LOOP ON ERROR
212
213          THIS SWITCH WHEN SET WILL
214          CAUSE THE PROGRAM TO LOOP ON THE
215          FIRST FAILURE WHICH IS ENCOUNTERED
216          EVEN IF THE FAILURE IS INTERMITTANT
217
218          SW8     000400      LOOP ON TEST IN SWR<7:0>
219
220          THIS SWITCH WHEN SET WILL
221          CAUSE THE PROGRAM TO LOOP ON THE
222          TEST WHOSE TEST NUMBER IS SET
223          IN BITS 7-0 OF THE SWITCH REG.

```

217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265

2.4 LOADING THE SWITCH REGISTER

THE CONSOLE SWITCH REGISTER PROVIDED IS LOADED DIRECTLY FROM THE CONSOLE BY TYPING A CONTROL P (^P), THEN WHEN THE CONSOLE PROMPT IS RECEIVED, TYPE 'D SW XXXXXX', WHERE 'XXXXXX' IS THE INTENDED VALUE OF THE SWITCH REGISTER. THE VALUE OF THE CONSOLE SWITCH REG. CAN BE CHANGED ANY TIME WHETHER THE PROGRAM IS RUNNING OR NOT.

TO LOAD THE SOFTWARE SWITCH REG. WHILE THE PROGRAM IS RUNNING, A CONTROL G (^G) SHOULD BE TYPED ON THE CONSOLE TERMINAL. (THE "SCOPE" AND "ERROR" ROUTINES CHECK TO SEE IF A ^G HAS BEEN TYPED.) THE ORIGINAL VALUE OF THE SOFTWARE SWITCH REG. WILL BE REQUESTED AS MENTIONED IN SECTION 2.2.

IN RESPONSE TO A ^G OR AT THE BEGINNING OF THE PROGRAM, THE PROGRAM WILL TYPE:

SWR = XXXXXX NEW =

WHERE 'XXXXXX' IS THE CURRENT OCTAL CONTENTS OF LOC. 176. THE OPERATOR MAY THEN TYPE ANY ONE OF THE FOLLOWING:

XXXXXX<CR> ONE TO SIX OCTAL DIGITS FOLLOWED BY A CARRIAGE RETURN WHICH WILL BE LOADED AS THE NEW VALUE FOR THE SWITCH REG.
<CR> JUST A <CR>, LEAVES THE SWITCH REG. AS IT IS.
XXX^U A CONTROL-U (^U) WILL CAUSE ALL OF THE DIGITS TYPED SO FAR TO BE IGNORED.
^C WILL CAUSE THE PROGRAM TO TYPE THE PRESENT TEST AND PASS NUMBERS, REQUEST A NEW VALUE FOR THE SWITCH REG., AND JUMP TO THE END-OF-PASS ROUTINE SO THE PROGRAM WILL GO DIRECTLY TO THE NEXT PASS WITH A NEW SW. REG. VALUE
<ILL.CHAR> ANY CHARACTER TYPED WHICH IS NOT ANY OF THE ABOVE OR AN OCTAL DIGIT WILL CAUSE THE PROGRAM TO TYPE A '?<CRLF>' AND REACT AS THOUGH A ^U HAD BEEN TYPED.

NOTE: RECOGNITION OF A ^G MAY BE HAMPERED BY
----- EXFLUTION OF A COUPLE 'RESET' INSTRUCTIONS
WITHIN THE PROGRAM.

2.5 EXECUTION TIMES

THE RUN TIME FOR A SINGLE PASS WITH TRACE TRAPPING ENABLED IS APPROXIMATELY 5 SECONDS WITH CACHE.

266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312

3.0 ERROR INFORMATION

3.1 ERROR REPORTING PROCEDURES

IF AN ERROR IS DETECTED, THE PROGRAM WILL TRAP TO THE ERROR HANDLING ROUTINE (\$ERROR). THE VALUE OF BITS 15, 13, 10, AND 9 IN THE SWITCH REGISTER ARE CONSIDERED IN REPORTING AN ERROR (SEE SECTION 2.3). THE ERROR INFORMATION WILL BE TYPED UNLESS SW13 = 1.

IF SW15 = 1, THE PROCESSOR WILL HALT AFTER THE ERROR IS REPORTED. IF THE CONTENTS OF THE SOFTWARE SWITCH REGISTER ARE TO BE CHANGED, A ^G SHOULD BE TYPED BEFORE PRESSING "CONTINUE" TO RESUME TESTING.

IF SW9 = 1 (LOOP ON ERROR), THE PROGRAM WILL GO TO THE ADDRESS CONTAINED IN LOCATION "\$LPERR". AFTER REPORTING THE ERROR, "\$LPERR" IS SET BY EACH "SCOPE" CALL AND IS SET DIRECTLY DURING SOME SUBTESTS TO PROVIDE THE SMALLEST LOOP FOR LOOPING ON ERROR. IF SW9 = 0, THE PROGRAM WILL RETURN TO THE INSTRUCTION FOLLOWING THE ERROR CALL. (SEE SECTION 5.3 FOR MORE ON "LOOP ON ERROR").

3.2 INTERPRETING ERROR REPORTS

EVERY ERROR REPORT TYPES THE NUMBER OF THE TEST IN WHICH THE ERROR TOOK PLACE (TESTNO) AND THE LOCATION OF THE ERROR CALL (ERRORPC). THESE TWO VALUES PINPOINT THE PLACE IN THE CODE THAT THE ERROR OCCURRED. BY REFERRING TO THE PROGRAM LISTING, THE OPERATOR CAN THEN READ THE COMMENTS ASSOCIATED WITH THAT PARTICULAR ERROR AND SUBTEST. A DESCRIPTION OF THE TEST FOUND IN THE PROGRAM LISTING WILL ALSO PROVIDE THE OPERATOR WITH INFORMATION ON THE LOGIC AND FUNCTIONS BEING TESTED.

EVERY ERROR REPORT ALSO TYPES AN ERROR MESSAGE GIVING A VERBAL DESCRIPTION OF THE ERROR THAT HAS BEEN DETECTED.

BY USING THE COMMENTS AND TEST DESCRIPTION FOUND IN THE PROGRAM LISTING TO DETERMINE WHAT FUNCTION OR LOGIC WAS BEING TESTED, THE OPERATOR CAN THEN REFER TO THE ENGINEERING DRAWINGS TO ISOLATE THE PROBABLE CAUSE FOR THE FAILURE.

313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
3483.3 SAMPLE ERROR REPORT

BELOW IS AN EXAMPLE OF AN ERROR WHICH COULD HAVE OCCURRED DURING EXECUTION OF THE PROGRAM:

```
MEM. MGMT. REG. BITS NOT SET CORRECTLY
REGISTR WROTE  READ  READ-(BINARY)
ADDRESS (OCTAL) (OCTAL) 5432109876543210 TESTNO ERRORPC
177572 040000 060000 0110000000000000 000012 022060
```

WE SEE THAT THE ERROR OCCURRED IN TEST 12 AT LOCATION 022060. THE 'REGISTER ADDRESS' TELLS US THAT WE WERE TESTING MEMORY MANAGEMENT'S STATUS REGISTER 0 (SRO). IN THE LISTING, THE TEST DESCRIPTION SAYS THAT THE ERROR BITS (BITS <15:13>) OF SRO WERE BEING SET AND CLEARED INDIVIDUALLY. THE ERROR REPORT SAYS WE TRIED TO SET BIT 14 BY WRITING '040000' TO SRO BUT WHEN WE READ IT BACK WE READ '060000'. IT APPEARS THAT BIT 13 IS STUCK AT '1' OR IT IS GETTING SET WHEN BIT 14 IS SET TO '1'. ERROR REPORTS BEFORE AND AFTER THIS ONE COULD TELL US WHICH IS THE CASE.


3.4 POWER MONITOR BIT ERRORS

WHEN THE POWER MONITOR BIT (BIT 0 OF THE CPU ERROR REGISTER) BECOMES SET DURING THE RUNNING OF THIS DIAGNOSTIC, THE \$SCOPE ROUTINE WILL CALL AN ERROR. IF THE BIT SHOULD BECOME SET AFTER THE \$SCOPE ROUTINE AND BEFORE AN ERROR, AND THE ERROR IS CALLED FOR ANY REASON, THE ERROR ROUTINE WILL CALL *TWO* ERRORS. THE FIRST ERROR WILL BE THE POWER MONITOR BIT ERROR CALL, THEN THE ERROR CALL ORIGINALLY CALLED WILL BE PRINTED. IN ANY CASE, LOOP-ON-ERROR IS DISABLED FOR THIS ERROR ONLY. IT IS RECOMMENDED THAT IF THIS ERROR SHOULD BE CALLED, THAT THE PROBLEM CAUSING THE BIT TO BE SET BE REPAIRED BEFORE RELYING ON THE RESULTS OF RUNNING THIS DIAGNOSTIC.

349 4.0 MISCELLANEOUS INFORMATION
350 -----
351
352 4.1 ACT/APT/XXDP COMPATABILITY
353 -----
354
355 THE PROGRAM IS FULLY ACT AND APT COMPATABLE
356 AND IS SUPPORTED UNDER THE XXDP PACKAGE.
357
358 4.2 END-OF-PASS MESSAGE
359 -----
360
361 AT THE END OF EACH PASS OF THE PROGRAM THE PASS NUMBER
362 AND TOTAL NUMBER OF ERRORS SINCE THE LAST END-OF-PASS ARE
363 REPORTED IN THE END-OF-PASS MESSAGE. FOR EXAMPLE:
364
365 END OF PASS #2 TOTAL ERRORS SINCE LAST REPORT 0
366
367 THAT WOULD INDICATE THAT PASS TWO WAS JUST COMPLETED
368 AND NO ERRORS WERE DETECTED DURING THAT PASS. BOTH
369 THE PASS NUMBER AND NUMBER OF ERRORS ARE DECIMAL NUMBERS.
370
371 4.3 T-BIT TRAPPING
372 -----
373
374 THE "T-BIT" (BIT 4) IN THE PROCESSOR STATUS WORD IS SET
375 BY AN "RTI" IN THE END-OF-PASS ROUTINE FOR EVERY OTHER PASS
376 BEGINNING WITH THE THIRD PASS (PASSES 3,5,7,9...). T-BIT
377 TRAPPING CAN BE INHIBITED BY SETTING BIT 12 = 1 IN THE SWITCH
378 REGISTER (SEE SECTION 2.4).
379
380 4.4 POWER FAILURE HANDLING
381 -----
382
383 IF A POWER FAIL OCCURS (FOLLOWED BY A POWER UP), THE
384 MESSAGE "POWER FAILURE-RESTARTING" IS TYPED OUT AND
385 THE PROGRAM WILL RESTART EXECUTION AT "START:" (THE
386 VERY BEGINNING OF THE PROGRAM. IF THE SOFTWARE
387 SWITCH REGISTER IS BEING USED, ITS CONTENTS WILL BE
388 RESTORED.

4.5 PHYSICAL BUS ADDRESS CONSTRUCTION

BELGW IS A SIMPLIFIED DIAGRAM OF HOW THE MEMORY MANAGEMENT LOGIC CONSTRUCTS A PHYSICAL BUS ADDRESS USING THE VIRTUAL ADDRESS AND THE PAGE ADDRESS REGISTER. THE PAGE DESCRIPTOR REGISTER SELECTED WILL CONTAIN THE PAGE EXPANSION, LENGTH, AND ACCESS INFORMATION.

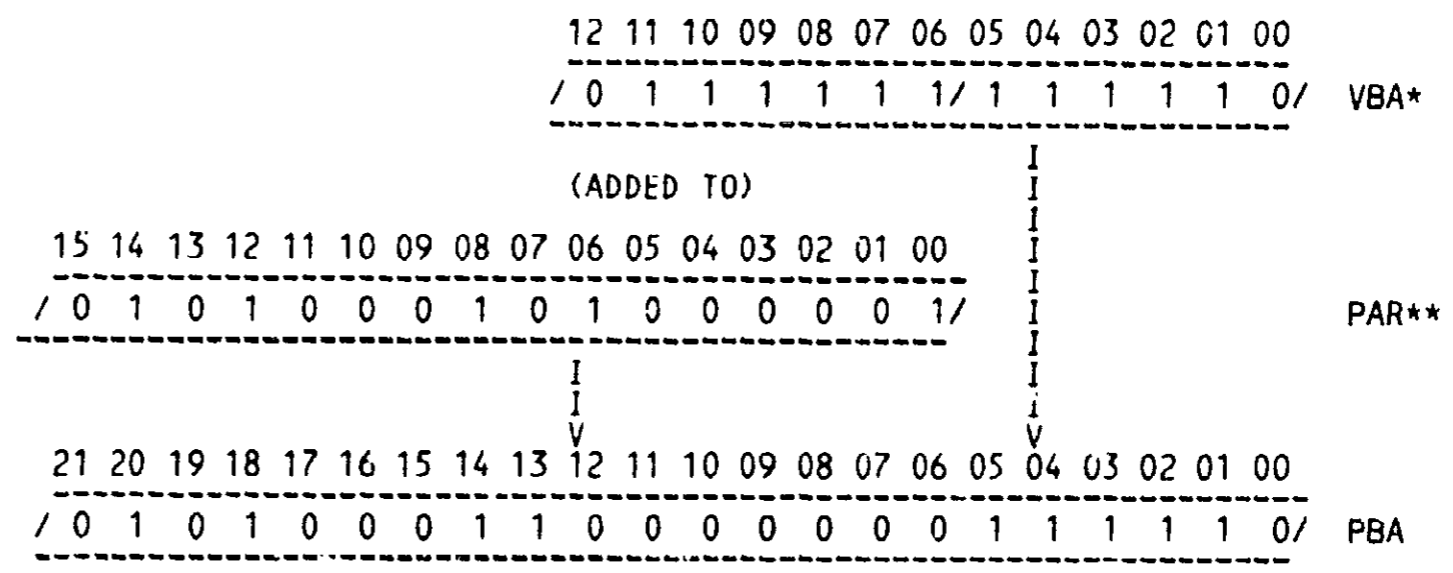

*= VBA BITS <15:13> SELECT THE APPROPRIATE PAR AND PDR
 **= PSW MODE BITS <15:14> SELECTS THE USER (=11), SUPERVISOR (=01) OR KERNEL (=00) SET OF PAR'S/PDR'S

389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419

420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453

5.0 PROGRAM DESCRIPTION

5.1 SUBROUTINES USED BY THIS PROGRAM

FOLLOWING IS A LIST OF THE SUBROUTINES AND HANDLERS USED BY THIS PROGRAM THAT ARE NOT PROVIDED BY THE "SYSMAC PACKAGE". DETAILS OF THE SUBROUTINES UNIQUE TO THIS PROGRAM MAY BE FOUND IN THE PROGRAM LISTING. REFER TO THE "SYSMAC" DOCUMENT AND PROGRAM LISTING FOR THE OTHER ROUTINES.

1. TURN OFF T-BIT AND SAVE CURRENT PSW
2. TURN ON T-BIT AND RESTORE PREVIOUS PSW
3. SET ALL WRITEABLE BITS IN ALL PAR/PDR'S
4. CONVERT VIRTUAL ADDRESS TO PHYSICAL ADDRESS

NOTE ALSO THAT THE MACRO LIBRARY USED TO ASSEMBLE THIS PROGRAM HAS OTHER SPECIAL ROUTINES APPENDED TO THE SYSMAC MACRO PACKAGE; THIS LIBRARY MUST BE USED TO ASSEMBLE EITHER PART A OR PART B CORRECTLY.

5.2 PROGRAM LISTING

A TABLE OF CONTENTS APPEARS AT THE BEGINNING OF THE LISTING WHICH CONTAINS THE NAMES OF EACH SECTION, SUBTEST, AND ROUTINE AND THE LINE NUMBERS CORRESPONDING TO THE START OF EACH.

FOLLOWING THIS SECTION OF DOCUMENTATION IS THE ACTUAL PROGRAM LISTING COMPLETE WITH SUBTEST DESCRIPTIONS AND "CODING COMMENTS".

454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487

5.3 USING THE PROGRAM TO DIAGNOSE A FAULT

WHEN AN ERROR OCCURS, ONE OF THE THINGS THAT'S IMPORTANT TO NOTE IS WHAT PASS THE ERROR OCCURRED ON. IF THE PASS NUMBER IS ODD AND IS THREE OR GREATER, THE ERROR MIGHT BE T-BIT SENSITIVE. TRY RUNNING THE PROGRAM AGAIN WITH BIT 12 OF THE SWITCH REG. EQUAL TO '1' TO INHIBIT T-BIT TRAPPING. THIS SHOULD HELP YOU DETERMINE WHAT MAKES THE MACHINE FAIL AND WHEN.

IF YOU HAVE BEEN RUNNING WITH BIT 15 OF THE SWITCH REG. EQUAL TO '0', THEN YOU ARE ABLE TO LOOK AT ALL THE ERRORS THAT MAY BE RELATED TO THE FAULT YOU ARE DIAGNOSING. A FAULT IN AN EARLIER TEST MAY RESULT IN ERRORS DURING LATER TESTS WHICH MAY GIVE YOU MORE CLUES ABOUT THE NATURE OF THE FAULT. NOW USE THE METHOD OUTLINED IN SECTION 3.2 FOR EACH ERROR TO GATHER AS MUCH INFORMATION AS POSSIBLE.

NOW TO TEST YOUR IDEAS ON THE CAUSE OF THE FAILURE, YOU MAY WANT TO SCOPE THIS ERROR CONDITION. SET BIT 09 OF THE SWITCH REG. EQUAL TO '1' TO LOOP ON THE ERROR. FOR AN EVEN TIGHTER SCOPE LOOP THE ERROR CALL CAN BE REPLACED WITH A BRANCH (REFER TO COMMENTS BY ERROR CALLS IN THE PROGRAM LISTING).

OR YOU COULD LOOP ON THE TEST BY EITHER SETTING BIT 14 OF THE SWITCH REG. EQUAL TO '1' OR BY SETTING BIT 08 OF THE SWITCH REG. EQUAL TO '1' AND THEN SETTING THE TEST NUMBER IN BITS 07-00 OF THE SWITCH REG. YOU WILL PROBABLY WANT TO INHIBIT ERROR TYPEOUTS BY SETTING BIT 13 OF THE SWITCH REG. EQUAL TO '1'.

a

1194
1195

```
.TITLE CKKTBD0 11/44 MEM MGMT PRT B
;*COPYRIGHT (C) 1982
;*DIGITAL EQUIPMENT CORP.
;*MAYNARD, MASS. 01754
;*
;*
;*THIS PROGRAM WAS ASSEMBLED USING THE PDP-11 MAINDEC SYSMAC
;*PACKAGE (MAINDEC-11-DZQAC-C5), JAN, 1981.
```

1196

```
.SBTTL OPERATIONAL SWITCH SETTINGS
;*
;*      SWITCH          USE
;*      -----          -
;*      15             HALT ON ERROR
;*      14             LOOP ON TEST
;*      13             INHIBIT ERROR TYPEOUTS
;*      12             INHIBIT TRACE TRAP
;*      10             BELL ON ERROR
;*      9              LOOP ON ERROR
;*      8              LOOP ON TEST IN SWR<7:0>
```

1197

001100
104000
000004

```
.SBTTL BASIC DEFINITIONS
;*INITIAL ADDRESS OF THE STACK POINTER *** 1100 ***
STACK= 1100
      ERROR=EMT
      SCOPE=IOT
```

000011
000012
000015
000200
177776
177776
177774
177772
177570
177570

```
;*MISCELLANEOUS DEFINITIONS
HT= 11          ;;CODE FOR HORIZONTAL TAB
LF= 12          ;;CODE FOR LINE FEED
CR= 15          ;;CODE FOR CARRIAGE RETURN
CRLF= 200       ;;CODE FOR CARRIAGE RETURN-LINE FEED
PS= 177776     ;;PROCESSOR STATUS WORD
PSW=PS
STKLMT= 177774 ;;STACK LIMIT REGISTER
PIRQ= 177772   ;;PROGRAM INTERRUPT REQUEST REGISTER
DSWR= 177570   ;;HARDWARE SWITCH REGISTER
DDISP= 177570  ;;HARDWARE DISPLAY REGISTER
```

000000
000001
000002
000003
000004
000005
000006
000007
000006
000007

```
;*GENERAL PURPOSE REGISTER DEFINITIONS
R0= X0          ;;GENERAL REGISTER
R1= X1          ;;GENERAL REGISTER
R2= X2          ;;GENERAL REGISTER
R3= X3          ;;GENERAL REGISTER
R4= X4          ;;GENERAL REGISTER
R5= X5          ;;GENERAL REGISTER
R6= X6          ;;GENERAL REGISTER
R7= X7          ;;GENERAL REGISTER
SP= X6          ;;STACK POINTER
PC= X7          ;;PROGRAM COUNTER
```

000000
000040
000100
000140
000200
000240
000300
000340

```
;*PRIORITY LEVEL DEFINITIONS
PR0= 0          ;;PRIORITY LEVEL 0
PR1= 40         ;;PRIORITY LEVEL 1
PR2= 100        ;;PRIORITY LEVEL 2
PR3= 140        ;;PRIORITY LEVEL 3
PR4= 200        ;;PRIORITY LEVEL 4
PR5= 240        ;;PRIORITY LEVEL 5
PR6= 300        ;;PRIORITY LEVEL 6
PR7= 340        ;;PRIORITY LEVEL 7
```

```

;*'SWITCH REGISTER' SWITCH DEFINITIONS
100000 SW15= 100000
040000 SW14= 40000
020000 SW13= 20000
010000 SW12= 10000
004000 SW11= 4000
002000 SW10= 2000
001000 SW09= 1000
000400 SW08= 400
000200 SW07= 200
000100 SW06= 100
000040 SW05= 40
000020 SW04= 20
000010 SW03= 10
000004 SW02= 4
000002 SW01= 2
000001 SW00= 1
001000 SW9=SW09
000400 SW8=SW08
000200 SW7=SW07
000100 SW6=SW06
000040 SW5=SW05
000020 SW4=SW04
000010 SW3=SW03
000004 SW2=SW02
000002 SW1=SW01
000001 SW0=SW00

;*DATA BIT DEFINITIONS (BIT00 TO BIT15)
100000 BIT15= 100000
040000 BIT14= 40000
020000 BIT13= 20000
010000 BIT12= 10000
004000 BIT11= 4000
002000 BIT10= 2000
001000 BIT09= 1000
000400 BIT08= 400
000200 BIT07= 200
000100 BIT06= 100
000040 BIT05= 40
000020 BIT04= 20
000010 BIT03= 10
000004 BIT02= 4
000002 BIT01= 2
000001 BIT00= 1
001000 BIT9=BIT09
000400 BIT8=BIT08
000200 BIT7=BIT07
000100 BIT6=BIT06
000040 BIT5=BIT05
000020 BIT4=BIT04
000010 BIT3=BIT03
000004 BIT2=BIT02
000002 BIT1=BIT01
000001 BIT0=BIT00

;*BASIC 'CPU' TRAP VECTOR ADDRESSES
000004 ERRVEC= 4 ;:TIME OUT AND OTHER ERRORS
000010 RESVEC= 10 ;:RESERVED AND ILLEGAL INSTRUCTIONS

```

1198

```

000014      TBITVEC=14      ;; 'T' BIT
000014      TRTVEC= 14      ;; TRACE TRAP
000014      BPTVEC= 14      ;; BREAKPOINT TRAP (BPT)
000020      IOTVEC= 20      ;; INPUT/OUTPUT TRAP (IOT) **SCOPE**
000024      PWRVEC= 24      ;; POWER FAIL
000030      EMTVEC= 30      ;; EMULATOR TRAP (EMT) **ERROR**
000034      TRAPVEC=34      ;; 'TRAP' TRAP
000060      TKVEC= 60      ;; TTY KEYBOARD VECTOR
000064      TPVEC= 64      ;; TTY PRINTER VECTOR
000240      PIRQVEC=240     ;; PROGRAM INTERRUPT REQUEST VECTOR

.SBTTL MEMORY MANAGEMENT DEFINITIONS
;*KT11 VECTOR ADDRESS
000250      MMVEC= 250
;*KT11 STATUS REGISTER ADDRESSES
177572      SR0= 177572
177574      SR1= 177574
177576      SR2= 177576
172516      SR3= 172516
;*USER 'I' PAGE DESCRIPTOR REGISTERS
177600      UIPDR0= 177600
177602      UIPDR1= 177602
177604      UIPDR2= 177604
177606      UIPDR3= 177606
177610      UIPDR4= 177610
177612      UIPDR5= 177612
177614      UIPDR6= 177614
177616      UIPDR7= 177616
;*USER 'D' PAGE DESCRIPTOR REGISTORS
177620      UDPDR0= 177620
177622      UDPDR1= 177622
177624      UDPDR2= 177624
177626      UDPDR3= 177626
177630      UDPDR4= 177630
177632      UDPDR5= 177632
177634      UDPDR6= 177634
177636      UDPDR7= 177636
;*USER 'I' PAGE ADDRESS REGISTERS
177640      UIPAR0= 177640
177642      UIPAR1= 177642
177644      UIPAR2= 177644
177646      UIPAR3= 177646
177650      UIPAR4= 177650
177652      UIPAR5= 177652
177654      UIPAR6= 177654
177656      UIPAR7= 177656
;*USER 'D' PAGE ADDRESS REGISTERS
177660      UDPAR0= 177660
177662      UDPAR1= 177662
177664      UDPAR2= 177664
177666      UDPAR3= 177666
177670      UDPAR4= 177670
177672      UDPAR5= 177672
177674      UDPAR6= 177674
177676      UDPAR7= 177676
;*SUPERVISOR 'I' PAGE DESCRIPTOR REGISTERS
172200      SIPDR0= 172200
172202      SIPDR1= 172202
    
```


172204	SIPDR2= 172204
172206	SIPDR3= 172206
172210	SIPDR4= 172210
172212	SIPDR5= 172212
172214	SIPDR6= 172214
172216	SIPDR7= 172216
	:*SUPERVISOR 'D' PAGE DESCRIPTOR REGISTERS
172220	SDPDR0= 172220
172222	SDPDR1= 172222
172224	SDPDR2= 172224
172226	SDPDR3= 172226
172230	SDPDR4= 172230
172232	SDPDR5= 172232
172234	SDPDR6= 172234
172236	SDPDR7= 172236
	:*SUPERVISOR 'I' PAGE ADDRESS REGISTERS
172240	SIPAR0= 172240
172242	SIPAR1= 172242
172244	SIPAR2= 172244
172246	SIPAR3= 172246
172250	SIPAR4= 172250
172252	SIPAR5= 172252
172254	SIPAR6= 172254
172256	SIPAR7= 172256
	:*SUPERVISOR 'D' PAGE ADDRESS REGISTERS
172260	SDPAR0= 172260
172262	SDPAR1= 172262
172264	SDPAR2= 172264
172266	SDPAR3= 172266
172270	SDPAR4= 172270
172272	SDPAR5= 172272
172274	SDPAR6= 172274
172276	SDPAR7= 172276
	:*KERNEL 'I' PAGE DESCRIPTOR REGISTERS
172300	KIPDR0= 172300
172302	KIPDR1= 172302
172304	KIPDR2= 172304
172306	KIPDR3= 172306
172310	KIPDR4= 172310
172312	KIPDR5= 172312
172314	KIPDR6= 172314
172316	KIPDR7= 172316
	:*KERNEL 'D' PAGE DESCRIPTOR REGISTERS
172320	KDPDR0= 172320
172322	KDPDR1= 172322
172324	KDPDR2= 172324
172326	KDPDR3= 172326
172330	KDPDR4= 172330
172332	KDPDR5= 172332
172334	KDPDR6= 172334
172336	KDPDR7= 172336
	:*KERNEL 'I' PAGE ADDRESS REGISTERS
172340	KIPAR0= 172340
172342	KIPAR1= 172342
172344	KIPAR2= 172344
172346	KIPAR3= 172346
172350	KIPAR4= 172350

	172352	KIPAR5= 172352
	172354	KIPAR6= 172354
	172356	KIPAR7= 172356
		;*KERNEL 'D' PAGE ADDRESS REGISTERS
	172360	KDPAR0= 172360
	172362	KDPAR1= 172362
	172364	KDPAR2= 172364
	172366	KDPAR3= 172366
	172370	KDPAR4= 172370
	172372	KDPAR5= 172372
	172374	KDPAR6= 172374
	172376	KDPAR7= 172376
		;*ADDITIONAL DEFINITIONS
		;*
1199		
1200		
1201	177572	MMR0=SR0
1202	177574	MMR1=SR1
1203	177576	MMR2=SR2
1204	172516	MMR3=SR3
1205	000006	KSP=SP
1206	000006	SSP=SP
1207	000006	USP=SP
1208	000020	TBIT=BIT4
1209	000100	WBIT=BIT6
1210	177766	CPUERR=177766
1211	001100	KERSTK=STACK
1212	000700	SUPSTK=STACK-200
1213	000600	USESTK=STACK-300
1214		

1246 000000

000174 000174
000176 000000

000200 000137 020000

```
.SBTTL TRAP CATCHER
      .=0
;*ALL UNUSED LOCATIONS FROM 4 - 776 CONTAIN A ".+2,HALT"
;*SEQUENCE TO CATCH ILLEGAL TRAPS AND INTERRUPTS
;*LOCATION 0 CONTAINS 0 TO CATCH IMPROPERLY LOADED VECTORS
      .=174
DISPREG: .WORD 0                    ;;SOFTWARE DISPLAY REGISTER
SWREG:   .WORD 0                    ;;SOFTWARE SWITCH REGISTER
.SBTTL STARTING ADDRESS(ES)
      JMP @#START ;;JUMP TO STARTING ADDRESS OF PROGRAM
```

1247

000046 000204
 000046
 036252
 000052
000052 000050
 000204

```
.SBTTL ACT11 HOOKS  
;*****  
;HOOKS REQUIRED BY ACT11  
      $SVPC=                   ;SAVE PC  
      .=46  
      $ENDAD                   ;;1)SET LOC.46 TO ADDRESS OF $ENDAD IN .$EOP  
      .=52  
      .WORD    0               ;;2)SET LOC.52 TO ZERO  
      .=$SVPC                 ;; RESTORE PC
```

1248

```
.SBTTL APT PARAMETER BLOCK
:*****
:SET LOCATIONS 24 AND 44 AS REQUIRED FOR APT
:*****
000024 000204      .SX=      ;;SAVE CURRENT LOCATION
000024 000024      =24      ;;SET POWER FAIL TO POINT TO START OF PROGRAM
000044 000200      200      ;;FOR APT START UP
000044 000044      =44      ;;POINT TO APT INDIRECT ADDRESS PNTR.
000044 000204      $APTHDR ;;POINT TO APT HEADER BLOCK
000044 000204      =.SX     ;;RESET LOCATION COUNTER
:*****
:SETUP APT PARAMETER BLOCK AS DEFINED IN THE APT-PDP11 DIAGNOSTIC
:INTERFACE SPEC.
000204 $APTHD:
000204 000000 $HIBTS: .WORD 0      ;;TWO HIGH BITS OF 18 BIT MAILBOX ADDR.
000206 001224 $MBADR: .WORD $MAIL  ;;ADDRESS OF APT MAILBOX (BITS 0-15)
000210 000002 $STMT: .WORD 2      ;;RUN TIM OF LONGEST TEST
000212 000005 $PASTM: .WORD 5     ;;RUN TIME IN SECS. OF 1ST PASS ON 1 UNIT (QUICK VERIFY)
000214 000005 $UNITM: .WORD 5     ;;ADDITIONAL RUN TIME (SECS) OF A PASS FOR EACH ADDITIONAL UNIT
000216 000014      .WORD $ETEND-$MAIL/2 ;;LENGTH MAILBOX-ETABLE(WORDS)
```

1249

.SBTTL COMMON TAGS

*THIS TABLE CONTAINS VARIOUS COMMON STORAGE LOCATIONS
*USED IN THE PROGRAM.

001100	001100			\$CMTAG:		::START OF COMMON TAGS
001100	000000				.WORD 0	
001102	000			\$TSTNM:	.BYTE 0	::CONTAINS THE TEST NUMBER
001103	000			\$ERFLG:	.BYTE 0	::CONTAINS ERROR FLAG
001104	000000			\$ICNT:	.WORD 0	::CONTAINS SUBTEST ITERATION COUNT
001106	000000			\$LPADR:	.WORD 0	::CONTAINS SCOPE LOOP ADDRESS
001110	000000			\$LPERR:	.WORD 0	::CONTAINS SCOPE RETURN FOR ERRORS
001112	000000			\$ERTTL:	.WORD 0	::CONTAINS TOTAL ERRORS DETECTED
001114	000			\$ITEMB:	.BYTE 0	::CONTAINS ITEM CONTROL BYTE
001115	001			\$ERMAX:	.BYTE 1	::CONTAINS MAX. ERRORS PER TEST
001116	000000			\$ERRPC:	.WORD 0	::CONTAINS PC OF LAST ERROR INSTRUCTION
001120	000000			\$GDADR:	.WORD 0	::CONTAINS ADDRESS OF 'GOOD' DATA
001122	000000			\$BDADR:	.WORD 0	::CONTAINS ADDRESS OF 'BAD' DATA
001124	000000			\$GDAT:	.WORD 0	::CONTAINS 'GOOD' DATA
001126	000000			\$BDAT:	.WORD 0	::CONTAINS 'BAD' DATA
001130	000000				.WORD 0	::RESERVED--NOT TO BE USED
001132	000000				.WORD 0	
001134	000			\$AUTOB:	.BYTE 0	::AUTOMATIC MODE INDICATOR
001135	000			\$INTAG:	.BYTE 0	::INTERRUPT MODE INDICATOR
001136	000000				.WORD 0	
001140	177570			\$SWR:	.WORD DSWR	::ADDRESS OF SWITCH REGISTER
001142	177570			\$DISPLAY:	.WORD DDISP	::ADDRESS OF DISPLAY REGISTER
001144	177560			\$TKS:	177560	::TTY KBD STATUS
001146	177562			\$TKB:	177562	::TTY KBD BUFFER
001150	177564			\$TPS:	177564	::TTY PRINTER STATUS REG. ADDRESS
001152	177566			\$TPB:	177566	::TTY PRINTER BUFFER REG. ADDRESS
001154	000			\$NULL:	.BYTE 0	::CONTAINS NULL CHARACTER FOR FILLS
001155	002			\$FILLS:	.BYTE 2	::CONTAINS # OF FILLER CHARACTERS REQUIRED
001156	012			\$FILLC:	.BYTE 12	::INSERT FILL CHARS. AFTER A 'LINE FEED'
001157	000			\$TPFLG:	.BYTE 0	::'TERMINAL AVAILABLE' FLAG (BIT<07>=0=YES)
001160	000000			\$REGAD:	.WORD 0	::CONTAINS THE ADDRESS FROM WHICH (\$REGO) WAS OBTAINED
	000006				.REPT 6	
001162	000000			\$REG0:	.WORD 0	::CONTAINS ((\$REGAD)+0)
001164	000000			\$REG1:	.WORD 0	::CONTAINS ((\$REGAD)+2)
001166	000000			\$REG2:	.WORD 0	::CONTAINS ((\$REGAD)+4)
001170	000000			\$REG3:	.WORD 0	::CONTAINS ((\$REGAD)+6)
001172	000000			\$REG4:	.WORD 0	::CONTAINS ((\$REGAD)+10)
001174	000000			\$REG5:	.WORD 0	::CONTAINS ((\$REGAD)+12)
001176	000000			\$TMP0:	.WORD 0	::USER DEFINED
001200	000000			\$TMP1:	.WORD 0	::USER DEFINED
001202	000000			\$TMP2:	.WORD 0	::USER DEFINED
001204	000000			\$TMP3:	.WORD 0	::USER DEFINED
001206	000000			\$TMP4:	.WORD 0	::USER DEFINED
001210	000000			\$TMP5:	.WORD 0	::USER DEFINED
001212	000000			\$ESCAPE:	0	::ESCAPE ON ERROR ADDRESS
001214	207	377	377	\$BELL:	.ASCII <207><377><377>	::CODE FOR BELL
001217	000					
001220	077			\$QUES:	.ASCII /?/	::QUESTION MARK
001221	015			\$CRLF:	.ASCII <15>	::CARRIAGE RETURN
001222	012	000		\$LF:	.ASCII <12>	::LINE FEED

```
*****  
:SBTTL APT MAILBOX-ETABLE  
*****  
.EVEN  
001224 $MAIL: ::APT MAILBOX  
001224 000000 $MSGTY: .WORD AMSTGY ::MESSAGE TYPE CODE  
001226 000000 $FATAL: .WORD AFATAL ::FATAL ERROR NUMBER  
001232 000000 $TESTN: .WORD ATESTN ::TEST NUMBER  
001232 000000 $PASS: .WORD APASS ::PASS COUNT  
001234 000000 $DEVCT: .WORD ADEVCT ::DEVICE COUNT  
001236 000000 $UNIT: .WORD AUNIT ::I/O UNIT NUMBER  
001240 000000 $MSGAD: .WORD AMSGAD ::MESSAGE ADDRESS  
001242 000000 $MSGLG: .WORD AMSGLG ::MESSAGE LENGTH  
001244 $ETABLE: ::APT ENVIRONMENT TABLE  
001244 000 $ENV: .BYTE AENV ::ENVIRONMENT BYTE  
001245 000 $ENVM: .BYTE AENVM ::ENVIRONMENT MODE BITS  
001246 000000 $SWREG: .WORD ASWREG ::APT SWITCH REGISTER  
001250 000000 $USWR: .WORD AUSWR ::USER SWITCHES  
001252 000000 $CPUOP: .WORD ACPUOP ::CPU TYPE, OPTIONS  
: * BIT 15-11=CPU TYPE  
: * 11/04=01,11/05=02,11/20=03,11/40=04,11/45=05  
: * 11/70=06,PDQ=07,Q=10  
: * BIT 10=REAL TIME CLOCK  
: * BIT 9=FLOATING POINT PROCESSOR  
: * BIT 8=MEMORY MANAGEMENT  
  
001254 $ETEND:  
.MEXIT  
  
001254 000000 TESTND: .WORD 0 ;HOLDS TEST NUMBER FOR TYPEOUTS  
001256 000000 WASR6: .WORD 0 ;USED TO STORE THE STACK POINTER AFTER A TRAP  
001260 000000 TRAPPC: .WORD 0 ;USED TO STORE THE PC OF A TRAP OR ABORT  
001262 000000 TRAPPS: .WORD 0 ;USED TO STORE THE PS OF A TRAP OR ABORT  
001264 000000 WASSR0: .WORD 0 ;USED TO STORE CONTENTS OF SR0  
001266 000000 WASSR1: .WORD 0 ;USED TO STORE CONTENTS OF SR1  
001270 000000 WASSR2: .WORD 0 ;USED TO STORE CONTENTS OF SR2  
001272 000000 WASSR3: .WORD 0 ;USED TO STORE CONTENTS OF SR3  
001274 000000 TBITPS: .WORD 0 ;SAVES THE PSW THAT MAY HAVE ITS T-BIT ON  
001276 000000 VIRT1: .WORD 0 ;HOLDS VIRTUAL ADDRESS TO BE CONVERTED  
001300 000000 PBALO: .WORD 0 ;HOLDS BITS <15:00> OF PHYSICAL ADDRESS  
001302 000000 PBAHI: .WORD 0 ;HOLDS BITS <21:16> OF PHYSICAL ADDRESS  
001304 000000 BADPC: .WORD 0 ;HOLDS PC FROM ABORT OR TRAP  
001306 000200 $MXCNT: .WORD 200 ;HOLD MAX. NUMBER OF LOOP ITERATIONS  
001310 000000 $TBIT: .WORD 0 ;'T' BIT STATE INDICATOR  
001312 136 103 015 $CNTLC: .ASCIIZ /^C/<15><12> ;CONTROL C  
001315 012 000  
  
.EVEN
```

.SBTTL ERROR POINTER TABLE

;*THIS TABLE CONTAINS THE INFORMATION FOR EACH ERROR THAT CAN OCCUR.

;*THE INFORMATION IS OBTAINED BY USING THE INDEX NUMBER FOUND IN

;*LOCATION \$ITEMB. THIS NUMBER INDICATES WHICH ITEM IN THE TABLE IS PERTINENT.

;*NOTE1: IF \$ITEMB IS 0 THE ONLY PERTINENT DATA IS (\$ERRPC).

;*NOTE2: EACH ITEM IN THE TABLE CONTAINS 4 POINTERS EXPLAINED AS FOLLOWS:

;* EM ;POINTS TO THE ERROR MESSAGE
 ;* DH ;POINTS TO THE DATA HEADER
 ;* DT ;POINTS TO THE DATA
 ;* DF ;POINTS TO THE DATA FORMAT

\$ERRTB:

1250	001320			
1251	001320	007522	EM1	:UNEXPECTED CPU TRAP TO LOC. 004
1252	001322	012672	DH1	:OLD PC OLD PSW R6 WAS CPUERR TESTNO ERRORPC
1253	001324	015306	DT1	:TRAPPC,TRAPPS,WASR6,CPUERR,TESTNO,\$ERRPC,0
1254	001326	016057	DF12	:0,0,0,0,0,0
1255				
1256				
1257	001330	007562	EM2	:UNEXPECTED MEM. MGMT. TRAP TO LOC. 250
1258	001332	012752	DH2	:OLD PC OLD PSW R6 WAS SR0 SR2 TESTNO ERRORPC
1259	001334	015324	DT2	:TRAPPC,TRAPPS,WASR6,WASSR0,WASSR2,TESTNO,\$ERRPC,0
1260	001336	016041	DF2	:0,0,0,0,0,0
1261				
1262				
1263	001340	007631	EM10	:MEMORY MGMT. ACCESS ABORT DID NOT OCCUR
1264	001342	013042	DH10	:PDR 4 PSW TESTNO ERRORPC
1265	001344	015344	DT10	:\$REG2,\$TMPO,TESTNO,\$ERRPC,0
1266	001346	016050	DF3	:0,0,0,0
1267				
1268				
1269	001350	007701	EM11	:ACCESS ERROR DID NOT ABORT INSTRUCTION
1270	001352	013042	DH10	:PDR 4 PSW TESTNO ERRORPC
1271	001354	015344	DT10	:\$REG2,\$TMPO,TESTNO,\$ERRPC,0
1272	001356	016050	DF3	:0,0,0,0
1273				
1274				
1275	001360	007750	EM12	:SR0 DID NOT REPORT ACCESS ERROR CORRECTLY
1276	001362	013102	DH12	:SR0 WAS EXPECTD PDR 4 PSW TESTNO ERRORPC
1277	001364	015356	DT12	:WASSR0,\$REG3,\$REG2,\$TMPO,TESTNO,\$ERRPC,0
1278	001366	016057	DF12	:0,0,0,0,0,0
1279				
1280				
1281	001370	010022	EM13	:SR2 DID NOT LOCKUP CORRECT VIRTUAL ADDR.
1282	001372	013162	DH13	:SR2 WAS EXPECTD PDR 4 PSW TESTNO ERRORPC
1283	001374	015374	DT13	:WASSR2,\$REG4,\$REG2,\$TMPO,TESTNO,\$ERRPC,0
1284	001376	016057	DF12	:0,0,0,0,0,0
1285				
1286				
1287	001400	010073	EM14	:PAGE LGTH. ABORT OCCURRED WHEN IT SHOULDN'T HAVE
1288	001402	013242	DH14	:V.B.A. KIPDR4 SR0 WAS SR2 WAS TESTNO ERRORPC
1289	001404	015412	DT14	:\$REG0,\$REG4,WASSR0,WASSR2,TESTNO,\$ERRPC,0
1290	001406	016057	DF12	:0,0,0,0,0,0

1291			;*ITEM 10	
1292	001410	010154	EM15	;PAGE LGTH. ABORT DID NOT OCCUR WHEN IT SHOULD HAVE
1293	001412	013322	DH15	;V.B.A. KIPDR4 TESTNO ERRORPC
1294	001414	015430	DT15	;\$REG0,\$REG4,TESTNO,\$ERRPC,0
1295	001416	016050	DF3	;0,0,0,0
1296				
1297			;*ITEM 11	
1298	001420	010237	EM16	;SRO DID NOT REPORT PAGE LGTH. ABORT CORRECTLY
1299	001422	013362	DH16	;V.B.A. KIPDR4 SRO WAS EXPECTD TESTNO ERRORPC
1300	001424	015442	DT16	;\$REG0,\$REG4,WASSRO,\$REG2,TESTNO,\$ERRPC,0
1301	001426	016057	DF12	;0,0,0,0,0,0
1302				
1303			;*ITEM 12	
1304	001430	010022	EM13	;SR2 DID NOT LOCKUP CORRECT VIRUAL ADDR.
1305	001432	013442	DH17	;V.B.A. KIPDR4 SR2 WAS EXPECTD TESTNO ERRORPC
1306	001434	015460	DT17	;\$REG0,\$REG4,WASSR2,\$REG3,TESTNO,\$ERRPC,0
1307	001436	016057	DF12	;0,0,0,0,0,0
1308				
1309			;*ITEM 13	
1310	001440	010022	EM13	;SR2 DID NOT LOCKUP CORRECT VIRUAL ADDR.
1311	001442	013522	DH20	;SR2 WAS EXPECTD TESTNO ERRORPC
1312	001444	015476	DT20	;WASSR2,\$REG1,TESTNO,\$ERRPC,0
1313	001446	016050	DF3	;0,0,0,0
1314				
1315			;*ITEM 14	
1316	001450	010315	EM21	;SRO OR SR2 CHANGED BY A SECOND ABORT
1317	001452	013562	DH21	;FIRST ABORT SECOND ABORT
1318				;SRO WAS SR2 WAS SRO WAS SR2 WAS TESTNO ERRORPC
1319	001454	015510	DT21	;\$TMP0,\$TMP2,WASSRO,WASSR2,TESTNO,\$ERRPC,0
1320	001456	016057	DF12	;0,0,0,0,0,0
1321				
1322			;*ITEM 15	
1323	001460	010362	EM22	;SRO OR SR2 WAS NOT 'RESET' BY A RESET
1324	001462	013677	DH22	;SRO WAS SR2 WAS TESTNO ERRORPC
1325	001464	015526	DT22	;WASSRO,WASSR2,TESTNO,\$ERRPC,0
1326	001466	016050	DF3	;0,0,0,0
1327				
1328			;*ITEM 16	
1329	001470	010431	EM23	;SR2 NOT TRACKING CORRECTLY
1330	001472	013522	DH20	;SR2 WAS EXPECTD TESTNO ERRORPC
1331	001474	015476	DT20	;WASSR2,\$REG1,TESTNO,\$ERRPC,0
1332	001476	016050	DF3	;0,0,0,0
1333				
1334			;*ITEM 17	
1335	001500	010464	EM24	;DID NOT TRAP THRU KERNEL SPACE
1336	001502	013737	DH24	;PSW WAS R6 WAS TESTNO ERRORPC
1337	001504	015540	DT24	;\$REG1,\$REG2,TESTNO,\$ERRPC,0
1338	001506	016050	DF3	;0,0,0,0

1339			;*ITEM 20	
1340	001510	010523	EM25	:KT ERROR SERVICED ON ODD ADDR. ERROR
1341	001512	013522	DH20	:PDR TESTNO ERRORPC
1342	001514	015476	DT20	:\$REG5,TESTNO,\$ERRPC,0
1343	001516	016054	DF5	:0,0,0
1344				
1345			;*ITEM 21	
1346	001520	010570	EM26	:SRO OR SR2 CHANGED BY ODD ADDR. ERROR
1347	001522	013777	DH26	:EXPECTED RECEIVED
1348				:SRO SR2 SRO WAS SR2 WAS TESTNO ERRORPC
1349	001524	015552	DT26	:\$REG0,\$REG1,WASSRO,WASSR2,TESTNO,\$ERRPC,0
1350	001526	016057	DF12	:0,0,0,0,0,0
1351				
1352			;*ITEM 22	
1353	001530	010636	EM27	:ERROR DURING 'DOUBLE ERROR' (KT & ODD ADDR.)
1354	001532	014111	DH27	:EXPECTED:
1355				:PSW PC SRO SR2
1356				:170017 (3\$+4) 020147 (3\$)
1357				:RECEIVED
1358				:PSW PC SRO SR2 TESTNO ERRORPC
1359	001534	015570	DT27	:\$REG1,\$REG3,WASSRO,WASSR2,TESTNO,\$ERRPC,0
1360	001536	016057	DF12	:0,0,0,0,0,0
1361				
1362			;*ITEM 23	
1363	001540	010713	EM30	:MFPI INSTRUCTION PUSHED WRONG DATA
1364	001542	014306	DH30	:DATA DATA
1365				:EXPECTD RECEIVD TESTNO ERRORPC
1366	001544	015606	DT30	:\$REG0,\$REG1,TESTNO,\$ERRPC,0
1367	001546	016050	DF3	:0,0,0,0
1368				
1369			;*ITEM 24	
1370	001550	010756	EM31	:MTPI INSTRUCTION LOADED WRONG DATA
1371	001552	014306	DH30	:DATA DATA
1372				:EXPECTD RECEIVD TESTNO ERRORPC
1373	001554	015606	DT30	:\$REG0,\$REG1,TESTNO,\$ERRPC,0
1374	001556	016050	DF3	:0,0,0,0
1375				
1376			;*ITEM 25	
1377	001560	011021	EM32	:STACK NOT PUSHED BY MFPI-MTPI
1378	001562	014362	DH32	:TESTNO ERRORPC
1379	001564	015620	DT32	:TESTNO,\$ERRPC,0
1380	001566	016065	DF32	:0,0
1381				
1382			;*ITEM 26	
1383	001570	011057	EM33	:KERNEL PAGE ACCESSED INSTEAD OF USER: MFPI-MTPI
1384	001572	014401	DH33	:SRO WAS SR2 WAS TESTNO ERRORPC
1385	001574	015526	DT22	:WASSRO,WASSR2,TESTNO,\$ERRPC,0
1386	001576	016050	DF3	:0,0,0,0
1387				
1388			;*ITEM 27	
1389	001600	011135	EM34	:M.M. ABORT IN KERNAL D-SFA E HAD WRONG CONDITION
1390	001602	014441	DH34	:(MMR0) (MMR1) (MMR2) TESTNO ERRORPC EXPECTING 020031
1391	001604	015626	DT34	:\$REG1,\$REG2,\$REG3,TESTNO,\$ERRPC,0
1392	001606	016034	DF1	:0,0,0,0,0
1393				
1394			;*ITEM 30	
1395	001610	011216	EM35	:ILLEGAL MODE 10 NOT ABORTED

CKKTBD0 11/44 MEM MGMT PRT B
ERROR POINTER TABLE

MACRO M1113 12-JAN-82 12:19 PAGE 23-1

3 3

SEQUENCE 27

1396 001612 014362
1397 001614 015620
1398 001616 016065

DH32
DT32
DF32

:TESTNO ERRORPC
:TESTNO,\$ERRPC,0
0,0

1399			;*ITEM 31		
1400	001620	011252		EM36	:SRO DID NOT REPORT ILLEGAL MODE 10 CORRECTLY
1401	001622	014532		DH36	:SRO WAS EXPECTD TESTNO ERRORPC
1402	001624	015642		DT36	:WASSRO,\$REG1,TESTNO,\$ERRPC,0
1403	001626	016050		DF3	:0.0.0.0
1404					
1405			;*ITEM 32		
1406	001630	011327		EM37	:PSW CHANGED BY AN RTI IN USER MODE
1407	001632	014572		DH37	:PSW WAS EXPECTD TESTNO ERRORPC
1408	001634	015540		DT24	:\$REG1,\$REG2,TESTNO,\$ERRPC,0
1409	001636	016050		DF3	:0.0.0.0
1410					
1411			;*ITEM 33		
1412	001640	011372		EM40	:ABORT IN KERNAL D-SPACE PICKED UP VECTOR FROM I-SPACE
1413	001642	014632		DH40	:(PSW) TESTNO ERRORPC EXPECTING XXX340
1414	001644	015654		DT40	:\$REG0,TESTNO,\$ERRPC,0
1415	001646	016054		DF5	:0.0.0
1416					
1417			;*ITEM 34		
1418	001650	011457		EM41	:D SPACE ENABLE CIRCUITRY HAS FAILED
1419	001652	014703		DH41	:ERROR AUTOI/D VIRTUAL
1420					:REGISTR 'EGISTR ADDRESS TESTNO PC AT ABORT
1421	001654	015664		DT41	:WASSRO,WASSR1,WASSR2,TESTNO,BADPC,0
1422	001656	016034		DF1	:0.0.0.0.0
1423					
1424			;*ITEM 35		
1425	001660	011523		EM42	:INCORRECT STORE BY MYP INSTRUCTION
1426	001662	015007		DH42	:GDDATA STORED TESTNO ERRORPC
1427	001664	015700		DT42	:\$REG3,\$REG4,TESTNO,\$ERRPC,0
1428	001666	016050		DF3	:0.0.0.0
1429					
1430			;*ITEM 36		
1431	001670	011566		EM43	:TRIED TO REFERENCE NON-RESIDENT PAGE
1432	001672	015047		DH43	:(MMR0) (MMR1) (MMR2) TESTNO ERRORPC
1433	001674	015712		DT43	:\$REG0,\$REG1,\$REG2,TESTNO,\$ERRPC,0
1434	001676	016034		DF1	
1435					
1436			;*ITEM 37		
1437	001700	011633		EM44	:WRONG DATA FETCHED BY HFP INSTRUCTION
1438	001702	014306		DH30	:DATA DATA
1439					:EXPECTD RECEIVD TESTNO ERRORPC
1440	001704	015606		DT30	:\$REG0,\$REG1,TESTNO,\$ERRPC,0
1441	001706	016050		DF3	:0.0.0.0
1442					
1443			;*ITEM 40		
1444	001710	011566		EM43	:TRIED TO REFERENCE NON-RESIDENT PAGE
1445	001712	015047		DH43	:(MMR0) (MMR1) (MMR2) TESTNO ERRORPC
1446	001714	015726		DT45	:WASSRO,WASSR1,WASSR2,TESTNO,\$ERRPC,0
1447	001716	016034		DF1	:0.0.0.0.0
1448					
1449			;*ITEM 41		
1450	001720	011701		EM45	:ILLEGAL CSM DID NOT TRAP TO 10
1451	001722	014362		DH32	:TESTNO ERRURPC
1452	001724	015620		DT32	:TESTNO,\$ERRPC,0
1453	001726	016041		DF2	:0.0

1454			;*ITEM 42		
1455	001730	011740	EM46		:CSM DID NOT ENTER SUPERVISOR MODE
1456	001732	015117	DH44		:EXPECTD (PSW) TESTNO ERR PC
1457	001734	015742	DT46		:\$REG3,ACSMPS,TESTNO,\$ERRPC,0
1458	001736	016034	DF1		:0,0,0,0,0
1459					
1460			;*ITEM 43		
1461	001740	012002	EM47		:CSM SET UP WRONG PREVIOUS MODE
1462	001742	015117	DH44		:EXPECTD (PSW) TESTNO ERR PC
1463	001744	015742	DT46		:\$REG3,ACSMPS,TESTNO,\$ERRPC,0
1464	001746	016034	DF1		:0,0,0,0,0
1465					
1466			;*ITEM 44		
1467	001750	012041	EM50		:CSM SET UP STACK WRONG
1468	001752	014306	DH30		:DATA DATA
1469					:EXPECTD RECEIVD TESTNO ERR PC
1470	001754	015606	DT30		:ACSMSP,\$TMP0,TESTNO,\$ERRPC,0
1471	001756	016034	DF1		:0,0,0,0,0
1472					
1473			;*ITEM 45		
1474	001760	012070	EM51		:CSM PUSHED INCORRECT ARGUMENT
1475	001762	014306	DH30		:DATA DATA
1476					:EXPECTD RECEIVD TESTNO ERR PC
1477	001764	015754	DT47		:\$REG0,CSM1ST,TESTNO,\$ERRPC,0
1478	001766	016034	DF1		:0,0,0,0,0
1479					
1480			;*ITEM 46		
1481	001770	012126	EM52		:CSM PUSHED WRONG PC
1482	001772	014306	DH30		:DATA DATA
1483					:EXPECTD RECEIVD TESTNO ERR PC
1484	001774	015766	DT50		:\$TMP0,CSM2ND,TESTNO,\$ERRPC,0
1485	001776	016034	DF1		:0,0,0,0,0
1486					
1487			;*ITEM 47		
1488	002000	012152	EM53		:CSM DID NOT CLEAR OLD PSW BITS <3:0>
1489	002002	015117	DH44		:OLDPSW TESTNO ERR PC
1490	002004	016000	DT52		:CSM3RD,TESTNO,\$ERRPC,0
1491	002006	016050	DF3		:0,0,0,0
1492					
1493			;*ITEM 50		
1494	002010	012217	EM54		:CSM ACCESSED WRONG SUPERVISOR SPACE
1495	002012	014362	DH32		:TESTNO ERR PC
1496	002014	015620	DT32		:TESTNO,\$ERRPC,0
1497	002016	016054	DF5		:0,0,0
1498					
1499			;*ITEM 51		
1500	002020	012263	EM55		:CSM ABORTED WHEN IT SHOULD NOT HAVE
1501	002022	014362	DH32		:TESTNO ERR PC
1502	002024	015620	DT32		:TESTNO,\$ERRPC,0
1503	002026	016054	DF5		:0,0,0
1504					
1505			;*ITEM 52		
1506	002030	012327	EM56		:CSM FAILED TO INCREMENT/DECREMENT REGISTER PROPERLY
1507	002032	015207	DH55		:TESTNO ERR PC RO RXP RO RCV
1508	002034	016010	DT55		:TESTNO,\$ERRPC,\$TMP0,\$REG0,0
1509	002036	016050	DF3		:0,0,0,0

1510			;*ITEM 53	
1511	002040	012413	EM57	:CSM FAILED TO PUT PROPER ARGUMENT ON STACK
1512	002042	015246	DH57	:TESTNO ERR PC ARGEXP ARGRCV
1513	002044	016022	DT57	:TESTNO,\$ERRPC,\$TMP1,\$TMP2,0
1514	002046	016050	DF3	:0,0,0,0
1515				
1516			;*ITEM 54	
1517	002050	012466	EM58	:SR2 LOCKED UP AN 11/34 COMPATIBLE ADDRESS THAT
1518				:DOES NOT MAKE IT COMPATIBLE WITH AN 11/70 SINCE
1519				:THE OPTIONAL M7095 ECO #8 IS MISSING
1520	002052	013522	DH20	:SR2 WAS EXPECTD TESTNO ERRORPC
1521	002054	015476	DT20	:WASSR2,\$REG1,TESTNO,\$ERRPC,0
1522	002056	016050	DF3	:0,0,0,0

```

1523
1524
1525
1526
1527
1528
1529
1530
1531
1532 002060
1533 002060 012700 077406
1534
1535 002064 012702 172300
1536 002070 012701 000020
1537 002074 010022
1538 002076 077102
1539 002100 020227 172340
1540 002104 001003
1541 002106 012702 172200
1542 002112 000766
1543 002114 020227 172240
1544 002120 001003
1545 002122 012702 177600
1546 002126 000760
1547 002130 012701 172340
1548 002134 012702 172360
1549 002140 012703 000007
1550 002144 005000
1551 002146 010022
1552 002150 010022
1553 002152 062700 000200
1554 002156 077305
1555 002160 012711 177600
1556 002164 012712 177600
1557 002170 020127 172356
1558 002174 001005
1559 002176 012701 172240
1560 002202 012702 172260
1561 002206 000754
1562 002210 020127 172256
1563 002214 001401
1564 002216 000207
1565 002220 012701 177640
1566 002224 012702 177660
1567 002230 000743
  
```

```

.SBTTL INITIALIZE ALL PAR'S AND PDR'S
:* ***** SUBROUTINES UNIQUE TO THIS PROGRAM *****
:* *****
:* THIS ROUTINE WILL INITIALIZE ALL KERNAL, SUPERVISOR, AND
:* USER PAR'S AND PDR'S TO THEIR USUAL INITIAL VALUE
:* *****
APRINIT:
MOV #77406,R0 ;MAKE ALL PDR'S 4K, READ/WRITE, UPWARDS
;EXPANDING, 200 BLOCKS
MOV #KIPDR0,R2 ;LOAD THE ADDRESS OF THE FIRST KERNAL PDR
1$: MOV #20,R1 ;LOAD R1 WITH 16
2$: MOV R0,(R2)+ ;LOAD EACH PDR IN TURN
SOB R1,2$ ;LOOP UNTIL ALL ARE LOADED
CMP R2,#KDPDR7+2 ;HAVE WE LOADED ALL KERNAL PDR'S
BNE 3$ ;BRANCH IF KERNAL & SUPER HAVE BEEN LOADED
MOV #SIPDR0,R2 ;LOAD ALL SUPERVISOR PDR'S
BR 1$ ;BRANCH TO LOOP
3$: CMP R2,#SDPDR7+2 ;HAVE USER PDR'S BEEN DUNE
BNE 4$ ;BRANCH IF THEY HAVE
MOV #UIPDR0,R2 ;LOAD ALL USER PDR'S
BR 1$ ;BRANCH TO LOOP
4$: MOV #KIPAR0,R1 ;LOAD R1 WITH ADDRESS OF KIPAR0
MOV #KDPAR0,R2 ;LOAD R2 WITH ADDRESS OF KDPAR0
5$: MOV #7,R3 ;LOAD LOOP COUNTER WITH 7
CLR R0 ;CLEAR PAR VALUE REGISTER
6$: MOV R0,(R1)+ ;LOAD AN I-SPACE PAR
MOV R0,(R2)+ ;LOAD A D-SPACE PAR
ADD #200,R0 ;INCREASE THE PAR VALUE BY 200
SOB R3,6$ ;LOOP UNTIL 7 PAR'S ARE LOADED
MOV #177600,(R1) ;MAP I-SPACE PAR7 TO I/O PAGE
MOV #177600,(R2) ;MAP D-SPACE PAR7 TO I/O PAGE
CMP R1,#KIPAR7
BNE 7$
MOV #SIPAR0,R1
MOV #SDPAR0,R2
BR 5$
7$: CMP R1,#SIPAR7
BEQ 8$ ;BRANCH TO USER LOAD ROUTINE
RTS PC ;RETURN TO CALLING ROUTINE
8$: MOV #UIPAR0,R1
MOV #UDPAR0,R2
BR 5$
  
```

```

1568 .SBTTL D-SPACE TESTS MEMORY MANAGEMENT ABORT SERVICE ROUTINE
1569 :*****
1570 :* THIS ROUTINE WILL BE ENTERED IF A MEMORY MANAGEMENT ABORT OCCURS
1571 :* DURING THE D-SPACE ENABLE TESTS. IF THE ABORT IS A NON-RESIDENT
1572 :* ABORT, THE PROBLEM IS PROBABLY IN THE D-SPACE ENABLE LOGIC. IN
1573 :* ALL OF THE D-SPACE ENABLE TESTS, D-SPACE PAGES 1 & 3 ARE MAPPED
1574 :* NON-RESIDENT AND I-SPACE PAGE 3 IS MAPPED NON-RESIDENT. ALL
1575 :* OTHER PAGES ARE MAPPED RESIDENT, 4K, READ/WRITE. THEREFORE, IF
1576 :* THE NON-RESIDENT PAGE IS 1 OR 3 YOU ARE NOT FORCING I-SPACE WHEN
1577 :* YOU SHOULD. IF THE NON-RESIDENT PAGE IS 3, AND YOU ARE IN TEST
1578 :* 15, YOU ARE PROBABLY FORCING I-SPACE WHEN YOU SHOULD BE ALLOWING
1579 :* D-SPACE.
1580 :*****
1581 002232 NODSPAC: ;STARTING ADDRESS FOR ABORT SERVICE ROUTINE
1582 002232 042737 000004 172516 BIC #BIT2,MMR3 ;TURN OFF D-SPACE BEFORE DOING ROUTINE
1583 002240 005227 INC (PC)+ ;MAKE FLAG ZERO IF THE FIRST TIME
1584 002242 177777 NDFLAG: .WORD -1 ;FLAG SHOULD BE -1
1585 002244 001401 BEQ 10$ ;BRANCH IF FIRST TIME IN ROUTINE
1586 002246 000000 HALT ;I HAVE ENTERED THIS ROUTINE BEFORE
1587 ;THE FIRST ERROR IS REPORTED; THE SECOND
1588 ;ENTRY ADDRESS IS ON THE STACK, AND THE
1589 ;FIRST ERROR CONDITION IS PROBABLY STILL
1590 ;LOCKED UP.
1591 002250 011637 001304 10$: MOV (KSP),BADPC ;SAVE PC AT TIME OF ABORT OR TRAP
1592 002254 012637 001260 MOV (KSP)+,TRAPPC ;SAVE RETURN ADDRESS IN CASE OF LOOP
1593 002260 012637 001262 MOV (KSP)+,TRAPPS ;SAVE OLD PSW IN CASE OF LOOP
1594 002264 013737 177572 001264 MOV MMRO,WASSRO ;SAVE STATUS REGISTER
1595 002272 013737 177574 001266 MOV MMR1,WASSR1 ;SAVE AUTO INCR/DECR REGISTER
1596 002300 013737 177576 001270 MOV MMR2,WASSR2 ;SAVE VIRTUAL ADDRESS REGISTER
1597 002306 005737 001264 TST WASSRO ;WAS ABORT NON-RESIDENT?
1598 002312 100002 BPL 1$ ;BRANCH IF ABORT NOT EXPECTED
1599 002314 104034 ERROR +34 ;D-SPACE ENABLE FAULTY
1600 002316 000401 BR 2$ ;BRANCH TO EXIT
1601 002320 104002 1$: ERROR +2 ;UNEXPECTED M.M. ABORT
1602 002322 042737 177376 177572 2$: BIC #177376,MMRO ;CLEAR ALL BITS EXCEPT 0 AND 8
1603 002330 012737 177777 002242 MOV #-1,NDFLAG ;MOVE A -1 TO THE FLAG
1604 002336 013746 001262 MOV TRAPPS,-(KSP) ;PUSH OLD PSW ONTO STACK
1605 002342 013746 001260 MOV TRAPPC,-(KSP) ;PUSH OLD PC ONTO STACK
1606 002346 052737 000004 172516 BIS #BIT2,MMR3 ;TURN D-SPACE BACK ON
1607 002354 000006 RTI ;RETURN TO MAIN PROGRAM

```



```

1608 .SBTTL TURN OFF T-BIT AND SAVE CURRENT PSW
1609 :*****
1610 :*
1611 :* THIS SUBROUTINE IS USED TO TURN OFF THE TRACE TRAP BIT IN
1612 :* THE PSW IF IT IS ON. THE PROCESSOR STATUS IS SAVED IN
1613 :* 'TBITPS' SO THAT THE PSW CAN BE RESTORED TO ITS PREVIOUS
1614 :* CONDITION WHEN CONDITIONS WARRANT T-BIT TRAPPING.
1615 :*
1616 :*****
1617 002356 033727 177776 000020 TOFF: BIT PSW,#TBIT ;IS THE T-BIT SET IN THE PSW?
1618 002364 001411 BEQ 1$ ;EXIT IF NO
1619 002366 013746 177776 MOV PSW,-(SP) ;PUSH PRESENT PSW ON THE STACK
1620 002372 011637 001274 MOV (SP),TBITPS ;ALSO SAVE IT IN 'TBITPS' FOR
1621 ;RESTORING LATER
1622 002376 042716 000020 BIC #TBIT,(SP) ;CLEAR THE T-BIT (BIT 4) IN THE PSW
1623 002402 012746 002410 MOV #1$,-(SP) ;PUSH PC OF 'RTS' ON STACK
1624 002406 000006 RTT ;'RETURN' TO 1$ WITH T-BIT OFF
1625 002410 000207 1$: RTS PC ;RETURN TO PROGRAM
    
```

```
1626 .SBTTL TURN ON T-BIT AND RESTORE PREVIOUS PSW
1627 :*****
1628 :
1629 : THIS SUBROUTINE IS USED TO RESTORE THE PROCESSOR STATUS
1630 : TO ITS PREVIOUS CONDITION BY RESTORING THE 'T-BIT PSW'
1631 : SAVED BY THE 'TOFF' SUBROUTINE IN THE 'TBITPS' LOCATION.
1632 :
1633 :*****
1634 002412 033727 001274 000020 TON: BIT TBITPS,#TBIT ;WAS T-BIT ON IN THE PREVIOUS PSW?
1635 002420 001410 BEQ 1$ ;EXIT IF NO
1636 002422 013746 001274 MOV TBITPS,-(SP) ;PUSH PREVIOUS PSW ON THE STACK
1637 002426 012737 000340 001274 MOV #340,TBITPS ;RESET THE 'TBITPS' LOCATION
1638 002434 012746 002442 MOV #1$,-(SP) ;PUSH PC OF 'RTS' ON STACK
1639 002440 000006 RTI ;'RETURN' TO 1$ WITH T-BIT RESTORED
1640 002442 000207 1$: RTS PC ;RETURN TO PROGRAM
```

```

1641 .SBTTL SUBROUTINE TO PREPARE ERLOOP, THE STACK AND EXIT TO ERROR
1642 *****
1643 *
1644 * THIS SUBROUTINE IS USED BY THE THREE SUBROUTINES MFPITS, MTPITS AND
1645 * MFPDTS WHEN AN ERROR IS CALLED. THE RETURN ADDRESS IS POPPED AS
1646 * RETURN IS NOT BACK TO THE SUBROUTINE, BUT TO THE TEST ERROR CALL. THIS
1647 * ROUTINE SETS LOCATION ERLOOP, DUPLICATES THE RETURN ADDRESS ON THE
1648 * STACK FOR POSSIBLE LOOP ON ERROR, AND CORRECTS THE RETURN ADDRESS TO
1649 * POINT TO THE ERROR CALL 4 LOCATIONS BACK FROM THE "TEST PASSED" LOCA-
1650 * TION DUPLICATED. NOTE THE "TEST PASSED" RETURN ON THE STACK IS NOT
1651 * TOUCHED FOR PROBABLE LATER USE WHEN LOOPING IS NO LONGER ENABLED.
1652 *****
1653
1654 002444 005726 ERPREP: TST (SP)+ ;POP RETURN OF THIS ROUTINE - NOT USED
1655 002446 012737 000001 002624 MOV #1,ERLOOP ;SET ERROR LOOPING FLAG INDICATING AN ERROR
1656 002454 011646 MOV (SP),-(SP) ;DUPLICATE RETURN PC AND
1657 002456 162716 000004 SUB #4,(SP) ;FUDGE FOR ERROR RETURN
1658 002462 000207 RTS PC ;RETURN TO THE ERROR CALL IN THE TEST
    
```

1659
 1660
 1661
 1662
 1663
 1664
 1665
 1666
 1667
 1668
 1669
 1670
 1671
 1672
 1673
 1674
 1675
 1676 002464 005037 002624
 1677 002470 011605
 1678 002472 012537 002532
 1679 002476 012537 002534
 1680 002502 062716 000010
 1681 002506 010637 001176
 1682 002512 011637 001200
 1683 002516 012737
 1684 002520 000000
 1685 002522 177776
 1686 002524 017737 000072 000250
 1687 002532 000000 000000
 1688 002536 012737 016142 000250
 1689 002544 012601
 1690 002546 020001
 1691 002550 001411
 1692 002552 012737 000340 177776
 1693 002560 013706 001176
 1694 002564 013716 001200
 1695 002570 004737 002444
 1696
 1697 002574 005737 002624
 1698 002600 001346
 1699 002602 012737 000340 177776
 1700 002610 013706 001176
 1701 002614 013716 001200
 1702 002620 000207
 1703 002622 000000
 1704 002624 000070

```

.SBTTL SUBROUTINE TO TEST MFPI INSTRUCTION
:*****
:
:  USAGE OF THE SUBROUTINE BELOW IS AS FOLLOWS:
:
:  MOV      #MFPIIP,$LPERR  :PUT ADDRESS OF LOOPING LOCATION IN $LPERR
:  MOV      #(NUMB),MFPIPS  :PUT PS PREVIOUS/CURRENT MODE VALUE IN THIS LOCATION
:  MOV      #TRAPRTN,MFPIVC :LOAD THE TEST EXCLUSIVE TRAP ROUTINE TO MFPIVC
:  MOV      #(NUMB),R2      :SETUP ADDRESS IN R2
:  (IT IS ASSUMED THAT ALL PDR S/PAR'S WILL ALSO BE SET UP PROPERLY)
:  JSR      PC,MFPITS       :GO DO THE TEST
:  MFPI     (MODE)          :MFPI INSTRUCTION TO TEST IS PUT HERE
:  NOP
:  ERROR    +(NUMB)         :NEEDED FOR MODES 1,2,4, & 5 *ONLY*
:  TST      (SP)+          :RETURN IS HERE FOR ERROR CALLS
:                                     :POP STACK - EXTRA RETURN INSTALLED BY SUBRTN NOT NEEDED
:*****
MFPITS: CLR      ERLOOP      :CLEAR ERROR LOOPING FLAG
:      MOV      (SP),R5      :MOVE STACK POINTER TO R5 FOR SUBROUTINE LOADING
:      MOV      (R5)+,MFPILD :MOVE MFPI INSTRUCTION TO LOCATION
:      MOV      (R5)+,MFPILD+2 :MOVE NEXT WORD TO LOCATION
:      ADD      #10,(SP)     :FUDGE RETURN TO "TEST PASSED" LOCATION
:      MOV      SP,$TMP0     :SAVE THE STACK POINTER AND
:      MOV      (SP),$TMP1   :SAVE THE RETURN ADDRESS
MFPILP: MOV      (PC)+,@(PC)+ :SETUP PSW AS DEFINED BY LOADED VALUE IN PRVMD1
MFPIPS: .WORD    0          :LOCATION TO HOLD SUPER/USER PREVIOUS MODE
:      .WORD    PSW         :LOAD THE PSW
:      MOV      @MFPIVC,MMVEC :SET M.M. VECTOR TO MFPIV1
MFPILD: .WORD    0,0        :LOCATIONS TO HOLD MFPI INSTRUCTION UNDER TEST
:      MOV      #MGMERR,MMVEC :SET M.M. VECTOR TO NORMAL ROUTINE
:      MOV      (SP)+,R1     :POP SUPERVISOR/USER/KERNEL STACK INTO R1
:      CMP      R0,R1       :WAS DATA FETCHED SAME AS STORED
:      BEQ      1$         :BRANCH IF CORRECT DATA WAS FETCHED
:      MOV      #340,PSW    :GO TO KERNEL MODE
:      MOV      $TMP0,SP    :RESET SP
:      MOV      $TMP1,(SP)  :RESET RETURN ADDRESS
:      JSR      PC,ERPREP   :GO PREPARE LOCATION ERLOOP, RETURN PC & EXIT TO ERROR
:FOR TIGHTER SCOPE LOOP, REPLACE 'JSR PC,ERPREP' WITH 'BR MFPIIP' = 000757
1$: TST      ERLOOP      :CHECK TO SEE IF THIS 'PASSED' IS IN AN ERROR LOOP
:      BNE      MFPIIP     :BRANCH BACK IF SO
:      MOV      #340,PSW    :GET BACK TO KERNEL MODE
:      MOV      $TMP0,SP    :RESET SP
:      MOV      $TMP1,(SP)  :RESET RETURN ADDRESS
:      RTS      PC         :EXIT - TEST PASSED
MFPIVC: .WORD    0          :LOCATION TO HOLD ADDRESS OF MM TRAP CATCHER
ERLOOP: .WORD    0          :LOCATION USED TO FLAG AN ERROR CONDITION
    
```

```

1705          .SBTTL SUBROUTINE TO CHECK THE MTP1 INSTRUCTION
1706          :*****
1707          :*
1708          :*          USAGE OF THE SUBROUTINE BELOW IS AS FOLLOWS:
1709          :*
1710          :*          MOV      #MTPILP,$LPERR ;PUT ADDRESS OF LOOPING LOCATION IN $LPERR
1711          :*          MOV      #(NUMB),MTPIPS ;PUT PS PREVIOUS/CURRENT MODE VALUE IN THIS LOCATION
1712          :*          MOV      #TRAPRTN,MTPIVC ;LOAD THE TEST EXCLUSIVE TRAP ROUTINE TO MTPIVC
1713          :*          MOV      #(NUMB),R2 ;SETUP ADDRESS IN R2
1714          :*          (IT IS ASSUMED THAT ALL PDR'S/PAR'S WILL ALSO BE SET UP PROPERLY)
1715          :*          JSR      PC,MTPITS ;GO DO THE TEST
1716          :*          MTP1     (MODE) ;MTP1 INSTRUCTION TO TEST IS PUT HERE
1717          :*          NOP ;NFEDED FOR MODES 1,2,4, & 5 *ONLY*
1718          :*          ERROR   +(NUMB) ;RETURN IS HERE FOR ERROR CALLS
1719          :*          TST      (SP)+ ;POP STACK - EXTRA RET IN *INSTALLED BY SUBRTN NOT NEEDED
1720          :*
1721          :*****
1722 002626 005037 002624 MTPITS: CLR      ERL00P ;CLEAR ERROR LOOPING FLAG
1723 002632 011605          MOV      (SP),R5 ;MOVE STACK POINTER TO R5 FOR LOADING
1724 002634 012537 002676          MOV      (R5)+,MTPILD ;MOVE MTP1 TO LOCATION
1725 002640 012537 002700          MOV      (R5)+,MTPILD+2 ;MOVE NEXT WORD TO LOCATION
1726 002644 012537 002720          MOV      (R5)+,MTPITA ;MOVE NUMBER TO ADD TO R2 TO LOCATION
1727 002650 062716 000012          ADD      #12,(SP) ;FUDGE RETURN TO "TEST PASSED" LOCATION
1728 002654 012737          MTPILP: MOV      (PC)+,@(PC)+ ;MAKE PREVIOUS MODE USER/SUPERVISOR
1729 002656 000000          MTP1PM: .WORD 0 ;LOCATION TO HOLD PREVIOUS MODE USER OR SUPER
1730 002660 177776          .WORD PSW ;LOAD THE PSW
1731 002662 010046          MOV      RC,-(KSP) ;PUSH TEST DATA ON KERNEL STACK
1732 002664 105037 172310          CLR     KIPDR4 ;MAKE KERNEL I PAGE 4 NON-RESIDENT
1733 002670 017737 000050 000250          MOV      @MTPIVC,MMVEC ;SET MM TO VECTOR IN MTPIVC
1734 002676 000000 000000          MTPILD: .WORD 0,0 ;LOCATIONS USED TO PLACE THE MPT1 INSTRUCTION
1735 002702 012737 016142 000250          MOV      #MMGERR,MMVEC ;RESTORE MM VECTOR TO NORMAL ROUTINE
1736 002710 112737 000006 172310          MOV     #006,KIPDR4 ;MAKE KERNEL PAGE 4 RESIDENT
1737 002716 062702          ADD      (PC)+,R2 ;ADD NUMBER TO R2 TO UNDO INCREMENT/DECREMENT
1738 002720 000000          MTPITA: .WORD 0 ;LOCATION TO HOLD -2, 0, +2 OR 10000
1739 002722 011201          MOV      (R2),R1 ;READ FROM ADDRESS 60000
1740 002724 020001          CMP      R0,R1 ;SEE IF DATA WAS STORED AT CORRECT PLACE
1741 002726 001402          BEQ     1$ ;BRANCH IF IT WAS
1742 002730 004737 002444          JSR     PC,ERPREP ;GO PREPARE LOCATION ERL00P, RETURN PC & EXIT TO ERROR
1743          ;FOR TIGHTER ERROR LOOP, REPLACE "JSR PC,ERPREP" WITH "BR MTPILP" = 000754
1744 002734 005737 002624          1$: TST     ERL00P ;SEE IF THIS "PASSED" WAS IN AN ERROR LOOP
1745 002740 001365          BNE     MTPILP ;BRANCH BACK IF SO
1746 002742 000207          RTS     PC ;EXIT - TEST PASSED
1747 002744 000000          MTPIVC: .WORD 0 ;LOCATION TO HOLD MM VECTOR TO LOAD

```

```

1748                                     .SBTTL SUBROUTINE TO CHECK THE MFPD INSTRUCTION
1749                                     :*****
1750                                     :*
1751                                     :*   USAGE OF THE SUBROUTINE BELOW IS AS FOLLOWS:
1752                                     :*
1753                                     :*   MOV   #MFPDLP,$LPERR ;PUT ADDRESS OF LOOPING LOCATION IN $LPERR
1754                                     :*   MOV   #(NUMB),MFPDPS ;PUT PS PREVIOUS/CURRENT MODE VALUE IN THIS LOCATION
1755                                     :*   MOV   #TRAPRTN,MFPDVC ;LOAD THE TEST EXCLUSIVE TRAP ROUTINE TO MFPDVC
1756                                     :*   MOV   #(NUMB),R2     ;SETUP ADDRESS IN R2
1757                                     :*   (IT IS ASSUMED THAT ALL PDR'S/PAR'S WILL ALSO BE SET UP PROPERLY)
1758                                     :*   JSR   PC,MFPDTS     ;GO DO THE TEST
1759                                     :*   MFPD  (MODE)       ;MFPD INSTRUCTION TO TEST IS PUT HERE
1760                                     :*   NOP                               ;NEEDED FOR MODES 1,2,4, & 5 *ONLY*
1761                                     :*   ERROR +(NUMB)        ;RETURN IS HERE FOR ERROR CALLS
1762                                     :*   TST   (SP)+          ;POP STACK - EXTRA RETURN INSTALLED BY SUBRTN NOT NEEDED
1763                                     :*
1764                                     :*****
1765 002746 005037 002624 MFPDTS: CLR   ERLOOP      ;CLEAR THE ERROR LOOPING FLAG
1766 002752 011605        MOV   (SP),R5      ;MOVE RETURN ADDRESS TO R5 FOR LOADING
1767 002754 012537 003004 MOV   (R5)+,MFPDLD ;MOVE MFPD INSTRUCTION TO THE LOCATION BELOW
1768 002760 012537 003006 MOV   (R5)+,MFPDLD+2 ;MOVE NEXT WORD TO THE NEXT LOCATION
1769 002764 062716 000010 ADD   #10,(SP)      ;FUDGE RETURN TO THE 'TEST PASSED' LOCATION
1770 002770 012737        MFPDLP: MOV  (PC)+,@(PC)+ ;SET UP PSW AS LOADED BY TEST RUNNING THIS SUBROUTINE
1771 002772 000000        MFPDPS: .WORD 0 ;LOCATION TO HOLD NUMBER TO LOAD THE PSW
1772 002774 177776        .WORD PSW ;LOAD THE PSW
1773 002776 017737 000036 000250 MOV  @MFPDVC,MMVEC ;SET M.M. VECTOR TO TRAP CATCHER OF THE TEST
1774 003004 000000 000000 MFPDLD: .WORD 0,0 ;LOCATIONS TO HOLD THE MFPD INSTRUCTION
1775 003010 012737 016142 000250 MOV  #MGMERR,MMVEC ;RESTORE MM VECTOR TO NORMAL ROUTINE
1776 003016 012601        MOV  (SP)+,R1 ;POP K/S/U STACK INTO R1
1777 003020 020001        CMP   R0,R1 ;WAS DATA FETCHED SAME AS DATA STORED
1778 003022 001402        BEQ   1$ ;BRANCH IF CORRECT DATA WAS FETCHED
1779 003024 004737 002444 JSR   PC,ERPREP ;GO PREPARE ERLOOP, STACK AND EXIT TO ERROR CALL
1780 003030 005737 002624 1$: TST  ERLOOP ;SEE IF THIS 'PASSED' IS IN AN ERROR LOOP
1781 003034 001355        BNE  MFPDLP ;BRANCH BACK IF SO
1782 003036 000207        RTS   PC ;EXIT - TEST PASSED
1783 003040 00000U        MFPDVC: .WORD 0 ;LOCATION TO HOLD MM VECTOR OF TEST

```

1785

.SBTTL SCOPE HANDLER ROUTINE

```

:*****
:*THIS ROUTINE CONTROLS THE LOOPING OF SUBTESTS. IT WILL INCREMENT
:*AND LOAD THE TEST NUMBER($STSTM) INTO THE DISPLAY REG.(DISPLAY<7:0>)
:*AND LOAD THE ERROR FLAG ($ERFLG) INTO DISPLAY<15:08>
:*THE SWITCH OPTIONS PROVIDED BY THIS ROUTINE ARE:
:*SW14=1      LOOP ON TEST
:*SW09=1      LOOP ON ERROR
:*SW08=1      LOOP ON TEST IN SWR<7:0>
:*CALL
:*          SCOPE          ;;SCOPE=IOT
    
```

```

003042          $SCOPE:
003042 104410          CKSWR          ;;TEST FOR CHANGE IN SOFT-SWR
003044 032777 040000 176066 1$: BIT #BIT14,@SWR          ;;LOOP ON PRESENT TEST
003052 J01077          BNE $OVER          ;;YES IF SW14=1
          ;#####START OF CODE FOR THE XOR TESTER#####
003054 000416          $XTSTR: BR 6$          ;;IF RUNNING ON THE 'XOR' TESTER CHANGE
          MOV @#ERRVEC,-(SP)          ;;THIS INSTRUCTION TO A 'NOP' (NOP=240)
003056 013746 000004          MOV #5,@#ERRVEC          ;;SAVE THE CONTENTS OF THE ERROR VECTOR
003062 012737 003102 000004          TST @#177060          ;;SET FOR TIMEOUT
003070 005737 177060          MOV (SP)+,@#ERRVEC          ;;TIME OUT ON XOR?
003074 012637 000004          BR $SVLAD          ;;RESTORE THE ERROR VECTOR
003100 000446          5$: CMP (SP)+,(SP)+          ;;GO TO THE NEXT TEST
003102 022626          MOV (SP)+,@#ERRVEC          ;;CLEAR THE STACK AFTER A TIME OUT
003104 012637 000004          BR 7$          ;;RESTORE THE ERROR VECTOR
003110 000434          6$;#####END OF CODE FOR THE XOR TESTER#####
003112 032777 000400 176020          BIT #BIT08,@SWR          ;;LOOP ON SPEC. TEST?
003120 001404          BEQ 2$          ;;BR IF NO
003122 127737 176012 001J2          CMPB @SWR,$STSTM          ;;ON THE RIGHT TEST? SWR<7:0>
003130 001450          BEQ $OVER          ;;BR IF YES
003132 013737 177766 003206 2$: MOV 177766,CPSAVE          ;;MOVE CPU ERR REG VALUE TO LOC FOR TST ;DPM001
003140 032737 000001 003266          BIT #BIT00,CPSAVE          ;;SEE IF THE POWER MONITOR BIT IS ON ;DPM001
003146 001406          BEQ 2000$          ;;BRANCH TO CONTINUE ROUTINE IF CLEAR ;DPM001
003150 042737 000001 177766          BIC #BIT00,177766          ;;CLEAR THE BIT FOUND TO BE SET ;DPM001
003156 104177          EMT +177          ;;CALL SPECIAL POWER FAIL BIT ERROR CALL ;DPM001
003160 105037 001103          CLRB $ERFLG          ;;CLEAR THE ERROR FLAG ;DPM001
003164 105737 001103          2000$: TSTB $ERFLG          ;;HAS AN ERROR OCCURRED?
003170 001412          BEQ $SVLAD          ;;BR IF NO
003172 032777 001000 175740          BIT #BIT09,@SWR          ;;LOOP ON ERROR?
003200 001404          BEQ 4$          ;;BR IF NO
003202 013737 001110 001106 7$: MOV $LPERR,$LPADR          ;;SET LOOP ADDRESS TO LAST SCOPE
003210 000420          BR $OVER
003212 105037 001103          4$: CLRB $ERFLG          ;;ZERO THE ERROR FLAG
003216 105237 001102          $SVLAD: INCB $STSTM          ;;COUNT TEST NUMBERS
003222 113737 001102 001230          MOVB $STSTM,$TESTN          ;;SET TEST NUMBER IN APT MAILBOX
003230 011637 001106          MOV (SP),$LPADR          ;;SAVE SCOPE LOOP ADDRESS
003234 011637 001110          MOV (SP),$LPERR          ;;SAVE ERROR LOOP ADDRESS
003240 005037 001212          CLR $ESCAPE          ;;CLEAR THE ESCAPE FROM ERROR ADDRESS
003244 112737 000001 001115          MOVB #1,$ERMAX          ;;ONLY ALLOW ONE(1) ERROR ON NEXT TEST
003252 013777 001102 175662 $OVER: MOV $STSTM,@DISPLAY          ;;DISPLAY TEST NUMBER
003260 013716 001106          MOV $LPADR,(SP)          ;;FUDGE RETURN ADDRESS
003264 000002          RTI          ;;FIXES PS
003266 000000          CPSAVE: .WORD 0          ;;LOCATION TO SAVE CPU ERR REG CONTENTS ;DPM001
    
```

1787

.SPTI ERROR HANDLER ROUTINE

```

:*****
:*THIS ROUTINE WILL INCREMENT THE ERROR FLAG AND THE ERROR COUNT,
:*SAVE THE ERROR ITEM NUMBER AND THE ADDRESS OF THE ERROR CALL
:*AND GO TO ERRYP ON ERROR
:*THE SWITCH OPTIONS PROVIDED BY THIS ROUTINE ARE:
:*SW15=1    HALT ON ERROR
:*SW13=1    INHIBIT ERROR TYPEOUTS
:*SW10=1    BELL ON ERROR
:*SW09=1    LOOP ON ERROR
:*CALL
:*          ERROR    N          ;;ERROR=EMT AND N=ERROR ITEM NUMBER
  
```

```

003270 105037 003646 $ERROR: CLRB    IBSAVE          ;CLEAR THE ITEM BYTE SAVE LOCATION ;DPM001
003274 104410          CKSWR          ;:TEST FOR CHANGE IN SOFT-SWR
003276 010037 001162          MOV     R0,$REG0      ;SAVE THE CONTENTS OF R0
003302 010137 001164          MOV     R1,$REG1      ;SAVE THE CONTENTS OF R1
003306 010237 001166          MOV     R2,$REG2      ;SAVE THE CONTENTS OF R2
003312 010337 001170          MOV     R3,$REG3      ;SAVE THE CONTENTS OF R3
003316 010437 001172          MOV     R4,$REG4      ;SAVE THE CONTENTS OF R4
003322 010537 001174          MOV     R5,$REG5      ;SAVE THE CONTENTS OF R5
003326 113737 001102 001254          MOVVB  $TSTNM,TESTNO ;SAVE THE TEST NUMBER
003334 105237 001103          7$:    INCB    $ERFLG      ;:SET THE ERROR FLAG
003340 001775          BEQ     7$           ;:DON'T LET THE FLAG GO TO ZERO
003342 013777 001102 175572          MOV     $TSTNM,@DISPLAY ;:DISPLAY TEST NUMBER AND ERROR FLAG
003350 032777 002000 175562          BIT     #BIT10,@SWR    ;:BELL ON ERROR?
003356 001402          BEQ     1$           ;:NO - SKIP
003360 104401 001214          TYPE   ,$BELL        ;:RING BELL
003364 005237 001112          1$:    INC     $ERTTL      ;:COUNT THE NUMBER OF ERRORS
003370 011637 001116          MOV     (SP),$ERRPC   ;:GET ADDRESS OF ERROR INSTRUCTION
003374 162737 000002 001116          SUB     #2,$ERRPC
003402 117737 175510 001114          MOVVB  @ $ERRPC,$ITEMB ;:STRIP AND SAVE THE ERROR ITEM CODE
003410 122737 000177 001114          CMPB   #177,$ITEMB   ;:SEE IF THIS IS THE POWER FAIL CALL ;DPM001
003415 001426          BEQ     1001$       ;:BRANCH AROUND ROUTINE IF IT IS ;DPM001
003420 105737 003646          TSTB   IBSAVE        ;:SEE IF THIS IS THE 2ND ERROR CALL ;DPM001
003424 001021          BNE    1000$       ;:BRANCH IF SO ;DPM001
003426 013737 177766 003266          MOV     177766,CPSAVE ;:MOVE CPU ERR REG TO CPSAVE FOR TEST ;DPM001
003434 032737 000001 003266          BIT     #BIT00,CPSAVE ;:SEE IF POWER MONITOR BIT IS SET ;DPM001
003442 001414          BEQ     1001$       ;:BRANCH IF OK ;DPM001
003444 042737 000001 177766          BIC     #BIT00,177766 ;:CLEAR THE BIT FOUND SET ;DPM001
003452 113737 001114 003646          MOVVB  $ITEMB,IBSAVE ;:MAKE IBSAVE NON-ZERO FOR DUAL CALL ;DPM001
003460 112737 000177 001114          MOVVB  #177,$ITEMB   ;:SET $ITEMB TO SPECIAL POWER FAIL PNTR ;DPM001
003466 000402          BR     1001$       ;:BRANCH OVER IBSAVE CLEARING ;DPM001
003470 105037 003646          1000$: CLRB    IBSAVE        ;:CLEAR IBSAVE SO AFTER 2ND ERROR, EXIT ;DPM001
003474          1001$:
003474 032777 020000 175436          BIT     #BIT13,@SWR   ;:SKIP TYPEOUT IF SET
003502 001004          BNE    20$         ;:SKIP TYPEOUTS
003504 004737 003650          JSR    PC,ERRYP     ;:GO TO USER ERROR ROUTINE
003510 104401 001221          TYPE   ,$CRLF
003514          20$:
003514 122737 000001 001244          CMPB   #APTENV,$ENV   ;:RUNNING IN APT MODE
003522 001007          BNE    2$         ;:NO,SKIP APT ERROR REPORT
003524 113737 001114 003536          MOVVB  $ITEMB,21$    ;:SET ITEM NUMBER AS ERROR NUMBER
003532 004737 006014          JSR    PC,$ATY4      ;:REPORT FATAL ERROR TO APT
003536          21$:          .BYTE  0
003537          .BYTE  0
  
```


ERROR HANDLER ROUTINE

```

003540 000777          22$: BR      22$      ;;APT ERROR LOOP
003542 105737 003646  2$:  TSTB   IBSAVE  ;;SEE IF POWER FAIL ERROR CALL      ;DPM001
003546 001005          3$:  BNE     3$      ;;BRANCH IF NOT - HALT NOT ALLOWED  ;DPM001
003550 005777 175364  @SWR   ;;HALT ON ERROR
003554 100002          3$:  BPL     3$      ;;SKIP IF CONTINUE
003556 000000          HALT   ;;HALT ON ERROR!
003560 104410          CKSWR  ;;TEST FOR CHANGE IN SOFT-SWR
003562 032777 001000 175350 3$:  BIT     #BIT09,@SWR ;;LOOP ON ERROR SWITCH SET?
003570 001405          4$:  EEQ     4$      ;;BR IF NO
003572 105737 003646  TSTB   IBSAVE  ;;SEE IF THIS IS THE PWR MNTR BIT ERROR ;DPM001
003576 001256          BNE     7$      ;;BRANCH BACK IF SO - FUDGING NOT ALLOWED;DPM001
003600 013716 001110  MOV     $LPERR,(SP) ;;FUDGE RETURN FOR LOOPING
003604 005737 001212  4$:  TST     $ESCAPE ;;CHECK FOR AN ESCAPE ADDRESS
003610 001405          BEQ     5$      ;;BR IF NONE
003612 105737 003646  TSTB   IBSAVE  ;;SEE IF THIS IS THE PWR MNTR BIT ERROR ;DPM001
003616 001246          BNE     7$      ;;BRANCH BACK IF SO - FUDGING NOT ALLOWED;DPM001
003620 013716 001212  MOV     $ESCAPE,(SP) ;;FUDGE RETURN ADDRESS FOR ESCAPE
003624          5$:
003624 022737 036252 000042  CMP     #$ENDAD,@#42 ;;ACT-11 AUTO-ACCEPT?
003632 001001          BNE     6$      ;;BRANCH IF NO
003634 000000          HALT   ;;YES
003636          6$:
003636 105737 003646  TSTB   IBSAVE  ;;SEE IF THIS IS THE PWR FAIL ERROR CALL ;DPM001
003642 001234          BNE     7$      ;;BRANCH BACK TO CALL ORIGINAL ERR IF SO ;DPM001
003644 000002          RTI     ;;RETURN
003646 000000  IBSAVE: .WORD 0 ;;LOC'N TO HOLD $ITEMB DURING DUAL ERR ;DPM001

```

```

1789 003650 104401 001221      ERRYP: TYPE      ,SCLF      ;TYPE <CRLF>
1790 003654 010046              MOV      RO,-(KSP)    ;SAVE RO.
1791 003656 005000              CLR      RO          ;PICKUP THE ITEM INDEX
1792 003660 153700 001114      BISB    @#$ITEMB,RO
1793 003664 001004              BNE     1$          ;IF ITEM NUMBER IS ZERO, JUST
1794                                ;TYPE THE PC OF THE ERROR
1795 003666 013746 001116      MOV      $ERRPC,-(SP) ;:SAVE $ERRPC FOR TYPEOUT
1796                                ;:ERROR ADDRESS
1797 003672 104402              TYPDC   ;:GO TYPE--OCTAL ASCII(ALL DIGITS)
1798 003674 000530              BR      13$        ;GET OUT
1799 003676 122700 000177      1$:     CMPB    #177,RO ;SEE IF THIS ERROR CALL IS THE POWER MONITOR BIT CALL
1800 003700 001003              BNE     100$       ;BRANCH IF NOT
1801 003704 012700 004172      MOV      #PFECWS,RO  ;MOVE ADDRESS OF POWER MONITOR BIT ERROR TO RO
1802 003710 000406              BR      110$       ;BRANCH TO CALL THE ERROR
1803 003712 005300      100$:   DEC     RO          ;ADJUST THE INDEX SO THAT IT WILL
1804 003714 006300              ASL     RO          ;WORK FOR THE ERROR TABLE.
1805 003716 006300              ASL     RO
1806 003720 006300              ASL     RO
1807 003722 062700 001320      ADD      #$ERRTB,RO  ;FORM TABLE POINTER
1808 003726 012037 003736      110$:   MOV      (RO)+,2$ ;PICKUP 'ERROR MESSAGE' POINTER
1809 003732 001404              BEQ     3$          ;SKIP TYPEOUT IF NO POINTER
1810 003734 104401              TYPE   ;TYPE THE 'ERROR MESSAGE'
1811 003736 000000      2$:     .WORD  0        ;'ERROR MESSAGE' POINTER GOES HERE
1812 003740 104401 001221      TYPE   ,SCLF       ;:'CARRIAGE RETURN' & 'LINE FEED'
1813 003744 012037 003754      3$:     MOV      (RO)+,4$ ;PICKUP 'DATA HEADER' POINTER
1814 003750 001404              BEQ     5$          ;SKIP TYPEOUT IF 0
1815 003752 104401              TYPE   ;TYPE THE 'DATA HEADER'
1816 003754 000000      4$:     .WORD  0        ;'DATA HEADER' POINTER GOES HERE
1817 003756 104401 001221      TYPE   ,SCLF       ;:'CARRIAGE RETURN' & 'LINE FEED'
1818 003762 010146      5$:     MOV      R1,-(KSP) ;SAVE R1
1819 003764 012001      MOV      (R0)+,R1  ;PICKUP 'DATA TABLE' POINTER
1820 003766 001472      BEQ     12$        ;BR IF NO DATA TO BE TYPED
1821 003770 012000      MOV      (R0)+,RO  ;PICKUP 'DATA FORMAT' POINTER
1822 003772 105710      6$:     TSTB    (R0)     ;IS IT FORMAT 0?
1823 003774 001003      BNE     7$          ;BR IF NO
1824                                ;*THIS CODE IS FOR OCTAL (16-BIT) FORMAT (DF=0)
1825 003776 013146      MOV      @ (R1)+,-(SP) ;:SAVE @ (R1)+ FOR TYPEOUT
1826 004000 104402              TYPDC   ;:GO TYPE--OCTAL ASCII(ALL DIGITS)
1827 004002 000456              BR      11$
1828                                ;*THIS CODE IS FOR DECIMAL FORMAT (DF=1)
1829 004004 121027 000001      7$:     CMPB    (R0),#1    ;IS IT FORMAT 1?
1830 004010 001003              BNE     8$          ;BRANCH IF NO
1831 004012 013146      MOV      @ (R1)+,-(SP) ;:SAVE @ (R1)+ FOR TYPEOUT
1832 004014 104405              TYPDS   ;:GO TYPE--DECIMAL ASCII WITH SIGN
1833 004016 000450              BR      11$
1834                                ;*THIS CODE IS FOR BINARY FORMAT (DF=2)
1835 004020 121027 000002      8$:     CMPB    (R0),#2    ;IS IT FORMAT 2
1836 004024 001003              BNE     9$          ;BRANCH IF NO
1837 004026 013146      MOV      @ (R1)+,-(SP) ;:SAVE @ (R1)+ FOR TYPEOUT
1838 004030 104406              TYPBN   ;:GO TYPE--BINARY ASCII
1839 004032 000442              BR      11$
1840                                ;*THIS CODE IS FOR OCTAL (22-BIT) FORMAT (DF=3)
1841 004034 121027 000003      9$:     CMPB    (R0),#3    ;IS IT FORMAT 3?
1842 004040 001011              BNE    15$         ;BRANCH IF NO
1843 004042 012146      MOV      (R1)+,-(KSP) ;PUT ADDRESS OF FIRST LOC. ON STACK
1844 004044 004737 007066      JSR     PC,$DB20   ;CONVERT TWO LOCS. TO AN ASCII STRING
1845 004050 062716 009003      ADD     #3,(KSP)   ;ONLY NEED 8 CHARACTERS NOT 11

```

```

1846 004054 012637 004062      MOV      (KSP)+,10$      ;PUT ADDRESS OF ASCII CHARS. AT 10$
1847 004060 104401              TYPE                      ;TYPE OCTAL VALUE OF 22-BIT BINARY NO.
1848 004062 000000      10$: .WORD      0
1849                      ;*THIS CODE IS FOR OCTAL (22-BIT) FORMAT FOR A PAR LEFT SHIFTED 6 (DF=4)
1850 004064 010246      15$: MOV      R2,-(KSP)      ;SAVE R2 ON STACK
1851 004066 010346      MOV      R3,-(KSP)      ;SAVE R3 ON STACK
1852 004070 013103      MOV      @ (R1)+,R3      ;LOAD DATA WORD INTO R3
1853 004072 005002      CLR      R2              ;R2 HOLDS UPPER SIX BITS OF NUMBER
1854 004074 073227 000006      ASHC     #6,R2          ;SHIFT VALUE LEFT 6 TIMES
1855 004100 010237 001206      MOV      R2,$TMP4       ;HOLDS LOWER 16 BITS OF ADDRESS
1856 004104 010337 001210      MOV      R3,$TMP5       ;HOLDS UPPER 6 BITS OF ADDRESS
1857 004110 012746 001206      MOV      #$TMP4,-(KSP)   ;PUT ADDRESS OF LOWER BITS ONTO STACK
1858 004114 004737 007066      JSR      PC,$DB20       ;CONVERT TWO LOCS. TO AN ASCII STRING
1859 004120 062716 000003      ADD      #3,(KSP)       ;ONLY NEED 8 CHARACTERS NOT 11
1860 004124 012637 004132      MOV      (KSP)+,16$     ;PUT ADDRESS OF ASCII CHARS. AT 16$
1861 004130 104401              TYPE                      ;TYPE OCTAL VALUE OF 22-BIT BINARY NO.
1862 004132 000000      16$: .WORD      0
1863 004134 012603      MOV      (KSP)+,R3      ;RESTORE R3
1864 004136 012602      MOV      (KSP)+,R2      ;RESTORE R2
1865 004140 005711      11$: TST      (R1)        ;IS THERE ANOTHER NUMBER?
1866 004142 001404              BEQ      12$            ;BR IF NO
1867 004144 104401 004166      TYPE     ,14$          ;TYPE TWO(2) SPACES
1868 004150 105720      TSTB    (R0)+          ;POINT TO NEW 'DATA FURMAT'
1869 004152 000707      BR      6$             ;LOOP
1870 004154 012601      12$: MOV      (KSP)+,R1   ;RESTORE R1
1871 004156 012600      13$: MOV      (KSP)+,R0   ;RESTORE R0
1872 004160 104401 001221      TYPE     ,$CRLF        ;'CARRIAGE RETURN' & 'LINE FEED'
1873 004164 000207      RTS     PC              ;RETURN
1874 004166      040      040      000      14$: .ASCIZ  / /          ;TWO(2) SPACES
1875 004171      000
1876 004172 004202 004242 004272 PFECWS: .WORD  PFECFM,PFECDH,PFECDT,PFECDF
1877 004202 004302      120      117      127      PFECFM: .ASCIZ  ?POWER MONITOR BIT WAS FOUND SET?
1878 004205      105      122      040
1879 004210      115      117      116
1880 004213      111      124      117
1881 004216      122      040      102
1882 004221      111      124      040
1883 004224      127      101      123
1884 004227      040      106      117
1885 004232      125      116      104
1886 004235      040      123      105
1887 004240      124      000
1888 004242      124      105      123      PFECDH: .ASCIZ  ?TESTNO ERR PC CPUERR?
1889 004245      124      116      117
1890 004250      040      040      105
1891 004253      122      122      040
1892 004256      120      103      040
1893 004261      040      103      120
1894 004264      125      105      122
1895 004267      122      000
1896 1879
1897 1880 004272 001230 001116 003266 PFECDT: .EVEN
1898 004300 000000              .WORD  $TESTN,$ERRPC,$PSAVE,0
1899 1881 004302 000      000      000      PFECDF: .BYTE  0,0,0,0
1900 004305 000

```

1882

```

.SBTTL TTY INPUT ROUTINE
:*****
.ENABL LSB
:*****
*SOFTWARE SWITCH REGISTER CHANGE ROUTINE.
*ROUTINE IS ENTERED FROM THE TRAP HANDLER, AND WILL
*SERVICE THE TEST FOR CHANGE IN SOFTWARE SWITCH REGISTER TRAP CALL
*WHEN OPERATING IN TTY FLAG MODE.
004306 022737 000176 001140 $CKSWR: CMP #SWREG,SWR ;;IS THE SOFT-SWR SELECTED?
004314 001114 BNE 15$ ;;BRANCH IF NO
004316 105777 174622 TSTB @STKS ;;CHAR THERE?
004322 100111 BPL 15$ ;;IF NO, DON'T WAIT AROUND
004324 117746 174616 MOVR @STKB,-(SP) ;;SAVE THE CHAR
004330 042716 177600 BIC #^C177,(SP) ;;STRIP-OFF THE ASCII
004334 022726 000007 CMP #7,(SP)+ ;;IS IT A CONTROL G?
004340 001102 BNE 15$ ;;NO, RETURN TO USER
004342 123727 001134 000001 CMPB $AUTOB,#1 ;;ARE WE RUNNING IN AUTO-MODE?
004350 001476 BEQ 15$ ;;BRANCH IF YES
004352 104401 005253 TYPE .SCNTLG ;;ECHO THE CONTROL-G (^G)
004356 104401 005260 $GTSWR: TYPE .SMSWR ;;TYPE CURRENT CONTENTS
004362 013746 000176 MOV SWREG,-(SP) ;;SAVE SWREG FOR TYPEOUT
004366 104402 TYPOC ;;GO TYPE--OCTAL ASCII(ALL DIGITS)
004370 104401 005271 TYPE .SMNEW ;;PROMPT FOR NEW SWR
004374 005046 19$: CLR -(SP) ;;CLEAR COUNTER
004376 005046 CLR -(SP) ;;THE NEW SWR
004400 105777 174540 7$: TSTB @STKS ;;CHAR THERE?
004404 100375 BPL 7$ ;;IF NOT TRY AGAIN
004406 117746 174534 MOVB @STKB,-(SP) ;;PICK UP CHAR
004412 042716 177600 BIC #^C177,(SP) ;;MAKE IT 7-BIT ASCII
004416 021627 000003 CMP (SP),#3 ;;IS IT A CONTROL-C?
004422 001015 BNE 9$ ;;BRANCH IF NOT
004424 104401 001312 TYPE .SCNTLC ;;YES, ECHO CONTROL-C (^C)
004430 062706 000006 ADD #6,SP ;;CLEAN UP STACK
004434 123727 001135 000001 CMPB $INTAG,#1 ;;REENABLE TTY KEYBOARD INTERRUPTS?
004442 001003 BNE 8$ ;;BRANCH IF NO
004444 012777 000100 174472 MOV #100,@STKS ;;ALLOW TTY KEYBOARD INTERRUPTS
004452 000137 005302 8$: JMP CNTRLC ;;CONTROL-C RESTART
004456 021627 000025 9$: CMP (SP),#25 ;;IS IT A CONTROL-U?
004462 001005 BNE 10$ ;;BRANCH IF NOT
004464 104401 005246 TYPE .SCNTLU ;;YES, ECHO CONTROL-U (^U)
004470 062706 000006 20$: ADD #6,SP ;;IGNORE PREVIOUS INPUT
004474 000737 BR 19$ ;;LET'S TRY IT AGAIN
004476 021627 000015 10$: CMP (SP),#15 ;;IS IT A <CR>?
004502 001022 BNE 16$ ;;BRANCH IF NO
004504 005766 000004 TST 4(SP) ;;YES, IS IT THE FIRST CHAR?
004510 001403 BEQ 11$ ;;BRANCH IF YES
004512 016677 000002 174420 MOV 2(SP),@SWR ;;SAVE NEW SWR
004520 062706 000006 11$: ADD #6,SP ;;CLEAR UP STACK
004524 104401 001221 14$: TYPE .SCRLF ;;ECHO <CR> AND <LF>
004530 123727 001135 000001 CMPB $INTAG,#1 ;;RE-ENABLE TTY KBD INTERRUPTS?
004536 001003 BNE 15$ ;;BRANCH IF NOT
004540 012777 000100 174376 MOV #100 @STKS ;;RE-ENABLE TTY KBD INTERRUPTS
004546 000002 15$: RTI ;;RETURN
004550 004737 005644 16$: JSR PC,$TYPEC ;;ECHO CHAR
004554 021627 000060 CMP (SP),#60 ;;CHAR < 0?
004560 002420 BLT 18$ ;;BRANCH IF YES
004562 021627 000067 CMP (SP),#67 ;;CHAR > 7?

```

```

004566 003015          BGT      18$          ;;BRANCH IF YES
004570 042726 000060  BIC      #60,(SP)+    ;;STRIP-OFF ASCII
004574 005766 000002  TST      2(SP)        ;;IS THIS THE FIRST CHAR
004600 001403          BEQ      17$          ;;BRANCH IF YES
004602 006316          ASL      (SP)         ;;NO, SHIFT PRESENT
004604 006316          ASL      (SP)         ;;CHAR OVER TO MAKE
004606 006316          ASL      (SP)         ;;ROOM FOR NEW ONE.
004610 005266 000002  17$: INC      2(SP)        ;;KEEP COUNT OF CHAR
004614 056616 177776  BIS      -2(SP),(SP)  ;;SET IN NEW CHAR
004620 000667          BR       7$          ;;GET THE NEXT ONE
004622 104401 001220  18$: TYPE  $QUES      ;;TYPE ?<CR><LF>
004626 000720          BR       20$         ;;SIMULATE CONTROL-!

.DSABL  LSB
*****
*THIS ROUTINE WILL INPUT A SINGLE CHARACTER FROM THE TTY
*CALL:
*      RDCHR          ;;INPUT A SINGLE CHARACTER FROM THE TTY
*      RETURN HERE    ;;CHARACTER IS ON THE STACK
*                      ;;WITH PARITY BIT STRIPPED OFF

004630 011646          $RDCHR: MOV      (SP),-(SP)  ;;PUSH DOWN THE PC
004632 016666 000004 000002  MOV      4(SP),2(SP)  ;;SAVE THE PS
004640 105777 174300  1$: TSTB   @STKS      ;;WAIT FOR
004644 100375          BPL      1$          ;;A CHARACTER
004646 117766 174274 000004  MOVB   @STKB,4(SP)    ;;READ THE TTY
004654 042766 177600 000004  BIC      #^C<177>,4(SP) ;;GET RID OF JUNK IF ANY
004662 026627 000004 000023  CMP      4(SP),#23    ;;IS IT A CONTROL-S?
004670 001013          BNE      3$          ;;BRANCH IF NO
004672 105777 174246  2$: TSTB   @STKS      ;;WAIT FOR A CHARACTER
004676 100375          BPL      2$          ;;LOOP UNTIL ITS THERE
004700 117746 174242  MOVB   @STKB,-(SP)    ;;GET CHARACTER
004704 042716 177600  BIC      #^C177,(SP)  ;;MAKE IT 7-BIT ASCII
004710 022627 000021  CMP      (SP)+,#21    ;;IS IT A CONTROL-Q?
004714 001366          BNE      2$          ;;IF NOT DISCARD IT
004716 000750          BR       1$          ;;YES, RESUME
004720 026627 000004 000021  3$: CMP      4(SP),#9XON ;;IS IT A RANDOM XON?
004726 001744          BEQ      1$          ;;BRANCH IF YES
004730 026627 000004 000140  CMP      4(SP),#140   ;;IS IT UPPER CASE?
004736 002407          BLT      4$          ;;BRANCH IF YES
004740 026627 000004 000175  CMP      4(SP),#175   ;;IS IT A SPECIAL CHAR?
004746 003003          BGT      4$          ;;BRANCH IF YES
004750 042766 000040 000004  BIC      #40,4(SP)    ;;MAKE IT UPPER CASE
004756 000002          4$: RTI          ;;GO BACK TO USER
*****
*THIS ROUTINE WILL INPUT A STRING FROM THE TTY
*CALL:
*      RDLIN          ;;INPUT A STRING FROM THE TTY
*      RETURN HERE    ;;ADDRESS OF FIRST CHARACTER WILL BE ON THE STACK
*                      ;;TERMINATOR WILL BE A BYTE OF ALL 0'S

004760 010346          $RDLIN: MOV      R3,-(SP)  ;;SAVE R3
004762 005046          CLR      -(SP)       ;;CLEAR THE RUBOUT KEY
004764 012703 005236  1$: MOV      #STTYIN,R3  ;;GET ADDRESS
004770 022703 005246  2$: CMP      #STTYIN+8.,R3 ;;BUFFER FULL?
004774 101467          BLOS    4$          ;;BR IF YES
004776 104411          RDCHR   ;;GO READ ONE CHARACTER FROM THE TTY
005000 112613          MOVB   (SP)+,(R3)    ;;GET CHARACTER
005002 122713 000003  CMPB   #3,(R3)       ;;IS IT A CONTROL-C?

```

```

005006 001006          BNE      10$          ;;BRANCH IF NO
005010 104401 001312   TYPE      , $CNTLC      ;;TYPE A CONTROL-C (^C)
005014 005726          TST      (SP)+          ;;CLEAN RUBOUT KEY OFF OF THE STACK
005016 012603          MOV      (SP)+,R3        ;;RESTORE R3
005020 000137 005302   JMP      CNTRLC          ;;GOTO CONTROL-C RESTART
005024 122713 000177   10$:    CMPB     #177,(R3)      ;;IS IT A RUBOUT
005030 001022          BNE      5$            ;;BR IF NO
005032 005716          TST      (SP)          ;;IS THIS THE FIRST RUBOUT?
005034 001007          BNE      6$            ;;BR IF NO
005036 112737 000134 005234  MOVB     #' \ ,9$      ;;TYPE A BACK SLASH
005044 104401 005234   TYPE      ,9$
005050 012716 177777   MOV      #-1,(SP)      ;;SET THE RUBOUT KEY
005054 005303          6$:    DEC      R3          ;;BACKUP BY ONE
005056 020327 005236   CMP      R3,$TTYIN     ;;STACK EMPTY?
005062 103434          BLO      4$            ;;BR IF YES
005064 111337 005234   MOVB     (R3),9$      ;;SETUP TO TYPEOUT THE DELETED CHAR.
005070 104401 005234   TYPE      ,9$
005074 000735          BR       2$            ;;GO TYPE
005076 005716          5$:    TST      (SP)          ;;GO READ ANOTHER CHAR.
005100 001406          BEQ      7$            ;;RUBOUT KEY SET?
005102 112737 000134 005234  MOVB     #' \ ,9$      ;;BR IF NO
005110 104401 005234   TYPE      ,9$          ;;TYPE A BACK SLASH
005114 005016          CLR      (SP)          ;;CLEAR THE RUBOUT KEY
005116 122713 000025   7$:    CMPB     #25,(R3)    ;;IS CHARACTER A CTRL U?
005122 001003          BNE      8$            ;;BR IF NO
005124 104401 005246   TYPE      , $CNTLU     ;;TYPE A CONTROL 'U'
005130 000715          BR       1$            ;;GO START OVER
005132 122713 000022   8$:    CMPB     #22,(R3)    ;;IS CHARACTER A '^R'?
005136 001011          BNE      3$            ;;BRANCH IF NO
005140 105013          CLRB    (R3)          ;;CLEAR THE CHARACTER
005142 104401 001221   TYPE      , $CRLF      ;;TYPE A 'CR' & 'LF'
005146 104401 005236   TYPE      , $TYIN      ;;TYPE THE INPUT STRING
005152 000706          BR       2$            ;;GO PICKUP ANOTHER CHACTER
005154 104401 001220   4$:    TYPE      , $QUES   ;;TYPE A '?'
005160 000701          BR       1$            ;;CLEAR THE BUFFER AND LOOP
005162 111337 005234   3$:    MOVB     (R3),9$    ;;ECHO THE CHARACTER
005166 104401 005234   TYPE      ,9$
005172 122723 000015   CMPB     #15,(R3)+     ;;CHECK FOR RETURN
005176 001274          BNE      2$            ;;LOOP IF NOT RETURN
005200 105063 177777   CLRB    -1(R3)        ;;CLEAR RETURN (THE 15)
005204 104401 001222   TYPE      , $LF        ;;TYPE A LINE FEED
005210 005726          TST      (SP)+          ;;CLEAN RUBOUT KEY FROM THE STACK
005212 012603          MOV      (SP)+,R3      ;;RESTORE R3
005214 011646          MOV      (SP)-,(SP)    ;;ADJUST THE STACK AND PUT ADDRESS OF THE
005216 016666 000004 000002  MOV      4(SP),2(SP)   ;;FIRST ASCII CHARACTER ON IT
005224 012766 005236 000004  MOV      $TTYIN,4(SP)
005232 000002          RTI
005234 000          9$:    .BYTE    0          ;;RETURN
005235 000          .BYTE    0          ;;STORAGE FOR ASCII CHAR. TO TYPE
005236          .BLKB   8          ;;TERMINATOR
005246 136 12 015 $TTYIN: .ASCIZ /^U/<15><12> ;;RESERVE 8 BYTES FOR TTY INPUT
005251 012 000          .ASCIZ /^U/<15><12> ;;CONTROL 'U'
005253 136 107 015 $CNTLG: .ASCIZ /^G/<15><12> ;;CONTROL 'G'
005256 012 000          .ASCIZ /^G/<15><12>
005260 015 012 123 $MSWK: .ASCIZ <15><12>/SWR = /
005263 127 12 040
005266 075 040 000
  
```

005271	040	040	116	\$MNEW: .ASCIZ / NEW = /
005274	105	127	040	
005277	075	040	000	

```

1884          .SBTTL CONTROL-C SERVICING ROUTINE
1885
1886 005302 013737 001232 001210 CNTRLC: MOV    $PASS,$TMP5    ;GET THE VALUE OF '$PASS'
1887 005310 005237 001210          INC    $TMP5      ;FORM CURRENT PASS #
1888 005314 104401 005361          TYPE   ,CMG      ;TYPE THE TEST STOPS HERE
1889 005320 113737 001102 005354 MOV    $STNM,1$    ;SAVE TEST NUMBER
1890 005326 013746 005354          MOV    1$,-(SP)   ;SAVE 1$ FO TYPEOUT
1891 005332 104402          TYPOC          ;
1892 005334 104401 005356          TYPE   ,2$      ;
1893 005340 013746 001210          MOV    $TMP5,-(SP) ;SAVE $TMP5 FOR TYPEOUT
1894 005344 104405          TYPDS          ;TYPE ASCII DECIMAL WITH SIGN
1895 005346 104407          GTSWR          ;ASK FOR NEW SWR VALUE
1896 005350 000137 036026          JMP    $EOP+2    ;JUMP TO END OF PASS + 2
1897 005354 000000          1$: .WORD 0      ;TEST # BUFFER
1898 005356          2$: .ASCIZ / / ;2 SPACES & STOP MESSAGE
1899 005361          CMG: .ASCII /JUMPING TO END OF PASS/<15><12>
      005364          112 125 115
      005367          120 111 116
      005372          107 040 124
      005375          117 040 105
      005400          116 104 040
      005403          117 106 040
      005406          120 101 123
      005411          123 015 012
1900 005411          124 105 123      .ASCIZ /TESTNO PASSNO/<15><12>
      005414          124 116 117
      005417          011 120 101
      005422          123 123 116
      005425          117 015 012
1901          .EVEN

```


1903

.SBTTL TYPE ROUTINE

 *ROUTINE TO TYPE ASCIZ MESSAGE. MESSAGE MUST TERMINATE WITH A 0 BYTE.
 *THE ROUTINE WILL INSERT A NUMBER OF NULL CHARACTERS AFTER A LINE FEED.
 *NOTE1: \$NULL CONTAINS THE CHARACTER TO BE USED AS THE FILLER CHARACTER.
 *NOTE2: \$FILLS CONTAINS THE NUMBER OF FILLER CHARACTERS REQUIRED.
 *NOTE3: \$FILLC CONTAINS THE CHARACTER TO FILL AFTER.
 *

*CALL:
 *1) USING A TRAP INSTRUCT
 * TYPE ,MESADR ;:MESADR IS FIRST ADDRESS OF AN ASCIZ STRING
 *OR
 * TYPE
 * MESADR

005432	105737	001157	\$TYPE:	TSTB	\$TPFLG	:: IS THERE A TERMINAL?
005436	100002			BPL	1\$:: BR IF YES
005440	000000			HALT		:: HALT HERE IF NO TERMINAL
005442	000430			BR	3\$:: LEAVE
005444	010046		1\$:	MOV	RO,-(SP)	:: SAVE RO
005446	017600	000002		MOV	@2(SP),RO	:: GET ADDRESS OF ASCIZ STRING
005452	122737	000001	001244	CMPB	#APTENV,\$ENV	:: RUNNING IN APT MODE
005460	001011			BNE	62\$:: NO,GO CHECK FOR APT CONSOLE
005462	132737	000100	001245	BITB	#APTPOOL,\$ENVM	:: SPOOL MESSAGE TO APT
005470	001405			BEQ	62\$:: NO,GO CHECK FOR CONSOLE
005472	010037	005502		MOV	RO,61\$:: SETUP MESSAGE ADDRESS FOR APT
005476	004737	006004		JSR	PC,\$ATY3	:: SPOOL MESSAGE TO APT
005502	000000			.WORD	0	:: MESSAGE ADDRESS
005504	132737	000040	001245	62\$:	BITB	#APTCSUP,\$ENVM
005512	001003			BNE	60\$:: APT CONSOLE SUPPRESSED
005514	112046			2\$:	MOVB	(RO)+,-(SP)
005516	001005			BNE	4\$:: YES,SKIP TYPE OUT
005520	005726			TST	(SP)+	:: BR IF IT ISN'T THE TERMINATOR
005522	012600			60\$:	MOV	(SP)+,RO
005524	062716	000002		3\$:	ADD	#2,(SP)
005530	000002			RTI		:: RESTORE RO
005532	122716	000011		4\$:	CMPB	#HT,(SP)
005536	001430			BEQ	8\$:: ADJUST RETURN PC
005540	122716	000200		CMPB	#CRLF,(SP)	:: RETURN
005544	001006			BNE	5\$:: BRANCH IF <HT>
005546	005726			TST	(SP)+	:: BRANCH IF NOT <CRLF>
005550	104401			TYPE		:: POP <CR><LF> EQUIV
005552	001221			\$CRLF		:: TYPE A CR AND LF
005554	105037	005772		CLRB	\$CHARCNT	:: CLEAR CHARACTER COUNT
005560	000755			BR	2\$:: GET NEXT CHARACTER
005562	004737	005644		5\$:	JSR	PC,\$TYPEC
005566	123726	001156		6\$:	CMPB	\$FILLC,(SP)+
005572	001350			BNE	2\$:: GO TYPE THIS CHARACTER
005574	013746	001154		MOV	\$NULL,-(SP)	:: IS IT TIME FOR FILLER CHARS.?
						:: IF NO GO GET NEXT CHAR.
						:: GET # OF FILLER CHARS. NEEDED
						:: AND THE NULL CHAR.
005600	105366	000001		7\$:	DECB	1(SP)
005604	002770			BLT	6\$:: DOES A NULL NEED TO BE TYPED?
005606	004737	005644		JSR	PC,\$TYPEC	:: BR IF NO--GO POP THE NULL OFF OF STACK
005612	105337	005772		DECB	\$CHARCNT	:: GO TYPE A NULL
005616	000770			BR	7\$:: DO NOT COUNT AS A COUNT
						:: LOOP
005620	112716	000040		8\$:	MOVB	#' ,(SP)
						:: REPLACE TAB WITH SPACE

:HORIZONTAL TAB PROCESSOR

```

005624 004737 005644 005772 9$: JSR PC,$TYPEC ;;TYPE A SPACE
005630 132737 000007 005772 BITB #7,$CHARCNT ;;BRANCH IF NOT AT
005636 001372 BNE 9$ ;;TAB STOP
005640 005726 TST (SP)+ ;;POP SPACE OFF STACK
005642 000724 BR 2$ ;;GET NEXT CHARACTER
005644 $TYPEC: TSTB @STKS ;;CHAR IN KYBD BUFFER? ;MJD001
005644 105777 173274 BPL 10$ ;;BR IF NOT ;MJD001
005650 100022 MOV @STKB,-(SP) ;;GET CHAR ;MJD001
005652 017746 173270 BIC #177600,(SP) ;;STRIP EXTRANEIOUS BITS ;MJD001
005656 042716 177600 CMPB #$XOFF,(SP) ;;WAS CHAR XOFF ;MJD001
005662 122716 000023 BNE 102$ ;;BR IF NOT ;MJD001
005666 001012 101$: TSTB @STKS ;;WAIT FOR CHAR ;MJD001
005670 105777 173250 BPL 101$ ;MJD001
005674 100375 MOVB @STKB,(SP) ;;GET CHAR ;MJD001
005676 117716 173244 BIC #177600,(SP) ;;STRIP IT ;MJD001
005702 042716 177600 CMPB #$XON,(SP) ;;WAS IT XON? ;MJD001
005706 122716 000021 BNE 101$ ;;BR IF NOT ;MJD001
005712 001366 102$: TST (SP)+ ;;FIX STACK ;MJD001
005714 005726 10$: TSTB @STPS ;;WAIT UNTIL PRINTER IS READY ;MJD001
005716 105777 173226 BPL 10$ ;MJD001
005722 100375 CMPB 2(SP),#$XON ;;IS CHARACTER A RANDOM XON? ;MJD001
005724 126627 000002 000021 BEQ $TYPEX ;;BRANCH IF YES ;RAN001
005732 001420 MOVB 2(SP),@STPB ;;LOAD CHAR TO BE TYPED INTO DATA REG. ;RAN001
005734 116677 000002 173210 CMPB #CR,2(SP) ;;IS CHARACTER A CARRIAGE RETURN?
005742 122766 000015 000002 BNE 1$ ;;BRANCH IF NO
005750 001003 CLRB $CHARCNT ;;YES--CLEAR CHARACTER COUNT
005752 105037 005772 BR $TYPEX ;;EXIT
005756 000406 CMPB #LF,2(SP) ;;IS CHARACTER A LINE FEED?
005760 122766 000012 000002 1$: BEQ $TYPEX ;;BRANCH IF YES
005766 001402 INCB (PC)+ ;;COUNT THE CHARACTER
005770 105227 $CHARCNT: .WORD 0 ;;CHARACTER COUNT STORAGE
005772 000000 $TYPEX: RTS PC
005774 000207

```

1904

```

.SBTTL APT COMMUNICATIONS ROUTINE
:*****
005773 112737 000001 006242 $ATY1: MOVB #1,$FFLG ;;TO REPORT FATAL ERROR
006004 112737 000001 006240 $ATY3: MOVB #1,$MFLG ;;TO TYPE A MESSAGE
006012 000403
006014 112737 000001 006242 $ATY4: MOVB #1,$FFLG ;;TO ONLY REPORT FATAL ERROR
006022 $ATYC:
006022 010046 MOV R0,-(SP) ;;PUSH R0 ON STACK
006024 010146 MOV R1,-(SP) ;;PUSH R1 ON STACK
006026 105737 006240 TSTB $MFLG ;;SHOULD TYPE A MESSAGE?
006032 001450 BEQ 5$ ;;IF NOT: BR
006034 122737 000001 001244 CMPB #APTENV,$ENV ;;OPERATING UNDER APT?
006042 001031 BNE 3$ ;;IF NOT: BR
006044 132737 000100 001245 BITB #APTSPOOL,$ENVM ;;SHOULD SPOOL MESSAGES?
006052 001425 BEQ 3$ ;;IF NOT: BR
006054 017600 000004 MOV @4(SP),R0 ;;GET MESSAGE ADDR.
006060 062766 000002 000004 ADD #2,4(SP) ;;BUMP RETURN ADDR.
006066 005737 001224 1$: TST $MSGTYPE ;;SEE IF DONE W/ LAST XMISSION?
006072 001375 BNE 1$ ;;IF NOT: WAIT
006074 010037 001240 MOV R0,$MSGAD ;;PUT ADDR IN MAILBOX
006100 105720 2$: TSTB (R0)+ ;;FIND END OF MESSAGE
006102 001376 BNE 2$
006104 163700 001240 SUB $MSGAD,R0 ;;SUB START OF MESSAGE
006110 006200 ASR R0 ;;GET MESSAGE LNTH IN WORDS
006112 010037 001242 MOV R0,$MSGLGT ;;PUT LENGTH IN MAILBOX
006116 012737 000004 001224 MOV #4,$MSGTYPE ;;TELL APT TO TAKE MSG.
006124 000413 BR 5$
006126 017637 000004 006152 3$: MOV @4(SP),4$ ;;PUT MSG ADDR IN JSR LINKAGE
006134 062766 000002 000004 ADD #2,4(SP) ;;BUMP RETURN ADDRESS
006142 013746 177776 MOV 177776,-(SP) ;;PUSH 177776 ON STACK
006146 004737 005432 JSR PC,$TYPE ;;CALL TYPE MACRO
006152 000000 4$: .WORD 0
006154 5$:
006154 105737 006242 10$: TSTB $FFLG ;;SHOULD REPORT FATAL ERROR?
006160 001416 BEQ 12$ ;;IF NOT: BR
006162 005737 001244 TST $ENV ;;RUNNING UNDER APT?
006166 001413 BEQ 12$ ;;IF NOT: BR
006170 005737 001224 11$: TST $MSGTYPE ;;FINISHED LAST MESSAGE?
006174 001375 BNE 11$ ;;IF NOT: WAIT
006176 017637 000004 001226 MOV @4(SP),$FATAL ;;GET ERROR #
006204 062766 000002 000004 ADD #2,4(SP) ;;BUMP RETURN ADDR.
006212 005237 001224 INC $MSGTYPE ;;TELL APT TO TAKE ERROR
006216 105037 006242 12$: CLRB $FFLG ;;CLEAR FATAL FLAG
006222 105037 006241 CLRB $LFLG ;;CLEAR LOG FLAG
006226 105037 006240 CLRB $MFLG ;;CLEAR MESSAGE FLAG
006232 012601 MOV (SP)+,R1 ;;POP STACK INTO R1
006234 012600 MOV (SP)+,R0 ;;POP STACK INTO R0
006236 000207 RTS PC ;;RETURN
006240 000 $MFLG: .BYTE 0 ;;MESSG. FLAG
006241 000 $LFLG: .BYTE 0 ;;LOG FLAG
006242 000 $FFLG: .BYTE 0 ;;FATAL FLAG
.EVEN
000200 APTSIZE=200
000000 APTENV=001
000100 APTSPOOL=100
000040 APTCSIJP=040

```

1905

```

.SBTTL BINARY TO ASCII AND TYPE ROUTINE
:*****
:*THIS ROUTINE IS USED TO CHANGE A 16-BIT BINARY NUMBER TO A 16-BIT
:*BINARY-ASCII NUMBER AND TYPE IT.
:*CALL:
:*      MOV      NUMBER,-(SP)      ;;NUMBER TO BE TYPED
:*      TYPBN
$TYPBN: MOV      R1,-(SP)          ;;TYPE IT
        MOV      6(SP),R1        ;;SAVE R1 ON THE STACK
        SEC
        MOV      #'0,$BIN        ;;GET THE INPUT NUMBER
        ROL      R1              ;;SET 'C' SO CAN KEEP TRACK OF THE NUMBER OF BITS
        BEQ      2$              ;;SET CHARACTER TO AN ASCII '0'.
        ADCB     $BIN            ;;GET THIS BIT
        TYPE     .$BIN           ;;DONE?
        CLC
        BR       1$              ;;NO--SET THE CHARACTER EQUAL TO THIS BIT
        BR       2$              ;;GO TYPE THIS BIT
        BR       2$              ;;CLEAR 'C' SO CAN KEEP TRACK OF BITS
        BR       2$              ;;GO DO THE NEXT BIT
        BR       2$              ;;POP THE STACK INTO R1
        BR       2$              ;;ADJUST THE STACK
        BR       2$              ;;ADJUST THE STACK
        RTI                    ;;RETURN TO USER
        .BYTE    0,0            ;;STORAGE FOR ASCII CHAR. AND TERMINATOR
    
```

1906

```

.SBTTL BINARY TO OCTAL (ASCII) AND TYPE
:*****
:THIS ROUTINE IS USED TO CHANGE A 16-BIT BINARY NUMBER TO A 6-DIGIT
:OCTAL (ASCII) NUMBER AND TYPE IT.
:$TYPOS---ENTER HERE TO SETUP SUPPRESS ZEROS AND NUMBER OF DIGITS TO TYPE
:CALL:
:   MOV     NUM,-(SP)      ;;NUMBER TO BE TYPED
:   TYPOS   ;;CALL FOR TYPEOUT
:   .BYTE  N              ;;N=1 TO 6 FOR NUMBER OF DIGITS TO TYPE
:   .BYTE  M              ;;M=1 OR 0
:                               ;;1=TYPE LEADING ZEROS
:                               ;;0=SUPPRESS LEADING ZEROS
:$STYPON----ENTER HERE TO TYPE OUT WITH THE SAME PARAMETERS AS THE LAST
:$STYPOS OR $STYPOC
:CALL:
:   MOV     NUM,-(SP)      ;;NUMBER TO BE TYPED
:   TYPON   ;;CALL FOR TYPEOUT
:$STYPOC---ENTER HERE FOR TYPEOUT OF A 16 BIT NUMBER
:CALL:
:   MOV     NUM,-(SP)      ;;NUMBER TO BE TYPED
:   TYPOC   ;;CALL FOR TYPEOUT
006320 017646 000000 006543 $TYPOS: MOV     @ (SP),-(SP)      ;;PICKUP THE MODE
006324 116637 000001 006543 $TYPOS: MOV     1(SP), $OFILL    ;;LOAD ZERO FILL SWITCH
006332 112637 006545 006543 $TYPOS: MOV     (SP)+, $OMODE+1  ;;NUMBER OF DIGITS TO TYPE
006336 062716 000002 006543 $TYPOS: ADD     #2, (SP)      ;;ADJUST RETURN ADDRESS
006342 000406 000001 006543 $TYPOC: BR      $TYPON
006344 112737 000001 006543 $TYPOC: MOV     #1, $OFILL    ;;SET THE ZERO FILL SWITCH
006352 112737 000006 006545 $TYPOC: MOV     #6, $OMODE+1  ;;SET FOR SIX(6) DIGITS
006360 112737 000005 006542 $TYPON: MOVE    #5, $COUNT  ;;SET THE ITERATION COUNT
006366 010346 000000 006545 $TYPON: MOV     R3, -(SP)      ;;SAVE R3
006370 010446 000000 006545 $TYPON: MOV     R4, -(SP)      ;;SAVE R4
006372 010546 000000 006545 $TYPON: MOV     R5, -(SP)      ;;SAVE R5
006374 113704 006545 006545 $TYPON: MOV     $OMODE+1, R4  ;;GET THE NUMBER OF DIGITS TO TYPE
006400 005404 000000 006545 $TYPON: NEG     R4
006402 062704 000006 006544 $TYPON: ADD     #6, R4      ;;SUBTRACT IT FOR MAX. ALLOWED
006406 110437 006544 006544 $TYPON: MOV     R4, $OMODE  ;;SAVE IT FOR USE
006412 113704 006543 006543 $TYPON: MOV     $OFILL, R4   ;;GET THE ZERO FILL SWITCH
006416 016605 000012 006543 $TYPON: MOV     12(SP), R5   ;;PICKUP THE INPUT NUMBER
006422 005003 000000 006543 $TYPON: CLR     R3          ;;CLEAR THE OUTPUT WORD
006424 006105 000000 006543 $TYPON: ROL    R5          ;;ROTATE MSB INTO 'C'
006426 000404 000000 006543 $TYPON: BR     3$      ;;GO DO MSB
006430 006105 000000 006543 $TYPON: ROL    R5          ;;FORM THIS DIGIT
006432 006105 000000 006543 $TYPON: ROL    R5
006434 006105 000000 006543 $TYPON: ROL    R5
006436 010503 000000 006543 $TYPON: MOV     R5, R3      ;;GET LSB OF THIS DIGIT
006440 006103 000000 006544 $TYPON: ROL    R3          ;;TYPE THIS DIGIT?
006442 105337 006544 006544 $TYPON: DECB   $OMODE
006446 100016 000000 006544 $TYPON: BPL    7$      ;;BR IF NO
006450 042703 177770 006544 $TYPON: BIC    #177770, R3  ;;GET RID OF JUNK
006454 001002 000000 006544 $TYPON: BNE    4$      ;;TEST FOR 0
006456 005704 000000 006544 $TYPON: TST    R4          ;;SUPPRESS THIS 0?
006460 001403 000000 006544 $TYPON: BEQ    5$      ;;BR IF YES
006462 005204 000000 006544 $TYPON: INC     R4          ;;DON'T SUPPRESS ANYMORE 0'S
006464 052703 000060 006544 $TYPON: BIS    #'0, R3   ;;MAKE THIS DIGIT ASCII
006470 052703 000040 006544 $TYPON: BIS    #' , R3   ;;MAKE ASCII IF NOT ALREADY

```

BINARY TO OCTAL (ASCII) AND TYPE

006474	110337	006540		MOVB	R3,8\$::SAVE FOR TYPING
006500	104401	006540		TYPE	,8\$::GO TYPE THIS DIGIT
006504	105337	006542	7\$:	DECB	\$OCNT	::COUNT BY 1
006510	003347			BGT	2\$::BR IF MORE TO DO
006512	002402			BLT	6\$::BR IF DONE
006514	005204			INC	R4	::INSURE LAST DIGIT ISN'T A BLANK
006516	000744			BR	2\$::GO DO THE LAST DIGIT
006520	012605		6\$:	MOV	(SP)+,R5	::RESTORE R5
006522	012604			MOV	(SP)+,R4	::RESTORE R4
006524	012603			MOV	(SP)+,R3	::RESTORE R3
006526	016666	000002 000004		MOV	2(SP),4(SP)	::SET THE STACK FOR RETURNING
006534	012616			MOV	(SP)+,(SP)	
006536	000002			RTI		::RETURN
006540	000		8\$:	.BYTE	0	::STORAGE FOR ASCII DIGIT
006541	000			.BYTE	0	::TERMINATOR FOR TYPE ROUTINE
006542	000		\$OCNT:	.BYTE	0	::OCTAL DIGIT COUNTER
006543	000		\$OFILL:	.BYTE	0	::ZERO FILL SWITCH
006544	000000		\$OMODE:	.WORD	0	::NUMBER OF DIGITS TO TYPE

1907

```

.SBTTL CONVERT BINARY TO DECIMAL AND TYPE ROUTINE
:*****
:THIS ROUTINE IS USED TO CHANGE A 16-BIT BINARY NUMBER TO A 5-DIGIT
:SIGNED DECIMAL (ASCII) NUMBER AND TYPE IT. DEPENDING ON WHETHER THE
:NUMBER IS POSITIVE OR NEGATIVE A SPACE OR A MINUS SIGN WILL BE TYPED
:BEFORE THE FIRST DIGIT OF THE NUMBER. LEADING ZEROS WILL ALWAYS BE
:REPLACED WITH SPACES.
:CALL:
:*      MOV      NUM,-(SP)          ;;PUT THE BINARY NUMBER ON THE STACK
:*      TYPDS                    ;;GO TO THE ROUTINE
$TYPDS:
MOV      R0,-(SP)                ;;PUSH R0 ON STACK
MOV      R1,-(SP)                ;;PUSH R1 ON STACK
MOV      R2,-(SP)                ;;PUSH R2 ON STACK
MOV      R3,-(SP)                ;;PUSH R3 ON STACK
MOV      R5,-(SP)                ;;PUSH R5 ON STACK
MOV      #20200,-(SP)           ;;SET BLANK SWITCH AND SIGN
MOV      20(SP),R5              ;;GET THE INPUT NUMBER
BPL      1$                      ;;BR IF INPUT IS POS.
NEG      R5                      ;;MAKE THE BINARY NUMBER POS.
MOVB    #'-,1(SP)              ;;MAKE THE ASCII NUMBER NEG.
1$:      CLR      R0              ;;ZERO THE CONSTANTS INDEX
MOV      # $DBLK,R3            ;;SETUP THE OUTPUT POINTER
MOVB    #' ,(R3)+              ;;SET THE FIRST CHARACTER TO A BLANK
2$:      CLR      R2              ;;CLEAR THE BCD NUMBER
MOV      $DTBL(R0),R1          ;;GET THE CONSTANT
3$:      SUB      R1,R5          ;;FORM THIS BCD DIGIT
BLT     4$                      ;;BR IF DONE
INC     R2                      ;;INCREASE THE BCD DIGIT BY 1
BR      3$
4$:      ADD      R1,R5          ;;ADD BACK THE CONSTANT
TST     R2                      ;;CHECK IF BCD DIGIT=0
BNE     5$                      ;;FALL THROUGH IF 0
TSTB   (SP)                    ;;STILL DOING LEADING 0'S?
BMI     7$                      ;;BR IF YES
5$:      ASLB    (SP)           ;;MSB?
BCC     6$                      ;;BR IF NO
MOVB    1(SP),-1(R3)           ;;YES--SET THE SIGN
6$:      BIS     #'0,R2         ;;MAKE THE BCD DIGIT ASCII
7$:      BIS     #' ,R2         ;;MAKE IT A SPACE IF NOT ALREADY A DIGIT
MOVB    R2,(R3)+              ;;PUT THIS CHARACTER IN THE OUTPUT BUFFER
TST     (R0)+                  ;;JUST INCREMENTING
CMP     R0,#10                ;;CHECK THE TABLE INDEX
BLT     2$                      ;;GO DO THE NEXT DIGIT
BGT     8$                      ;;GO TO EXIT
MOV     R5,R2                  ;;GET THE LSD
BR      6$                      ;;GO CHANGE TO ASCII
8$:      TSTB   (SP)+          ;;WAS THE LSD THE FIRST NON-ZERO?
BPL     9$                      ;;BR IF NO
9$:      MOVB   -1(SP),-2(R3)   ;;YES--SET THE SIGN FOR TYPING
CLRB   (R3)                    ;;SET THE TERMINATOR
MOV     (SP)+,R5              ;;POP STACK INTO R5
MOV     (SP)+,R3              ;;POP STACK INTO R3
MOV     (SP)+,R2              ;;POP STACK INTO R2
MOV     (SP)+,R1              ;;POP STACK INTO R1
MOV     (SP)+,R0              ;;POP STACK INTO R0
TYPE   ,$DBLK                 ;;NOW TYPE THE NUMBER

```

```

006546
006546 010046
006550 010146
006552 010246
006554 010346
006556 010546
006560 012746 020200
006564 016605 000020
006570 100004
006572 005405
006574 112766 000055 000001
006602 005000 1$:
006604 012703 006762
006610 112723 000040
006614 005002 2$:
006616 016001 006752
006622 160105 3$:
006624 002402
006626 005202
006630 000774
006632 060105 4$:
006634 005702
006636 001002
006640 105716
006642 100407
006644 106316 5$:
006646 103003
006650 116663 000001 177777
006656 052702 000000
006662 052702 000040 6$:
006666 110223 7$:
006670 005720
006672 020027 000010
006676 002746
006700 003002
006702 010502
006704 000764
006706 105726 8$:
006710 100003
006712 116663 177777 177776
006720 105013 9$:
006722 012605
006724 012603
006726 012602
006730 012601
006732 012600
006734 104401 006762

```

```
006740 016666 000002 000004      MOV      2(SP),4(SP)      ;;ADJUST THE STACK
006746 012616                      MOV      (SP)+,(SP)
006750 000002                      RTI                          ;;RETURN TO USER
006752 023420      $DTBL: 10000.
006754 001750                      1000.
006756 000144                      100.
006760 000012                      10.
006762      $DBLK: .BLKW 4
```


1908

.SBTTL SAVE AND RESTORE R0-R5 ROUTINES
 ;*****

;*SAVE R0-R5
 ;*CALL:
 ;* SAVREG
 ;*UPON RETURN FROM \$SAVREG THE STACK WILL LOOK LIKE:

;*TOP---(+16)
 ;* +2---(+18)
 ;* +4---R5
 ;* +6---R4
 ;* +8---R3
 ;*+10---R2
 ;*+12---R1
 ;*+14---R0

\$SAVREG:
 MOV R0,-(SP) ;;PUSH R0 ON STACK
 MOV R1,-(SP) ;;PUSH R1 ON STACK
 MOV R2,-(SP) ;;PUSH R2 ON STACK
 MOV R3,-(SP) ;;PUSH R3 ON STACK
 MOV R4,-(SP) ;;PUSH R4 ON STACK
 MOV R5,-(SP) ;;PUSH R5 ON STACK
 MOV 22(SP),-(SP) ;;SAVE PS OF MAIN FLOW
 MOV 22(SP),-(SP) ;;SAVE PC OF MAIN FLOW
 MOV 22(SP),-(SP) ;;SAVE PS OF CALL
 MOV 22(SP),-(SP) ;;SAVE PC OF CALL
 RTI

;*RESTORE R0-R5
 ;*CALL:
 ;* RESREG

\$RESREG:
 MOV (SP)+,22(SP) ;;RESTORE PC OF CALL
 MOV (SP)+,22(SP) ;;RESTORE PS OF CALL
 MOV (SP)+,22(SP) ;;RESTORE PC OF MAIN FLOW
 MOV (SP)+,22(SP) ;;RESTORE PS OF MAIN FLOW
 MOV (SP)+,R5 ;;POP STACK INTO R5
 MOV (SP)+,R4 ;;POP STACK INTO R4
 MOV (SP)+,R3 ;;POP STACK INTO R3
 MOV (SP)+,R2 ;;POP STACK INTO R2
 MOV (SP)+,R1 ;;POP STACK INTO R1
 MOV (SP)+,R0 ;;POP STACK INTO R0
 RTI

006772
 006772 010046
 006774 010146
 006776 010246
 007000 010346
 007002 010446
 007004 010546
 007006 016646 000022
 007012 016646 000022
 007016 016646 000022
 007022 016646 000022
 007026 000002

007030
 007030 012666 000022
 007034 012666 000022
 007040 012666 000022
 007044 012666 000022
 007050 012605
 007052 012604
 007054 012603
 007056 012602
 007060 012601
 007062 012600
 007064 000002

1909

```

.SBTTL DOUBLE LENGTH BINARY TO OCTAL ASCII CONVERT ROUTINE
:*****
:*THIS ROUTINE WILL CONVERT A 32-BIT UNSIGNED BINARY NUMBER TO AN
:*UNSIGNED OCTAL ASCII NUMBER.
:*CALL
:
:      MOV      #PNTR,-(SP)      ;; POINTER TO LOW WORD OF BINARY NUMBER
:*      JSR      PC,@#$DB20      ;; CALL THE ROUTINE
:      RETURN
:      $DB20: SAVREG           ;; THE ADDRESS OF THE FIRST ASCII CHAR. IS ON THE STACK
:      MOV      2(SP),R1         ;; SAVE ALL REGISTERS
:      MOV      #$OCTVL+13.,R5   ;; PICKUP THE POINTER TO LOW WORD
:      MOV      #12.,R4          ;; POINTER TO DATA TABLE
:      MOV      #^C7,R3         ;; DO ELEVEN CHARACTERS
:      MOV      (R1)+,R0         ;; MASK
:      MOV      (R1)+,R1         ;; LOWER WORD
:      CLR      R2              ;; HIGH WORD
:      CLR      R2              ;; TERMINATOR
:      1$:      MOVB     R2,-(R5)  ;; PUT CHARACTER IN DATA TABLE
:      MOV      R0,R2           ;; GET THIS DIGIT
:      DEC      R4              ;; COUNT THIS CHARACTER
:      BGT      3$             ;; BR IF NOT THE LAST DIGIT
:      BEQ      2$             ;; BR IF IT IS THE LAST DIGIT
:      INC      R5              ;; ALL DIGITS DONE-ADJUST POINTER FOR FIRST
:      MOV      R5,2(SP)        ;; ASCII CHAR. & PUT IT ON THE STACK
:      RESREG
:      RTS      PC              ;; RESTORE ALL REGISTERS
:      2$:      ASR      R3         ;; RETURN TO USER
:      3$:      ROR      R1         ;; POSITION THE MASK FOR THE LAST DIGIT
:      ROR      R0              ;; POSITION THE BINARY NUMBER FOR
:      ROR      R1              ;; THE NEXT OCTAL DIGIT
:      ROR      R0
:      ROR      R1
:      ROR      R0
:      ROR      R1
:      ROR      R0
:      BIC      R3,R2           ;; MASK OUT ALL JUNK
:      ADD      #'0,R2         ;; MAKE THIS CHAR. ASCII
:      BR       1$             ;; GO PUT IT IN THE DATA TABLE
:      $OCTVL: .BLKB 14.      ;; RESERVE DATA TABLE
    
```

```

007066 104413
007070 016601 000002
007074 012705 007205
007100 012704 000014
007104 012703 177770
007110 012100
007112 012101
007114 005002
007116 110245
007120 010002
007122 005304
007124 003007
007126 001405
007130 005205
007132 010566 000002
007136 104414
007140 000207
007142 006203
007144 006001
007146 006000
007150 006001
007152 006000
007154 006001
007156 006000
007160 040302
007162 062702 000060
007166 000753
007170
    
```

1910

```

.SBTTL TRAP DECODER
;*****
;THIS ROUTINE WILL PICKUP THE LOWER BYTE OF THE "TRAP" INSTRUCTION
;AND USE IT TO INDEX THROUGH THE TRAP TABLE FOR THE STARTING ADDRESS
;OF THE DESIRED ROUTINE. THEN USING THE ADDRESS OBTAINED IT WILL
;GO TO THAT ROUTINE.
007206 010046          $TRAP: MOV    R0,-(SP)          ;;SAVE R0
007210 016600 000002  MOV    2(SP),R0          ;;GET TRAP ADDRESS
007214 005740          TST    -(R0)             ;;BACKUP BY 2
007216 111000          MOVB   (R0),R0           ;;GET RIGHT BYTE OF TRAP
007220 006300          ASL    R0                ;;POSITION FOR INDEXING
007222 016000 007242  MOV    $TRPAD(R0),R0      ;;INDEX TO TABLE
007226 000200          RTS    R0              ;;GO TO ROUTINE
;;THIS IS USE TO HANDLE THE "GETPRI" MACRO
007230 011646          $TRAP2: MOV   (SP),-(SP)    ;;MOVE THE PC DOWN
007232 016666 000004 000002 MOV   4(SP),2(SP)        ;;MOVE THE PSW DOWN
007240 000002          RTI                    ;;RESTORE THE PSW

.SBTTL TRAP TABLE
;THIS TABLE CONTAINS THE STARTING ADDRESSES OF THE ROUTINES CALLED
;BY THE "TRAP" INSTRUCTION.
;
;ROUTINE
;-----
007242 007230          $TRPAD: .WORD  $TRAP2
007244 005432          $TYPE  ;;CALL=TYPE      TRAP+1(104401) TTY TYPEOUT ROUTINE
007246 006344          $TYPOC ;;CALL=TYPOC   TRAP+2(104402) TYPE OCTAL NUMBER (WITH LEADING ZEROS)
007250 006320          $TYPOS ;;CALL=TYPOS   TRAP+3(104403) TYPE OCTAL NUMBER (NO LEADING ZEROS)
007252 006360          $TYPON ;;CALL=TYPON   TRAP+4(104404) TYPE OCTAL NUMBER (AS PER LAST CALL)
007254 006546          $TYPDS ;;CALL=TYPDS   TRAP+5(104405) TYPE DECIMAL NUMBER (WITH SIGN)
007256 006244          $TYPBN ;;CALL=TYPBN   TRAP+6(104406) TYPE BINARY (ASCII) NUMBER
007260 004356          $GTSWR ;;CALL=GTSWR   TRAP+7(104407) GET SOFT-SWR SETTING
007262 004306          $CKSWR ;;CALL=CKSWR   TRAP+10(104410) TEST FOR CHANGE IN SOFT-SWR
007264 004650          $RDCHR ;;CALL=RDCHR   TRAP+11(104411) TTY TYPEIN CHARACTER ROUTINE
007266 004760          $RDLIN ;;CALL=RDLIN   TRAP+12(104412) TTY TYPEIN STRING ROUTINE
007270 006772          $SAVREG ;;CALL=SAVREG TRAP+13(104413) SAVE R0-R5 ROUTINE
007272 007030          $RESREG ;;CALL=RESREG TRAP+14(104414) RESTORE R0-R5 ROUTINE

```

1911

..SBTTL POWER DOWN AND UP ROUTINES

..POWER DOWN ROUTINE

007274 012737 007452 000024
007302 012737 000340 000026
007310 010046
007312 010146
007314 010246
007316 010346
007320 010446
007322 010546
007324 017746 171610
007330 010637 007456
007334 012737 007346 000024
007342 000000
007344 000776

```
$PWRDN: MOV #SILLUP,@#PWRVEC ;;SET FOR FAST UP
MOV #340,@#PWRVEC+2 ;;PRIO:7
MOV R0,-(SP) ;;PUSH R0 ON STACK
MOV R1,-(SP) ;;PUSH R1 ON STACK
MOV R2,-(SP) ;;PUSH R2 ON STACK
MOV R3,-(SP) ;;PUSH R3 ON STACK
MOV R4,-(SP) ;;PUSH R4 ON STACK
MOV R5,-(SP) ;;PUSH R5 ON STACK
MOV @SWR,-(SP) ;;PUSH @SWR ON STACK
MOV SP,$SAVR6 ;;SAVE SP
MOV #SPWRUP,@#PWRVEC ;;SET UP VECTOR
HALT
BR -2 ;;HANG UP
```

..POWER UP ROUTINE

007346 012737 007452 000024
007354 013706 007456
007360 005037 007456
007364 005237 007456
007370 001375
007372 012677 171542
007376 012605
007400 012604
007402 012603
007404 012602
007406 012601
007410 012600
007412 012737 007274 000024
007420 012737 000340 000026
007426 104401
007430 007460
007432 012716
007434 020000
007436 042766 000020 000002
007444 005037 001310
007450 000002
007452 000000
007454 000776
007456 000000
1912 007460 012 015 040
007463 120 117 127
007466 105 122 040
007471 106 101 111
007474 114 125 122
007477 105 040 055
007502 040 122 105
007505 123 124 101
007510 122 124 111
007513 116 107 040
007516 012 015 000

```
$PWRUP: MOV #SILLUP,@#PWRVEC ;;SET FOR FAST DOWN
MOV $SAVR6,SP ;;GET SP
CLR $SAVR6 ;;WAIT LOOP FOR THE TTY
1$: INC $SAVR6 ;;WAIT FOR THE INC
RNE 1$ ;;OF WORD
MOV (SP)+,@SWR ;;POP STACK INTO @SWR
MOV (SP)+,R5 ;;POP STACK INTO R5
MOV (SP)+,R4 ;;POP STACK INTO R4
MOV (SP)+,R3 ;;POP STACK INTO R3
MOV (SP)+,R2 ;;POP STACK INTO R2
MOV (SP)+,R1 ;;POP STACK INTO R1
MOV (SP)+,R0 ;;POP STACK INTO R0
MOV #SPWRDN,@#PWRVEC ;;SET UP THE POWER DOWN VECTOR
MOV #340,@#PWRVEC+2 ;;PRIO:7
TYPE PWRMSG ;;REPORT THE POWER FAILURE
$PWRMG: .WORD PWRMSG ;;POWER FAIL MESSAGE POINTER
MOV (PC)+,(SP) ;;RESTART AT START
$PWRAD: .WORD START ;;RESTART ADDRESS
BIC #20,(SP) ;;CLEAR 'T' BIT
CLR $TBIT ;;CLEAR THE 'T' BIT FLAG
RTI
$ILLUP: HALT ;;THE POWER UP SEQUENCE WAS STARTED
BR -2 ;; BEFORE THE POWER DOWN WAS COMPLETE
$SAVR6: 0 ;;PUT THE SP HERE
PWRMSG: .ASCIZ <12><15>? POWER FAILURE - RESTARTING ?<12><15>
```

1913

..EVEN

```

1915          .SBTTL  ERROR MESSAGES, DATA HEADERS-TABLES & FORMATS
1916          .NLIST  BEX
1917 007522      125      116      105  EM1:  .ASCIZ  /UNEXPECTED CPU TRAP TO LOC. 004/
1918 007562      125      116      105  EM2:  .ASCIZ  /UNEXPECTED MEM. MGMT. TRAP TO LOC. 250/
1919 007631      115      105      115  EM10: .ASCIZ  /MEMORY MGMT. ACCESS ABORT DID NOT OCCUR/
1920 007701      101      103      103  EM11: .ASCIZ  /ACCESS ERROR DID NOT ABORT INSTRUCTION/
1921 007750      123      122      060  EM12: .ASCIZ  /SR0 DID NOT REPORT ACCESS ERROR CORRECTLY/
1922 010022      123      122      062  EM13: .ASCIZ  /SR2 DID NOT LOCKUP CORRECT VIRTUAL ADDR./
1923 010073      120      101      107  EM14: .ASCIZ  /PAGE LGTH. ABORT OCCURRED WHEN IT SHOULDN'T HAVE/
1924 010154      120      101      107  EM15: .ASCIZ  /PAGE LGTH. ABORT DID NOT OCCUR WHEN IT SHOULD HAVE/
1925 010237      123      122      060  EM16: .ASCIZ  /SR0 DID NOT REPORT PAGE LGTH. ABORT CORRECTLY/
1926 010315      123      122      060  EM21: .ASCIZ  /SR0 OR SR2 CHANGED BY A SECOND ABORT/
1927 010362      123      122      060  EM22: .ASCIZ  /SR0 OR SR2 WERE NOT 'RESET' BY A RESET/
1928 010431      123      122      062  EM23: .ASCIZ  /SR2 NOT TRACKING CORRECTLY/
1929 010464      104      111      104  EM24: .ASCIZ  /DID NOT TRAP THRU KERNEL SPACE/
1930 010523      113      124      040  EM25: .ASCIZ  /KT ERROR SERVICED ON ODD ADDR. ERROR/
1931 010570      123      122      060  EM26: .ASCIZ  /SR0 OR SR2 CHANGED BY ODD ADDR. ERROR/
1932 010636      105      122      122  EM27: .ASCIZ  /ERROR DURING 'DOUBLE ERROR' (KT & ODD ADDR.)/
1933 010713      115      106      120  EM30: .ASCIZ  /MFPI INSTRUCTION PUSHED WRONG DATA/
1934 010756      115      124      120  EM31: .ASCIZ  /MTPI INSTRUCTION LOADED WRONG DATA/
1935 011021      123      124      101  EM32: .ASCIZ  /STACK NOT PUSHED BY MFPI-MTPI/
1936 011057      113      105      122  EM33: .ASCIZ  /KERNEL PAGE ACCESS INSTEAD OF USER: MFPI-MTPI/
1937 011135      115      056      115  EM34: .ASCIZ  /M.M. ABORT IN KERNAL D-SPACE HAD WRONG CONDITION/
1938 011216      111      114      114  EM35: .ASCIZ  /ILLEGAL MODE 10 NOT ABORTED/
1939 011252      123      122      060  EM36: .ASCIZ  /SR0 DID NOT REPORT ILLEGAL MODE 10 CORRECTLY/
1940 011327      120      123      127  EM37: .ASCIZ  /PSW CHANGED BY AN RTI IN USER MODE/
1941 011372      101      102      117  EM40: .ASCIZ  /ABORT I KERNAL D-SPACE PICKED UP VECTOR FROM I-SPACE/
1942 011457      104      040      123  EM41: .ASCIZ  /D SPACE ENABLE CIRCUITRY HAS FAILED/
1943 011523      111      116      103  EM42: .ASCIZ  /INCORRECT STORE BY MTP INSTRUCTION/
1944 011566      124      122      111  EM43: .ASCIZ  /TRIED TO REFERENCE NON-RESIDENT PAGE/
1945 011633      127      122      117  EM44: .ASCIZ  /WRONG DATA FETCHED BY MFP INSTRUCTION/
1946 011701      111      114      114  EM45: .ASCIZ  /ILLEGAL CSM DID NOT TRAP TO 10/
1947 011740      103      123      115  EM46: .ASCIZ  /CSM DID NOT ENTER SUPERVISOR MODE/
1948 012002      103      123      115  EM47: .ASCIZ  /CSM SET UP WRONG PREVIOUS MODE/
1949 012041      103      123      115  EM50: .ASCIZ  /CSM SET UP STACK WRONG/
1950 012070      103      123      115  EM51: .ASCIZ  /CSM PUSHED INCORRECT ARGUMENT/
1951 012126      103      123      115  EM52: .ASCIZ  /CSM PUSHED WRONG PC/
1952 012152      103      123      115  EM53: .ASCIZ  /CSM DID NOT CLEAR OLD PSW BITS <3:0>/
1953 012217      103      123      115  EM54: .ASCIZ  /CSM ACCESSED WRONG SUPERVISOR SPACE/
1954 012263      103      123      115  EM55: .ASCIZ  /CSM ABORTED WHEN IT SHOULD NOT HAVE/
1955 012327      103      123      115  EM56: .ASCIZ  /CSM FAILED TO INCREMENT/DECREMENT REGISTER PROPERLY?
1956 012413      103      123      115  EM57: .ASCIZ  /CSM FAILED TO PUT PROPER ARGUMENT ON STACK/
1957 012466      123      122      062  EM58: .ASCIZ  /SR2 LOCKED UP AN 11/34 COMPATIBLE ADDRESS THAT:<CRLF>
1958 012545      101      117      105  .ASCIZ  /DOES NOT MAKE IT COMPATIBLE WITH AN 11/70 SINCE:<CRLF>
1959 012625      124      110      105  .ASCIZ  /THE OPTIONAL M7095 ECO #8 IS MISSING/
1960          .EVEN

```

Year	Test No	PC	PSW	R6	SR0	SR2	TESTNO	ERRORPC/
1962								
1963	012672	117	114	104	DH1:	.SBTTL	DATA HEADERS	
1964	012752	117	114	104	DH2:	.ASCIZ	/OLD PC OLD PSW R6 WAS CPUERR TESTNO ERRORPC/	
1965	013042	120	104	122	DH10:	.ASCIZ	/OLD PC OLD PSW R6 WAS SR0 SR2 TESTNO ERRORPC/	
1966	013102	123	122	060	DH12:	.ASCIZ	/PDR 4 PSW TESTNO ERRORPC/	
1967	013162	123	122	062	DH13:	.ASCIZ	/SR0 WAS EXPECTD PDR 4 PSW TESTNO ERRORPC/	
1968	013242	126	056	102	DH14:	.ASCIZ	/SR2 WAS EXPECTD PDR 4 PSW TESTNO ERRORPC/	
1969	013322	126	056	102	DH15:	.ASCIZ	/V.B.A. KIPDR4 SR0 WAS SR2 WAS TESTNO ERRORPC/	
1970	013362	126	056	102	DH16:	.ASCIZ	/V.B.A. KIPDR4 TESTNO ERRORPC/	
1971	013442	126	056	102	DH17:	.ASCIZ	/V.B.A. KIPDR4 SR0 WAS EXPECTD TESTNO ERRORPC/	
1972	013522	123	122	062	DH20:	.ASCIZ	/V.B.A. KIPDR4 SR2 WAS EXPECTD TESTNO ERRORPC/	
1973	013562	106	111	122	DH21:	.ASCII	/SR2 WAS EXPECTD TESTNO ERRORPC/	
1974	013617	123	122	060		.ASCIZ	/FIRST ABORT SECOND ABORT/<CRLF>	
1975	013677	123	122	060	DH22:	.ASCIZ	/SR0 WAS SR2 WAS SR0 WAS SR2 WAS TESTNO ERRORPC/	
1976	013737	120	123	127	DH24:	.ASCIZ	/SR0 WAS SR2 WAS TESTNO ERRORPC/	
1977	013777	105	130	120	DH26:	.ASCII	/PSW WAS R6 WAS TESTNO ERRORPC/	
1978	014031	123	122	060		.ASCIZ	/EXPECTED RECEIVED/<CRLF>	
1979	014111	105	130	120	DH27:	.ASCII	/SR0 SR2 SR0 WAS SR2 WAS TESTNO ERRORPC/	
1980	014123	120	123	127		.ASCII	/EXPECTED: <CRLF>	
1981	014157	061	067	060		.ASCII	/PSW PC SR0 SR2/<CRLF>	
1982	014214	122	105	103		.ASCII	/170017 (3\$+4) 020147 (3\$)/<CRLF>	
1983	014226	120	123	127		.ASCIZ	/RECEIVED: <CRLF>	
1984	014306	104	101	124	DH30:	.ASCII	/PSW PC SR0 SR2 TESTNO ERRORPC/	
1985	014323	105	130	120		.ASCIZ	/DATA DATA/<CRLF>	
1986	014362	124	105	123	DH32:	.ASCIZ	/EXPECTD RECEIVD TESTNO ERR PC/	
1987	014401	123	122	060	DH33:	.ASCIZ	/TESTNO ERR PC/	
1988	014441	050	115	115	DH34:	.ASCIZ	/SR0 WAS SR2 WAS TESTNO ERRORPC/	
1989	014532	123	122	060	DH36:	.ASCIZ	/(MMR0) (MMR1) (MMR2) TESTNO ERRORPC EXPECTING 020031/	
1990	014572	120	123	127	DH37:	.ASCIZ	/SR0 WAS EXPECTD TESTNO ERRORPC/	
1991	014632	050	120	123	DH40:	.ASCIZ	/PSW WAS EXPECTD TESTNO ERRORPC/	
1992	014703	105	122	122	DH41:	.ASCII	/(PSW) TESTNO ERRORPC EXPECTING XXX340/	
1993	014733	122	105	107		.ASCIZ	/ERROR AUTOI-D VIRTUAL/<CRLF>	
1994	015007	107	104	104	DH42:	.ASCIZ	/REGISTR REGISTR ADDRESS TESTNO PC AT ABORT/	
1995	015047	050	115	115	DH43:	.ASCIZ	/GDDATA STORED TESTNO ERRORPC/	
1996	015117	105	130	120	DH44:	.ASCIZ	/(MMR0) (MMR1) (MMR2) TESTNO ERRORPC/	
1997	015157	117	114	104	DH45:	.ASCIZ	/EXPECTD (PSW) TESTNO ERRORPC/	
1998	015207	124	105	123	DH55:	.ASCIZ	/OLDPSW TESTNO ERRORPC/	
1999	015246	124	105	123	DH57:	.ASCIZ	/TESTNO ERR PC RO EXP RO RCV/	
2000						.EVEN	ARGEXP ARGRCV/	

2002						.SBTTL	DATA TABLES
2003	015306	001260	001262	001256	DT1:	.WORD	TRAPPC,TRAPPS,WASR6,CPUERR,TESTNO,\$ERRPC,0
2004	015324	001260	001262	001256	DT2:	.WORD	TRAPPC,TRAPPS,WASR6,WASSR0,WASSR2,TESTNO,\$ERRPC,0
2005	015344	001166	001176	001254	DT10:	.WORD	\$REG2,\$TMP0,TESTNO,\$ERRPC,0
2006	015356	001264	001170	001166	DT12:	.WORD	WASSR0,\$REG3,\$REG2,\$TMP0,TESTNO,\$ERRPC,0
2007	015374	001270	001172	001166	DT13:	.WORD	WASSR2,\$REG4,\$REG2,\$TMP0,TESTNO,\$ERRPC,0
2008	015412	001162	001172	001264	DT14:	.WORD	\$REG0,\$REG4,WASSR0,WASSR2,TESTNO,\$ERRPC,0
2009	015430	001162	001172	001254	DT15:	.WORD	\$REG0,\$REG4,TESTNO,\$ERRPC,0
2010	015442	001162	001172	001264	DT16:	.WORD	\$REG0,\$REG4,WASSR0,\$REG2,TESTNO,\$ERRPC,0
2011	015460	001162	001172	001270	DT17:	.WORD	\$REG0,\$REG4,WASSR2,\$REG3,TESTNO,\$ERRPC,0
2012	015476	001270	001164	001254	DT20:	.WORD	WASSR2,\$REG1,TESTNO,\$ERRPC,0
2013	015510	001176	001202	001264	DT21:	.WORD	\$TMP0,\$TM,2,WASSR0,WASSR2,TESTNO,\$ERRPC,0
2014	015526	001264	001270	001254	DT22:	.WORD	WASSR0,WASSR2,TESTNO,\$ERRPC,0
2015	015540	001164	001166	001254	DT24:	.WORD	\$REG1,\$REG2,TESTNO,\$ERRPC,0
2016	015552	001162	001164	001264	DT26:	.WORD	\$REG0,\$REG1,WASSR0,WASSR2,TESTNO,\$ERRPC,0
2017	015570	001164	001170	001264	DT27:	.WORD	\$REG1,\$REG3,WASSR0,WASSR2,TESTNO,\$ERRPC,0
2018	015606	035336	001176	001254	DT30:	.WORD	ACSMSP,\$TMP0,TESTNO,\$ERRPC,0
2019	015620	001254	001116	000000	DT32:	.WORD	TESTNO,\$ERRPC,0
2020	015626	001164	001166	001170	DT34:	.WORD	\$REG1,\$REG2,\$REG3,TESTNO,\$ERRPC,0
2021	015642	001264	001164	001254	DT36:	.WORD	WASSR0,\$REG1,TESTNO,\$ERRPC,0
2022	015654	001162	001254	001116	DT40:	.WORD	\$REG0,TESTNO,\$ERRPC,0
2023	015664	001264	001266	001270	DT41:	.WORD	WASSR0,WASSR1,WASSR2,TESTNO,BADPC,0
2024	015700	001162	001164	001254	DT42:	.WORD	\$REG0,\$REG1,TESTNO,\$ERRPC,0
2025	015712	001162	001164	001166	DT43:	.WORD	\$REG0,\$REG1,\$REG2,TESTNO,\$ERRPC,0
2026	015726	001264	001266	001270	DT45:	.WORD	WASSR0,WASSR1,WASSR2,TESTNO,\$ERRPC,0
2027	015742	001170	035334	001254	DT46:	.WORD	\$REG3,ACSMPS,TESTNO,\$ERRPC,0
2028	015754	001162	035326	001254	DT47:	.WORD	\$REG0,CSM1ST,TESTNO,\$ERRPC,0
2029	015766	001176	035330	001254	DT50:	.WORD	\$TMP0,CSM2ND,TESTNO,\$ERRPC,0
2030	016000	035332	001254	001116	DT52:	.WORD	CSM3RD,TESTNO,\$ERRPC,0
2031	016010	001254	001116	001176	DT55:	.WORD	TESTNO,\$ERRPC,\$TMP0,\$REG0,0
2032	016022	001254	001116	001176	DT57:	.WORD	TESTNO,\$ERRPC,\$TMP0,\$TMP1,0

2034						.SBTTL	DATA FORMAT BYTE STRINGS
2035	016034	000	000	000	DF1:	.BYTE	0,0,0,0,0
2036	016041	000	000	000	DF2:	.BYTE	0,0,0,0,0,0,0
2037	016050	000	000	000	DF3:	.BYTE	0,0,0,0
2038	016054	000	000	000	DF5:	.BYTE	0,0,0
2039	016057	000	000	000	DF12:	.BYTE	0,0,0,0,0,0
2040	016065	000	000		DF32:	.BYTE	0,0
2041						.EVEN	


```

2042          .SBTTL ***** TRAP HANDLING ROUTINES *****
2043
2044          .SBTTL CPU TRAP HANDLER ROUTINE
2045          ;*****
2046          ;*
2047          ;* THIS SUBROUTINE WILL HANDLE ALL CPU TRAPS AND ABORTS THRU
2048          ;* 'ERRVEC' (LOC. 004). IF THIS SUBROUTINE IS ENTERED BY A
2049          ;* SECOND TRAP BEFORE THE FIRST HAS BEEN SERVICED, A HALT IS
2050          ;* EXECUTED.
2051          ;*
2052          ;*****
2053 016070 005227 TIMERR: INC      (PC)+      ;MAKE FLAG ZERO IF FIRST TIME THRU
2054 016072 177777 TIMFLG: .WORD  -1      ;NEGATIVE ONE FOR 'HAVE ENTERED' FLAG
2055 016074 001401          BEQ      1$      ;BRANCH IF FIRST TIME IN
2056 016076 000000          HALT          ;STOP! - I'VE ENTERED THIS ROUTINE
2057          ;A SECOND TIME BEFORE I FINISHED
2058          ;REPORTING THE FIRST ERROR. THE
2059          ;SECOND ENTRY ADDRESS SHOULD BE ON
2060          ;THE KERNEL STACK.
2061 016100 012637 001260 1$:  MOV      (KSP)+,TRAPPC ;SAVE PC+2 AT TIME OF ABORT
2062 016104 012637 001262      MOV      (KSP)+,TRAPPS ;SAVE PS AT TIME OF ABORT
2 63 016110 010637 001256      MOV      KSP,NASR6 ;SAVE STACK POINTER VALUE
2064 016114 104001          ERROR  +1      ;UNEXPECTED TRAP OR ABORT TO LOC. 4
2065 016116 012737 177777 016072 MOV      #-1,TIMFLG ;MAKE FLAG NEGATIVE ONE FOR NEXT TIME
2066 016124 005037 177766      CLR      CPUERR ;CLEAR THE CPU ERROR REGISTER
2067 016130 013746 001262      MOV      TRAPPS,-(KSP) ;PUT PC & PS OF TRAP ON STACK
2068 016134 013746 001260      MOV      TRAPPC,-(KSP)
2069 016140 000006          RTT          ;RETURN FROM INTERRUPT OR ABORT
  
```



```

2102          : *      ***** STARTING POINT OF TEST *****
2103          : *      ***** STARTING ADDRESS OF 200 *****
2104          : =20000
2105
2106 020000    START:
                .SBTTL INITIALIZE THE COMMON TAGS
                ;;CLEAR THE COMMON TAGS ($CMTAG) AREA
020000 012706 001100    MOV    # $CMTAG,R6      ;;FIRST LOCATION TO BE CLEARED
020004 005026          CLR    (R6)+          ;;CLEAR MEMORY LOCATION
020006 022706 001140    CMP    #SWR,R6 ;;DONE?
020012 001374          BNE    -6            ;;LOOP BACK IF NO
020014 012706 001100    MOV    #STACK,SP      ;;SETUP THE STACK POINTER
                ;;INITIALIZE A FEW VECTORS
020020 012737 003042 000020    MOV    # $SCOPE,@#IOTVEC ;;IOT VECTOR FOR SCOPE ROUTINE
020026 012737 000340 000022    MOV    #340,@#IOTVEC+2 ;;LEVEL 7
020034 012737 003270 000030    MOV    # $ERROR,@#EMTVEC ;;EMT VECTOR FOR ERROR ROUTINE
020042 012737 000340 000032    MOV    #340,@#EMTVEC+2 ;;LEVEL 7
020050 012737 007206 000034    MOV    # $TRAP,@#TRAPVEC ;;TRAP VECTOR FOR TRAP CALLS
020056 012737 000340 000036    MOV    #340,@#TRAPVEC+2;LEVEL 7
020064 012737 007274 000024    MOV    # $PWRDN,@#PWRVEC ;;POWER FAILURE VECTOR
020072 012737 000340 000026    MOV    #340,@#PWRVEC+2 ;;LEVEL 7
020100 013737 036054 036046    MOV    $ENDCT,$EOPCT  ;;SETUP END-OF-PROGRAM COUNTER
020106 005037 001212          CLR    $ESCAPE       ;;CLEAR THE ESCAPE ON ERROR ADDRESS
020112 112737 000001 001115    MOV    #1,$ERMAX     ;;ALLOW ONE ERROR PER TEST
                ;;INITIALIZE THE 'T-BIT' TRAP VECTOR. THEN LOAD LOCATION '$RTRN', IN
                ;;THE 'END-OF-PASS' ($EOP) ROUTINE, WITH A 'RTI' OR 'RTT'.
020120 012737 036316 000014    MOV    # $RTRN,@#TBITVEC ;;SET 'T' BIT VECTOR TO $RTRN
020126 012737 000340 000016    MOV    #340,@#TBITVEC+2 ;;LEVEL 7
020134 012737 000002 036316    MOV    #RTI,$RTRN    ;;SET $RTRN TO A RTI
020142 012737 020170 000010    MOV    #65$,@#RESVEC  ;;TRY TO DO A RTT
020150 005046          CLR    -(SP)         ;;DUMMY PS
020152 012746 020160          MOV    #64$,-(SP)    ;;AND PC
020156 000006          RTT                ;;TRY THE RTT
020160 012737 000006 036316 64$: MOV    #RTT,$RTRN    ;;RTT IS LEGAL--SET $RTRN TO A RTT
020166 000402          BR    66$
020170 062706 000010 65$:  ADD    #10,SP        ;;RTT ILLEGAL--CLEAN OFF THE STACK
020174 012737 000012 000010 66$:  MOV    #RESVEC+2,@#RESVEC ;;RESTORE TRAP CATCHER
020202 005037 001310          CLR    $TBIT        ;;CLEAR 'T' BIT SWITCH
020206 012737 020206 001106    MOV    #.,$LPADR     ;;INITIALIZE THE LOOP ADDRESS FOR SCOPE
020214 012737 020214 001110    MOV    #.,$LPERR     ;;SETUP THE ERROR LOOP ADDRESS
                ;;SIZE FOR A HARDWARE SWITCH REGISTER. IF NOT FOUND OR IT IS
                ;;EQUAL TO A "-1", SETUP FOR A SOFTWARE SWITCH REGISTER.
020222 013746 000004          MOV    @#ERRVEC,-(SP) ;;SAVE ERROR VECTOR
020226 012737 020262 000004    MOV    #67$,@#ERRVEC ;;SET UP ERROR VECTOR
020234 012737 177570 001140    MOV    #DSWR,SWR     ;;SETUP FOR A HARDWARE SWICH REGISTER
020242 012737 177570 001142    MOV    #DDISP,DISPLAY ;;AND A HARDWARE DISPLAY REGISTER
020250 022777 177777 160662    CMP    #-1,@SWR     ;;TRY TO REFERENCE HARDWARE SWR
020256 001012          BNE    69$         ;;BRANCH IF NO TIMEOUT TRAP OCCURRED
                ;;AND THE HARDWARE SWR IS NOT = -1
020260 000403          BR    68$         ;;BRANCH IF NO TIMEOUT
020262 012716 020270 67$:  MOV    #68$,(SP)    ;;SET UP FOR TRAP RETURN
020266 000002          RTI
020270 012737 000176 001140 68$:  MOV    #SWREG,SWR    ;;POINT TO SOFTWARE SWR
020276 012737 000174 001142    MOV    #DISPREG,DISPLAY
020304 012637 000004 69$:  MOV    (SP)+,@#ERRVEC ;;RESTORE ERROR VECTOR
020310 005037 001232          CLR    $PASS       ;;CLEAR PASS COUNT
020314 132737 000200 001245    BITB  #APTSIZE,$ENVM ;;TEST USER SIZE UNDER APT
    
```

```

2107 020322 001403          BEQ    70$      ;;YES,USE NON-APT SWITCH
      020324 012737 001246 001140  MOV    #$$SWREG,SWR  ;;NO,USE APT SWITCH REGISTER
      020332          70$:
      .SBTTL  TYPE PROGRAM NAME
      ;;TYPE THE NAME OF THE PROGRAM IF FIRST PASS:
      020332 005227 177777          INC    #-1          ;;FIRST TIME?
      020336 001047          BNE    71$          ;;BRANCH IF NO
      020340 022737 036252 000042  CMP    #$$ENDAD,@#42  ;;ACT-11?
      020346 001443          BEQ    71$          ;;BRANCH IF YES
      020350 104401 020416          TYPE   ,72$          ;;TYPE ASCIZ STRING
      .SBITL  GET VALUE FOR SOFTWARE SWITCH REGISTER
      020354 005737 000042          TST    @#42          ;;ARE WE RUNNING UNDER XXDP/ACT?
      020360 001012          BNE    73$          ;;BRANCH IF YES
      020362 123727 001244 000001  CMPB   $ENV,#1        ;;ARE WE RUNNING UNDER APT?
      020370 001406          BEQ    73$          ;;BRANCH IF YES
      020372 023727 001140 000176  CMP    SWR,#SWREG     ;;SOFTWARE SWITCH REG SELECTED?
      020400 001005          BNE    74$          ;;BRANCH IF NO
      020402 104407          GTSWR          ;;GET SOFT-SWR SETTINGS
      020404 000403          BR     74$
      020406 112737 000001 001134 73$:  MOVB   #1,$AUTOB     ;;SET AUTO-MODE INDICATOR
      020414          74$:
      020414 000420          BR     71$          ;;GET OVER THE ASCIZ
      020456          ;;72$: .ASCIZ <CRLF>#CKKTBD0 11/44 MEM MGMT PRT B#<CRLF>
      2108 020456 104401 020464          71$:
      020462 000436          TYPE   ,76$          ;;TYPE ASCIZ STRING
      ;;76$: .ASCIZ #EOP MESSAGES WILL PRINT EVERY 64 PASSES OR ABOUT 11 SECONDS#
      020560          75$:
      2109 020560          LOOP:
      2110 020560 012706 001100          MOV    #STACK,KSP    ;;INITIALIZE THE STACK POINTER
      2111 020564 012737 040000 177776  MOV    #40000,PSW     ;;TURN ON SUPERVISOR MODE
      2112 020572 012706 000700          MOV    #SUPSTK,SSP    ;;INITIALIZE SUPER. STACK POINTER
      2113 020576 012737 140000 177776  MOV    #140000,PSW    ;;TURN ON USER MODE
      2114 020604 012706 000600          MOV    #USESTK,USP    ;;INITIALIZE USER STACK POINTER
      2115 020610 005037 177776          CLR    PSW           ;;RETURN TO KERNAL MODE
      2116 020614 012737 016070 000004  MOV    #TIMERR,ERRVEC ;;LOAD CPU SERVICE ROUTINE INTO TRAP VECTOR
      2117 020622 012737 000340 000006  MOV    #340,ERRVEC+2  ;;SET NEW PS TO PRIORITY LEVEL 7-KERNEL
      2118 020630 012737 016142 000250  MOV    #MGMERR,MMVEC  ;;LOAD MEMORY MANAGENT ROUTINE INTO VECTOR
      2119 020636 012737 000340 000252  MOV    #340,MMVEC+2  ;;SET NEW PS TO PRIORITY LEVEL 7-KERNEL
      2120 020644 012700 177777          MOV    #-1,R0        ;;PUT -1 INTO R0 TO INITIALIZE FLAGS
      2121 020650 010037 016072          MOV    R0,TIMFLG     ;;INITIALIZE CPU ERROR FLAG
      2122 020654 010037 016144          MOV    R0,MGMFLG     ;;INITIALIZE MEMORY MANAGEMENT ERROR FLAG
      2123 020660 012737 000340 001274  MOV    #340,TBITPS   ;;INITIALIZE LOG THAT HOLDS T-BIT PSW
      2124 020666 005037 177572          INIT: CLR    MMR0     ;;BE SURE MEM. MGMT IS OFF TO START WITH,
      2125 020672 012737 000020 172516  MOV    #BIT4,MMR3    ;;BUT TURN ON 22-BIT ADDRESSING MODE
      2126 020700 004737 002060          JSR    PC,APRINIT   ;;JUMP TO PAR/PDR INIT ROUTINE

```


2150

```
.SBTTL TEST # 1 - NON-RESIDENT ABORT TEST (ACF=084)
:*****
:*TEST 1 NON-RESIDENT ABORT TEST (ACF=084)
:*
:* THIS TEST CHECKS THE ACCESS CONTROL FIELD (ACF) COMPARTOR
:* LOGIC BY CAUSING NON-RESIDENT ABORTS IN KERNEL, SUPERVISOR
:* AND USER MODES. PDR 4 IS LOADED WITH ACF'S = 084 AND
:* THEN PHYSICAL ADDR. 60000 IS ACCESSED TO CAUSE THE ABORT.
:*
:*****
```

```
TST1: SCOPE
1$: MOV #600,R0 ;LOAD DATA FOR PAR'S INTO R0
MOV R0,KIPAR3 ;MAP KERNEL PAR'S 384 TO 12-16K
MOV R0,KIPAR4
MOV R0,SIPAR3 ;MAP SUPERVISOR PAR'S 384 TO 12-16K
MOV R0,SIPAR4
MOV R0,UIPAR3 ;MAP USER PAR'S 384 TO 12-16K
MOV R0,UIPAR4
MOV #60000,R0 ;LOAD VIRTUAL ADDR. TO REFERENCE PDR3 INTO R0
MOV #100000,R1 ;LOAD VIRTUAL ADDR. TO REFERENCE PDR4 INTO R1
MOV #100011,R3 ;LOAD R3 WITH WHAT SRO SHOULD READ - N.R., KERNEL, PG.4
MOV #77400,R2 ;LOAD ACF=0 (NON-RESIDENT) PDR VALUE IN R2
2$: MOV #5$,MMVEC ;POINT MEM. MGMT. TRAP VECTOR TO 5$ BELOW
MOV R2,KIPDR4 ;LOAD ACF TEST VALUE INTO KIPDR4
MOV R2,SIPDR4 ;LOAD ACF TEST VALUE INTO SIPDR4
MOV R2,UIPDR4 ;LOAD ACF TEST VALUE INTO UIPDR4
000250 3$: MOV #3$,SLPERR ;SET LOOP ON ERROR POINTER TO 3$
MOV #1,MMRO ;TURN ON MEMORY MANAGEMENT
2151 020704 000004 000600 2151 020706 012700 000600 ;CLR (R0) ;CLEAR PHYS. LOC. 60000 USING PDR3
2152 020712 010037 172346 2152 020712 010037 172346 ;MOV PSW,$TMP0 ;SAVE PSW IN CASE OF ERROR
2153 020716 010037 172350 2153 020716 010037 172350 ;INC (R1) ;TRY TO REF. IT USING PDR4 - SHOULD TRAP TO 5$
2154 020722 010037 172246 2154 020722 010037 172246 ;ERROR +3 ;MEM. MGMT. ABORT DID NOT OCCUR
2155 020726 010037 172250 2155 020726 010037 172250 ;FOR TIGHTER SCOPE LOOP
2156 020732 010037 177646 2156 020732 010037 177646 ;REPLACE ERROR CALL WITH
2157 020736 010037 177650 2157 020736 010037 177650 ;'BR 3$' = 000772
2158 020742 012700 060000 2158 020742 012700 060000 ;BR 8$ ;BRANCH AROUND STATUS REG. CHECKS IF NO ABORT
2159 020746 012701 100000 2159 020746 012701 100000 ;ADD #4,SP ;RESTORE STACK POINTER
2160 020752 012703 100011 2160 020752 012703 100011 ;TST (R0) ;DID INSTRUCTION GET ABORTED & NOT EXECUTE
2161 020756 012702 077400 2161 020756 012702 077400 ;BEQ 6$ ;BRANCH IF YES
2162 020767 012737 021036 000250 2162 020767 012737 021036 000250 ;ERROR +4 ;INSTRUCTION WAS NOT ABORTED, LOC. GOT CHANGED
2163 020770 010237 172310 2163 020770 010237 172310 ;FOR TIGHTER SCOPE LOOP
2164 020774 010237 172210 2164 020774 010237 172210 ;REPLACE ERROR CALL WITH
2165 021000 010237 177610 2165 021000 010237 177610 ;'BR 3$' = 000764
2166 021004 012737 021020 001110 2166 021004 012737 021020 001110 ;MOV SRO,WASSR0 ;READ STATUS REGISTER 0
2167 021012 012737 000001 177572 2167 021012 012737 000001 177572 ;MOV SR2,WASSR2 ;READ STATUS REGISTER 2
2168 021020 005010 2168 021020 005010 ;CMP R3,WASSR0 ;DID SRO REPORT NON-RESIDENT ERROR CORRECTLY?
2169 021022 013737 177776 001176 2169 021022 013737 177776 001176 ;BEQ 7$ ;BRANCH IF YES
2170 021030 005211 2170 021030 005211 ;ERROR +5 ;SRO DID NOT REPORT NON-RES. ERROR CORRECTLY
2171 021032 104003 2171 021032 104003 ;FOR TIGHTER SCOPE LOOP
2172 2172 ;REPLACE ERROR CALL WITH
2173 2173 ;'BR 3$' = 000752
2174 2174 ;LOAD R4 WITH WHAT SR2 SHOULD READ
2175 021034 000425 2175 021034 000425 ;CMP R4,WASSR2 ;DID SR2 LOCKUP RIGHT VIRTUAL ADDR. (=4$)?
2176 021036 062706 000004 2176 021036 062706 000004 ;BEQ 8$ ;BRANCH IF YES
2177 021042 005710 2177 021042 005710 ;ERROR +6 ;SR2 DID NOT LOCK VIRTUAL ADDR. OF NON-RES. ERROR
2178 021044 001401 2178 021044 001401 ;FOR TIGHTER SCOPE LOOP
2179 021046 104004 2179 021046 104004 ;REPLACE ERROR CALL WITH
2180 2180 ;'BR 3$' = 000752
2181 2181 ;LOAD R4 WITH WHAT SR2 SHOULD READ
2182 2182 ;CMP R4,WASSR2 ;DID SR2 LOCKUP RIGHT VIRTUAL ADDR. (=4$)?
2183 021050 013737 177572 001264 2183 021050 013737 177572 001264 ;BEQ 7$ ;BRANCH IF YES
2184 021056 013737 177576 001270 2184 021056 013737 177576 001270 ;ERROR +5 ;SR2 DID NOT LOCK VIRTUAL ADDR. OF NON-RES. ERROR
2185 021064 020337 001264 2185 021064 020337 001264 ;FOR TIGHTER SCOPE LOOP
2186 021070 001401 2186 021070 001401 ;REPLACE ERROR CALL WITH
2187 021072 104005 2187 021072 104005 ;'BR 3$' = 000752
2188 2188 ;LOAD R4 WITH WHAT SR2 SHOULD READ
2189 2189 ;CMP R4,WASSR2 ;DID SR2 LOCKUP RIGHT VIRTUAL ADDR. (=4$)?
2190 2190 ;BEQ 8$ ;BRANCH IF YES
2191 021074 012704 021030 2191 021074 012704 021030 ;ERROR +6 ;SR2 DID NOT LOCK VIRTUAL ADDR. OF NON-RES. ERROR
2192 021100 020437 001270 2192 021100 020437 001270 ;FOR TIGHTER SCOPE LOOP
2193 021104 001401 2193 021104 001401 ;REPLACE ERROR CALL WITH
2194 021106 104006 2194 021106 104006 ;'BR 3$' = 000752
2195 2195 ;LOAD R4 WITH WHAT SR2 SHOULD READ
2196 2196 ;CMP R4,WASSR2 ;DID SR2 LOCKUP RIGHT VIRTUAL ADDR. (=4$)?
```


2226

```
.SBTTL TEST # 2 - READ-ONLY ABORT TEST (ACF=2)
*****
*TEST 2          READ-ONLY ABORT TEST (ACF=2)
*
* THIS TEST CHECKS THE ACCESS CONTROL FIELD (ACF) COMPARATOR
* LOGIC BY CAUSING READ-ONLY ABORTS IN KERNEL, SUPERVISOR AND
* USER MODES. PDR 4 IS LOAD WITH ACF=2 AND THEN
* PHYSICAL ADDR. 60000 IS WRITTEN TO CAUSE THE ABORT.
*****
```

```
TST2: SCOPE
1$:
;KERNEL, SUPERVISOR AND USER PAR'S 3 & 4,
;AND PDR 3 ARE SETUP FROM LAST TEST
;LOAD VIRTUAL ADDR. TO REFERENCE PDR3 INTO R0
;LOAD VIRTUAL ADDR. TO REFERENCE PDR4 INTO R1
;LOAD R3 WITH WHAT SRO SHOULD READ - R/O, KERNEL, PG.4
;LOAD ACF=2 (READ-ONLY) PDR VALUE IN R2
;POINT MEM. MGMT. TRAP VECTOR TO 5$ BELOW
;LOAD ACF=2 INTO KIPDR4
;LOAD ACF=2 INTO SIPDR4
;LOAD ACF=2 INTO UIPDR4
;SET LOOP ON ERROR POINTER TO 3$
;TURN ON MEMORY MANAGEMENT
;CLEAR PHYS. LOC. 60000 USING PDR3
;SAVE PSW IN CASE OF ERROR
;TRY TO WRITE USING PDR4 - SHOULD TRAP TO 5$
;MEM. MGMT. ABORT DID NOT OCCUR
;FOR TIGHTER SCOPE LOOP
;REPLACE ERROR CALL WITH
;'BR 3$' = 000772
;BRANCH AROUND STATUS REG. CHECKS IF NO ABORT
;RESTORE STACK POINTER
;DID INSTRUCTION GET ABORTED & NOT EXECUTE
;BRANCH IF YES
;INSTRUCTION WAS NOT ABORTED, LOC. GOT CHANGED
;FOR TIGHTER SCOPE LOOP
;REPLACE ERROR CALL WITH
;'BR 3$' = 000764
;READ STATUS REG. 0
;READ STATUS REG. 2
;DID SRO REPORT READ-ONLY ERROR CORRECTLY?
;BRANCH IF YES
;SRO DID NOT REPORT R/O ERROR CORRECTLY
;FOR TIGHTER SCOPE LOOP
;REPLACE ERROR CALL WITH
;'BR 3$' = 000752
;LOAD R4 WITH WHAT SR2 SHOULD READ
;DID SR2 LOCKUP RIGHT VIRTUAL ADDR. (=4$)?
;BRANCH IF YES
;SR2 DID NOT LOCKUP VIRTUAL ADDR. OF R/O ERROR
;FOR TIGHTER SCOPE LOOP
;REPLACE ERROR CALL WITH
;'BR 3$' = 000744
;TURN OFF MEMORY MANAGEMENT
;HAS ACF=2 BEEN TESTED IN USER MODE?
;BRANCH IF YES
;LOAD R3 WITH WHAT SRO SHOULD READ-R/O, USER, PG.4

2227 021222 UU0004
2228 021224
2229 021224 012700 060000 MOV #60000,R0
2230 021230 012701 100000 MOV #100000,R1
2231 021234 012703 020011 MOV #20011,R3
2232 021240 012702 077402 MOV #77402,R2
2233 021244 012737 021316 000250 2$: MOV #5$,MMVEC
2234 021252 010237 172310 MOV R2,KIPDR4
2235 021256 010237 172210 MOV R2,SIPDR4
2236 021262 010237 177610 MOV R2,UIPDR4
2237 021266 012737 021300 001110 MOV #3$,SLPERR
2238 021274 005237 177572 INC MMRO
2239 021300 005010 3$: CLR (R0)
2240 021302 013737 177776 001176 MOV PSW,$TMP0
2241 021310 005211 4$: INC (R1)
2242 021312 104003 ERROR +3
2243
2244
2245
2246 021314 000425 BR 8$
2247 021316 062706 000004 5$: ADD #4,SP
2248 021322 005710 TST (R0)
2249 021324 001401 BEQ 6$
2250 021326 104004 ERROR +4
2251
2252
2253
2254 021330 013737 177572 001264 6$: MOV SRO,WASSRO
2255 021336 013737 177576 001270 MOV SR2,WASSR2
2256 021344 021337 001264 CMP R3,WASSRO
2257 021350 001401 BEQ 7$
2258 021352 104005 ERROR +5
2259
2260
2261
2262 021354 012704 021310 7$: MOV #4$,R4
2263 021360 020437 001270 CMP R4,WASSR2
2264 021364 001401 BEQ 8$
2265 021366 104006 ERROR +6
2266
2267
2268
2269 021370 005037 177572 8$: CLR MMRO
2270 021374 032737 140000 001176 BIT #140000,$TMP0
2271 021402 001006 BNE 11$
2272 021404 012703 020151 MOV #20151,R3
```


2273	021410	012737	140000	177776		MOV	#140000,PSW	:GO TO USER MODE
2274	021416	000712				BR	2\$:REPEAT TEST IN USER MODE
2275	021420	022737	040000	001176	11\$:	CMP	#40000,\$TMP0	:HAS ACF=2 BEEN TESTED IN SUPERVISOR MODE?
2276	021426	001006				BNE	9\$:BRANCH IF YES
2277	021430	012703	020051			MOV	#20051,R3	:LOAD R3 WITH WHAT SRO SHOULD READ-R/O, SUPERVISOR, PG.4
2278	021434	012737	040000	177776		MOV	#40000,PSW	:GO TO SUPERVISOR MODE
2279	021442	000700				BR	2\$:REPEAT TEST IN SUPERVISOR MODE
2280	021444	005037	177776		9\$:	CLR	PSW	:GO BACK TO KERNEL MODE BEFORE LEAVING
2281	021450	012737	016142	000250		MOV	#MGMERR,MMVEC	:RESTORE ADDRESS OF NORMAL MEMORY
2282								:MANAGEMENT ERROR ROUTINE TO MMVEC.

2294

```
.SBTTL TEST # 3 - TEST ILLEGAL MODE '10'
:*****
:*TEST 3 TEST ILLEGAL MODE '10'
:*
:* THIS TEST CHECKS TO SEE THAT A 10 IN THE CURRENT MODE BITS OF THE
:* PSW WHILE MEMORY MANAGEMENT IS ON IS ILLEGAL. A
:* MEMORY MANAGEMENT ABORT SHOULD OCCUR AND STATUS REGISTER 0
:* SHOULD REPORT NON-RESIDENT ABORT, MODE = 10, PAGE = 1 (100103). STATUS
:* REGISTER 2 SHOULD LOCKUP THE ADDRESS OF THE INSTRUCTION
:* THAT LOADED THE PSW IF M7095 ECO #8 IS MISSING. IF THE ECO IS
:* INSTALLED, THE ADDRESS LOCKED UP WILL BE THAT OF THE UPDATED PC.
:*
:*****
```

```
TST3: SCOPE
1$: MOV #10$,SLPERR ;SET LOOP ON ERROR POINTER TO 10$
MOV #3$,MMVEC ;LOAD MEM. MGMT. TRAP VECTOR WITH 3$
MOV #1$,MMRO ;TURN ON MEMORY MANAGEMENT
10$: MOV #100000,PSW ;SET 10 IN PSW CURRENT MODE BITS
2$: ERROR +30 ;ILLEGAL MODE 10 NOT ABORTED
;FOR A TIGHTER SCOPE LOOP, REPLACE ERROR CALL WITH 'BR 10$' = 000774
2301 021512 012737 016142 000250 MOV #MGMERR,MMVEC ;RESTORE MEM. MGMT. ABORT VECTOR
2302 021520 000441 BR 5$ ;BRANCH AROUND SRO & SR2 CHECKS
2303 021522 013737 177576 001270 3$: MOV SR2,WASSR2 ;READ CONTENTS OF SR2
MOV #MGMERR,MMVEC ;RESTORE MEM. MGMT. ABORT VECTOR
2304 021530 012737 016142 000250 MOV #KERSTK,SP ;RESTORE STACK POINTER
2305 021536 012706 001100 CMP #100103,SRO ;DID SRO REPORT ILLEGAL MODE CORRECTLY?
2306 021542 022737 100103 177572 BEQ 4$ ;BRANCH IF YES
2307 021550 001406 MOV #100103,R1 ;LOAD EXPECTED CONTENTS OR SRO INTO R1
2308 021552 012701 100103 MOV SRO,WASSR0 ;READ CONTENTS OF SRO
2309 021556 013737 177572 001264 ERROR +31 ;SRO DID NOT REPORT NR ABORT, PG=1, MODE=10
2310 021564 104031 ;FOR TIGHTER SCOPE LOOP, REPLACE ERROR CALL WITH 'BR 10$' = 000746
2311 2312 021566 022737 021502 001270 4$: CMP #10$,WASSR2 ;DID SR2 LOCKUP VIRT. ADDR OF ABORT ;DPM002
BEQ 45$ ;BRANCH IF OK BUT NOT FOR ECO #8 ;DPM002
2313 021574 001410 CMP #2$,WASSR2 ;DID SR2 LOCKUP VIRT. ADDR OF ABORT ;DPM002
2314 021576 022737 021510 001270 BEQ 5$ ;BRANCH IF ANSWER IS OK ;DPM002
2315 021604 001407 MOV #2$,R1 ;MOVE ERROR ADDRESS TO R1 FOR ERROR CALL ;DPM002
2316 021606 012701 021510 ERROR +13 ;SR2 DID NOT LOCKUP VIRT. ADDR. OF ILL. MODE INST.
2317 021612 104013 ;FOR TIGHTER SCOPE LOOP, REPLACE ERROR CALL WITH 'BR 10$' = 000733
2318 2319 021614 000403 BR 5$ ;BRANCH OVER 2ND ERROR CALL
2320 021616 012701 021502 45$: MOV #10$,R1 ;MOVE ADDRESS TO R1 FOR ERROR CALL ;DPM002
2321 021622 104054 ERROR +54 ;SR2 LOCKED UP AN 11/34 COMPATIBLE ;DPM002
;ADDRESS THAT DOES NOT MAKE IT COMPA- ;DPM002
;TIBLE WITH AN 11/70 SINCE THE OPTIONAL ;DPM002
;M7095 ECO #8 IS MISSING ;DPM002
2322 2323 2324 2325 ;FOR TIGHTER SCOPE LOOP, REPLACE ERROR CALL WITH 'BR 10$' = 000727
2326 021624 042737 160000 177572 5$: BIC #160000,SRO ;CLEAR POSSIBLE ERROR BITS IN SRO
```

2327
2328
2329
2330
2331
2332
2333
2334
2335
2336
2337
2338
2339
2340
2341
2342

```
*****  
*  
* THE NEXT TWO (2) TESTS WILL BE CHECKING THE PAGE LENGTH  
* COMPARATORS AND SOME MORE OF THE KT ERROR DETECTION  
* AND STATUS LOGIC. THE PAGE LENGTH FIELD (PLF) IN KERNEL  
* PDR 4 IS VARIED AND FOR EVERY PLF, THREE (3) VIRTUAL  
* ADDRESSES ARE READ. WHILE USING BOTH UPWARD & DOWNWARD PAGE  
* EXPANSION, ONE OF THOSE THREE VIRTUAL ADDRESSES WILL CAUSE A  
* "PAGE LENGTH ABORT" WHILE THE OTHER TWO WON'T.  
*  
* STATUS REGISTER 0 & 2 ARE CHECKED WHEN THE PAGE LENGTH  
* ABORT DOES OCCUR TO SEE THAT THE ABORT IS REPORTED AND THAT  
* THE VIRTUAL ADDRESS OF THE INSTRUCTION THAT CAUSED THE ABORT  
* IS LOCKED UP.  
*  
*****
```

2354

.SBTTL TEST # 4 - PAGE LENGTH FAULTS-UPWARD EXPANSION

 :TEST 4 PAGE LENGTH FAULTS-UPWARD EXPANSION

THIS TEST VARIES THE PAGE LENGTH FIELD (PLF) IN KERNEL PDR 4 FROM 1 TO 177 AND FOR EACH PLF, THREE VIRTUAL ADDRESSES (VBA'S) ARE ACCESSED. WHEN VBA <12:6> IS LESS THAN OR EQUAL TO PDR <14:8> NO ABORT SHOULD OCCUR. WHEN VBA <12:6> IS GREATER THAN PDR <14:8>, A PAGE LENGTH ABORT SHOULD OCCUR AND BE REPORTED BY SRO & SR2. THE PAGE EXPANSION DIRECTION IN THIS TEST IS UPWARD, (THE ED BIT (BIT 3) OF PDR 4 = 0).

2355 021632 000004
 2356 021634 012737 077406 172306
 2357 021642 012737 077406 172312
 2358 021650 012700 100000
 2359 021654 012704 000406
 2360 021660 012737 022052 000250
 2361 021666 010437 172310
 2362 021672 012737 021700 001110
 2363 021700 012706 001100
 2364 021704 011001
 2365 021706 062700 000100
 2366 021712 012737 021720 001110
 2367 021720 012705 001100
 2368 021724 011001
 2369 021726 062700 000100
 2370 021732 020027 117700
 2371 021736 001470
 2372 021740 012737 021754 001110
 2373 021746 012737 021762 000250
 2374 021754 011001
 2375 021756 104010
 2376
 2377
 2378 021760 000424
 2379 021762 012706 001100
 2380 021766 013737 177572 001264
 2381 021774 013737 177576 001270
 2382 022002 012702 040011
 2383 022006 020237 001264
 2384 022012 001401
 2385 022014 104011
 2386
 2387
 2388
 2389 022016 012703 021754
 2390 022022 020337 001270
 2391 022026 001401
 2392 022030 104012
 2393
 2394
 2395
 2396 022032 042737 160000 177572
 2397 022040 062704 000400

TST4: SCOPE
 1\$: MOV #77406,KIPDR3 ;MAKE SURE PDR3 IS DESCRIBED AS R/W
 MOV #77406,KIPDR5 ;MAKE SURE PDR5 IS DESCRIBED AS R/W
 MOV #100000,R0 ;LOAD VIRTUAL ADDR. TO SELECT PDR4 INTO R0
 MOV #406,R4 ;LOAD FIRST PDR VALUE IN R4 (PLF=1, ACF=6)
 2\$: MOV #9\$,MMVEC ;SETUP M.M. TRAP VECTOR FOR UNEXPECTED ABORTS
 R4,KIPDR4 ;LOAD KIPDR4 WITH PAGE LENGTH VALUE
 MOV #3\$,SLPERR ;SET LOOP ON ERROR POINTER TO 3\$
 3\$: MOV #KERSTK,KSP ;MAKE SURE STACK POINTER IS ALL SET UP
 MOV (R0),R1 ;ACCESS VIRTUAL ADDR. (VBA < PLF - NO ABORT)
 ADD #100,R0 ;FORM NEXT VIRTUAL ADDRESS IN R0
 4\$: MOV #4\$,SLPERR ;SET LOOP ON ERROR POINTER TO 4\$
 MOV #KERSTK,KSP ;MAKE SURE STACK POINTER IS ALL SET UP
 MOV (R0),R1 ;ACCESS VIRTUAL ADDR. (VBA=PLF - NO ABORT)
 ADD #100,R0 ;FORM NEXT VIRTUAL ADDR IN R0
 CMP R0,#117700 ;HAVE ALL PLF'S BEEN TESTED YET?
 BEQ 10\$;BRANCH IF ALL VBA'S & PLF'S HAVE BEEN USED
 5\$: MOV #5\$,SLPERR ;SET LOOP ON ERROR POINTER TO 5\$
 MOV #6\$,MMVEC ;SETUP M.M. TRAP VECTOR FOR EXPECTED ABORT
 MOV (R0),R1 ;ACCESS VIRTUAL ADDR. (VBA > PLF - ABORT TO 6\$)
 ERROR +10 ;EXPECTED PAGE LENGTH ABORT DID NOT OCCUR
 ;FOR TIGHTER SCOPE LOOP
 ;REPLACE ERROR CALL WITH
 ;'BR 5\$' = 000776
 6\$: BR 8\$;BRANCH AROUND ABORT CHECKS
 MOV #KERSTK,KSP ;RESTORE STACK POINTER FOLLOWING ABORT
 MOV SRO,WASSRO ;READ M.M. STATUS REG. 0
 MOV SR2,WASSR2 ;READ M.M. STATUS REG. 2
 MOV #40011,R2 ;PUT EXPECTED SRO CONTENTS IN R2
 CMP R2,WASSRO ;DID SRO REPORT PG. LENGTH ABORT, PAGE 4, KERNEL?
 BEQ 7\$;BRANCH IF YES
 ERROR +11 ;SRO DID NOT REPORT PG. LENGTH ABORT CORRECTLY
 ;FOR TIGHTER SCOPE LOOP
 ;REPLACE ERROR CALL WITH
 ;'BR 5\$' = 000757
 7\$: MOV #5\$,R3 ;PUT EXPECTED SR2 CONTENTS IN R3
 CMP R3,WASSR2 ;DID SR2 LOCKUP VIRT. ADDR. OF ABORTED INSTRUCTION?
 BEQ 8\$;BRANCH IF YES
 ERROR +12 ;SR2 DID NOT LOCKUP VIRT. ADDR. OF ABORT CORRECTLY
 ;FOR TIGHTER SCOPE LOOP
 ;REPLACE ERROR CALL WITH
 ;'BR 5\$' = 000751
 8\$: BIC #160000,SRO ;CLEAR ERROR BITS IN SRO
 ADD #400,R4 ;FORM NEXT PLF VALUE FOR KIPDR4

2427

```
.SBTTL TEST # 5 - PAGE LENGTH FAULTS-DOWNWARD EXPANSION
:*****
:*TEST 5 PAGE LENGTH FAULTS-DOWNWARD EXPANSION
:*
:* THIS TEST VARIES THE PAGE LENGTH FIELD (PLF) IN KERNEL PDR4
:* FROM 176 TO 0 AND FOR EACH PLF, THREE VIRTUAL ADDRESSES (VBA'S)
:* ARE ACCESSED. WHEN VBA <12:6> IS GREATER THAN OR EQUAL TO PDR <14:8>
:* NO PAGE ABORT SHOULD OCCUR. WHEN VBA <12:6> IS LESS THAN PDR <14:8>
:* A PAGE LENGTH ABORT SHOULD OCCUR AND BE REPORTED BY SR0 & SR2.
:* THE PAGE EXPANSION DIRECTION IN THIS TEST IS DOWNWARD, (THE ED BIT
:* (BIT 3) OF PDR4=1).
:*****
```

```
TST5: SCOPE
1$: MOV #117700,R0 ;LOAD VIRTUAL ADDR. TO SELECT PDR4 INTO R0
MOV #77016,R4 ;LOAD FIRST PDR VALUE IN R4 (PLF=176,ACF=6)
2$: MOV #9$,MMVEC ;SETUP M.M. TRAP VECTOR FOR UNEXPECTED ABORTS
MOV R4,KIPDR4 ;LOAD KIPDR4 WITH PAGE LENGTH VALUE
MOV #3$,SLPERR ;SET LOOP ON ERROR POINTER TO 3$
3$: MOV #KERSTK,KSP ;MAKE SURE STACK POINTER IS ALL SET UP
MOV (R0),R1 ;ACCESS VIRTUAL ADDR. (VBA > PLF - NO ABORT)
SUB #100,R0 ;FORM NEXT VIRTUAL ADDRESS IN R0
MOV #4$,SLPERR ;SET LOOP ON ERROR POINTER TO 4$
4$: MOV #KERSTK,KSP ;MAKE SURE STACK POINTER IS ALL SET UP
MOV (R0),R1 ;ACCESS VIRTUAL ADDR. (VBA=PLF - NO ABORT)
SUB #100,R0 ;FORM NEXT VIRTUAL ADDR. IN R0
CMP R0,#100000 ;HAVE ALL PLF'S BEEN TESTED YET?
BEQ 10$ ;BRANCH IF ALL VBA'S & PLF'S HAVE BEEN USED
MOV #5$,SLPERR ;SET LOOP ON ERROR POINTER TO 5$
5$: MOV #6$,MMVEC ;SETUP M.M. TRAP VECTOR FOR EXPECTED ABORT
MOV (R0),R1 ;ACCESS VIRTUAL ADDR. (VBA < PLF - ABORT TO 6$)
ERROR +10 ;EXPECTED PAGE LENGTH ABORT DID NOT OCCUR
;FOR TIGHTER SCOPE LOOP
;REPLACE ERROR CALL WITH
;'BR 5$' = 000776
2428 022126 000004 117700
2429 022134 012704 077016
2430 022140 012737 022332 000250
2431 022146 010437 172310
2432 022152 012737 022160 001110
2433 022160 012706 001100
2434 022164 011001
2435 022166 162700 000100
2436 022172 012737 022200 001110
2437 022200 012706 001100
2438 022204 011001
2439 022206 162700 000100
2440 022212 020027 100000
2441 022216 001470
2442 022220 012737 022234 001110
2443 022226 012737 022242 000250
2444 022234 011001
2445 022236 104010
2446
2447
2448
2449 022240 000424
2450 022242 012706 001100
2451 022246 013737 177572 001264
2452 022254 013737 177576 001270
2453 022262 012702 040011
2454 022266 020237 001264
2455 022272 001401
2456 022274 104011
2457
2458
2459
2460 022276 012703 022234
2461 022302 020337 001270
2462 022306 001401
2463 022310 104012
2464
2465
2466
2467 022312 042737 160000 177572 8$: BIC #160000,SR0 ;CLEAR ERROR BITS IN SR0
2468 022320 162704 000400 SUB #400,R4 ;FORM NEXT PLF VALUE FOR KIPDR4
2469 022324 062700 000100 ADD #100,R0 ;FORM FIRST VIRT. ADDR. FOR THAT PLF VALUE
2470 022330 000703 BR 2$ ;BRANCH BACK AND ACCESS 3 VBA'S FOR
```

```
2471  
2472 022332 012637 001260 9$: MOV (KSP)+,TRAPPC ;THE PLF VALUE JUST FORMED  
2473 022336 012637 001262 MOV (KSP)+,TRAPPS ;SAVE PC & PS OF TRAP  
2474 022342 013737 177572 001264 MOV SR0,WASSRO ;SAVE CONTENTS OF SR0 FOR ERROR  
2475 022350 013737 177576 001270 MOV SR2,WASSR2 ;SAVE CONTENTS OF SR2 FOR ERROR  
2476 022356 042737 160000 177572 BIC #160000,SR0 ;CLEAR ERROR BITS IN SR0  
2477 022364 104007 ERROR +7 ;GOT PG. LENGTH ABORT BEFORE IT WAS EXPECTED  
2478 ;FOR TIGHTER SCOPE LOOP  
2479 ;REPLACE ERROR CALL WITH  
2480 ;A 'NOP' = 000240  
2481 022366 013746 001262 MOV TRAPPS,-(KSP) ;PUT PC & PS OF TRAP ON STACK  
2482 022372 013746 001260 MOV TRAPPC,-(KSP)  
2483 022376 000002 RTI ;RETURN FROM UNEXPECTED ABORT  
2484  
2485 022400 012737 016142 000250 10$: MOV #MGMERR,MMVEC ;RESTORE NORMAL M.M. TRAP HANDLER  
2486 ;ADDRESS TO M.M. TRAP VECTOR
```

2500

.SBTTL TEST # 6 - SR2 BIT TEST

*TEST 6 SR2 BIT TEST

*

* THIS TEST CHECKS THE BITS IN MEMORY MANAGEMENT REGISTER 2 BY
 * CAUSING 'READ-ONLY ABORTS' AT VIRTUAL ADDRESSES BETWEEN 100000
 * TO 111000 (PHYSICAL ADDRESSES 060000-071000). KIPDR4 IS USED TO EXECUTE
 * THE FOLLOWING FOUR WORDS OF CODE WHICH ARE MOVED THRU MEMORY:
 * 010727 MOV PC,(PC)+ ;THIS INSTRUCTION SHOULD CAUSE A R/O ABORT
 * 000000 ;ITS VIRTUAL ADDR. SHOULD BE LOCKED UP IN SR2
 * 000137 JMP @#3\$;THIS INSTRUCTION IS ALSO MOVED THRU MEMORY
 * (ADDR. OF 3\$) ;IN CASE A R/O ABORT DOES NOT OCCUR,
 * ;IN WHICH CASE SR2 WILL NOT CONTAIN CORRECT ADDR.

2501	022406	000004				TST6: SCOPE	
2502	022410	012737	000600	172346	1\$:	MOV #600,KIPAR3	:BE SURE PAR3 IS MAPPED TO 12-16K
2503	022416	012737	000600	172350		MOV #600,KIPAR4	:BE SURE PAR4 IS MAPPED TO 12-16K
2504	022424	012737	077406	172306		MOV #77406,KIPDR3	:MAP PAGE 3 128 BLOCKS, R/W
2505	022432	012737	077402	172310		MOV #77402,KIPDR4	:MAP PAGE 4 128 BLOCKS, READ-ONLY
2506	022440	012700	060000			MOV #60000,R0	:LOAD R0 WITH VIRTUAL ADDR. WHICH USES PDR3
2507	022444	012701	100000			MOV #100000,R1	:LOAD R1 WITH VIRTUAL ADDR. WHICH USES PDR4
2508	022450	012737	022504	000250		MOV #3\$,MMVEC	:SET M.M. TRAP VECTOR TO 3\$
2509	022456	012737	022464	001110		MOV #2\$,SLPERR	:SET LOOP ON ERROR POINTER TO 2\$
2510	022464	012720	010727		2\$:	MOV #010727,(R0)+	:LOAD 'MOV PC,(PC)+' INSTRUCTION AT ADDR.
2511	022470	005020				CLR (R0)+	: REACHED THRU PDR/PAR 4.
2512	022472	012720	000137			MOV #000137,(R0)+	:LOAD 'JMP @#3\$' INSTRUCTION AT VIRT. ADDR.
2513	022476	012710	022504			MOV #3\$,(R0)	: IN CASE R/O VIOL. DOES NOT ABORT
2514	022502	010107				MOV R1,PC	:TRANSFER PROGRAM EXECUTION TO 'PAGE 4 INSTRUCTIONS'
2515	022504	012706	001100		3\$:	MOV #KFRSTK,KSP	:RESTORE STACK POINTER
2516	022510	013737	177576	001270		MOV SR2,WASSR2	:READ CONTENTS OF STATUS REG 2
2517	022516	020137	001270			CMP R1,WASSR2	:WAS ADDR. OF 'RELOCATED - R/O ABORT' LOCKED UP?
2518	022522	001401				BEQ 4\$:BRANCH IF YES
2519	022524	104013				ERROR +13	:SR2 DID NOT LOCK UP VIRTUAL ADDR. OF R/O VIOL.
2520							:FOR TIGHTER SCOPE LOOP
2521							:REPLACE ERROR CALL WITH
2522	022526	042737	160000	177572	4\$:	BIC #160000,SRO	:CLEAR THE ERROR BITS IN SRO
2523	022534	162700	000004			SUB #4,R0	:RESET R0 TO POINT TO NEXT VIRT. ADDR. TO LOAD
2524	022540	062701	000002			ADD #2,R1	:FORM VIRTUAL ADDR. THAT SHOULD BE LOCKED UP NEXT
2525	022544	020127	111002			CMP R1,#111002	:HAVE ALL VBA'S 100000-111000 BEEN TESTED?
2526	022550	103745				BLO 2\$:BRANCH IF NO
2527							
2528	022552	012737	071106	172310	5\$:	MOV #77406,KIPDR4	:RESTORE PDR4 TO R/W ACCESS
2529	022560	012737	016142	000250		MOV #MGMERR,MMVEC	:RESTORE ADDRESS OF NORMAL M.M.
2530							:TRAP HANDLER TO M.M. VECTOR

2544

```
.SBTTL TEST # 7 - MORE CHECKS OF SRO & SR2
:*****
:TEST 7 MORE CHECKS OF SRO & SR2
:
: THIS TEST PERFORMS SOME ADDITIONAL CHECKS OF THE SRO & SR2 LOGIC.
: FIRST IT CHECKS THAT SR2 "TRACKS" ALONG ACTING AS A VIRTUAL ADDRESS
: PROGRAM COUNTER. ALSO SRO & SR2 ARE LOCKED UP BY A PAGE LENGTH
: ABORT, THEN WITHOUT CLEARING SRO'S ERROR BITS, A R/O ABORT IS CAUSED.
: SRO & SR2 SHOULD NOT BE CHANGED BY THE SECOND ABORT AND THE
: INFORMATION ABOUT THE PAGE LENGTH ABORT SHOULD STILL BE LOCKED UP.
: IN ADDITION A "RESET" IS EXECUTED TO VERIFY THAT SRO IS CLEARED
: AND SR2 IS UNLOCKED BY A RESET. AFTER MEMORY MANAGEMENT IS TURNED BACK ON,
: SR2 IS CHECKED TO SEE THAT IT IS TRACKING AGAIN.
:
:*****
```

```
TST7: SCOPE
2545 022566 000004 172352 1$: MOV #600,KIPAR5 ;MAP KERNEL PAGE 5 TO 12-16K
2546 022570 012737 000600 172310 1$: MOV #406,KIPDR4 ;SETUP PDR4 FOR PAGE LENGTH ABORT
2547 022576 012737 000406 172310 1$: MOV #77402,KIPDR5 ;SETUP PDR5 FOR R/O ABORT
2548 022604 012737 077402 172312 1$: MOV #2$, $LPERR ;SET LOOP ON ERROR POINTER TO 2$
2549 022612 012737 022620 001110 2$: MOV SR2,WASSR2 ;READ SR2 TO SEE IF ITS TRACKING
2550 022620 013737 177576 001270 2$: MOV #2$,R1 ;PUT EXPECTED VIRTUAL PC IN R1
2551 022626 012701 022620 001110 2$: CMP R1,WASSR2 ;DID SR2 CONTAIN VIRTUAL PC AT 2$?
2552 022632 020137 001270 001270 2$: BEQ 3$ ;BRANCH IF YES
2553 022636 001401 104016 001270 2$: ERROR +16 ;SR2 NOT TRACKING CORRECTLY
2554 022640 104016 104016 001270 2$: ;FOR TIGHTER SCOPE LOOP
2555 022642 012737 022650 001110 3$: ;REPLACE ERROR CALL WITH
2556 022642 012737 022650 001110 3$: ;"BR 2$" = 000767
2557 022642 012737 022650 001110 3$: MOV #4$, $LPERR ;SET LOOP ON ERROR POINTER TO 4$
2558 022642 012737 022650 001110 4$: MOV SR2,WASSR2 ;READ SR2 TO SEE IF ITS TRACKING
2559 022642 012737 022650 001110 4$: MOV #4$,R1 ;PUT EXPECTED VIRTUAL PC IN R1
2560 022642 012737 022650 001110 4$: CMP R1,WASSR2 ;DID SR2 CONTAIN VIRTUAL PC AT 4$?
2561 022642 012737 022650 001110 4$: BEQ 5$ ;BRANCH IF YES
2562 022642 012737 022650 001110 4$: ERROR +16 ;SR2 NOT TRACKING CORRECTLY
2563 022642 012737 022650 001110 4$: ;FOR TIGHTER SCOPE LOOP
2564 022642 012737 022650 001110 4$: ;REPLACE ERROR CALL WITH
2565 022642 012737 022650 001110 4$: ;"BR 4$" = 000767
2566 022672 012737 022700 001110 5$: MOV #6$, $LPERR ;SET LOOP ON ERROR POINTER TO 6$
2567 022700 012737 022716 000250 6$: MOV #7$,MMVEC ;PUT ADDRESS OF 7$ IN M.M. TRAP VECTOR
2568 022706 005037 001200 000250 6$: CLR $TMP1 ;CLEAR ERROR INDICATOR
2569 022712 005237 100500 000250 6$: INC @#100500 ;CAUSE PAGE LENGTH ABORT - TRAP TO 7$
2570 022716 012706 001100 001100 7$: MOV #KERSTK,KSP ;RESTORE STACK POINTER AFTER ABORT
2571 022722 013737 177572 001176 7$: MOV SRO,$TMP0 ;SAVE SRO'S INFORMATION ON PG. LGTH. ABORT
2572 022730 013737 177576 001202 7$: MOV SR2,$TMP2 ;SAVE SR2'S INFORMATION ON PG. LGTH. ABORT
2573 022736 012737 022750 000250 7$: MOV #8$,MMVEC ;PUT ADDRESS OF 8$ IN M.M. TRAP VECTOR
2574 022744 005237 120000 000250 7$: INC @#120000 ;CAUSE R/O ABORT - TRAP TO 8$
2575 02 750 012706 001100 001100 8$: MOV #KERSTK,KSP ;RESTORE STACK POINTER AFTER ABORT
2576 022754 013737 177572 001264 8$: MOV SRO,WASSRO ;READ SRO FOLLOWING SECOND KT ABORT
2577 022762 013737 177576 001270 8$: MOV SR2,WASSR2 ;READ SR2 FOLLOWING SECOND KT ABORT
2578 022770 023737 001176 001264 8$: CMP $TMP0,WASSRO ;IS SRO STILL HOLDING INFO ON FIRST ABORT?
2579 022776 001402 001200 001264 8$: BEQ 9$ ;BRANCH IF YES
2580 023000 005237 001200 001200 8$: INC $TMP1 ;SET ERROR INDICATOR
2581 023004 023737 001202 001270 9$: CMP $TMP2,WASSR2 ;DOES SR2 STILL HOLD PC OF FIRST ABORT?
2582 023012 001402 001202 001270 9$: BEQ 10$ ;BRANCH IF YES
2583 023014 005237 001200 001200 9$: INC $TMP1 ;SET ERROR INDICATOR
2584 023020 005737 001200 001200 10$: TST $TMP1 ;WERE SRO OR SR2 CHANGED BY A SECOND ABORT?
2585 023024 001401 001200 001200 10$: BEQ 11$ ;BRANCH IF NO
```


2632

.SBTTL TEST # 10 - SUPER/USER ABORT PICKS UP KERNEL VECTOR

*TEST 10 SUPER/USER ABORT PICKS UP KERNEL VECTOR

*
 * THIS TEST CHECKS TO BE SURE THAT WHEN AN ABORT OCCURS WHILE
 * IN SUPERVISOR OR USER MODE, THE TRAP VECTOR INFORMATION
 * FETCHED IS TAKEN FROM KERNEL SPACE. USER PAGE 0 IS MAPPED
 * TO 12K (60000-77776) SO THAT IF USER SPACE IS USED INSTEAD
 * OF KERNEL, THE NEW PC THAT WAS LOADED AT LOC. 060004 IS USED
 * INSTEAD OF THE NEW PC THAT SHOULD BE PICKED UP FROM LOC. 000004.
 * THE SUPERVISOR PAGE 0 IS THEN MAPPED TO 12K, AND THE TEST
 * IS REPEATED FOR SUPERVISOR MODE. AN ODD ADDRESS ERROR IS
 * USED TO CAUSE A TRAP TO '4'.
 *

2633	023160	000004			TST10: SCOPE	
2634	023162	004737	002356		1\$: JSR PC,TOFF	;TURN OFF T-BIT TRAPPING FOR THIS TEST
2635	023166	012737	023174	001110	MOV #2\$, \$LPERR	;SET LOOP ON ERROR POINTER TO 2\$
2636	023174	005037	177776		2\$: CLR PSW	;GO TO KERNEL MODE
2637	023200	012706	001100		MOV #KERSTK, KSP	;SETUP KERNEL STACK PTR.
2638					* * TEST USER MODE ABORT *	
2640	023204	012737	000600	177640	MOV #600, UIPARO	;MAP USER PAGE 0 TO 12K
2641	023212	012737	023274	000004	MOV #4\$, @#4	;LOAD KERNEL VECTOR 4 (LOC.4) WITH 4\$
2642	023220	012737	000340	000006	MOV #340, @#6	;LOAD VECTOR+2 WITH NEW PSW
2643	023226	012737	140000	177776	MOV #140000, PSW	;GO TO USER MODE
2644	023234	012706	000600		MOV #USESTK, USP	;SETUP USER STACK PTR.
2645	023240	012737	023260	000004	MOV #3\$, @#4	;LOAD USER VECTOR 4 (LOC. 60004) WITH 3\$
2646	023246	012737	000340	000006	MOV #340, @#6	;LOAD VECTOR+2 WITH NEW PSW
2647	023254	005737	023261		TST 3\$+1	;CAUSE ODD ADDR. ERROR TRAP TO '4'
2648						;SHOULD PICK UP NEW PC=4\$ FROM KERNEL
2649						;LOC. 4, NOT PC=3\$ FROM USER LOC. 4 (=60004)
2650	023260	013701	177776		3\$: MOV PSW, R1	;SAVE PSW FOR ERROR
2651	023264	010602			MOV SP, R2	;SAVE VALUE OF STACK POINTER FOR ERROR
2652	023266	005037	177776		CLR PSW	;BE SURE BACK IN KERNEL MODE
2653	023272	104017			ERROR +17	;DID NOT TRAP THRU KERNEL SPACE
2654						;FOR TIGHTER SCOPE LOOP
2655						;REPLACE ERROR CALL WITH
2656						;'BR 2\$' = 000740
2657	023274	005037	177776		4\$: CLR PSW	;BE SURE BACK IN KERNEL MODE
2658	023300	012706	001100		MOV #KERSTK, KSP	;RESTORE KERNEL S.P. IN CASE IT CHANGED
2659	023304	005037	177640		CLR UIPARO	;REMAP USER PAGE 0 TO 0-4K
2660	023310	012737	140000	177776	MOV #140000, PSW	;GO TO USER MODE
2661	023316	012706	000600		MOV #USESTK, USP	;RESTORE USER STACK POINTER
2662	023322	005037	177776		CLR PSW	;GO BACK TO KERNEL MODE
2663					* * NOW TEST THE SUPERVISOR MODE ABORT *	
2666	023326	012737	000600	172240	MOV #600, SIPARO	;MAP SUPERVISOR PAGE 0 TO 12K
2667	023334	012737	023416	000004	MOV #6\$, @#4	;LOAD KERNAL VECTOR 4 WITH 6\$
2668	023342	012737	000340	000006	MOV #340, @#6	;LOAD VECTOR+2 WITH NEW PSW
2669	023350	012737	040000	177776	MOV #40000, PSW	;GO TO SUPERVISOR MODE
2670	023356	012706	000700		MOV #SUPSTK, SSP	;SETUP SUPERVISOR STACK PTR.
2671	023362	012737	023402	000004	MOV #5\$, @#4	;LOAD SUPERVISOR VECTOR 4 (LOC. 60004) WITH 5\$
2672	023370	012737	000340	000006	MOV #340, @#6	;LOAD VECTOR+2 WITH NEW PSW
2673	023376	005737	023403		TST 5\$+1	;CAUSE ODD ADDR. ERROR TRAP TO '4'

2697

```
.SBTTL TEST # 11 - RTI IN SUPER/USER MODE DOES NOT CHANGE PSW
:*****
:*TEST 11 RTI IN SUPER/USER MODE DOES NOT CHANGE PSW
:*
:* THIS TEST CHECKS TO SEE THAT WHEN AN RTI IS EXECUTED IN SUPERVISOR
:* OR USER MODE, THE MODE OR PRIORITY BITS OF THE PSW ARE NOT CHANGED.
:*
:*****
TST11: SCOPE
```

```
023462 000004
2698
2699 023464 012737 023476 001110 1$: MOV #2$, $LPERR ;SET LOOP ON ERROR POINTER TO 2$
2700 023472 012702 170000 MOV #170000,R2 ;LOAD 'PRESENT & EXPECTED' PSW VALUE INTO R2
2701 023476 010237 177776 2$: MOV R2,PSW ;GO TO PRESENT MODE-PRIORITY 0
2702 023502 012746 000340 MOV #340,-(SP) ;PUT A NEW PSW (PRIORITY=7) ON STACK
2703 023506 012746 023514 MOV #3$,-(SP) ;PUT NEW PC ON THE STACK
2704 023512 000002 RTI ;DO AN RTI FROM PRESENT MODE
2705 023514 013701 177776 3$: MOV PSW,R1 ;READ NEW PSW INTO R1
2706 023520 042701 007437 BIC #7437,R1 ;MASK OFF COND. CODE, T-BIT, AND UNUSED BITS
2707 023524 005037 177776 CLR PSW ;GO BACK TO KERNEL MODE
2708 023530 020201 CMP R2,R1 ;DID PSW STAY IN PRESENT MODE, PRIORITY=0?
2709 023532 001401 BEQ 4$ ;BRANCH IF YES
2710 023534 104032 ERROR +32 ;PSW CHANGED BY AN RTI FROM USER
2711 ;FOR A TIGHTER SCOPE LOOP
2712 ;REPLACE ERROR CALL WITH
2713 ;'BR=2$' = 000760
2714 023536 022702 050000 4$: CMP #50000,R2 ;IF SUPERVISOR MODE HAS BEEN CHECKED,
2715 023542 001403 BEQ TST12 ;GO TO NEXT TEST
2716 023544 012702 050000 MOV #50000,R2 ;ELSE, SET SUPERVISOR MODE,
2717 023550 000752 BR 2$ ;AND BRANCH BACK TO TEST IT.
```

2729

```

.SBTTL TEST # 12 - KT ERROR NOT SERVICED IF ODD ADDR. ERROR
:*****
:*TEST 12      KT ERROR NOT SERVICED IF ODD ADDR. ERROR
:*
:*      THIS TEST CHECKS TO SEE THAT IF A CERTAIN VIRTUAL ADDRESS THAT
:*      WOULD CAUSE A MEMORY MANAGEMENT ERROR CAUSES AN ODD ADDRESS
:*      ERROR FIRST, THE ODD ADDRESS ERROR IS SERVICED BUT THE MEMORY
:*      MANAGEMENT ERROR ISN'T. THIS MEANS THAT SR0 AND SR2
:*      SHOULD NOT REPORT THE ERROR OR LOCK UP ITS VIRTUAL ADDRESS.
:*      A READ-ONLY VIOLATION IS USED AS THE POTENTIAL MEMORY MANAGEMENT
:*      ERROR
:*
:*****
TST12: SCOPE
1$:  MOV      #600,KIPDR4      ;MAP KERNEL PAGE 4 TO 12-16K
    MOV      #77402,R5        ;LOAD PDR4 DATA INTO R5
    MOV      R5,KIPDR4        ;MAP PAGE 4 READ-ONLY
    MOV      #4$,@#4          ;SET CPU TRAP VECTOR TO ADDRESS OF 4$
    MOV      #3$,@#250        ;SET M.M. TRAP VECTOR TO ADDRESS OF 3$
    MOV      #2$,SLPERR        ;SET LOOP ON ERROR POINTER TO 2$
2$:  INC      60001            ;CAUSE ODD ADDR. ERROR & POTENTIAL R/O ABORT
3$:  ERROR    +20              ;TRAPPED THRU M.M. VECTOR BUT SHOULDN'T HAVE
    ;FOR TIGHTER SCOPE LOOP
    ;REPLACE ERROR CALL WITH
    ;'BR 2$' = 000776
4$:  MOV      #KERSTK,KSP      ;RESTORE STACK POINTER AFTER TRAPPING
    CLR      $TMP1            ;CLEAR ERROR INDICATOR
5$:  MOV      SR0,WASSR0        ;READ STATUS REG. 0
    MOV      SR2,WASSR2        ;READ STATUS REG. 2
    MOV      #17,R0            ;LOAD EXPECTED SR0 CONTENTS INTO R0
    CMP      R0,WASSR0         ;SR0 ERROR BITS LEFT CLEAR BY TRAPPING?
    BEQ      6$                ;BRANCH IF YES
    INC      $TMP1            ;SR0 ERROR BITS SET WHEN ODD ADDR. SERVICED
6$:  MOV      #5$,R1            ;LOAD EXPECTED SR2 CONTENTS INTO R1
    CMP      R1,WASSR2         ;WAS SR2 LEFT UNLOCKED BY TRAPPING?
    BEQ      7$                ;BRANCH IF YES
    INC      $TMP1            ;SR2 LOCKED UP BY ODD ADDR. ERROR
7$:  TST      $TMP1            ;WHERE SR0 OR SR2 EFFECTED?
    BEQ      8$                ;BRANCH IF NO
    ERROR    +21              ;SR0 OR SR2 CHANGED BY ODD ADDR. ERROR
    ;FOR TIGHTER SCOPE LOOP
    ;REPLACE ERROR CALL WITH
    ;'BR 2$' = 000741
8$:  BIC      #160000,SR0       ;CLEAR ERROR BITS THAT MAY BE SET IN SR0
    MOV      #TIMERR,@#4        ;RESTORE ADDRESS OF NORMAL CPU TRAP HANDLER
    MOV      #MGMERR,@#250      ;RESTORE ADDRESS OF NORMAL M.M. TRAP HANDLER
    MOV      #77406,KIPDR4      ;REMAP PAGE 4 TO READ/WRITE
    
```

```

023552 000004
2730 023554 012737 000600 172350
2731 023562 012705 077402
2732 023566 010537 172310
2733 023572 012737 023622 000004
2734 023600 012737 023620 000250
2735 023606 012737 023614 001110
2736 023614 005237 060001
2737 023620 104020
2738
2739
2740
2741 023622 012706 001100
2742 023626 005037 001200
2743 023632 013737 177572 001264
2744 023640 013737 177576 001270
2745 023646 012700 000017
2746 023652 020037 001264
2747 023656 001402
2748 023660 005237 001200
2749 023664 012701 023640
2750 023670 020137 001270
2751 023674 001402
2752 023676 005237 001200
2753 023702 005737 001200
2754 023706 001404
2755 023710 104021
2756
2757
2758
2759 023712 042737 160000 177572
2760 023720 012737 016070 000004
2761 023726 012737 016142 000250
2762 023734 012737 077406 172310
    
```

2777

```
.SBTTL TEST # 13 - PC & PSW SAVED FOR KT ERROR ON ODD ADDR.
*****
*TEST 13 PC & PSW SAVED FOR KT ERROR ON ODD ADDR.
*
* THIS TEST CHECKS THE PC AND PROCESSOR STATUS WORD SAVED WHEN
* A KT ERROR OCCURS DURING THE SECOND PUSH ON THE STACK DURING
* SERVICING OF AN ODD ADDR. ERROR. DURING A 'DOUBLE ERROR'
* SEQUENCE SUCH AS THIS, THE PSW SAVED WILL BE THE ONE PICKED UP
* FROM VECTOR+2 (LOC. 6 IN THIS CASE) AFTER THE FIRST TRAP,
* NOT THE PSW PRESENT BEFORE THE FIRST TRAP. SRO AND SR2
* SHOULD RECORD THE KT ERROR (A R/O VIOLATION BY THE USER STACK PTR.)
*
* NOTE THAT THE PREVIOUS MODE BITS <13:12> OF THE PSW
* WILL BE SET IN THE PSW THAT IS SAVED.
*****
```

```
TST13: SCOPE
1$: JSR PC,TOFF ;TURN T-BIT TRAPPING OFF FOR THIS TEST
MOV #600,UIPAR3 ;MAP USER PAGE 3 TO 12-16K
MOV #600,UIPAR4 ;MAP USER PAGE 4 TO 12-16K
MOV #77402,UIPDR3 ;MAP USER PAGE 3 READ-ONLY
MOV #77406,UIPDR4 ;MAP USER PAGE 4 READ/WRITE
MOV #4$,a#4 ;LOAD ADDRESS OF 4$ IN CPU (ODD ADDR.) VECTOR
MOV #140017,a#6 ;LOAD PSW THAT SHOULD BE PUT ON STACK IN VECTOR+2
MOV #4$,a#250 ;LOAD ADDRESS OF 4$ IN M.M. TRAP VECTOR
MOV #340,a#252 ;LOAD A KERNEL PSW IN MMVEC+2
MOV #2$, $LPERR ;SET LOOP ON ERROR POINTER TO 2$
2$: MOV #140000,PSW ;GO TO USER MODE
MOV #100002,USP ;SET USER STACK PTR. SO SECOND PUSH IS IN PG. 3
3$: INC 100005 ;CAUSE ODD ADDRESS ERROR THAT WILL CAUSE
;R/O ERROR WHEN TRY TO SAVE OLD PC
4$: MOV 2(KSP),R1 ;PUT PSW SAVED ON KERNEL STACK INTO R1
MOV (KSP),R3 ;PUT PC SAVED ON KERNEL STACK INTO R3
MOV SRO,WASSRO ;READ THE CONTENTS OF M.M. STATUS REG. 0
MOV SR2,WASSR2 ;READ THE CONTENTS OF M.M. STATUS REG. 2
BIC #160000,SRO ;CLEAR THE ERROR BITS IN SRO
CLR PSW ;BE SURE IN KERNEL MODE
MOV #KERSTK,KSP ;RESTORE KERNEL STACK POINTER
MOV #140000,PSW ;GO TO USER MODE
MOV #USESTK,USP ;RESTORE USER STACK POINTER
CLR PSW ;GO BACK TO KERNEL MODE
CLR $TMP0 ;CLEAR ERROR INDICATOR
CMP R1,#170017 ;WAS THE PSW SAVED THE ONE PICKED UP BY THE
;ODD ADDR. TRAP FROM ERRVEC+2?
;VALUE 170017 = PSW FROM LOC. 6 WITH
;PREVIOUS MODE BITS = USER
2807 BEQ 5$ ;BRANCH IF YES
2808 INC $TMP0 ;WRONG PSW SAVED DURING 'DOUBLE ERROR' SEQUENCE
2809 CMP R3,#3$+4 ;WAS THE PC AT THE TIME OF THE ODD ADDR. ERROR
;SAVED ON THE STACK?
2811 BEQ 6$ ;BRANCH IF YES
2812 INC $TMP0 ;WRONG PC SAVED DURING TRAP SEQUENCE
2813 CMP WASSRO,#20147 ;DID SRO REPORT - USER, PAGE 3, R/O ABORT?
2814 BEQ 7$ ;BRANCH IF YES
2815 INC $TMP0 ;SRO DID NOT REPORT R/O ABORT
2816 CMP WASSR2,#3$ ;DID SR2 LOCK UP VIRTUAL ADDR. OF LAST
;INSTRUCTION SUCCESSFULLY FETCHED?
2817
```

2818	024204	001402				BEQ	8\$:BRANCH IF YES
2819	024206	005237	001176			INC	\$TMP0		:SR2 DID NOT LOCK UP ADDR. OF ODD ADDR. INST.
2820	024212	005737	001176		8\$:	TST	\$TMP0		:ANY "ERRORS" DURING TRAP SEQUENCE?
2821	024216	001401				BEQ	9\$:BRANCH IF NO
2822	024220	104022				ERROR	+22		:THE WRONG PC OR PSW WERE SAVED
2823									:OR SR0 OR SR2 DID NOT REPORT R/O
2824									:ERROR DURING ODD ADDR. - KT TRAP
2825									:SEQUENCE
2826									:FOR TIGHTER SCOPE LOOP
2827									:REPLACE ERROR CALL WITH
2828									: 'BR 2\$' = 000710
2829	024222	012737	016070	000004	9\$:	MOV	#TIMERR,@#4		:RESTORE ADDRESS OF NORMAL CPU TRAP HANDLER
2830	024230	012737	000340	000006		MOV	#340,@#6		:RELOAD ERRVEC+2 WITH KERNEL PSW
2831	024236	012737	016142	000250		MOV	#MGMERR,@#250		:RESTORE ADDRESS OF NORMAL M.M. TRAP HANDLER
2832	024244	012737	077406	177606		MOV	#77406,UIPDR3		:REMAP USER PAGE 3 READ/WRITE
2833	024252	004737	002412			JSR	PC,TON		:TURN T-BIT TRAPPING BACK ON

2852

.SBTTL TEST # 14 - ENABLE D-SPACE AND SEE THAT I-SPACE IS FORCED

*TEST 14 ENABLE D-SPACE AND SEE THAT I-SPACE IS FORCED

*

* THIS TEST SHOWS THAT I-SPACE IS FORCED DURING INSTRUCTION FETCHES,
 * AND ADDRESS, INDEX AND OPERAND FETCHES IF THE REGISTER FIELD IS 7.

*

* ALL ERRORS FOUND IN THIS TEST ARE REPORTED WHEN THE CPU
 * ABORTS THRU 'MMVEC' TO SUBROUTINE 'NODSPAC'. THIS SUB-
 * ROUTINE WILL REPORT THAT D-SPACE WAS NOT ENABLED PROPERLY.

*

* NOTE - WHENEVER A DSTM=3,6,7 IS SHOWN, AND THE OPERAND IS
 * '100000', I-SPACE IS FORCED IN THE OPERAND FETCH,
 * BUT D-SPACE WILL BE FORCED ON THE ACCESS OF THE
 * LOCATION; CORRECT OPERATION IS CHECKED.

*

2853 024256 000004
 2854 024260 005037 177572
 2855 024264 012700 077400
 2856 024270 010037 172310
 2857 024274 010037 172322
 2858 024300 010037 172324
 2859 024304 010037 172326
 2860 024310 012737 000600 172370
 2861 024316 012737 002232 000250
 2862 024324 012737 024344 001110
 2863 024332 005237 177572
 2864 024336 012737 000024 172516
 2865
 2866
 2867 024344 000400
 2868 024346 000244
 2869 024350 001776
 2870 024352 000264
 2871 024354 001376
 2872 024356 000270
 2873 024360 100376
 2874
 2875
 2876
 2877 024362 005700
 2878 024364 005200
 2879 024366 005300
 2880 024370 006000
 2881 024372 006100
 2882 024374 005037 177572
 2883
 2884
 2885 024400 012737 100002 060C00
 2886 024406 012737 024420 001110
 2887 024414 005237 177572
 2888 024420 005727 060000
 2889 024424 005737 100000
 2890 024430 005737 100C00
 2891 024434 005777 053340

TST14: SCOPE
 ;INITIALIZE KERNAL I/D SPACE PAR'S AND PDR'S
 CLR MMRO ;TURN OFF MEMORY MANAGEMENT
 MOV #77400,RO ;MAKE KERNAL D-SPACE PGS. 1,2&3 NON-RESIDENT
 MOV RO,KIPDR4 ;AND KERNAL I-SPACE PDR4 NON-RESIDENT
 MOV RO,KDPDR1
 MOV RO,KDPDR2
 MOV RO,KDPDR3
 MOV #600,KDPAR4 ;MAP KDPAR4 TO 12->16K
 MOV #NODSPAC,MMVEC ;SET M.M. VECTOR TO D-SPACE SERVICE ROUTINE
 MOV #10\$, \$LPERR ;SET LOOP ON ERROR POINTER TO 10\$
 INC MMRO ;TURN ON MEMORY MANAGEMENT
 MOV #24,MMR3 ;ENABLE 22-BIT, KERNAL D-SPACE MAPPING
 * TEST THAT INSTRUCTION FETCHES FORCE I-SPACE
 *
 10\$: BR 4\$;BRANCH
 4\$: CLZ ;CLEAR ZERO BIT IN PSW
 BEQ 4\$;NO BRANCH
 5\$: SEZ ;SET ZERO BIT IN PSW
 BNE 5\$;NO BRANCH
 6\$: SEN ;SET NEGATIVE BIT IN PSW
 BPL 6\$;NO BRANCH
 * TRY SOME SOP INSTRUCTIONS WITH SRCM=DSTM=0
 * THESE SHOULD NEVER INVOKE D-SPACE
 *
 TST RO
 INC RO
 DEC RO
 ROP RO
 ROL RO
 CLR MMRO ;TURN OFF MEMORY MANAGEMENT
 * TEST SOB NON-MOD WITH DSTM=2,3,6,7; DSTF=7
 *
 MOV #100002,@#60000 ;SET UP TEST LOCATION
 MOV #11\$, \$LPERR ;SET LOOP ON ERROR POINTER TO 11\$
 INC MMRO ;TURN ON MEMORY MANAGEMENT
 11\$: TST #60000 ;DSTM=2 SOP NON-MOD
 TST @#100000 ;DSTM=3 SOP NON-MOD
 TST 100000 ;DSTM=6 SOP NON-MOD
 TST @100000 ;DSTM=7 SOP NON-MOD

```

2892 024440 005037 177572          CLR      MMRO          ;TURN OFF MEMORY MANAGEMENT
2893                               :*      TEST SOB MOD WITH DSTM=2,3,6,7; DSTF=7
2894                               :*
2895 024444 012737 024464 001110    MOV      #12$, $LPERR  ;SET LOOP ON ERROR POINTER TO 12$
2896 024452 012737 100000 060002    MOV      #100000, @#60002 ;SET UP TEST VALUES
2897 024460 005237 177572          INC      MMRO          ;TURN ON MEMORY MANAGEMENT
2898 024464 005027 060000          CLR      #60000        ;DSTM=2 SOP MOD
2899 024470 005037 100000          CLR      @#100000     ;DSTM=3 SOP MOD
2900 024474 005037 100000          CLR      100000       ;DSTM=6 SOP MOD
2901 024500 005077 053276          CLR      @100002      ;DSTM=7 SOP MOD
2902 024504 005037 177572          CLR      MMRO          ;TURN OFF MEMORY MANAGEMENT
2903                               :*
2904                               :*      THE NEXT THREE TESTS ARE CONCERNED WITH TESTING
2905                               :*      DOP AND NOT(SRCM=DSTM=0)
2906                               :*
2907                               :*      TEST DOP DEST NON-MOD SRCM=DSTM=2,3,6,7; SRCF=DSTF=7
2908                               :*
2909 024510 012737 024530 001110    MOV      #13$, $LPERR  ;SET LOOP ON ERROR POINTER TO 13$
2910 024516 012737 100000 060002    MOV      #100000, @#60002 ;SET UP TEST VALUE
2911 024524 005237 177572          INC      MMRO          ;TURN ON MEMORY MANAGEMENT
2912 024530 022727 060000 060000    CMP      #60000, #60000 ;SRCM=2 DSTM=2 DOP NON-MOD
2913 024536 023737 100000 100000    CMP      @#100000, @#100000 ;SRCM=3 DSTM=3 DOP NON-MOD
2914 024544 023737 100000 100000    CMP      100000, 100000 ;SRCM=6 DSTM=6 DOP NON-MOD
2915 024552 027777 053224 053222    CMP      @100002, @100002 ;SRCM=7 DSTM=7 DOP NON-MOD
2916 024560 005037 177572          CLR      MMRO          ;TURN OFF MEMORY MANAGEMENT
2917                               :*      TEST MOV DEST AND NOT(SRCM=DSTM=0)
2918                               :*      SRCM=DSTM=2,3,6,7; SRCF=DSTF=7
2919                               :*
2920 024564 012737 024604 001110    MOV      #14$, $LPERR  ;SET LOOP ON ERROR POINTER TO 14$
2921 024572 012737 100000 060002    MOV      #100000, @#60002 ;SET UP TEST VALUE
2922 024600 005237 177572          INC      MMRO          ;TURN ON MEMORY MANAGEMENT
2923 024604 012727 060002 060002    MOV      #60002, #60002 ;SRCM=2 DSTM=2 MOV
2924 024612 012737 060000 100000    MOV      #60000, @#100000 ;SRCM=2 DSTM=3 MOV
2925 024620 012737 060000 100000    MOV      #60000, 100000 ;SRCM=2 DSTM=6 MOV
2926 024626 012777 060000 053146    MOV      #60000, @100002 ;SRCM=2 DSTM=7 MOV
2927 024634 005037 177572          CLR      MMRO          ;TURN OFF MEMORY MANAGEMENT
2928                               :*      TEST DOP DEST MOD AND NOT SUB
2929                               :*      SRCM=DSTM=2,3,6,7; SRCF=DSTF=7
2930                               :*
2931 024640 012737 024652 001110    MOV      #15$, $LPERR  ;SET LOOP ON ERROR POINTER TO 15$
2932 024646 005237 177572          INC      MMRO          ;TURN ON MEMORY MANAGEMENT
2933 024652 052727 060000 060000    BIS      #60000, #60000 ;SRCM=2 DSTM=2 DOP MOD
2934 024660 052737 070000 100000    BIS      #00000, @#100000 ;SRCM=2 DSTM=3 DOP MOD
2935 024666 052737 000000 100000    BIS      #00000, 100000 ;SRCM=2 DSTM=6 DOP MOD
2936 024674 052777 000000 053100    BIS      #00000, @100002 ;SRCM=2 DSTM=7 DOP MOD
2937 024702 005037 177572          CLR      MMRO          ;TURN OFF MEMORY MANAGEMENT
2938                               :*      TEST SWAB WITH DSTM=2,3,6,7; DSTF=7
2939                               :*
2940 024706 012737 024726 001110    MOV      #16$, $LPERR  ;SET LOOP ON ERROR POINTER TO 16$
2941 024714 012737 100002 060000    MOV      #100002, @#60000 ;SET UP TEST VALUES
2942 024722 005237 177572          INC      MMRO          ;TURN ON MEMORY MANAGEMENT
2943 024726 000327 060000          SWAB    #60000         ;DSTM=2 SWAB
2944 024732 000337 100002          SWAB    @#100002      ;DSTM=3 SWAB
2945 024736 000337 100002          SWAB    100002        ;DSTM=6 SWAB
2946 024742 000377 053052          SWAB    @100000       ;DSTM=7 SWAB
2947 024746 005037 177572          CLR      MMRO          ;TURN OFF MEMORY MANAGEMENT
2948                               :*      TEST ROT/SHFT WITH DSTM=2,3,6,7; DSTF=7
  
```

```

2949
2950 024752 012737 024772 001110 :* MOV #17$, $LPERR ;SET LOOP ON ERROR POINTER TO 17$
2951 024760 012737 100000 060002 MOV #100000, @#60002 ;SET UP TEST VALUES
2952 024766 005237 177572 INC MMR0 ;TURN ON MEMORY MANAGEMENT
2953 024772 006127 060000 17$: ROL #60000 ;DSTM=2 ROT/SHFT
2954 024776 006137 100000 ROL @#100000 ;DSTM=3 ROT/SHFT
2955 025002 006137 100000 ROL 100000 ;DSTM=6 ROT/SHFT
2956 025006 006177 052770 ROL @100002 ;DSTM=7 ROT/SHFT
2957 025012 005037 177572 CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
2958 :* TEST ASH/ASHC WITH DSTM=2,3,6,7; DSTF=7
2959 :*
2960 025016 012737 025044 001110 MOV #18$, $LPERR ;SET LOOP ON ERROR POINTER TO 18$
2961 025024 012737 000001 060000 MOV #1, @#60000 ;SET UP TEST VALUES
2962 025032 012737 100000 060002 MOV #100000, @#60002
2963 025040 005237 177572 INC MMR0 ;TURN ON MEMORY MANAGEMENT
2964 025044 072027 000001 18$: ASH #1, R0 ;DSTM=2 ASH/ASHC
2965 025050 072037 100000 ASH @#100000, R0 ;DSTM=3 ASH/ASHC
2966 025054 072037 100000 ASH 100000, R0 ;DSTM=6 ASH/ASHC
2967 025060 072077 052715 ASH @100002, R0 ;DSTM=7 ASH/ASHC
2968 025064 005037 177572 CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
2969 :* TEST MUL/DIV WITH DSTM=2,3,6,7; DSTF=7
2970 :*
2971 025070 012737 025102 001110 MOV #19$, $LPERR ;SET LOOP ON ERROR POINTER TO 19$
2972 025076 005237 177572 INC MMR0 ;TURN ON MEMORY MANAGEMENT
2973 025102 070027 000002 19$: MUL #2, R0 ;DSTM=2 MUL/DIV
2974 025106 070037 100000 MUL @#100000, R0 ;DSTM=3 MUL/DIV
2975 025112 070037 100000 MUL 100000, R0 ;DSTM=6 MUL/DIV
2976 025116 070077 052660 MUL @100002, R0 ;DSTM=7 MUL/DIV
2977 025122 005037 177572 CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
2978 :* TEST JMP WITH DSTM=3,6,7; DSTF=7
2979 :*
2980 025126 012737 025146 001110 MOV #20$, $LPERR ;SET LOOP ON ERROR POINTER TO 20$
2981 025134 012737 025162 060000 MOV #23$, @#60000 ;SET UP TEST VALUES
2982 025142 005237 177572 INC MMR0 ;TURN ON MEMORY MANAGEMENT
2983 025146 000137 025152 20$: JMP @#21$ ;DSTM=3 JMP
2984 025152 000137 025156 21$: JMP 22$ ;DSTM=6 JMP
2985 025156 000177 052616 22$: JMP @100000 ;DSTM=7 JMP
2986 025162 005037 177572 23$: CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
2987 :* TEST SUB WITH DSTM=2,3,6,7; DSTF=7
2988 :*
2989 025166 012737 025210 001110 MOV #28$, $LPERR ;SET LOOP ON ERROR POINTER TO 28$
2990 025174 005000 CLR R0 ;SET UP TEST VALUES
2991 025176 012737 100000 060002 MOV #100000, @#60002
2992 025204 005237 177572 INC MMR0 ;TURN ON MEMORY MANAGEMENT
2993 025210 160027 060002 28$: SUB R0, #60002 ;DSTM=2 SUB
2994 025214 160037 100000 SUB R0, @#100000 ;DSTM=3 SUB
2995 025220 160037 100000 SUB R0, 100000 ;DSTM=6 SUB
2996 025224 160077 052552 SUB R0, @100002 ;DSTM=7 SUB
2997 025230 005037 177572 CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
    
```

3008

```
.SBTTL TEST # 15 - ENABLE D-SPACE AND SEE I-SPACE IS NOT FORCED
:*****
:*TEST 15 ENABLE D-SPACE AND SEE I-SPACE IS NOT FORCED
:*
:* THIS TEST SHOWS THAT I-SPACE IS NOT FORCED , THE REGISTER FIELD
:* IS NOT 7, BUT THE OTHER CONDITIONS ARE MET.
:*
:* ALL ERRORS FOUND IN THIS TEST ARE REPORTED WHEN THE CPU ABORTS
:* THROUGH 'MMVEC' TO SUBROUTINE 'NOVSPAC'. THIS SUBROUTINE WILL
:* REPORT THAT D-SPACE WAS NOT ENABLED PROPERLY.
:*****
```

```
025234 000004
3009 025236 012700 077406
3010 025242 010037 172310
3011 025246 010037 172322
3012 025252 010037 172324
3013 025256 010037 172326
3014 025262 105037 172306
3015
3016
3017 025266 012700 060000
3018 025272 010037 060000
3019 025276 012737 060002 060002
3020 025304 012737 060004 060004
3021 025312 012737 060006 060006
3022 025320 012737 025362 001110
3023 025326 012737 060000 060000
3024 025334 012737 060002 060002
3025 025342 012737 060004 060004
3026 025350 012737 060006 060006
3027 025356 005237 177572
3028 025362 005710
3029 025364 005720
3030 025366 005730
3031 025370 005750
3032 025372 005770 000000
3033 025376 005037 177572
3034
3035
3036 025402 012737 025414 001110
3037 025410 005237 177572
3038 025414 005010
3039 025416 005020
3040 025420 005030
3041 025422 005050
3042 025424 005070 000000
3043 025430 005037 177572
3044
3045
3046
3047 025434 012737 025476 001110
3048 025442 012702 000032
3049 025446 012700 060000
3050 025452 012701 060000
3051 025456 010021
3052 025460 062700 000002
```

```
TST15: SCOPE
MOV #77406,R0
MOV R0,KIPDR4 ;MAKE KIPDR4 R/W,4K,200 BLOCKS
MOV R0,KDPDR1 ;MAKE KDPDR1 R/W,4K,200 BLOCKS
MOV R0,KDPDR2 ;MAKE KDPDR2 R/W,4K,200 BLOCKS
MOV R0,KDPDR3 ;MAKE KDPDR3 R/W,4K,200 BLOCKS
CLRB KIPDR3 ;MAKE KIPDR3 NON-RESIDENT
:*
:* TEST SOP NON-MOD; DSTM=1,2,3,5,7
20$: MOV #60000,R0 ;SET UP CONSTANTS FOR TEST
MOV R0,@#60000
MOV #60002,@#60002
MOV #60004,@#60004
MOV #60006,@#60006
MOV #1$, $LPERR ;SET LOOP ON ERROR POINTER TO 1$
MOV #60000,@#60000
MOV #60002,@#60002
MOV #60004,@#60004
MOV #60006,@#60006
1$: INC MMRO ;TURN ON MEMORY MANAGEMENT
TST (R0) ;DSTM=1 SOP NON-MOD
TST (R0)+ ;DSTM=2 SOP NON-MOD
TST @(R0)+ ;DSTM=3 SOP NON-MOD
TST @-(R0) ;DSTM=5 SOP NON-MOD
TST @0(R0) ;DSTM=7 SOP NON-MOD
CLR MMRO ;TURN OFF MEMORY MANAGEMENT
:*
:* TEST SOP MOD; DSTM=1,2,3,5,7
2$: MOV #2$, $LPERR ;SET LOOP ON ERROR POINTER TO 2$
INC MMRO ;TURN ON MEMORY MANAGEMENT
CLR (R0) ;DSTM=1 SOP MOD
CLR (R0)+ ;DSTM=2 SOP MOD
CLR @(R0)+ ;DSTM=3 SOP MOD
CLR @-(R0) ;DSTM=5 SOP MOD
CLR @0(R0) ;DSTM=7 SOP MOD
CLR MMRO ;TURN OFF MEMORY MANAGEMENT
:*
:* TEST SOP DEST NON-MOD WITH SRGM=1,2,3,5,7 AND DSTM=1,2,3,5,7
:* ALL SOURCE MODES TO BE TESTED ARE TESTED HERE
3$: MOV #3$, $LPERR ;SET LOOP ON ERROR POINTER TO 3$
MOV #32,R2 ;SET UP ADDRESSES 60000-60064 FOR TEST
MOV #60000,R0
MOV #60000,R1
21$: MOV R0,(R1)+
ADD #2,R0
```

3053	025464	077204			SOB	R2,21\$	
3054	025466	012700	060000		MOV	#60000,R0	
3055	025472	005237	177572		INC	MMR0	
3056	025476	021010		3\$:	CMP	(R0),(R0)	;TURN ON MEMORY MANAGEMENT
3057	025500	021020			CMP	(R0),(R0)+	;SRCM=1 DSTM=1 DOP DEST NON-MOD
3058	025502	021030			CMP	(R0),a(R0)+	;SRCM=1 DSTM=2 DOP DEST NON-MOD
3059	025504	021050			CMP	(R0),a-(R0)	;SRCM=1 DSTM=3 DOP DEST NON-MOD
3060	025506	021070	000000		CMP	(R0),a0(R0)	;SRCM=1 DSTM=5 DOP DEST NON-MOD
3061	025512	022010			CMP	(R0)+,(R0)	;SRCM=1 DSTM=7 DOP DEST NON-MOD
3062	025514	022020			CMP	(R0)+,(R0)+	;SRCM=2 DSTM=1 DOP DEST NON-MOD
3063	025516	022030			CMP	(R0)+,a(R0)+	;SRCM=2 DSTM=2 DOP DEST NON-MOD
3064	025520	022050			CMP	(R0)+,a-(R0)	;SRCM=2 DSTM=3 DOP DEST NON-MOD
3065	025522	022070	000000		CMP	(R0)+,a0(R0)	;SRCM=2 DSTM=5 DOP DEST NON-MOD
3066	025526	023010			CMP	a(R0)+,(R0)	;SRCM=2 DSTM=7 DOP DEST NON-MOD
3067	025530	023020			CMP	a(R0)+,(R0)+	;SRCM=3 DSTM=1 DOP DEST NON-MOD
3068	025532	023030			CMP	a(R0)+,a(R0)+	;SRCM=3 DSTM=2 DOP DEST NON-MOD
3069	025534	023050			CMP	a(R0)+,a-(R0)	;SRCM=3 DSTM=3 DOP DEST NON-MOD
3070	025536	023070	000000		CMP	a(R0)+,a0(R0)	;SRCM=3 DSTM=5 DOP DEST NON-MOD
3071	025542	025010			CMP	a-(R0),(R0)	;SRCM=3 DSTM=7 DOP DEST NON-MOD
3072	025544	025020			CMP	a-(R0),(R0)+	;SRCM=5 DSTM=1 DOP DEST NON-MOD
3073	025546	025030			CMP	a-(R0),a(R0)+	;SRCM=5 DSTM=2 DOP DEST NON-MOD
3074	025550	025050			CMP	a-(R0),a-(R0)	;SRCM=5 DSTM=3 DOP DEST NON-MOD
3075	025552	025070	000000		CMP	a-(R0),a0(R0)	;SRCM=5 DSTM=5 DOP DEST NON-MOD
3076	025556	027010	000000		CMP	a0(R0),(R0)	;SRCM=5 DSTM=7 DOP DEST NON-MOD
3077	025562	027020	000000		CMP	a0(R0),(R0)+	;SRCM=7 DSTM=1 DOP DEST NON-MOD
3078	025566	027030	000000		CMP	a0(R0),a(R0)+	;SRCM=7 DSTM=2 DOP DEST NON-MOD
3079	025572	027050	000000		CMP	a0(R0),a-(R0)	;SRCM=7 DSTM=3 DOP DEST NON-MOD
3080	025576	027070	000000	000000	CMP	a0(R0),a0(R0)	;SRCM=7 DSTM=5 DOP DEST NON-MOD
3081	025604	005037	177572		CLR	MMR0	;TURN OFF MEMCRY MANAGEMENT
3082					;	TEST DOP DEST MOD AND NOT SUB; DSTM=1,2,3,5,7	
3083					;		
3084	025610	005000			CLR	R0	;SET UP CONSTANTS FOR TEST
3085	025612	012701	060000		MOV	#60000,R1	
3086	025616	012737	025630	001110	MOV	#4\$, \$LPERR	;SET LOOP ON ERROR POINTER TO 4\$
3087	025624	005237	177572		INC	MMR0	;TURN ON MEMORY MANAGEMENT
3088	025630	050011		4\$:	BIS	R0,(R1)	;DSTM=1 DOP DEST MOD
3089	025632	050021			BIS	R0,(R1)+	;DSTM=2 DOP DEST MOD
3090	025634	050031			BIS	R0,a(R1)+	;DSTM=3 DOP DEST MOD
3091	025636	050051			BIS	R0,a-(R1)	;DSTM=5 DOP DEST MOD
3092	025640	050071	000000		BIS	R0,a0(R1)	;DSTM=7 DOP DEST MOD
3093	025644	005037	177572		CLR	MMR0	;TURN OFF MEMORY MANAGEMENT
3094					;	TEST MOV DEST AND NOT(SMO AND DMO); DSTM=3,5,7	
3095					;		
3096	025650	012701	060000		MOV	#60000,R1	;SET UP CONSTANTS FOR TEST
3097	025654	012737	060002	060000	MOV	#60002,a#60000	
3098	025662	012737	025674	001110	MOV	#5\$, \$LPERR	;SET LOOP ON ERROR POINTER TO 5\$
3099	025670	005237	177572		INC	MMR0	;TURN ON MEMORY MANAGEMENT
3100	025674	010031		5\$:	MOV	R0,a(R1)+	;DSTM=3 MOV DEST
3101	025676	010051			MOV	R0,a-(R1)	;DSTM=5 MOV DEST
3102	025700	010071	000000		MOV	R0,a0(R1)	;DSTM=7 MOV DEST
3103	025704	005037	177572		CLR	MMR0	;TURN OFF MEMORY MANAGEMENT
3104					;	TEST SWAB; DSTM=1,2,3,5,7	
3105					;		
3106	025710	012701	060000		MOV	#60000,R1	;SET UP CONSTANTS FOR TEST
3107	025714	012737	025726	001110	MOV	#6\$, \$LPERR	;SET LOOP ON ERROR POINTER TO 6\$
3108	025722	005237	177572		INC	MMR0	;TURN ON MEMORY MANAGEMENT
3109	025726	000311		6\$:	SWAB	(R1)	;DSTM=1 SWAB

```

3110 025730 000321 SWAB (R1)+ ;DSTM=2 SWAB
3111 025732 000331 SWAB @ (R1)+ ;DSTM=3 SWAB
3112 025734 000351 SWAB @-(R1) ;DSTM=5 SWAB
3113 025736 000371 000000 SWAB @0(R1) ;DSTM=7 SWAB
3114 025742 005037 177572 CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
3115 ;* TEST ROT/SHFT; DSTM=1,2,3,5,7
3116 ;*
3117 025746 012701 060000 MOV #60000,R1 ;SET UP CONSTANTS FOR TEST
3118 025752 012702 060006 MOV #60006,R2
3119 025756 010203 MOV R2,R3
3120 025760 012737 060000 060000 MOV #60000,@#60000
3121 025766 012737 060002 060002 MOV #60002,@#60002
3122 025774 012737 060004 060004 MOV #60004,@#60004
3123 026002 012737 060006 060006 MOV #60006,@#60006
3124 026010 012737 026022 001110 MOV #7$, $LPERR ;SET LOOP ON ERROR POINTER TO 7$
3125 026016 005237 177572 INC MMR0 ;TURN ON MEMORY MANAGEMENT
3126 026022 006111 7$: ROL (R1) ;DSTM=1 ROT/SHFT
3127 026024 006121 ROL (R1)+ ;DSTM=2 ROT/SHFT
3128 026026 006131 ROL @ (R1)+ ;DSTM=3 ROT/SHFT
3129 026030 006152 ROL @-(R2) ;DSTM=5 ROT/SHFT
3130 026032 006173 000000 ROL @0(R3) ;DSTM=7 ROT/SHFT
3131 026036 005037 177572 CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
3132 ;* TEST MUL/DIV; DSTM=1,2,3,5,7
3133 ;*
3134 026042 012737 026056 001110 MOV #8$, $LPERR ;SET LOOP ON ERROR POINTER TO 8$
3135 026050 005003 CLR R3 ;SET UP CONSTANT FOR TEST
3136 026052 005237 177572 INC MMR0 ;TURN ON MEMORY MANAGEMENT
3137 026056 070310 8$: MUL (R0),R3 ;DSTM=1 MUL/DIV
3138 026060 070320 MUL (R0)+,R3 ;DSTM=2 MUL/DIV
3139 026062 070330 MUL @ (R0)+,R3 ;DSTM=3 MUL/DIV
3140 026064 070350 MUL @-(R0),R3 ;DSTM=5 MUL/DIV
3141 026066 070370 000000 MUL @0(R0),R3 ;DSTM=7 MUL/DIV
3142 026072 005037 177572 CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
3143 ;* TEST ASH/ASHC; DSTM=1,2,3,5,7
3144 ;*
3145 026076 012737 000001 060000 MOV #1,@#60000 ;SET UP CONSTANTS FOR THE TEST
3146 026104 012737 060000 060002 MOV #60000,@#60002
3147 026112 012700 060000 MOV #60000,R0
3148 026116 012737 026130 001110 MOV #9$, $LPERR ;SET LOOP ON ERROR POINTER TO 9$
3149 026124 005237 177572 INC MMR0 ;TURN ON MEMORY MANAGEMENT
3150 026130 072310 9$: ASH (R0),R3 ;DSTM=1 ASH/ASHC
3151 026132 072320 ASH (R0)+,R3 ;DSTM=2 ASH/ASHC
3152 026134 072330 ASH @ (R0)+,R3 ;DSTM=3 ASH/ASHC
3153 026136 072350 ASH @-(R0),R3 ;DSTM=5 ASH/ASHC
3154 026140 072370 000000 ASH @0(R0),R3 ;DSTM=7 ASH/ASHC
3155 026144 005037 177572 CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
3156 ;* TEST JMP; DSTM=3,7
3157 ;*
3158 026150 012737 026202 001110 MOV #10$, $LPERR ;SET LOOP ON ERROR POINTER TO 10$
3159 026156 012737 026204 060000 MOV #11$,@#60000 ;SET UP CONSTANTS FOR THE TEST
3160 026164 012737 026210 060002 MOV #12$,@#60002
3161 026172 012701 060000 MOV #60000,R1
3162 026176 005237 177572 INC MMR0 ;TURN ON MEMORY MANAGEMENT
3163 026202 000131 10$: JMP @ (R1)+ ;DSTM=3 JMP
3164 026204 000171 000000 11$: JMP @0(R1) ;DSTM=7 JMP
3165 026210 005037 177572 12$: CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
3166 ;* TEST JSR; DSTM=3,7
    
```

```
3167
3168 026214 012737 026246 001110 ;* MOV #13$, $LPERR ;SET LOOP ON ERROR POINTER TO 13$
3169 026222 012737 026250 060000 MOV #14$, @#60000 ;SET UP CONSTANTS FOR THE TEST
3170 026230 012737 026254 060002 MOV #15$, @#60002
3171 026236 012701 060000 MOV #60000, R1
3172 026242 005237 177572 INC MMRO ;TURN ON MEMORY MANAGEMENT
3173 026246 004731 13$: JSR PC, @ (R1)+ ;DSTM=3 JSR
3174 026250 004771 000000 14$: JSR PC, @0 (R1) ;DSTM=7 JSR
3175 026254 005037 177572 15$: CLR MMRO ;TURN OFF MEMORY MANAGEMENT
3176 026260 112737 000006 172306 MOVB #6, KIPDR3 ;MAKE KIPDR3 RESIDENT
3177 026266 012706 001100 MOV #KERSTK, KSP ;RESET STACK POINTER
```


3186

```
.SBTTL TEST # 16 - PROPER ENABLING OF SUPER. D-SPACE
:*****
:*TEST 16 PROPER ENABLING OF SUPER. D-SPACE
:*
:* THIS TEST CHECKS FOR PROPER ENABLING OF THE SUPERVISOR D-SPACE.
:*
:* ANY ERRORS ENCOUNTERED WILL BE REPORTED THROUGH 'MMVEC' TO
:* SUBROUTINE 'NODSPAC'.
:*****
```

```
3187 026272 000004
3188 026274 105037 172222
3189 026300 012737 026326 001110
3190 026306 012737 000022 172516
3191 026314 052737 040000 177776
3192 026322 005237 177572
3193
3194 026326 000400
3195 026330 005700
3196 026332 005200
3197 026334 005037 177572
3198 026340 112737 000006 172222
3199 026346 105037 172206
3200
3201
3202 026352 012737 026364 001110
3203 026360 005237 177572
3204 026364 005737 060000
3205 026370 005037 060000
3206 026374 005037 177572
3207
3208
3209 026400 012737 026416 001110
3210 026406 012700 060000
3211 026412 005237 177572
3212 026416 023710 060000
3213 026422 052730 000000
3214 026426 013737 060002 060002
3215 026434 005037 177572
3216
3217
3218 026440 012737 026464 001110
3219 026446 012737 000001 060000
3220 026454 012700 000001
3221 026460 005237 177572
3222 026464 006137 060000
3223 026470 072337 060000
3224 026474 005037 177572
3225
3226
3227 026500 012737 026512 001110
3228 026506 005237 177572
3229 026512 070037 060000
3230 026516 000337 060004
3231 026522 005037 177572
3232 026526 042737 000002 172516
```

```
TST16: SCOPE
20$: CLR SDPDR1 ;MAKE SDPDR1 NON-RESIDENT
MOV #1$, $LPERR ;SET LOOP ON ERROR POINTER TO 1$
MOV #22, MMR3 ;ENABLE 22-BIT SUPERVISOR D-SPACE
BIS #40000, PSW ;ENABLE SUPERVISOR MODE
INC MMR0 ;TURN ON MEMORY MANAGEMENT
:* THE NEXT INSTRUCTIONS SHOULD NEVER INVOKE D-SPACE
:*
1$: BR 2$
2$: TST R0
INC R0
CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
MOVB #6, SDPDR1 ;MAKE SDPDR1 RESIDENT
CLRB SIPDR3 ;MAKE SIPDR3 NON-RESIDENT
:* TEST SOP INSTRUCTIONS
:*
3$: MOV #3$, $LPERR ;SET LOOP ON ERROR POINTER TO 3$
INC MMR0 ;TURN ON MEMORY MANAGEMENT
TST @#60000 ;DSTM=3 DSTF=7 SOP NON-MOD
CLR @#60000 ;DSTM=3 DSTF=7 SOP MOD
CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
:* TEST DOP INSTRUCTIONS
:*
4$: MOV #4$, $LPERR ;SET LOOP ON ERROR POINTER TO 4$
MOV #60000, R0 ;SET UP CONSTANT FOR TEST
INC MMR0 ;TURN ON MEMORY MANAGEMENT
CMP @#60000, (R0) ;SRCM=3 DSTM=1 DOP DEST NON-MOD
BIS #0, @(R0)+ ;SRCM=2 DSTM=3 DOP DEST MOD
MOV @#60002, @#60002 ;SRCM=3 DSTM=3 MOV DEST
CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
:* TEST ROT/SHFT AND ASH/ASHC INSTRUCTIONS
:*
5$: MOV #5$, $LPERR ;SET LOOP ON ERROR POINTER TO 5$
MOV #1, @#60000 ;SET CONSTANT FOR TEST
MOV #1, R0 ;SET UP CONSTANT FOR TEST
INC MMR0 ;TURN ON MEMORY MANAGEMENT
ROL @#60000 ;DSTM=3 ROT/SHFT
ASH @#60000, R3 ;DSTM=3 ASH/ASHC
CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
:* TEST MUL/DIV AND SWAB INSTRUCTIONS
:*
6$: MOV #6$, $LPERR ;SET LOOP ON ERROR POINTER TO 6$
INC MMR0 ;TURN ON MEMORY MANAGEMENT
MUL @#60000, R0 ;DSTM=3 MUL/DIV
SWAB @#60004 ;DSTM=3 SWAB
CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
BIC #2, MMR3 ;DISABLE SUPERVISOR D-SPACE
```

CKKTBD0 11/44 MEM MGMT PRT B MACRO M1113 12-JAN-82 12:19 PAGE 75-1
TEST # 16 - PROPER ENABLING OF SUPER. D-SPACE

H 8

SEQUENCE 98

3233 026534 112737 000006 172206 MOVB #6,SIPDR3 ;MAKE SIPDR3 RESIDENT

3242

```
.SBTTL TEST # 17 - PROPER ENABLING OF USER D-SPACE
:*****
:TEST 17 PROPER ENABLING OF USER D-SPACE
:
: THIS TEST CHECKS FOR PROPER ENABLING OF THE USER D-SPACE.
:
: ANY ERRORS ENCOUNTERED WILL BE REPORTED THROUGH 'MMVEC' TO
: SUBROUTINE 'NODSPAC'.
:*****
```

```
026542 000004
3243 026544 105037 177622
3244 026550 012737 026576 001110
3245 026556 012737 000021 172516
3246 026564 052737 140000 177776
3247 026572 005237 177572
3248
3249
3250 026576 000400
3251 026600 005700
3252 026602 005200
3253 026604 005037 177572
3254 026610 112737 000006 177622
3255 026616 105037 177606
3256
3257
3258 026622 012737 026634 001110
3259 026630 005237 177572
3260 026634 005737 060000
3261 026640 005037 060000
3262 026644 005037 177572
3263
3264
3265 026650 012737 026666 001110
3266 026656 012700 060000
3267 026662 005237 177572
3268 026666 023710 060000
3269 026672 052730 000000
3270 026676 013737 060002 060002
3271 026704 005037 177572
3272
3273
3274 026710 012737 026730 001110
3275 026716 012737 000001 060000
3276 026724 005237 177572
3277 026730 006137 060000
3278 026734 072337 060000
3279 026740 005037 177572
3280
3281
3282 026744 012737 026762 001110
3283 026752 012700 000001
3284 026756 005237 177572
3285 026762 070037 060000
3286 026766 000337 060004
3287 026772 005037 177572
3288 026776 042737 000001 172516
```

```
TST17: SCOPE
20$: CLR UDPDR1 ;MAKE UDPDR1 NON-RESIDENT
MOV #1$, $LPERR ;SET LOOP ON ERROR POINTER TO 1$
MOV #21, MMR3 ;ENABLE 22-BIT USER D-SPACE
BIS #140000, PSW ;ENABLE USER MODE
INC MMR0 ;TURN ON MEMORY MANAGEMENT
: * THE NEXT INSTRUCTIONS SHOULD NEVER INVOKE D-SPACE
: *
1$: BR 2$
2$: TST R0
INC R0
CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
MOVB #6, UDPDR1 ;MAKE UDPDR1 RESIDENT
CLRB UIPDR3 ;MAKE UIPDR3 NON-RESIDENT
: * TEST SOP INSTRUCTIONS
: *
3$: MOV #3$, $LPERR ;SET LOOP ON ERROR POINTER TO 3$
INC MMR0 ;TURN ON MEMORY MANAGEMENT
TST @#60000 ;DSTM=3 DSTF=7 SOP NON-MOD
CLR @#60000 ;DSTM=3 DSTF=7 SOP MOD
CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
: * TEST POP INSTRUCTIONS
: *
4$: MOV #4$, $LPERR ;SET LOOP ON ERROR POINTER TO 4$
MOV #60000, R0 ;SET UP CONSTANT FOR TEST
INC MMR0 ;TURN ON MEMORY MANAGEMENT
CMP @#60000, (R0) ;SRCM=3 DSTM=1 DOP DEST NON-MOD
BIS #0, @ (R0)+ ;SRCM=2 DSTM=3 DOP DEST MOD
MOV @#60002, @#60002 ;SRCM=3 DSTM=3 MOV DEST
CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
: * TEST ROT/SHFT AND ASH/ASHC INSTRUCTIONS
: *
5$: MOV #5$, $LPERR ;SET LOOP ON ERROR POINTER TO 5$
MOV #1, @#60000 ;SET CONSTANT FOR TEST
INC MMR0 ;TURN ON MEMORY MANAGEMENT
ROL @#60000 ;DSTM=3 ROT/SHFT
ASH @#60000, R3 ;DSTM=3 ASH/ASHC
CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
: * TEST MUL/DIV AND SWAB INSTRUCTIONS
: *
6$: MOV #6$, $LPERR ;SET LOOP ON ERROR POINTER TO 6$
MOV #1, R0 ;SET UP CONSTANT FOR TEST
INC MMR0 ;TURN ON MEMORY MANAGEMENT
MUL @#60000, R0 ;DSTM=3 MUL/DIV
SWAB @#60004 ;DSTM=3 SWAB
CLR MMR0 ;TURN OFF MEMORY MANAGEMENT
BIC #1, MMR3 ;DISABLE USER D-SPACE
```

3289 027004 112737 000006 177606
3290 027012 005037 177776

MOVB #6,UIPDR3
CLR PSW

;MAKE UIPDR3 RESIDENT
;RESET TO KERNAL SPACE

3299

.SBTTL TEST # 20 - TRAPPING IN D-SPACE KERNAL MODE

 *TEST 20 TRAPPING IN D-SPACE KERNAL MODE
 *

* THIS TEST VERIFIES THAT THE ABORT VECTOR IS TAKEN FROM
 * D-SPACE AND NOT I-SPACE. THE I-SPACE VECTOR POINTS TO
 * 10\$ AND THE D-SPACE VECTOR POINTS TO 15\$. EACH PSW IN
 * VIRTUAL 252 IS DIFFERENT SO THE PROGRAM CAN TELL WHICH
 * AREA IT IS PICKED UP FROM.

3300	027016	000004				TST20: SCOPE		
3301	027020	004737	002356			JSR PC,TOFF	:TURN OF T-BIT FOR THIS TEST	
3302	027024	012737	027060	001110	20\$:	MOV #1\$, \$LPERR	:SET LOOP ON ERROR POINTER TO 1\$	
3303	027032	012737	027126	000250		MOV #10\$, @MMVEC	:SET M.M. VEC. TO HOLD BAD VECTOR	
3304	027040	005037	000252			CLR @MMVEC+2	:PSW IN 252 HAS PRIORITY OF ZERO	
3305	027044	012737	027134	000350		MOV #15\$, @#350	:SET D-SPACE M.M VECTOR TO 350	
3306	027052	012737	000340	000352		MOV #340, @#352	:SET PSW PRIORITY TO 7	
3307	027060	012706	001000		1\$:	MOV #1000, KSP	:SET UP KERNAL VECTOR	
3308	027064	005237	177572			INC MMRO	:TURN ON MEMORY MANAGEMENT	
3309						;NOW SET UP FOR AN ABORT IN KERNAL MODE WITH D-SPACE ENABLED		
3310	027070	012737	077402	172330		MOV #77402, KDPDR4	:KERNAL D-SPACE PAGE 4 IS READ ONLY	
3311	027076	012737	000600	172370		MOV #600, KDPAR4	:MAP D-SPACE PAGE 4 TO 12K	
3312	027104	052737	000004	172516		BIS #BIT2, MMR3	:ENABLE KERNAL D-SPACE MAPPING	
3313	027112	012737	000001	172360		MOV #1, KDPAR0	:MAP KERNAL D PAGE 0 TO 000100	
3314	027120	012737	177777	100000		MOV #-1, @#100000	:TRY TO WRITE TO PAGE 4	
3315	027126	013700	177776		10\$:	MOV PSW, R0	:SAVE PSW FOR COMPARE	
3316	027132	000402				BR 16\$:BRANCH TO D-SPACE READ CODE	
3317	027134	013700	177776		15\$:	MOV PSW, R0	:SAVE PSW FOR COMPARE	
3318	027140	005037	172360		16\$:	CLR KDPAR0	:REMAP KERNAL D PAGE 0 TO PHYSICAL 0	
3319	027144	012706	001100			MOV #KERSTK, KSP	:RESET STACK POINTER AFTER D-SPACE ABORT	
3320	027150	042737	000004	172516		BIC #BIT2, MMR3	:TURN OFF KERNAL D-SPACE ENABLE	
3321	027156	013701	177572			MOV MMRO, R1	:SAVE MMRO FOR COMPARE	
3322	027162	013702	177574			MOV MMR1, R2	:SAVE MMR1 FOR COMPARE	
3323	027166	013703	177576			MOV MMR2, R3	:SAVE MMR2 FOR COMPARE	
3324	027172	122700	000340			CMPB #340, R0	:DID YOU PICK CORRECT PSW	
3325	027176	001401				BEQ 2\$:BRANCH IF PSW IS 340	
3326	027200	104033				ERROR +33	:WRONG PSW PICKED IN ABORT SEQUENCE	
3327	027202	022701	020031		2\$:	CMP #020031, R1	:EXPECTING READ ONLY ABORT	
3328							:KERNAL MODE D-SPACE PAGE 4	
3329	027206	001401				BEQ 3\$:BRANCH IF CONDITION IS CORRECT	
3330	027210	104027				ERROR +27	:WRONG M.M. ABORT CONDITION	
3331	027212	005037	177572		3\$:	CLR MMRO	:CLEAR OFF MMRO FOR EXIT OF TEST	
3332	027216	012737	016142	000250		MOV #MGMERR, MMVEC	:RESTORE NORMAL M.M. TRAP VECTOR	
3333	027224	012737	000340	000252		MOV #340, MMVEC+2	:RESTORE TRAP PSW (PRIORITY=7)	
3334								

3359

.SBTTL TEST # 21 - MOVE FROM PREVIOUS (SUPERVISOR) I-SPACE

*TEST 21 MOVE FROM PREVIOUS (SUPERVISOR) I-SPACE

* THIS TEST USES THE 'MFPI' INSTRUCTION TO ENSURE THAT THE PREVIOUS MODE IS CLOCKED CORRECTLY. THERE IS A DESCRIPTION BEFORE EACH DESTINATION MODE TESTED. THE TEST ITSELF IS CARRIED OUT IN SUBROUTINE MFPITS, WHICH USES THE MFPI INSTRUCTION CODE FOLLOWING THE JSR CALL TO EXECUTE THE TEST. *IMPORTANT* - ALL 'NOP'S' FOLLOWING MFPI'S OF MODES 1,2, 4 AND 5 ARE TO BE LEFT ALONE. THE SUBROUTINE LOADS THE TWO WORDS AFTER THE JSR CALL, PREPARING FOR MODES 3, 6 AND 7.

* IF THE CORRECT MODE (SUPERVISOR) IS NOT ENABLED A NON-RESIDENT ABORT WILL OCCUR AND TRAP TO MFPIV1, WHERE THE ERRORS ARE REPORTED.

027232	000004				TST21: SCOPE
3360 027234	004737	002060			JSR PC, APRINIT ;INIT ALL PAR/PDR'S
3361 027240	012737	000001	177572		MOV #1, MMRO ;TURN ON MEMORY MANAGEMENT
3362 027246	012737	000600	172350	1\$:	MOV #600, KIPAR4 ;MAP KIPAR4 TO 12K
3363 027254	012737	000600	172250		MOV #600, SIPAR4 ;MAP SIPAR4 TO 12K
3364 027262	012700	036514			MOV #36514, R0 ;LOAD DATA PATTERN INTO R0
3365 027266	010037	100000			MOV R0, @#100000 ;LOAD DATA PATTERN INTO PHY 60000
3366 027272	105037	172310			CLRB KIPDR4 ;MAKE KERNEL I-SPACE PAGE 4 NON-RESIDENT
3367					;THE FOLLOWING WILL TEST DSTM=0 MFPI
3368 027276	012737	027304	001110		MOV #2\$, \$LPERR ;SET LOOP ON ERROR POINTER TO 2\$
3369 027304	012737	010340	177776	2\$:	MOV #010340, PSW ;MAKE PREVIOUS MODE SUPERVISOR
3370 027312	006506				MFPI SSP ;PUT SUPERVISOR STACK POINTER ON KERNEL STACK
3371 027314	022706	001100			CMP #KERSTK, KSP ;WAS SOMETHING PUSHED ON STACK AT 6\$
3372 027320	001407				BEQ 3\$;BRANCH IF NOTHING WAS PUSHED
3373 027322	012600				MOV (KSP)+, R0 ;POP KERNEL STACK INTO R0
3374 027324	012701	000700			MOV #SUPSTK, R1 ;EXPECTING TO GET 700 AS SSP
3375 027330	020001				CMP R0, R1 ;DID YOU GET THE RIGHT POINTER?
3376 027332	001403				BEQ 4\$;BRANCH IF YOU DID
3377 027334	104023				ERROR +23 ;WRONG THING WAS PUSHED ON STACK
3378					;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 4\$' WITH 'BR 2\$' = 000764
3379 027336	000401				BR 4\$;BRANCH TO NEXT TRY
3380 027340	104025			3\$:	ERROR +25 ;NOTHING PUSHED ON STACK
3381					;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 3\$' ABOVE WITH 'BR 2\$' = 000771
3382					
3383					;THE FOLLOWING WILL TEST DSTM=1 MFPI.
3384 027342	012737	002516	001110	4\$:	MOV #MFPILP, \$LPERR ;SET LOOP ON ERROR POINTER TO MFPILP IN SUBROUTINE
3385 027350	012700	036514			MOV #36514, R0 ;RELOAD DATA PATTERN IN R0
3386 027354	012737	010340	002520		MOV #010340, MFPIPS ;MAKE PREVIOUS MODE SUPERVISOR IN SUBROUTINE
3387 027362	012702	100000			MOV #100000, R2 ;LOAD VIRTUAL ADDRESS INTO R2
3388 027366	012737	027566	002622		MOV #MFPIV1, MFPIVC ;LOAD ADDRESS OF THIS TEST'S TRAP CATCHER TO MFPIVC
3389 027374	004737	002404			JSR PC, MFPITS ;GO DO TEST USING MFPI INSTRUCTION FOUND
3390 027400	006512				MFPI (R2) ;<HERE - READ FROM PHYSICAL 60000
3391 027402	000240				NOP ;MODE NOT 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3392 027404	104023				ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3393 027406	005726				IST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3394					;THE FOLLOWING WILL TEST DSTM=2 MFPI.
3395 027410	012702	100000			MOV #100000, R2 ;LOAD VIRTUAL ADDRESS INTO R2
3396 027414	004737	002464			JSR PC, MFPITS ;GO DO TEST USING MFPI INSTRUCTION FOUND
3397 027420	006522				MFPI (R2)+ ;<HERE - READ FROM PHYSICAL 60000
3398 027422	000240				NOP ;MODE NOT 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3399 027424	104023				ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED

3400	027426	005726			TST (SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3401					;THE FOLLOWING WILL TEST DSTM=3	MFPI.
3402	027430	004737	002464		JSR PC,MFPITS	;GO DO TEST USING MFPI INSTRUCTION FOUND
3403	027434	006537	100000		MFPI @#100000	;<HERE - READ FROM PHYSICAL 60000
3404	027440	104023			ERROR +23	;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3405	027442	005726			TST (SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3406					;THE FOLLOWING WILL TEST DSTM=4	MFPI.
3407	027444	012702	100002		MOV #100002,R2	;LOAD VIRTUAL ADDRESS INTO R2
3408	027450	004737	002464		JSR PC,MFPITS	;GO DO TEST USING MFPI INSTRUCTION FOUND
3409	027454	006542			MFPI -(R2)	;<HERE - READ FROM PHYSICAL 60000
3410	027456	000240			NOP	;MODE NOT 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3411	027460	104023			ERROR +23	;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3412	027462	005726			TST (SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3413					;THE FOLLOWING WILL TEST DSTM=5	MFPI.
3414	027464	012737	100000	001202	MOV #100000,\$TMP2	;LOAD TEST LOC. VIRT. ADDR INTO LOC. \$TMP2
3415	027472	012702	001204		MOV #<\$TMP2+2>,R2	;LOAD ADDR. OF \$TMP2+2 INTO R2
3416	027476	004737	002464		JSR PC,MFPITS	;GO DO TEST USING MFPI INSTRUCTION FOUND
3417	027502	006552			MFPI @-(R2)	;<HERE - READ FROM PHYSICAL 60000
3418	027504	000240			NOP	;MODE NOT 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3419	027506	104023			ERROR +23	;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3420	027510	005726			TST (SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3421					;THE FOLLOWING WILL TEST DSTM=6	MFPI.
3422	027512	005002			CLR R2	;MAKE REGISTER 2 A ZERO
3423	027514	004737	002464		JSR PC,MFPITS	;GO DO TEST USING MFPI INSTRUCTION FOUND
3424	027520	006562	100000		MFPI 100000(R2)	;<HERE - READ FROM PHYSICAL 60000
3425	027524	104023			ERROR +23	;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3426	027526	005726			TST (SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3427					;THE FOLLOWING WILL TEST DSTM=7	MFPI.
3428	027530	012737	100000	001202	MOV #100000,\$TMP2	;LOAD TEST LOC. V.A. INTO \$TMP2
3429	027536	012702	001202		MOV #\$TMP2,R2	;LOAD ADDRESS OF \$TMP2 INTO R2
3430	027542	004737	002464		JSR PC,MFPITS	;GO DO TEST USING MFPI INSTRUCTION FOUND
3431	027546	006572	000000		MFPI @0(R2)	;USE \$TMP2 TO FETCH VIRTUAL ADDRESS OF 60000
3432	027552	104023			ERROR +23	;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3433	027554	005726			TST (SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3434	027556	112737	000006	172310	MOVB #6,KIPDR4	;MAKE KIPDR4 RESIDENT
3435	027564	000423			BR TST2	;BRANCH TO NEXT TEST


```
3437 .SBTTL MM TRAP CATCHER FOR ABOVE TEST
3438 027566 012637 001260 MFP1V1: MOV (KSP)+,TRAPPC ;SAVE PC & PS OF TRAP
3439 027572 012637 001262 MOV (KSP)+,TRAPPS
3440 027576 013737 177572 001264 MOV SRO,WASSRO ;SAVE SRO FOR ERROR TYPEOUT
3441 027604 013737 177576 001270 MOV SR2,WASSR2 ;SAVE SR2 FOR ERROR TYPEOUT
3442 027612 042737 160000 177572 BIC #160000,SRO ;CLEAR ERROR BITS IN SRO AND LEAVE
3443 027620 104026 ERROR +26 ;TRIED TO READ NON-RESIDENT PAGE
3444 ;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
3445 027622 013746 001262 MOV TRAPPS,-(KSP) ;PUT PC & PS OF TRAP ON STACK
3446 027626 013746 001260 MOV TRAPPC,-(KSP)
3447 027632 000002 RTI
```

3462

.SBTTL TEST # 22 - MOVE FROM PREVIOUS (USER) I-SPACE

*TEST 22 MOVE FROM PREVIOUS (USER) I-SPACE

*
 * THIS TEST USES THE 'MFP!' INSTRUCTION TO ENSURE THAT THE PREVIOUS MODE
 * IS CLOCKED CORRECTLY. THERE IS A DESCRIPTION BEFORE EACH DESTINATION
 * MODE TESTED. THE TEST ITSELF IS CARRIED OUT IN SUBROUTINE MFPIITS,
 * WHICH USES THE MFPI INSTRUCTION CODE FOLLOWING THE JSR CALL TO EXECUTE
 * THE TEST. *IMPORTANT* - ALL 'NOP'S' FOLLOWING MFPI'S OF MODES 1,2,
 * 4 AND 5 ARE TO BE LEFT ALONE. THE SUBROUTINE LOADS THE TWO WORDS
 * AFTER THE JSR CALL, PREPARING FOR MODES 3, 6 AND 7.

* IF THE CORRECT MODE (USER) IS NOT ENABLED A NON-RESIDENT ABORT WILL
 * OCCUR AND TRAP TO MFPIV2, WHERE THE ERRORS ARE REPORTED.

027634 000004
 3463 027636 012700 036514
 3464 027642 012737 000600 177650
 3465 027650 010037 100000
 3466 027654 105037 172310
 3467
 3468 027660 012737 027666 001110
 3469 027666 012737 030340 177776
 3470 027674 012737 030164 000250
 3471 027702 006506
 3472 027704 012737 016142 000250
 3473 027712 022706 001076
 3474 027716 001007
 3475 027720 012600
 3476 027722 012701 000600
 3477 027726 020001
 3478 027730 001403
 3479 027732 104023
 3480
 3481 027734 000401
 3482 027736 104025
 3483
 3484
 3485 027740 012737 002516 001110
 3486 027746 012737 030340 002520
 3487 027754 012700 036514
 3488 027760 012737 030164 002622
 3489 027766 012702 100000
 3490 027772 004737 002464
 3491 027776 006512
 3492 030000 000240
 3493 030002 104023
 3494 030004 005726
 3495
 3496 030006 012702 100000
 3497 030012 004737 002464
 3498 030016 006522
 3499 030020 000240
 3500 030022 104023
 3501 030024 005726
 3502

TST22: SCOPE
 1\$: MOV #36514,R0 ;LOAD DATA PATTERN INTO R0
 MOV #600,UIPAR4 ;MAP UIPAR4 TO 12K
 MOV R0,#100000 ;LOAD DATA PATTERN INTO PHY 60000
 CLR B KIPDR4 ;MAKE KERNEL I-SPACE PAGE 4 NON-RESIDENT
 ;THE FOLLOWING WILL TEST DSTM=0 MFPI
 2\$: MOV #2\$,SLPERR ;SET LOOP ON ERROR POINTER TO 2\$
 MOV #030340,PSW ;MAKE PREVIOUS MODE USER
 MOV #MFPIV2,MMVEC ;LOAD ADDRESS OF THIS TEST'S TRAP CATCHER TO MMVEC
 MFPI USP ;PUT USER STACK POINTER ON KERNEL STACK
 MOV #MGMERR,MMVEC ;SET M.M. VECTOR TO NORMAL ROUTINE
 CMP #KERSTK-2,KSP ;WAS SOMETHING PUSHED ON STACK BY THE MFPI?
 BNE 3\$;BRANCH TO ERROR IF POINTER IS WRONG
 MOV (KSP)+,R0 ;POP KERNEL STACK INTO R0
 MOV #USESTK,R1 ;EXPECTING TO GET 600 AS USP
 CMP R0,R1 ;DID YOU GET THE RIGHT POINTER?
 BEQ 4\$;BRANCH IF YOU DID
 ERROR +23 ;WRONG THING WAS PUSHED ON STACK
 ;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 4\$' WITH 'BR 2\$' = 000764
 BR 4\$;BRANCH TO NEXT TRY
 3\$: ERROR +25 ;NOTHING PUSHED ON STACK
 ;FOR TIGHTER SCOPE LOOP, REPLACE 'BNE 3\$' ABOVE WITH 'BR 2\$' = 000771
 ;THE FOLLOWING WILL TEST DSTM=1 MFPI.
 4\$: MOV #MFPIILP,SLPERR ;SET LOOP ON ERROR POINTER TO MFPIILP IN SUBROUTINE
 MOV #030340,MFPIPS ;MAKE PREVIOUS MODE USER IN SUBROUTINE LOCATION
 MOV #36514,R0 ;RELOAD DATA PATTERN IN R0
 MOV #MFPIV2,MFPIVC ;LOAD ADDRESS OF THIS TEST'S TRAP CATCHER TO MFPIVC
 MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
 JSR PC,MFPIITS ;GO DO TEST USING MFPI INSTRUCTION FOUND
 MFPI (R2) ;<HERE - READ FROM PHYSICAL 60000
 NOP ;MODE NOT 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
 ;THE FOLLOWING WILL TEST DSTM=2 MFPI.
 MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
 JSR PC,MFPIITS ;GO DO TEST USING MFPI INSTRUCTION FOUND
 MFPI (R2)+ ;<HERE - READ FROM PHYSICAL 60000
 NOP ;MODE NOT 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
 ;THE FOLLOWING WILL TEST DSTM=3 MFPI.

```

3503 030026 004737 002464      JSR    PC,MFPITS      ;GO DO TEST USING MFPI INSTRUCTION FOUND
3504 030032 006537 100000      MFPI   @#100000      ;<HERE - READ FROM PHYSICAL 60000
3505 030036 104023              ERROR  +23           ;RETURN IS EHRE FOR ERROR - WRONG DATA WAS FETCHED
3506 030040 005726              TST    (SP)+         ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3507                          ;THE FOLLOWING WILL TEST DSTM=4 MFPI.
3508 030042 012702 100002      MOV    #100002,R2    ;LOAD VIRTUAL ADDRESS INTO R2
3509 030046 004737 002464      JSR    PC,MFPITS      ;GO DO TEST USING MFPI INSTRUCTION FOUND
3510 030052 006542              MFPI   -(R2)         ;<HERE - READ FROM PHYSICAL 60000
3511 030054 000240              NOP                    ;MODE NOT 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3512 030056 104023              ERROR  +23           ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3513 030060 005726              TST    (SP)+         ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3514                          ;THE FOLLOWING WILL TEST DSTM=5 MFPI.
3515 030062 012737 100000 001202 MOV    #100000,$TMP2 ;LOAD TEST LOC. VIRT. ADDR INTO LOC. $TMP2
3516 030070 012702 001204      MOV    #<$TMP2+2>,R2 ;LOAD ADDR. OF $TMP2+2 INTO R2
3517 030074 004737 002464      JSR    PC,MFPITS      ;GO DO TEST USING MFPI INSTRUCTION FOUND
3518 030100 006552              MFPI   @-(R2)        ;<HERE - READ FROM PHYSICAL 60000
3519 030102 000240              NOP                    ;MODE NOT 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3520 030104 104023              ERROR  +23           ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3521 030106 005726              TST    (SP)+         ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3522                          ;THE FOLLOWING WILL TEST DSTM=6 MFPI.
3523 030110 005002              CLR    R2            ;MAKE REGISTER 2 A ZERO
3524 030112 004737 002464      JSR    PC,MFPITS      ;GO DO TEST USING MFPI INSTRUCTION FOUND
3525 030116 006562 100000      MFPI   100000(R2)    ;<HERE - READ FROM PHYSICAL 60000
3526 030122 104023              ERROR  +23           ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3527 030124 005726              TST    (SP)+         ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3528                          ;THE FOLLOWING WILL TEST DSTM=7 MFPI.
3529 030126 012737 100000 001202 MOV    #100000,$TMP2 ;LOAD TEST LOC. V.A. INTO $TMP2
3530 030134 012702 001202      MOV    #$TMP2,R2    ;LOAD ADDRESS OF $TMP2 INTO R2
3531 030140 004737 002464      JSR    PC,MFPITS      ;GO DO TEST USING MFPI INSTRUCTION FOUND
3532 030144 006572 000000      MFPI   @0(R2)        ;USE $TMP2 TO FETCH VIRTUAL ADDRESS OF 60000
3533 030150 104023              ERROR  +23           ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3534 030152 005726              TST    (SP)+         ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3535 030154 112737 000006 172310 MOVB   #6,KIPDR4     ;MAKE KIPDR4 RESIDENT
3536 030162 000423              BR     TST23        ;:BRANCH TO NEXT TEST
  
```

```
3538 .SBTTL MM TRAP CATCHER FOR PREVIOUS TEST
3539 030164 012637 001260 MFP1V2: MOV (KSP)+,TRAPPC ;SAVE PC & PS OF TRAP
3540 030170 012637 001262 MOV (KSP)+,TRAPPS
3541 030174 013737 177572 001264 MOV SRO,WASSRO ;SAVE SRO FOR ERROR TYPEOUT
3542 030202 013737 177576 001270 MOV SR2,WASSR2 ;SAVE SR2 FOR ERROR TYPEOUT
3543 030210 042737 160000 177572 BIC #160000,SRO ;CLEAR ERROR BITS IN SRO AND LEAVE
3544 030216 104026 ERROR +26 ;TRIED TO READ NON-RESIDENT PAGE
3545 ;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
3546 030220 013746 001262 MOV TRAPPS,-(KSP) ;PUT PC & PS OF TRAP ON STACK
3547 030224 013746 001260 MOV TRAPPC,-(KSP)
3548 030230 000002 RTI
```

3563

SBTTL TEST # 23 - MOVE TO PREVIOUS (SUPERVISOR) I-SPACE

 *TEST 23 MOVE TO PREVIOUS (SUPERVISOR) I-SPACE
 *

THIS TEST USES THE 'MTP1' INSTRUCTION TO ENSURE THAT THE PREVIOUS MODE IS CLOCKED CORRECTLY. THERE IS A DESCRIPTION BEFORE EACH DESTINATION MODE TESTED. THE TEST ITSELF IS CARRIED OUT IN SUBROUTINE MFPITS, WHICH USES THE MTP1 INSTRUCTION CODE FOLLOWING THE JSR CALL TO EXECUTE THE TEST. *IMPORTANT* - ALL 'NOP'S' FOLLOWING MTP1'S OF MODES 1,2, 4 AND 5 ARE TO BE LEFT ALONE. THE SUBROUTINE LOADS THE TWO WORDS AFTER THE JSR CALL, PREPARING FOR MODES 3, 6 AND 7.

IF THE CORRECT MODE IS NOT ENABLED A NON-RESIDENT ABORT WILL OCCUR AND TRAP TO MTP1V1, WHERE THE ERRORS ARE REPORTED.

3564 030232 000004
 3565 030234 012737 077406 172210
 3566 030242 012737 016340 177776
 3567 030250 012746 007777
 3568 030254 012737 030614 000250
 3569 030262 006606
 3570 030264 006506
 3571 030266 012737 016142 000250
 3572 030274 012601
 3573 030276 022701 007777
 3574 030302 001401
 3575 030304 104025
 3576
 3577 030306 012737 010340 177776
 3578 030314 012746 000700
 3579 030320 012737 030614 000250
 3580 030326 006606
 3581 030330 012737 016142 000250
 3582 030336
 3583 030336 012737 002654 001110
 3584 030344 012737 010340 002656
 3585 030352 012702 100000
 3586 030356 012700 125252
 3587 030362 004737 002626
 3588 030366 006612
 3589 030370 000240
 3590 030372 000000
 3591 030374 104024
 3592 030376 005726
 3593
 3594 030400 012700 125252
 3595 030404 012702 100000
 3596 030410 004737 002626
 3597 030414 006622
 3598 030416 000240
 3599 030420 177776
 3600 030422 104024
 3601 030424 005726
 3602
 3603 030426 012700 052525

TST23: SCOPE
 1\$: MOV #77406,SIPDR4 ;SUPERVISOR I-SPACE PAGE 4 READ/WRITE
 ;THE FOLLOWING WILL TEST DSTM=0 MTP1
 2\$: MOV #010340,PSW ;MAKE PREVIOUS MODE SUPERVISOR
 MOV #7777,-(KSP) ;PUSH DATA ON KERNEL STACK
 MOV #MTP1V1,MMVEC ;LOAD ADDRESS OF THIS TEST'S TRAP CATCHER TO MMVEC
 MTP1 SSP ;LOAD SUPERVISOR STACK POINTER
 MFPI SSP ;READ SUPERVISOR STACK POINTER
 MOV #MGERR,MMVEC ;SET M.M. VECTOR TO NORMAL ROUTINE
 MOV (KSP)+,R1 ;POP KERNEL STACK INTO R1
 CMP #7777,R1 ;WAS SUPERVISOR STACK POINTER CHANGED
 BEQ 3\$;BRANCH IF IT WAS
 ERROR +25 ;SUPERVISOR STACK POINTER NOT CHANGED
 ;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 3\$' WITH 'BR 2\$' = 000765
 3\$: MOV #010340,PSW ;MAKE PREVIOUS MODE SUPERVISOR
 MOV #SUPSTK,-(KSP) ;GET READY TO RESTORE SUPERVISOR S. POINT
 MOV #MTP1V1,MMVEC ;LOAD ADDRESS OF THIS TEST'S TRAP CATCHER TO MMVEC
 MTP1 SSP ;RESTORE SUPERVISOR STACK POINTER
 MOV #MGERR,MMVEC ;SET M.M. VECTOR TO NORMAL ROUTINE
 4\$: ;THIS WILL TEST DSTM = 1 MTP1.
 MOV #MTP1LP,\$LPERR ;SET LOOP ON ERROR POINTER TO MTP1LP IN SUBROUTINE
 MOV #010340,MTP1PM ;MAKE PREVIOUS MODE SUPER IN LOCATION IN SUBROUTINE
 MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
 MOV #125252,R0 ;LOAD TEST DATA INTO R0
 JSR PC,MTPITS ;GO DO THE TEST USING THE MTP1 INSTRUCTION FOUND
 MTP1 (R2) ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 .WORD 0 ;ADD 0 TO R2 AFTER MTP1 INSTRUCTION EXECUTE
 ERROR +24 ;RETURN IS HERE FOR ERROR - INCORRECT STORE
 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
 ;THE FOLLOWING WILL TEST DSTM=2 MTP1.
 MOV #125252,R0 ;LOAD TEST DATA INTO R0
 MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
 JSR PC,MTPITS ;GO DO THE TEST USING THE MTP1 INSTRUCTION FOUND
 MTP1 (R2)+ ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 .WORD -2 ;ADD -2 TO R2 AFTER MTP1 INSTRUCTION EXECUTE
 ERROR +24 ;RETURN IS HERE FOR ERROR - INCORRECT STORE
 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
 ;THIS WILL TEST DSTM = 3 MTP1.
 MOV #52525,R0 ;LOAD TEST DATA INTO R0

```

3604 030432 004737 002626      JSR    PC,MTPITS      ;GO DO THE TEST USING THE MTPi INSTRUCTION FOUND
3605 030436 006637 100000      MTPi   @#100000      ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
3606 030442 000000              .WORD  0              ;ADD 0 TO R2 AFTER MTPi INSTRUCTION EXECUTE
3607 030444 104024              ERROR  +24            ;RETURN IS HERE FOR ERROR - INCORRECT STORE
3608 030446 005726              TST    (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3609                                ;THIS WILL TEST DSTM = 4 MTPi.
3610 030450 012700 125252      MOV    #125252,R0     ;LOAD TEST DATA INTO R0
3611 030454 012702 100002      MOV    #100002,R2     ;LOAD VIRTUAL ADDRESS INTO R2
3612 030460 004737 002626      JSR    PC,MTPITS      ;GO DO THE TEST USING THE MTPi INSTRUCTION FOUND
3613 030464 006642              MTPi   -(R2)          ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
3614 030466 000240              NOP                    ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3615 030470 000000              .WORD  0              ;ADD 0 TO R2 AFTER MTPi INSTRUCTION EXECUTE
3616 030472 104024              ERROR  +24            ;RETURN IS HERE FOR ERROR - INCORRECT STORE
3617 030474 005726              TST    (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3618                                ;THE FOLLOWING WILL TEST DSTM=5 MTPi.
3619 030476 012700 052525      MOV    #52525,R0      ;LOAD TEST DATA INTO R0
3620 030502 012702 001204      MOV    #<$TMP2+2>,R2  ;LOAD ADDR. OF LOC. $TMP2+2 INTO R2
3621 030506 012737 100000      MOV    #100000,$TMP2  ;LOAD VIRT. ADDR. OF TEST LOC. INTO $TMP2
3622 030514 004737 002626      JSR    PC,MTPITS      ;GO DO THE TEST USING THE MTPi INSTRUCTION FOUND
3623 030520 006652              MTPi   @-(R2)         ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
3624 030522 000240              NOP                    ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3625 030524 076576              .WORD  100000-$TMP2   ;ADD 100000-$TMP2 TO R2 AFTER MTPi INSTRUCTION EXECUTE
3626 030526 104024              ERROR  +24            ;RETURN IS HERE FOR ERROR - INCORRECT STORE
3627 030530 005726              TST    (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3628                                ;THIS WILL TEST DSTM = 6 MTPi.
3629 030532 012700 052525      MOV    #52525,R0      ;LOAD TEST DATA INTO R0
3630 030536 005002              CLR    R2              ;MAKE REGISTER 2 ZERO
3631 030540 004737 002626      JSR    PC,MTPITS      ;GO DO THE TEST USING THE MTPi INSTRUCTION FOUND
3632 030544 006662 100000      MTPi   100000(R2)     ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
3633 030550 100000              .WORD  100000         ;ADD 100000 TO R2 AFTER MTPi INSTRUCTION EXECUTE
3634 030552 104024              ERROR  +24            ;RETURN IS HERE FOR ERROR - INCORRECT STORE
3635 030554 005726              TST    (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3636                                ;THE FOLLOWING WILL TEST DSTM=7 MTPi.
3637 030556 012700 125252      MOV    #125252,R0      ;LOAD TEST DATA INTO R0
3638 030562 012737 100000      MOV    #100000,$TMP2  ;LOAD VIRT. ADDR. OF TEST LOCATION INTO LOCATION $TMP2
3639 030570 012702 001202      MOV    #<$TMP2,R2     ;LOAD ADDRESS OF $TMP2 INTO R2
3640 030574 004737 002626      JSR    PC,MTPITS      ;GO DO THE TEST USING THE MTPi INSTRUCTION FOUND
3641 030600 006672 000000      MTPi   @0(R2)         ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
3642 030604 076576              .WORD  100000-$TMP2   ;ADD 100000-$TMP2 TO R2 AFTER MTPi INSTRUCTION EXECUTE
3643 030606 104024              ERROR  +24            ;RETURN IS HERE FOR ERROR - INCORRECT STORE
3644 030610 005726              TST    (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3645 030612 000423              BR     TST24          ;;BRANCH TO NEXT TEST
3646
3647 030614 012637 001260      MTPiV1: MOV    (KSP)+,TRAPPC ;SAVE PC & PS OF TRAP
3648 030620 012637 001262      MOV    (KSP)+,TRAPPS
3649 030624 013737 177572      MOV    SRO,WASSRO     ;SAVE SRO FOR ERROR TYPEOUT
3650 030632 013737 177576      MOV    SR2,WASSR2     ;SAVE SR2 FOR ERROR TYPEOUT
3651 030640 042737 160000      BIC    #160000,SRO    ;CLEAR ERROR BITS IN SRO
3652 030646 104024              ERROR  +24            ;TRIED TO LOAD A N.R. PAGE 4
3653                                ;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
3654 030650 013746 001262      MOV    TRAPPS,-(KSP)  ;PUT PC & PS OF TRAP ON STACK
3655 030654 013746 001260      MOV    TRAPPC,-(KSP)
3656 030660 000002              RTI                    ;RETURN TO TEST
    
```

3657

.SBTTL TEST # 24 - MOVE TO PREVIOUS (USER) I-SPACE

*TEST 24 MOVE TO PREVIOUS (USER) I-SPACE

*

* THIS TEST USES THE 'MTPI' INSTRUCTION TO ENSURE THAT THE PREVIOUS MODE IS CLOKED CORRECTLY. THERE IS A DESCRIPTION BEFORE EACH DESTINATION MODE TESTED. THE TEST ITSELF IS CARRIED OUT IN SUBROUTINE MFPITS, WHICH USES THE MTPI INSTRUCTION CODE FOLLOWING THE JSR CALL TO EXECUTE THE TEST. *IMPORTANT* - ALL 'NOP'S' FOLLOWING MTPI'S OF MODES 1,2, 4 AND 5 ARE TO BE LEFT ALONE. THE SUBROUTINE LOADS THE TWO WORDS AFTER THE JSR CALL, PREPARING FOR MODES 3, 6 AND 7.

* IF THE CORRECT MODE IS NOT ENABLED A NON-RESIDENT ABORT WILL OCCUR AND TRAP TO MTPIV1, WHERE THE ERRORS ARE REPORTED.

*

030662 000004
 3658 030664 012737 077406 177610
 3659 030672 012737 000600 177650
 3660
 3661 030700 012737 030340 177776
 3662 030706 012746 007777
 3663 030712 012737 031260 000250
 3664 030720 006606
 3665 030722 006506
 3666 030724 012737 016142 000250
 3667 030732 012601
 3668 030734 022701 007777
 3669 030740 001401
 3670 030742 104025
 3671
 3672 030744 012737 030340 177776
 3673 030752 012746 000600
 3674 030756 012737 031260 000250
 3675 030764 006606
 3676 030766 012737 016142 000250
 3677
 3678 030774 012737 002654 001110
 3679 031002 012737 030340 002656
 3680 031010 012737 031260 002744
 3681 031016 012702 100000
 3682 031022 012700 125252
 3683 031026 004737 002626
 3684 031032 006612
 3685 031034 000240
 3686 031036 000000
 3687 031040 104024
 3688 031042 005726
 3689
 3690 031044 012700 125252
 3691 031050 012702 100000
 3692 031054 004737 002626
 3693 031060 006622
 3694 031062 000240
 3695 031064 177776
 3696 031066 104024
 3697 031070 005726

TST24: SCOPE

1\$: MOV #77406,UIPDR4 ;USER I-SPACE PAGE 4 READ/WRITE
 MOV #600,UIPAR4 ;MAP USER I PAGE 4 TO 12K

;THE FOLLOWING WILL TEST DSTM=0 MTPI

2\$: MOV #030340,PSW ;MAKE PREVIOUS MODE USER
 MOV #7777,-(KSP) ;PUSH DATA ON KERNEL STACK
 MOV #MTPIV2,MMVEC ;SET M.M. VECTOR TO 20\$
 MTPI USP ;LOAD USER STACK POINTER
 MFPI USP ;READ USER STACK POINTER
 MOV #MGMERR,MMVEC ;RESTORE MM VECTOR TO NORMAL ROUTINE
 MOV (KSP)+,R1 ;POP KERNEL STACK INTO R1
 CMP #7777,R1 ;WAS USER STACK POINTER CHANGED
 BEQ 3\$;BRANCH IF IT WAS
 ERROR +25 ;USER STACK POINTER NOT CHANGED

;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 3\$' WITH 'BR 3\$' = 000765

3\$: MOV #030340,PSW ;MAKE PREVIOUS MODE USER
 MOV #USESTK,-(KSP) ;GET READY TO RESTORE USER S. POINT
 MOV #MTPIV2,MMVEC ;SET M.M. VECTOR TO 20\$
 MTPI USP ;RESTORE USER STACK POINTER
 MOV #MGMERR,MMVEC ;RESTORE MM VECTOR TO NORMAL ROUTINE

;THIS WILL TEST DSTM = 1 MTPI.

MOV #MTPILP,\$LPERR ;SET LOOP ON ERROR POINTER TO MTPILP IN SUBROUTINE
 MOV #030340,MTPIPM ;SET PREVIOUS MODE = USER IN SUBROUTINE LOCATION
 MOV #MTPIV2,MTPIVC ;SET THIS TEST'S MM TRAP HANDLER IN MTPIVC
 MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
 MOV #125252,R0 ;LOAD TEST DATA INTO R0
 JSR PC,MTPITS ;GO DO TEST USING MTPI INSTRUCTION LOCATED
 MTPI (R2) ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 .WORD 0 ;ADD 0 TO R2 AFTER MTPI INSTRUCTION EXECUTE
 ERROR +24 ;RETURN IS HERE FOR ERROR - INCORRECT STORE
 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE

;THE FOLLOWING WILL TEST DSTM=2 MTPI.

MOV #125252,R0 ;LOAD TEST DATA INTO R0
 MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
 JSR PC,MTPITS ;GO DO TEST USING MTPI INSTRUCTION LOCATED
 MTPI (R2)+ ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 .WORD -2 ;ADD -2 TO R2 AFTER MTPI INSTRUCTION EXECUTE
 ERROR +24 ;RETURN IS HERE FOR ERROR - INCORRECT STORE
 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE

```

3698                                     ;THIS WILL TEST DSTM = 3 MTPI.
3699 031072 012700 052525                MOV    #52525,R0                ;LOAD TEST DATA INTO R0
3700 031076 004737 002626                JSR    PC,MTPI                 ;GO DO TEST USING MTPI INSTRUCTION LOCATED
3701 031102 006637 100000                MTPI   @#100000                ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
3702 031106 000000                        .WORD 0                        ;ADD 0 TO R2 AFTER MTPI INSTRUCTION EXECUTE
3703 031110 104024                        ERROR  +24                      ;RETURN IS HERE FOR ERROR - INCORRECT STORE
3704 031112 005726                        TST   (SP)+                    ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3705                                     ;THIS WILL TEST DSTM = 4 MTPI.
3706 031114 012700 125252                MOV    #125252,R0              ;LOAD TEST DATA INTO R0
3707 031120 012702 100002                MOV    #100002,R2              ;LOAD VIRTUAL ADDRESS INTO R2
3708 031124 004737 002626                JSR    PC,MTPI                 ;GO DO TEST USING MTPI INSTRUCTION LOCATED
3709 031130 006642                        MTPI   -(R2)                   ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
3710 031132 000240                        NOP                               ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3711 031134 000000                        .WORD 0                        ;ADD 0 TO R2 AFTER MTPI INSTRUCTION EXECUTE
3712 031136 104024                        ERROR  +24                      ;RETURN IS HERE FOR ERROR - INCORRECT STORE
3713 031140 005726                        TST   (SP)+                    ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3714                                     ;THE FOLLOWING WILL TEST DSTM=5 MTPI.
3715 031142 012700 052525                MOV    #52525,R0                ;LOAD TEST DATA INTO R0
3716 031146 012702 001204                MOV    #<$TMP2+2>,R2           ;LOAD ADDR. OF LOC. $TMP2+2 INTO R2
3717 031152 012737 100000 001202        MOV    #100000,$TMP2           ;LOAD VIRT. ADDR. OF TEST LOC. INTO $TMP2
3718 031160 004737 002626                JSR    PC,MTPI                 ;GO DO TEST USING MTPI INSTRUCTION LOCATED
3719 031164 006652                        MTPI   @--(R2)                 ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
3720 031166 000240                        NOP                               ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3721 031170 076576                        .WORD 100000-$TMP2            ;ADD 100000-$TMP2 TO R2 AFTER MTPI INSTRUCTION EXECUTE
3722 031172 104024                        ERROR  +24                      ;RETURN IS HERE FOR ERROR - INCORRECT STORE
3723 031174 005726                        TST   (SP)+                    ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3724                                     ;THIS WILL TEST DSTM = 6 MTPI.
3725 031176 012700 052525                MOV    #52525,R0                ;LOAD TEST DATA INTO R0
3726 031202 005002                        CLR    R2                      ;MAKE REGISTER 2 ZERO
3727 031204 004737 002626                JSR    PC,MTPI                 ;GO DO TEST USING MTPI INSTRUCTION LOCATED
3728 031210 006662 100000                MTPI   100000(R2)              ;<HERE - LOAD TEST DATA INTO PHYSICAL 60000
3729 031214 100000                        .WORD 100000                   ;ADD 100000 TO R2 AFTER MTPI INSTRUCTION EXECUTE
3730 031216 104024                        ERROR  +24                      ;RETURN IS HERE FOR ERROR - INCORRECT STORE
3731 031220 005726                        TST   (SP)+                    ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3732                                     ;THE FOLLOWING WILL TEST DSTM=7 MTPI.
3733 031222 012700 125252                MOV    #125252,R0              ;LOAD TEST DATA INTO R0
3734 031226 012737 100000 001202        MOV    #100000,$TMP2           ;LOAD VIRT. ADDR. OF TEST LOCATION
3735                                     ;INTO LOCATION $TMP2
3736 031234 012702 001202                MOV    #<$TMP2>,R2             ;LOAD ADDRESS OF $TMP2 INTO R2
3737 031240 004737 002626                JSR    PC,MTPI                 ;GO DO TEST USING MTPI INSTRUCTION LOCATED
3738 031244 006672 000000                MTPI   @0(R2)                  ;<HERE LOAD TEST DATA INTO PHYSICAL 60000
3739 031250 076576                        .WORD 100000-$TMP2            ;ADD 100000-$TMP2 TO R2 AFTER MTPI INSTRUCTION EXECUTE
3740 031252 104024                        ERROR  +24                      ;RETURN IS HERE FOR ERROR - INCORRECT STORE
3741 031254 005726                        TST   (SP)+                    ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3742 031256 000423                        BR     TST25                   ;:BRANCH TO NEXT TEST
3743                                     ;
3744 031260 012637 001260                MTPIV2: MOV    (KSP)+,TRAPPC    ;SAVE PC & PS OF TRAP
3745 031264 012637 001262                MOV    (KSP)+,TRAPPS          ;
3746 031270 013737 177572 001264        MOV    SR0,WASSRO             ;SAVE SR0 FOR ERROR TYPEOUT
3747 031276 013737 177576 001270        MOV    SR2,WASSR2             ;SAVE SR2 FOR ERROR TYPEOUT
3748 031304 042737 160000 177572        BIC    #160000,SR0            ;CLEAR ERROR BITS IN SR0
3749 031312 104024                        ERROR  +24                      ;TRIED TO LOAD A N.R. PAGE 4
3750                                     ;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
3751 031314 013746 001262                MOV    TRAPPS,-(KSP)          ;PUT PC & PS OF TRAP ON STACK
3752 031320 013746 001260                MOV    TRAPPC,-(KSP)          ;
3753 031324 000002                        RTI                               ;RETURN TO TEST
    
```


3768

```
.SBTTL TEST # 25 - MFPI (KERNEL) TO SUPERVISOR MODE
:*****
:*TEST 25 MFPI (KERNEL) TO SUPERVISOR MODE
:*
:* THIS TEST CHECKS THAT IF THE PREVIOUS MODE IS KERNEL THE FETCH IS FROM
:* KERNEL SPACE. THERE IS A DESCRIPTION BEFORE EACH DESTINATION MODE
:* TESTED. THE TEST ITSELF IS CARRIED OUT IN SUBROUTINE MFPIITS,
:* WHICH USES THE MFPI INSTRUCTION CODE FOLLOWING THE JSR CALL TO EXECUTE
:* THE TEST. *IMPORTANT* - ALL 'NOP'S' FOLLOWING MFPI'S OF MODES 1,2,
:* 4 AND 5 ARE TO BE LEFT ALONE. THE SUBROUTINE LOADS THE TWO WORDS
:* AFTER THE JSR CALL, PREPARING FOR MODES 3, 6 AND 7.
:*
:* IF THE CORRECT MODE IS NOT ENABLED A NON-RESIDENT ABORT WILL OCCUR AND
:* TRAP TO MFPIV3, WHERE THE ERRORS ARE REPORTED.
:*****
```

```
3769 031326 000004
3770 031330 012737 031364 001110
3771 031336 012737 040340 177776
3772 031344 012700 036514
3773 031350 010037 100000
3774 031354 012702 100000
3775 031360 105037 172210
3776 031364 012737 040340 177776
3777 031372 012737 031674 000250
3778 031400 006506
3779 031402 012737 016142 000250
3780 031410 022706 000700
3781 031414 001407
3782 031416 012600
3783 031420 012701 001100
3784 031424 020001
3785 031426 001403
3786 031430 104023
3787
3788 031432 000401
3789 031434 104025
3790
3791
3792 031436 012737 002516 001110
3793 031444 012737 040340 002520
3794 031452 012737 031674 002622
3795 031460 012700 036514
3796 031464 012702 100000
3797 031470 004737 002464
3798 031474 006512
3799 031476 000240
3800 031500 104023
3801 031502 005726
3802
3803 031504 012702 100000
3804 031510 004737 002464
3805 031514 006522
3806 031516 000240
3807 031520 104023
3808 031522 005726
```

```
TST25: SCOPE
MOV #1$, $LPERR ;SET LOOP ON ERROR TO 1$
MOV #040340, PSW ;GO TO SUPERVISOR MODE FOR THIS TEST
MOV #36514, R0 ;LOAD DATA PATTERN INTO R0
MOV R0, #100000 ;LOAD DATA PATTERN INTO PHY 60000
MOV #100000, R2 ;LOAD VIRTUAL ADDRESS INTO R2
;THE FOLLOWING WILL TEST DSTM=0 MFPI
CLRB SIPDR4 ;MAKE SUPERVISOR I-SPACE PAGE 4 NON-RESIDENT
1$: MOV #040340, PSW ;MAKE PREVIOUS MODE KERNEL PRESENT SUPERVISOR
MOV #MFPIV3, MMVEC ;SET M.M. VECTOR TO MFPIV3
MFPI KSP ;PUT KERNEL STACK POINTER ON SUPERVISOR STACK
MOV #MGMERR, MMVEC ;RESTORE MM VECTOR TO NORMAL ROUTINE
CMP #SUPSTK, SSP ;WAS SOMETHING PUSHED ON STACK AT THE MFPI
BEQ 2$ ;BRANCH TO ERROR IF NOTHING WAS PUSHED
MOV (SSP)+, R0 ;POP SUPERVISOR STACK INTO R0
MOV #KERSTK, R1 ;EXPECTING 1100 AS KSP
CMP R0, R1 ;DID YOU GET THE RIGHT POINTER?
BEQ 3$ ;BRANCH IF YOU DID
ERROR +23 ;WRONG THING WAS PUSHED ON STACK
;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 3$' WITH 'BR 1$' = 000756
BR 3$ ;BRANCH TO NEXT TRY
2$: ERROR +25 ;NOTHING PUSHED ON STACK
;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 2$' ABOVE WITH 'BR 1$' = 000762
;THE FOLLOWING WILL TEST DSTM=1 MFPI.
3$: MOV #MFPIILP, $LPERR ;SET LOOP ON ERROR POINTER TO MFPIILP IN SUBROUTINE
MOV #040340, MFPIV3 ;MAKE PREVIOUS MODE KERNEL PRESENT SUPERVISOR
MOV #MFPIV3, MFPIVC ;MOVE THIS TEST'S MM TRAP VECTOR TO MFPIVC
MOV #36514, R0 ;LOAD DATA EXPECTED INTO R0
MOV #100000, R2 ;LOAD VIRTUAL ADDRESS INTO R2
JSR PC, MFPIITS ;GO DO TEST USING MFPI INSTRUCTION LOCATED
MFPI (R2) ;<HERE - READ FROM PHYSICAL 60000
NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
;THE FOLLOWING WILL TEST DSM=2 MFPI.
MOV #100000, R2 ;LOAD VIRTUAL ADDRESS INTO R2
JSR PC, MFPIITS ;GO DO TEST USING MFPI INSTRUCTION LOCATED
MFPI (R2)+ ;<HERE - READ FROM PHYSICAL 60000
NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
```

```

3809 ;THE FOLLOWING WILL TEST DSTM=3 MFPI.
3810 031524 004737 002464 JSR PC,MFPITS ;GO DO TEST USING MFPI INSTRUCTION LOCATED
3811 031530 006537 100000 MFPI @#100000 ;<HERE - READ FROM PHYSICAL 60000
3812 031534 104023 ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3813 031536 005726 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3814 ;THE FOLLOWING WILL TEST DSTM=4 MFPI.
3815 031540 012702 100002 MOV #100002,R2 ;LOAD VIRTUAL ADDRESS INTO R2
3816 031544 004737 002464 JSR PC,MFPITS ;GO DO TEST USING MFPI INSTRUCTION LOCATED
3817 031550 006542 MFPI ~(R2) ;<HERE - READ FROM PHYSICAL 60000
3818 031552 000240 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3819 031554 104023 ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3820 031556 005726 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3821 ;THE FOLLOWING WILL TEST DSTM=5 MFPI.
3822 031560 012737 100000 001202 MOV #100000,$TMP2 ;LOAD TEST LOC. VIRT. ADDR INTO LOC. $TMP2
3823 031566 012702 001204 MOV #<$TMP2+2>,R2 ;LOAD ADDRESS OF $TMP2+2 INTO R2
3824 031572 004737 002464 JSR PC,MFPITS ;GO DO TEST USING MFPI INSTRUCTION LOCATED
3825 031576 006552 MFPI @-(R2) ;<HERE - READ FROM PHYSICAL 60000
3826 031600 000240 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3827 031602 104023 ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3828 031604 005726 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3829 ;THE FOLLOWING WILL TEST DSTM=6 MFPI.
3830 031606 005002 CLR R2 ;MAKE REGISTER 2 A ZERO
3831 031610 004737 002464 JSR PC,MFPITS ;GO DO TEST USING MFPI INSTRUCTION LOCATED
3832 031614 006562 100000 MFPI 100000(R2) ;<HERE - READ FROM PHYSICAL 60000
3833 031620 104023 ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3834 031622 005726 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3835 ;THE FOLLOWING WILL TEST DSTM=7 MFPI.
3836 031624 012737 100000 001202 MOV #100000,$TMP2 ;LOAD TEST LOC. VIRT. ADDR. INTO $TMP2
3837 031632 012702 001202 MOV #$TMP2,R2 ;LOAD ADDRESS OF $TMP2 INTO R2
3838 031636 004737 002464 JSR PC,MFPITS ;GO DO TEST USING MFPI INSTRUCTION LOCATED
3839 031642 006572 000000 MFPI @0(R2) ;<HERE - READ FROM PHYSICAL 60000
3840 031646 104023 ERROR +23 ;WRONG DATA WAS FETCHED
3841 031650 005726 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3842 031652 012737 000340 177776 MOV #00340,PSW ;GO BACK TO KERNEL MODE, PREVIOUS KERNEL
3843 031660 112737 000006 172210 MOVB #6,SIPDR4 ;MAKE SIPDR4 RESIDENT
3844 031666 012706 001100 MOV #KERSTK,KSP ;RESET KERNEL STACK POINTER
3845 031672 000423 BR TST26 ;BRANCH TO NEXT TEXT
    
```

```

MM TRAP ROUTINE FOR ABOVE TEST
3847
3848 031674 012637 001260
3849 031700 012637 001262
3850 031704 013737 177572 001264
3851 031712 013737 177576 001270
3852 031720 042737 160000 177572
3853 031726 104026
3854
3855 031730 013746 001262
3856 031734 013746 001260
3857 031740 000002

.SBTTL MM TRAP ROUTINE FOR ABOVE TEST
MFPIV3: MOV (KSP)+,TRAPPC ;SAVE PC & PS OF TRAP
MOV (KSP)+,TRAPPS
MOV SRO,WASSRO ;SAVE SRO FOR ERROR TYPEOUT
MOV SR2,WASSR2 ;SAVE SR2 FOR ERROR TYPEOUT
BIC #160000,SRO ;CLEAR ERROR BITS IN SRO
ERROR +26 ;TRIED TO READ NON-RESIDENT PAGE
;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
MOV TRAPPS,-(KSP) ;PUT PC & PS OF TRAP ON STACK
MOV TRAPPC,-(KSP)
RTI ;RETURN TO TEST

```

3858

.SBTTL TEST # 26 - MFPI (KERNEL) TO USER MODE

*TEST 26 MFPI (KERNEL) TO USER MODE

*

* THIS TEST CHECKS THAT IF THE PREVIOUS MODE IS KERNEL THE FETCH IS FROM
 * KERNEL SPACE. THERE IS A DESCRIPTION BEFORE EACH DESTINATION MODE
 * TESTED. THE TEST ITSELF IS CARRIED OUT IN SUBROUTINE MFPI,
 * WHICH USES THE MFPI INSTRUCTION CODE FOLLOWING THE JSR CALL TO EXECUTE
 * THE TEST. *IMPORTANT* - ALL 'NOP'S' FOLLOWING MFPI'S OF MODES 1,2,
 * 4 AND 5 ARE TO BE LEFT ALONE. THE SUBROUTINE LOADS THE TWO WORDS
 * AFTER THE JSR CALL, PREPARING FOR MODES 3, 6 AND 7.

*

* IF THE CORRECT MODE IS NOT ENABLED A NON-RESIDENT ABORT WILL OCCUR AND
 * TRAP TO MFPIV4, WHERE THE ERRORS ARE REPORTED.

*

3859 031742 000004
 3860 031744 012737 031752 001110
 3861 031752 012737 140340 177776
 3862 031760 012700 036514
 3863 031764 010037 100000
 3864 031770 012702 100000
 3865 031774 012737 032304 000250
 3866 032002 105037 177610
 3867 032006 012737 140340 177776
 3868 032014 006506
 3869 032016 012737 016142 000250
 3870 032024 022706 000600
 3871 032030 001407
 3872 032032 012600
 3873 032034 012701 001100
 3874 032040 020001
 3875 032042 001403
 3876 032044 104023
 3877
 3878 032046 000401
 3879 032050 104025
 3880
 3881
 3882
 3883 032052 012737 002516 001110
 3884 032060 012737 140340 002520
 3885 032066 012737 032304 002622
 3886 032074 012700 036514
 3887 032100 012702 100000
 3888 032104 004737 002464
 3889 032110 006512
 3890 032112 000240
 3891 032114 104023
 3892 032116 005726
 3893
 3894 032120 012702 100000
 3895 032124 004737 002464
 3896 032130 006522
 3897 032132 000240
 3898 032134 104023

TST26: SCOPE
 1\$: MOV #1\$, \$LPERR ;SET LOOP ON ERROR TO 1\$
 MOV #140340, PSW ;GO TO USER MODE FOR THIS TEST
 MOV #36514, R0 ;LOAD DATA PATTERN INTO R0
 MOV R0, @#100000 ;LOAD DATA PATTERN INTO PHY 60000
 MOV #100000, R2 ;LOAD VIRTUAL ADDRESS INTO R2
 ;THE FOLLOWING WILL TEST DSTM=0 MFPI
 MOV #MFPIV4, MMVEC ;SET M.M. VECTOR TO MFPIV4
 CLRB UIPDR4 ;MAKE USER I-SPACE PAGE 4 NON-RESIDENT
 MOV #140340, PSW ;MAKE PREVIOUS MODE KERNEL PRESENT USER
 MFPI KSP ;PUT KERNEL STACK POINTER ON USER STACK
 MOV #MGMERR, MMVEC ;RESTORE MM VECTOR TO NORMAL ROUTINE
 CMP #USESTK, USP ;WAS SOMETHING PUSHED ON STACK AT THE MFPI
 BEQ 2\$;BRANCH IF NOTHING WAS PUSHED
 MOV (USP)+, R0 ;POP USER STACK INTO R0
 MOV #KERSTK, R1 ;EXPECTING 1100 AS KSP
 CMP R0, R1 ;DID YOU GET THE RIGHT POINTER?
 BEQ 3\$;BRANCH IF YOU DID
 ERROR +23 ;WRONG THING WAS PUSHED ON STACK
 ;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 3\$' WITH 'BR 1\$' = 000763
 BR 3\$;BRANCH TO NEXT TRY
 2\$: ERROR +25 ;NOTHING PUSHED ON STACK
 ;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 2\$' WITH 'BR 1\$' = 000763
 ;THE FOLLOWING WILL TEST DSTM=1 MFPI.
 3\$: MOV #MFPIILP, \$LPERR ;SET LOOP ON ERROR POINTER TO MFPIILP IN SUBROUTINE
 MOV #140340, MFPIPS ;MAKE PREVIOUS MODE KERNEL PRESENT USER
 MOV #MFPIV4, MFPIVC ;MOVE THIS TEST'S MM TRAP HANDLER TO MFPIVC
 MOV #36514, R0 ;LOAD DATA EXPECTED INTO R0
 MOV #100000, R2 ;LOAD VIRTUAL ADDRESS INTO R2
 JSR PC, MFPIPS ;GO DO TEST USING MFPI INSTRUCTION LOCATED
 MFPI (R2) ;<HERE - READ FROM PHYSICAL 60000
 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 ERROR +23 ;WRONG DATA WAS FETCHED
 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
 ;THE FOLLOWING WILL TEST DSM=2 MFPI.
 MOV #100000, R2 ;LOAD VIRTUAL ADDRESS INTO R2
 JSR PC, MFPIPS ;GO DO TEST USING MFPI INSTRUCTION LOCATED
 MFPI (R2)+ ;<HERE - READ FROM PHYSICAL 60000
 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 ERROR +23 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED

```

3899 032136 005726          TST      (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3900          ;THE FOLLOWING WILL TEST DSTM=3 MFPI.
3901 032140 004737 002464  JSR      PC,MFPITS      ;GO DO TEST USING MFPI INSTRUCTION LOCATED
3902 032144 006537 100000  MFPI     @#100000        ;<HERE - READ FROM PHYSICAL 60000
3903 032150 104023          ERROR    +23            ;WRONG DATA WAS FETCHED
3904 032152 005726          TST      (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3905          ;THE FOLLOWING WILL TEST DSTM=4 MFPI.
3906 032154 012702 100002  MOV      #100002,R2      ;LOAD VIRTUAL ADDRESS INTO R2
3907 032160 004737 002464  JSR      PC,MFPITS      ;GO DO TEST USING MFPI INSTRUCTION LOCATED
3908 032164 006542          MFPI     -(R2)           ;<HERE - READ FROM PHYSICAL 60000
3909 032166 000240          NOP                        ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3910 032170 104023          ERROR    +23            ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3911 032172 005726          TST      (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3912          ;THE FOLLOWING WILL TEST DSTM=5 MFPI.
3913 032174 012737 100000 001202 MOV      #100000,$TMP2    ;LOAD TEST LOC. VIRT. ADDR INTO LOC. $TMP2
3914 032202 012702 001204  MOV      #<$TMP2+2>,R2    ;LOAD ADDRESS OF $TMP2+2 INTO R2
3915 032206 004737 002464  JSR      PC,MFPITS      ;GO DO TEST USING MFPI INSTRUCTION LOCATED
3916 032212 006552          MFPI     @-(R2)         ;<HERE - READ FROM PHYSICAL 60000
3917 032214 000240          NOP                        ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
3918 032216 104023          ERROR    +23            ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
3919 032220 005726          TST      (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3920          ;THE FOLLOWING WILL TEST DSTM=6 MFPI.
3921 032222 005002          CLR      R2              ;MAKE REGISTER 2 A ZERO
3922 032224 004737 002464  JSR      PC,MFPITS      ;GO DO TEST USING MFPI INSTRUCTION LOCATED
3923 032230 006562 100000  MFPI     100000(R2)      ;<HERE - READ FROM PHYSICAL 60000
3924 032234 104023          ERROR    +23            ;WRONG DATA WAS FETCHED
3925 032236 005726          TST      (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3926          ;THE FOLLOWING WILL TEST DSTM=7 MFPI.
3927 032240 012737 100000 001202 MOV      #100000,$TMP2    ;LOAD TEST LOC. VIRT. ADDR. INTO $TMP2
3928 032246 012702 001202  MOV      #,$TMP2,R2      ;LOAD ADDRESS OF $TMP2 INTO R2
3929 032252 004737 002464  JSR      PC,MFPITS      ;GO DO TEST USING MFPI INSTRUCTION LOCATED
3930 032256 006572 000000  MFPI     @0(R2)         ;<HERE - READ FROM PHYSICAL 60000
3931 032262 104023          ERROR    +23            ;WRONG DATA WAS FETCHED
3932 032264 005726          TST      (SP)+          ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
3933 032266 012737 000340 177776 MOV      #000340,PSW     ;GO BACK TO KERNEL MODE, PREVIOUS KERNEL
3934 032274 112737 000006 177610 MOVB     #6,PDR4        ;MAKE PDR4 RESIDENT
3935 032302 000423          BR       TEST          ;BRANCH TO NEXT TEXT
    
```

```

MM TRAP HANDLER FOR ABOVE TEST
3937
3938 032304 012637 001260
3939 032310 012637 001262
3940 032314 013737 177572 001264
3941 032322 013737 177576 001270
3942 032330 042737 160000 177572
3943 032336 104026
3944
3945 032340 013746 001262
3946 032344 013746 001260
3947 032350 000002

.SBTTL MM TRAP HANDLER FOR ABOVE TEST
MFP1V4: MOV (KSP)+,TRAPPC ;SAVE PC & PS OF TRAP
MOV (KSP)+,TRAPPS
MOV SRO,WASSRO ;SAVE SRO FOR ERROR TYPEOUT
MOV SR2,WASSR2 ;SAVE SR2 FOR ERROR TYPEOUT
BIC #160000,SRO ;CLEAR ERROR BITS IN SRO
ERROR +26 ;TRIED TO READ NON-RESIDENT PAGE
;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
MOV TRAPPS,-(KSP) ;PUT PC & PS OF TRAP ON STACK
MOV TRAPPC,-(KSP)
RTI ;RETURN TO TEST

```

3962

.SBTTL TEST # 27 - MFPI (SUPERVISOR) WITH SUPER D-SPACE ENABLED

*TEST 27 MFPI (SUPERVISOR) WITH SUPER D-SPACE ENABLED

*

* THIS TEST USES THE 'MFPI' INSTRUCTION TO ENSURE THAT PREVIOUS MODE IS
 * Clocked CORRECTLY, AND THAT D-SPACE IS NOT ENABLED. THE TEST ITSELF
 * IS CARRIED OUT IN SUBROUTINE MFPIITS, WHICH USES THE MFPI INSTRUCTION
 * CODE FOLLOWING THE JSR CALL TO EXECUTE THE TEST. *IMPORTANT* - ALL
 * 'NOP'S' FOLLOWING MFPI'S OF MODES 1, 2, 4 AND 5 ARE TO BE LEFT ALONE.
 * THE SUBROUTINE LOADS THE TWO WORDS AFTER THE JSR CALL, PREPARING FOR
 * MODES 3, 6 AND 7.

* IF THE CORRECT MODE IS NOT ENABLED, A NON-RESIDENT ABORT WILL OCCUR AND
 * TRAP TO MFPIV5, WHERE THE ERRORS ARE REPORTED.

*

3963	032352	000004		
3964	032354	012702	077400	
3965	032360	010037	172330	
3966	032364	010037	172330	
3967	032370	010037	172330	
3968	032374	010037	172610	
3969	032400	012700	008514	
3970	032404	010037	060000	
3971	032410	052737	000002	172516
3972	032416	105037	172610	
3973				
3974	032422	012737	002516	001110
3975	032430	012737	010340	002520
3976	032436	012737	032562	002622
3977	032444	012702	100000	
3978	032450	004737	002464	
3979	032454	006512		
3980	032456	000240		
3981	032460	104037		
3982	032462	005726		
3983				
3984	032464	012702	100000	
3985	032470	004737	002464	
3986	032474	006522		
3987	032476	000240		
3988	032500	104037		
3989	032502	005726		
3990				
3991	032504	012702	100000	
3992	032510	004737	002464	
3993	032514	006537	100000	
3994	032520	104037		
3995	032522	005726		
3996				
3997	032524	012702	100002	
3998	032530	004737	002464	
3999	032534	006542		
4000	032536	000240		
4001	032540	104037		
4002	032542	005726		

```

TEST27: SCOPE
MOV #77400,R0 ;MAKE PAGE 4 IN ALL BUT SUPERVISOR 1
;AND KERNAL 1 NON-RESIDENT
MOV R0,KDPDR4 ;KERNAL D-SPACE PAGE 4
MOV R0,SDPDR4 ;SUPERVISOR D-SPACE PAGE 4
MOV R0,UDPDR4 ;USER D-SPACE PAGE 4
MOV R0,UIPDR4 ;USER I-SPACE PAGE 4
MOV #36514,R0 ;LOAD DATA PATTERN INTO R0
MOV R0,#60000 ;LOAD DATA PATTERN INTO PHYS. 60000
BIS #BIT1,MMR3 ;ENABLE SUPERVISOR D-SPACE
CLR# KIPDR4 ;MAKE KERNAL I-SPACE PAGE 4 NON-RESIDENT
;THE FOLLOWING WILL TEST DSTM=1 MFPI.
MOV #MFPILP,$LPERR ;SET LOOP ON ERROR POINTER TO MFPILP IN SUBROUTINE
MOV #010340,MFPIPS ;MAKE PREVIOUS MODE SUPERVISOR IN SUBRTN LOCATION
MOV #MFPIV5,MFPIVC ;MOVE THIS TEST'S MM TRAP HANDLER TO MFPIVC
MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
JSR PC,MFPITS ;GO DO TEST USING THE MFPI INSTRUCTION FOUND
MFPI (R2) ;<HERE - READ FROM PHYSICAL 60000
NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA FETCHED
TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
;THE FOLLOWING WILL TEST DSTM=2 MFPI.
MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
JSR PC,MFPITS ;GO DO TEST USING THE MFPI INSTRUCTION FOUND
MFPI (R2)+ ;<HERE - READ FROM PHYSICAL 100000
NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA FETCHED
TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
;THE FOLLOWING WILL TEST DSTM=3 MFPI.
MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
JSR PC,MFPITS ;GO DO TEST USING THE MFPI INSTRUCTION FOUND
MFPI #100000 ;<HERE - READ FROM PHYSICAL 100000
ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA FETCHED
TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
;THE FOLLOWING WILL TEST DSTM=4 MFPI.
MOV #100002,R2 ;LOAD VIRTUAL ADDRESS INTO R2
JSR PC,MFPITS ;GO DO TEST USING THE MFPI INSTRUCTION FOUND
MFPI -(R2) ;<HERE - READ FROM PHYSICAL 100000
NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA FETCHED
TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
  
```

CKKTBD0 11/44 MEM MGMT PRT B MACRO M1113 12-JAN-82 12:19 PAGE 89-1 D 10
TEST # 27 - MFPI (SUPERVISOR) WITH SUPER D-SPACE ENABLED

SEQUENCE 120

4003	032544	112737	000006	172310	MOVB	#6,KIPDR4	;MAKE KIPDR4 RESIDENT
4004	032552	042737	000002	172516	BIC	#3111,MMR3	;DISABLE SUPERVISOR D-SPACE
4005	032560	000426			BR	TST30	;BRANCH TO NEXT TEST


```
4007 .SBTTL MM TRAP HANDLER FOR ABOVE TEST
4008 032562 013737 177572 001264 MFPIV5: MOV MMR0,WASSR0 ;SAVE MMR0 FOR ERROR TYPEOUT
4009 032570 013737 177574 001266 MOV MMR1,WASSR1 ;SAVE MMR1 FOR ERROR TYPEOUT
4010 032576 013737 177576 001270 MOV MMR2,WASSR2 ;SAVE MMR2 FOR ERROR TYPEOUT
4011 032604 013737 172516 001272 MOV MMR3,WASSR3 ;SAVE MMR3 FOR ERROR TYPEOUT
4012 032612 012637 001260 MOV (KSP)+,TRAPPC ;SAVE PC & PS OF TRAP
4013 032616 012637 001262 MOV (KSP)+,TRAPPS
4014 032622 104040 ERROR +40 ;TRIED TO READ NON-RESIDENT PAGE
4015 ;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
4016 032624 013746 001262 MOV TRAPPS,-(KSP) ;PUT PC & PS OF TRAP ON STACK
4017 032630 013746 001260 MOV TRAPPC,-(KSP)
4018 032634 000002 RTI
```

4033

.SBTTL TEST # 30 - MTPI (SUPERVISOR) WITH SUPER. D-SPACE ENABLED

*TEST 30 MTPI (SUPERVISOR) WITH SUPER. D-SPACE ENABLED

*

* THIS TEST USES THE 'MTPI' INSTRUCTION TO ENSURE THAT THE PREVIOUS MODE IS CLOKED CORRECTLY, AND THAT D-SPACE IS NOT ENABLED. THE TEST ITSELF IS CARRIED OUT IN SUBROUTINE MTPITS, WHICH USES THE MTPI INSTRUCTION CODE FOLLOWING THE JSR CALL TO EXECUTE THE TEST. *IMPORTANT* - ALL 'NOP'S' FOLLOWING MTPI'S OF MODES 1,2, 4 AND 5 ARE TO BE LEFT ALONE. THE SUBROUTINE LOADS THE TWO WORDS AFTER THE JSR CALL, PREPARING FOR MODES 3, 6 AND 7.

* IF THE CORRECT MODE IS NOT ENABLED, A NON-RESIDENT ABORT WILL OCCUR AND AND TRAP TO MTPIV3, WHERE THE ERRORS ARE REPORTED.

4034	032636	000004			TST30: SCOPE	
4035	032640	052737	000002	172516	BIS #BIT1,MMR3 ;ENABLE SUPERVISOR D-SPACE	
4036	032646	012737	002654	001110	;THIS WILL TEST DSTM = 1 MTPI	
4037	032654	012737	010340	002655	MOV #MTPILP,\$LPERR ;SET LOOP ON ERROR POINTER TO MTPILP IN SUBROUTINE	
4038	032662	012737	033022	002744	MOV #010340,MTPIPM ;MAKE PREVIOUS MODE SUPERVISOR IN LOCATION IN SUBRTN	
4039	032670	012702	100000		MOV #MTPIV3,MTPIVC ;LOAD THIS TEST'S MM TRAP HANDLER TO MTPIVC	
4040	032674	012700	125252		MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2	
4041	032700	004737	002626		MOV #125252,R0 ;LOAD TEST DATA INTO R0	
4042	032704	006612			JSR PC,MTPITS ;GO DO THE TEST USING MTPI INSTRUCTION FOUND	
4043	032706	000240			MTPI (R2) ;LOAD TEST DATA INTO PHYSICAL 100000	
4044	032710	000000			NOP ;<HERE - NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD	
4045	032712	104035			.WORD 0 ;ADD 0 TO R2 AFTER MTPI INSTRUCTION EXECUTE	
4046	032714	005726			ERROR +35 ;RETURN IS HERE FOR ERROR - INCORRECT STORE	
4047					TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE	
4048	032716	012700	052525		;THIS WILL TEST DSTM = 3 MTPI	
4049	032722	004737	002626		MOV #52525,R0 ;LOAD TEST DATA INTO R0	
4050	032726	006637	100000		JSR PC,MTPITS ;GO DO THE TEST USING MTPI INSTRUCTION FOUND	
4051	032732	000000			MTPI @#100000 ;<HERE - LOAD TEST DATA INTO PHYSICAL 100000	
4052	032734	104035			.WORD 0 ;ADD 0 TO R2 AFTER MTPI INSTRUCTION EXECUTE	
4053	032736	005726			ERROR +35 ;RETURN IS HERE FOR ERROR - INCORRECT STORE	
4054					TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE	
4055	032740	012700	125252		;THIS WILL TEST DSTM = 4 MTPI	
4056	032744	012702	100002		MOV #125252,R0 ;LOAD TEST DATA INTO R0	
4057	032750	004737	002626		MOV #100002,R2 ;LOAD VIRTUAL ADDRESS INTO R2	
4058	032754	006642			JSR PC,MTPITS ;GO DO THE TEST USING MTPI INSTRUCTION FOUND	
4059	032756	000240			MTPI -(R2) ;<HERE - LOAD TEST DATA INTO PHYSICAL 100000	
4060	032760	000000			NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD	
4061	032762	104035			.WORD 0 ;ADD 0 TO R2 AFTER MTPI INSTRUCTION EXECUTE	
4062	032764	005726			ERROR +35 ;RETURN IS HERE FOR ERROR - INCORRECT STORE	
4063					TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE	
4064	032766	012700	052525		;THIS WILL TEST DSTM = 6 MTPI	
4065	032772	005002			MOV #52525,R0 ;LOAD TEST DATA INTO R0	
4066	032774	004737	002626		CLR R2 ;MAKE R2 ZERO	
4067	033000	006662	100000		JSR PC,MTPITS ;GO DO THE TEST USING MTPI INSTRUCTION FOUND	
4068	033004	100000			MTPI 100000(R2) ;<HERE - LOAD TEST DATA INTO PHYSICAL 100000	
4069	033006	104035			.WORD 100000 ;ADD 100000 TO R2 AFTER MTPI INSTRUCTION EXECUTE	
4070	033010	005726			ERROR +35 ;RETURN IS HERE FOR ERROR - INCORRECT STORE	
4071	033012	042737	000002	172516	TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE	
4072	033020	000410			BIC #BIT1,MMR3 ;DISABLE SUPERVISOR D-SPACE	
					BR TST31 ;:BRANCH TO NEXT TEST	

```
4074  
4075 033022 013700 177572  
4076 033026 013701 177574  
4077 033032 013702 177576  
4078 033036 104036  
4079  
4080 033040 000002
```

.SBTTL MM TRAP HANDLER FOR ABOVE TEST
MTPIV3: MOV MMRO,R0 ;SAVE MMRO FOR ERROR TYPEOUT
MOV MMR1,R1 ;SAVE MMR1 FOR ERROR TYPEOUT
MOV MMR2,R2 ;SAVE MMR2 FOR ERROR TYPEOUT
ERROR +36 ;TRIED TO LOAD A NON-RESIDENT PAGE 4
;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
RTI ;RETURN TO TEST

4081

.SBTTL TEST # 31 - MTPI (USER) WITH USER D-SPACE ENABLED

*TEST 31 MTPI (USER) WITH USER D-SPACE ENABLED

*

* THIS TEST USES THE 'MTPI' INSTRUCTION TO ENSURE THAT THE PREVIOUS MODE IS CLOKED CORRECTLY, AND THAT D-SPACE IS NOT ENABLED. THE TEST ITSELF IS CARRIED OUT IN SUBROUTINE MTPITS, WHICH USES THE MTPI INSTRUCTION CODE FOLLOWING THE JSR CALL TO EXECUTE THE TEST. *IMPORTANT* - ALL 'NOP'S' FOLLOWING MTPI'S OF MODES 1,2, 4 AND 5 ARE TO BE LEFT ALONE. THE SUBROUTINE LOADS THE TWO WORDS AFTER THE JSR CALL, PREPARING FOR MODES 3, 6 AND 7.

* IF THE CORRECT MODE IS NOT ENABLED, A NON-RESIDENT ABORT WILL OCCUR AND AND TRAP TO MTPIV4, WHERE THE ERRORS ARE REPORTED.

4082	033042	000004			TST31: SCOPE	
4082	033044	012737	077400	172210	MOV #77400,SIPDR4	;MAKE SIPDR4 NON-RESIDENT
4083	033052	012737	077406	177610	MOV #77406,UIPDR4	;MAKE UIPDR4 RESIDENT
4084	033060	052737	000001	172516	BIC #BIT0,MMR3	;ENABLE USER D-SPACE
4085						
4086	033066	012737	002654	001110	;THIS WILL TEST DSTM = 1 MTPI	
4087	033074	012737	030340	002656	MOV #MTPILP,\$LPERR	;SET LOOP ON ERROR POINTER TO MTPILP IN SUBROUTINE
4088	033102	012737	033242	002744	MOV #030340,MTPIPM	;MAKE LOCATION IN SUBROUTINE PREVIOUS MODE USER
4089	033110	012702	100000		MOV #MTPIV4,MTPIVC	;PUT THIS TEST'S MM TRAP HANDLER ADDRESS IN LOC MTPIVC
4090	033114	012700	125252		MOV #100000,R2	;LOAD VIRTUAL ADDRESS INTO R2
4091	033120	004737	002626		MOV #125252,R0	;LOAD TEST DATA INTO R0
4092	033124	006612			JSR PC,MTPITS	;GO DO TEST USING MTPI INSTRUCTION FOUND
4093	033126	000240			MTPI (R2)	;<HERE - LOAD TEST DATA INTO PHYSICAL 100000
4094	033130	000000			NOP	;MODE NOT 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
4095	033132	104035			.WORD 0	;ADD 0 TO R2 AFTER MTPI INSTRUCTION EXECUTE
4096	033134	005726			ERROR +35	;RETURN IS HERE FOR ERROR - INCORRECT STORE
4097					TST (SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
4098	033136	012700	052525		;THIS WILL TEST DSTM = 3 MTPI	
4099	033142	004737	002626		MOV #52525,R0	;LOAD TEST DATA INTO R0
4100	033146	006637	100000		JSR PC,MTPITS	;GO DO TEST USING MTPI INSTRUCTION FOUND
4101	033152	000000			MTPI @100000	;<HERE - LOAD TEST DATA INTO PHYSICAL 100000
4102	033154	104035			.WORD 0	;ADD 0 TO R2 AFTER MTPI INSTRUCTION EXECUTE
4103	033156	005726			ERROR +35	;RETURN IS HERE FOR ERROR - INCORRECT STORE
4104					TST (SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
4105	033160	012700	125252		;THIS WILL TEST DSTM = 4 MTPI	
4106	033164	012702	100002		MOV #125252,R0	;LOAD TEST DATA INTO R0
4107	033170	004737	002626		MOV #100002,R2	;LOAD VIRTUAL ADDRESS INTO R2
4108	033174	006642			JSR PC,MTPITS	;GO DO TEST USING MTPI INSTRUCTION FOUND
4109	033176	000240			MTPI -(R2)	;LOAD TEST DATA INTO PHYSICAL 100000
4110	033200	000000			NOP	;<HERE - MODE NOT 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
4111	033202	104035			.WORD 0	;ADD 0 TO R2 AFTER MTPI INSTRUCTION EXECUTE
4112	033204	005726			ERROR +35	;RETURN IS HERE FOR ERROR - INCORRECT STORE
4113					TST (SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
4114	033206	012700	052525		;THIS WILL TEST DSTM = 6 MTPI	
4115	033212	005002			MOV #52525,R0	;LOAD TEST DATA INTO R0
4116	033214	004737	002626		CLR R2	;MAKE R2 ZERO
4117	033220	006662	100000		JSR PC,MTPITS	;GO DO TEST USING MTPI INSTRUCTION FOUND
4118	033224	100000			MTPI 100000(R2)	;<HERE - LOAD TEST DATA INTO PHYSICAL 100000
4119	033226	104035			.WORD 100000	;ADD 100000 TO R2 AFTER MTPI INSTRUCTION EXECUTE
4120	033230	005726			ERROR +35	;RETURN IS HERE FOR ERROR - INCORRECT STORE
4121	033232	042737	000001	172516	TST (SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
					BIC #BIT0,MMR3	;DISABLE USER D-SPACE

4122 033240 000410

BR TST32

::BRANCH TO NEXT TEST

MM TRAP CATCHER FOR THE ABOVE TEST

```
4124  
4125 033242 013700 177572  
4126 033246 013701 177574  
4127 033252 013702 177576  
4128 033256 104036  
4129  
4130 033260 000002
```

.SBTTL MM TRAP CATCHER FOR THE ABOVE TEST
MTPIV4: MOV MMR0,R0 ;SAVE MMR0 FOR ERROR TYPEOUT
MOV MMR1,R1 ;SAVE MMR1 FOR ERROR TYPEOUT
MOV MMR2,R2 ;SAVE MMR2 FOR ERROR TYPEOUT
ERROR +36 ;TRIED TO LOAD A NON-RESIDENT PAGE 4
;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
RTI ;RETURN TO TEST

4139

```
.SBTTL TEST # 32 - MFPI (PREVIOUS=CURRENT=KERNEL)
:*****
:*TEST 32 MFPI (PREVIOUS=CURRENT=KERNEL)
:*
:* THIS TEST CHECKS THAT IF BOTH PREVIOUS AND CURRENT MODES ARE KERNEL,
:* AND THE SOURCE MODE IS 0, THE DESTINATION STACK IS NOT DECREMENTED
:* BEFORE ACCESS. 'MFPI KSP' SHOULD PUSH THE NON-DECREMENTED VALUE OF KSP
:* (1100) ONTO THE STACK (AT LOC. 1076).
:*
:*****
```

```

4140 033262 000004
4141 033264 112737 000006 172330
4142 033272 005037 177776
4143 033276 012700 001100
4144 033302 010006
4145 033304 006506
4146 033306 011601
4147 033310 020001
4148 033312 001401
4149 033314 104037
4150 033316 005740
4151 033320 020600
4152 033322 001401
4153 033324 104025
4154
4155 033326 012706 001100

TST32: SCOPE
1$:   MOVB #6,KDPDR4      ;MAKE KDPDR4 RESIDENT
      CLR  @#PSW         ;SET PREVIOUS = CURRENT = KERNEL
      MOV  #STACK,R0     ;SETUP VALUE FOR STACK POINTER
      MOV  R0,KSP        ;LOAD STACK POINTER
      MFPI KSP           ;THE VALUE 'STACK' SHOULD BE PUSHED BEFORE BEING DEC'D
      MOV  (KSP),R1      ;READ DATA WHICH WAS PUSHED
      CMP  R0,R1         ;WAS THE ORIGINAL VALUE OF THE STACK POINTER PUSHED?
      BEQ  2$            ;BRANCH IF YES
      ERROR +3;         ;MFPI FETCHED WRONG DATA
;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 2$' WITH 'BR 1$' = 000767
2$:   TST  -(R0)          ;SETUP EXPECTED STACK POINTER VALUE
      CMP  KSP,R0        ;WAS THE STACK POINTER DECREMENTED?
      BEQ  3$            ;BRANCH IF YES
      ERROR +25         ;STACK NOT PUSHED BY THE MFPI
;FOR TIGHTER SCOPE LOOP, REPLACE 'BEQ 3$' WITH 'BR 1$' = 000760
3$:   MOV  #STACK,KSP    ;RESTORE STACK POINTER.
```

4169

.SBTTL TEST # 33 - MFPD (SUPERVISOR) WITH SUPER D-SPACE ENABLED
 ;*****
 ;*TEST 33 MFPD (SUPERVISOR) WITH SUPER D-SPACE ENABLED
 ;*

THIS TEST CHECKS TO SEE THAT THE REFERENCE IS TO D-SPACE IF THE INSTRUCTION IS AN MFPD. THE TEST ITSELF IS CARRIED OUT IN SUBROUTINE MFPDTS, WHICH USES THE MFPD INSTRUCTION CODE FOLLOWING THE JSR CALL TO EXECUTE THE TEST. *IMPORTANT* - ALL 'NOP'S' FOLLOWING MFPD'S OF MODES 1, 2, 4 AND 5 ARE TO BE LEFT ALONE. THE SUBROUTINE LOADS THE TWO WORDS AFTER THE JSR CALL, PREPARING FOR MODES 3, 6 AND 7.

IF THE CORRECT MODE IS NOT ENABLED, A NON-RESIDENT ABORT WILL OCCUR AND TRAP TO MFPDV1, WHERE THE ERRORS ARE REPORTED.

033332 000004
 4170 033334 012737 000600 172270
 4171 033342 012700 077400
 4172
 4173 033346 010037 172330
 4174 033352 010037 172210
 4175 033356 010037 177630
 4176 033362 010037 177610
 4177 033366 012737 077406 172230
 4178 033374 012700 036514
 4179 033400 010037 100000
 4180 033404 052737 000002 172516
 4181 033412 105037 172310
 4182
 4183 033416 012737 002770 001110
 4184 033424 012737 010340 002772
 4185 033432 012737 033534 003040
 4186 033440 012702 100000
 4187 033444 004737 002746
 4188 033450 106512
 4189 033452 000240
 4190 033454 104037
 4191 033456 005726
 4192
 4193 033460 012702 100000
 4194 033464 004737 002746
 4195 033470 106522
 4196 033472 000240
 4197 033474 104037
 4198 033476 005726
 4199
 4200 033500 012702 100000
 4201 033504 004737 002746
 4202 033510 106537 100000
 4203 033514 104037
 4204 033516 005726
 4205
 4206 033520 012702 100002
 4207 033524 004737 002746
 4208 033530 106542
 4209 033532 000240
 4210 033534 104037

TST33: SCOPE
 20\$: MOV #600,SDPAR4 ;MAP SDPAR4 TO 12K
 MOV #77400,R0 ;MAKE PAGE 4 IN ALL BUT SUPERVISOR D
 ;AND KERNAL I NON-RESIDENT
 MOV R0,KDPDR4 ;KERNAL D-SPACE PAGE 4
 MOV R0,SIPDR4 ;SUPERVISOR I-SPACE PAGE 4
 MOV R0,UDPDR4 ;USER D-SPACE PAGE 4
 MOV R0,UIPDR4 ;USER I-SPACE PAGE 4
 MOV #77406,SDPDR4 ;MAKE SDPDR4 RESIDENT
 MOV #36514,R0 ;LOAD DATA PATTERN INTO R0
 MOV R0,@#100000 ;LOAD DATA PATTERN INTO PHYS. 100000
 BIS #BIT1,MMR3 ;ENABLE SUPERVISOR D-SPACE
 CLRB KIPDR4 ;MAKE KERNAL I-SPACE PAGE 4 NON-RESIDENT
 ;THE FOLLOWING WILL TEST DSTM=1 MFPD
 MOV #MFPDLP,\$LPERR ;SET LOOP ON ERROR POINTER TO MFPDLP IN SUBROUTINE
 MOV #010340,MFPDPS ;MOVE PREVIOUS MODE=SUPERVISOR TO LOCATION IN SUBRTN
 MOV #MFPDV1,MFPDVC ;PUT ADDRESS OF THIS TEST'S MM TRAP CATCHER IN MFPDVC
 MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
 JSR PC,MFPDTS ;GO DO TEST USING THE MFPD INSTRUCTION LOCATED
 MFPD (R2) ;<HERE - READ FROM PHYSICAL 100000
 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
 ;THE FOLLOWING WILL TEST DSTM=2 MFPD
 MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
 JSR PC,MFPDTS ;GO DO TEST USING THE MFPD INSTRUCTION LOCATED
 MFPD (R2)+ ;<HERE - READ FROM PHYSICAL 100000
 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
 ;THE FOLLOWING WILL TEST DSTM=3 MFPD
 MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
 JSR PC,MFPDTS ;GO DO TEST USING THE MFPD INSTRUCTION LOCATED
 MFPD @#100000 ;<HERE - READ FROM PHYSICAL 100000
 ERROR +37 ;WRONG DATA WAS FETCHED
 TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
 ;THE FOLLOWING WILL TEST DSTM=4 MFPD
 MOV #100002,R2 ;LOAD VIRTUAL ADDRESS INTO R2
 JSR PC,MFPDTS ;GO DO TEST USING THE MFPD INSTRUCTION LOCATED
 MFPD -(R2) ;<HERE - READ FROM PHYSICAL 100000
 NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
 ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED

4211	033536	005726		TST	(SP)+	;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
4212	033540	042737	000002 172516	BIC	#B1Y1,MMR3	;DISABLE SUPERVISOR D-SPACE
4213	033546	012700	077406	MOV	#77406,R0	;SET UP R0 FOR 4K RESIDENT R/W
4214	033552	010037	172310	MOV	R0,KIPDR4	;MAKE KIPAR4 RESIDENT
4215	033556	010037	177630	MOV	R0,UDPDR4	;MAKE UDPDR4 RESIDENT
4216	033562	000423		BR	TST34	;BRANCH TO NEXT TEST

```
4218 .SBTTL MM TRAP HANDLER FOR THE ABOVE TEST
4219 033564 013737 177572 001264 MFPDV1: MOV MMR0,WASSR0 ;SAVE MMR0 FOR ERROR TYPEOUT
4220 033572 013737 177574 001266 MOV MMR1,WASSR1 ;SAVE MMR1 FOR ERROR TYPEOUT
4221 033600 013737 177576 001270 MOV MMR2,WASSR2 ;SAVE MMR2 FOR ERROR TYPEOUT
4222 033606 012637 001260 MOV (KSP)+,TRAPPC ;SAVE PC & PS OF TRAP
4223 033612 012637 001262 MOV (KSP)+,TRAPPS
4224 033616 104040 ERROR +40 ;TRIED TO READ NON-RESIDNT PAGE
4225 ;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
4226 033620 013746 001262 MOV TRAPPS,-(KSP) ;PUT PC & PS OF TRAP ON STACK
4227 033624 013746 001260 MOV TRAPPC,-(KSP)
4228 033630 000002 RTI ;RETURN TO TEST
```

4240

.SBTTL TEST # 34 - MFPI (USER/PREV USER) WITH USER D-SPACE ENABLED

 *TEST 34 MFPI (USER/PREV USER) WITH USER D-SPACE ENABLED

*
 * THIS TEST CHECKS THAT IF THE INSTRUCTION IS AN MFPI AND BOTH THE
 * PRESENT AND PREVIOUS MODES ARE USER, THEN D-SPACE IS USED IF IT IS
 * ENABLED. IN THIS WAY AN OPERATING SYSTEM CAN MAKE PROPRIETARY CODE
 * "EXECUTE ONLY" FOR THE USER.

*
 * IF THE CORRECT MODE IS NOT ENABLED, A NON-RESIDENT ABORT WILL OCCUR AND
 * TRAP TO MFPIV6, WHERE THE ERRORS ARE REPORTED.
 *

4241	033632	000004		
4242	033634	012737	000600	177670
4243	033642	012700	036514	
4244	033646	010037	100000	
4245	033652	052737	000001	172516
4246	033660	105037	172230	
4247	033664	105037	172310	
4248	033670	012737	002516	001110
4249	033676	012737	170340	002520
4250	033704	012737	034036	002622
4251	033712	012702	100000	
4252	033716	004737	002464	
4253	033722	006512		
4254	033724	000240		
4255	033726	104037		
4256	033730	005726		
4257				
4258	033732	012702	100000	
4259	033736	004737	002464	
4260	033742	006522		
4261	033744	000240		
4262	033746	104037		
4263	033750	005726		
4264				
4265	033752	012702	100000	
4266	033756	004737	002464	
4267	033762	006537	100000	
4268	033766	104037		
4269	033770	005726		
4270				
4271	033772	012702	100002	
4272	033776	004737	002464	
4273	034002	006542		
4274	034004	000240		
4275	034006	104037		
4276	034010	005726		
4277	034012	042737	000001	172516
4278	034020	012737	000340	177776
4279	034026	112737	000006	172310
4280	034034	000423		

```

TST34: SCOPE
MOV #600,UDPAR4 ;MAP UDPAR4 TO 12K
MOV #36514,R0 ;LOAD DATA PATTERN INTO R0
MOV R0,@#100000 ;LOAD DATA PATTERN INTO PHYS. 100000
BIS #BIT0,MMR3 ;ENABLE USER D-SPACE
CLRB SDPDR4 ;MAKE SDPDR4 NON-RESIDENT
CLRB KIPDR4 ;MAKE KERNAL I-SPACE PAGE 4 NON-RESIDENT
;THE FOLLOWING WILL TEST DSTM=1 MFPI
MOV #MFPILP,$LPERR ;SET LOOP ON ERROR POINTER TO MFPILP IN SUBROUTINE
MOV #170340,MFPIPS ;SET PREVIOUS AND CURRENT MODE TO LOCATION IN SUBRTN
MOV #MFPIV6,MFPIVC ;PUT ADDRESS OF THIS TEST'S TRAP CATCHER IN MFPIVC
MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
JSR PC,MFPITS ;GO DO TEST USING THE MFPI INSTRUCTION LOCATED
MFPI (R2) ;<HERE - READ FROM PHYSICAL 100000
NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
;THE FOLLOWING WILL TEST DSTM=2 MFPI
MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
JSR PC,MFPITS ;GO DO TEST USING THE MFPI INSTRUCTION LOCATED
MFPI (R2)+ ;<HERE - READ FROM PHYSICAL 100000
NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
;THE FOLLOWING WILL TEST DSTM=3 MFPI
MOV #100000,R2 ;LOAD VIRTUAL ADDRESS INTO R2
JSR PC,MFPITS ;GO DO TEST USING THE MFPI INSTRUCTION LOCATED
MFPI @#100000 ;<HERE - READ FROM PHYSICAL 100000
ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
;THE FOLLOWING WILL TEST DSTM=4 MFPI
MOV #100002,R2 ;LOAD VIRTUAL ADDRESS INTO R2
JSR PC,MFPITS ;GO DO TEST USING THE MFPI INSTRUCTION LOCATED
MFPI -(R2) ;<HERE - READ FROM PHYSICAL 100000
NOP ;NOT MODE 3, 6 OR 7 - NEEDED FOR SUBROUTINE LOAD
ERROR +37 ;RETURN IS HERE FOR ERROR - WRONG DATA WAS FETCHED
TST (SP)+ ;POP EXCESS RETURN OFF STACK - LOOPING NOT DONE
BIC #BIT0,MMR3 ;DISABLE USER D-SPACE
MOV #340,PSW ;MAKE PRESENT MODE KERNAL
MOV8 #6,KIPDR4 ;MAKE KIPDR4 RESIDENT
BR TST35 ;:BRANCH TO NEXT TEST
    
```

```
4282          .SBTTL  MM TRAP CATCHER FOR ABOVE TEST
4283 034036 013737 177572 001264 MFPIV6: MOV  MMRO,WASSRO ;SAVE MMRO FOR ERROR TYPEOUT
4284 034044 013737 177574 001266      MOV  MMR1,WASSR1 ;SAVE MMR1 FOR ERROR TYPEOUT
4285 034052 013737 177576 001270      MOV  MMR2,WASSR2 ;SAVE MMR2 FOR ERROR TYPEOUT
4286 034060 012637 001260      MOV  (KSP)+,TRAPPC ;SAVE PC & PS OF TRAP
4287 034064 012637 001262      MOV  (KSP)+,TRAPPS
4288 034070 104040      ERROR +40 ;TRIED TO READ NON-RESIDENT PAGE
4289          ;FOR TIGHTER SCOPE LOOP, REPLACE 1ST MOV INSTRUCTION WITH AN 'RTI' = 000002
4290 034072 013746 001262      MOV  TRAPPS,-(KSP) ;PUT PC & PS OF TRAP ON STACK
4291 034076 013746 001260      MOV  TRAPPC,-(KSP)
4292 034102 000002      RTI ;RETURN TO TEST
```

4300

```
.SBTTL TEST # 35 - TEST CSM INSTRUCTION - ILLEGAL KERNEL MODE
;*****
;TEST 35 TEST CSM INSTRUCTION - ILLEGAL KERNEL MODE
;*****
; THIS TEST CHECKS OUT THE CSM (CALL SUPERVISOR MODE)
; INSTRUCTION TO MAKE SURE CSM IS ILLEGAL WHEN DISABLED
; IN KERNEL MODE.
;*****
;*****
```

4301	034104	000004				TST35: SCOPE		
4302	034106	005037	172516			CLR MMR3		;MAKE SURE MMR3 IS CLEARED, DISABLING CSM
4303	034112	005037	177776			CLR PSW		;MAKE SURE PSW PREVIOUS=CURRENT=KERNEL
4304	034116	013737	000010	001204		MOV RESVEC,\$TMP3		;SAVE TRAP TO 10 VECTOR
4305	034124	012737	034140	000010		MOV #1\$,RESVEC		;TRAPS TO 10 GO TO 1\$
4306	034132	005237	177572			INC MMR0		;TURN ON MEMORY MANAGEMENT
4307	034136	007000				CSMO		;CSM RO
4308	034140	013737	001204	000010	1\$:	MOV \$TMP3,RESVEC		;RESTORE TRAPS TO 10 VECTOR
4309	034146	005037	177572			CLR MMR0		;TURN OFF MEMORY MANAGEMENT
4310	034152	005037	177776			CLR PSW		;RETURN TO KERNEL MODE
4311	034156	022726	034140			CMP #1\$, (SP)+		;SEE IF IT WAS AN EXPECTED TRAP
4312	034162	001403				BEQ 2\$;BRANCH TO RESTORE STACK IF IT WAS
4313	034164	022626				CMP (SP)+, (SP)+		;CORRECT STACK
4314	034166	104041				ERROR +41		;ILLEGAL CSM DID NOT TRAP TO 10
4315	034170	000401				BR TST36		;BRANCH AROUND STACK CORRECTION
4315	034172	005726			2\$:	TST (SP)+		;CORRECT STACK

4323

```
.SBTTL TEST # 36 - TEST CSM INSTRUCTION - ILLEGAL SUPERVISOR MODE
:*****
:*TEST 36 TEST CSM INSTRUCTION - ILLEGAL SUPERVISOR MODE
:*****
:* THIS TEST CHECKS OUT THE CSM (CALL SUPERVISOR MODE)
:* INSTRUCTION TO MAKE SURE CSM IS ILLEGAL WHEN DISABLED
:* IN SUPERVISOR MODE.
:*****
:*****
```

4324	034174	000004				TST36: SCOPE		
4325	034176	005037	172516			CLR	MMR3	:MAKE SURE MMR3 IS CLEARED, DISABLING CSM
4326	034202	052737	040000	177776		BIS	#40000,PSW	:GO TO SUPERVISOR MODE
4327	034210	013737	000010	001204		MOV	RESVEC,\$TMP3	:SAVE TRAPS TO 10 VECTOR
4328	034216	012737	034232	000010		MOV	#1\$,RESVEC	:TRAPS TO 10 GO TO 1\$
4329	034224	005237	177572			INC	MMR0	:TURN ON MEMORY MANAGEMENT
4330	034230	007000				CSMO		:CSM R0
4331	034232	013737	001204	000010	1\$:	MOV	\$TMP3,RESVEC	:RESTORE TRAPS TO 10 VECTOR
4332	034240	005037	177572			CLR	MMR0	:TURN OFF MEMORY MANAGEMENT
4333	034244	005037	177776			CLR	PSW	:GO BACK TO KERNEL MODE
4334	034250	022726	034232			CMP	#1\$,(SP)+	:SEE IF IT WAS AN EXPECTED TRAP
4335	034254	001403				BEQ	2\$:BRANCH AROUND ERROR CALL IF IT WAS
4336	034256	022626				CMP	(SP)+,(SP)+	:CORRECT STACK
4337	034260	104041				ERROR	+41	:ILLEGAL CSM DID NOT TRAP TO 10
4338	034262	000401				BR	TST37	:BRANCH AROUND STACK CORRECTION
	034264	005726			2\$:	TST	(SP)+	:CORRECT STACK

4346

.SBTTL TEST # 37 - TEST CSM INSTRUCTION - ILLEGAL USER MODE
 :*****
 :*TEST 37 TEST CSM INSTRUCTION - ILLEGAL USER MODE
 :*****
 :* THIS TEST CHECKS OUT THE CSM (CALL SUPERVISOR MODE)
 :* INSTRUCTION TO MAKE SURE CSM IS ILLEGAL WHEN DISABLED
 :* IN USER MODE.
 :*****
 :*****

4347	034266	000004				TST37: SCOPE		
4348	034270	005037	172516			CLR MMR3		;MAKE SURE MMR3 IS CLEARED, DISABLING CSM
4349	034274	052737	140000	177776		BIS #140000,PSW		;GO TO USER MODE
4350	034302	013737	000010	001204		MOV RESVEC,\$TMP3		;SAVE TRAPS TO 10 VECTOR
4351	034310	012737	034324	000010		MOV #1\$,RESVEC		;TRAPS TO 10 GO TO 1\$
4352	034316	005237	177572			INC MMRO		;TURN ON MEMORY MANAGEMENT
4353	034322	007000				CSMO		;CSM R0
4354	034324	013737	001204	000010	1\$:	MOV \$TMP3,RESVEC		;RESTORE TRAPS TO 10 VECTOR
4355	034332	005037	177572			CLR MMRO		;TURN OFF MEMORY MANAGEMENT
4356	034336	005037	177776			CLR PSW		;RETURN TO KERNEL MODE
4357	034342	022726	034324			CMP #1\$, (SP)+		;SEE IF IT WAS AN EXPECTED TRAP
4358	034346	001403				BEQ 2\$;BRANCH AROUND ERROR CALL IF IT WAS
4359	034350	022626				CMP (SP)+, (SP)+		;CORRECT STACK
4360	034352	104041				ERROR +41		;ILLEGAL CSM DID NOT TRAP TO 10
4361	034354	000401				BR TST40		;BRANCH AROUND STACK CORRECTION
4361	034356	005726			2\$:	TST (SP)+		;CORRECT STACK

4369

```
.SBTTL TEST # 40 - TEST CSM INSTRUCTION - ILLEGAL KERNEL MODE
:*****
:*TEST 40 TEST CSM INSTRUCTION - ILLEGAL KERNEL MODE
:*****
:* THIS TEST CHECKS OUT THE CSM (CALL SUPERVISOR MODE)
:* INSTRUCTION TO MAKE SURE CSM IS ILLEGAL WHEN ENABLED
:* IN KERNEL MODE.
:*****
:*****
```

4370	034360	000004				TST40: SCOPE		
4371	034362	052737	000010	172516		BIS #BIT3,MMR3	;TURN ON CSM ENABLE	
4372	034370	005037	177776			CLR PSW	;MAKE SURE PSW PREVIOUS=CURRENT=KERNEL	
4373	034374	013737	000010	001204		MOV RESVEC,\$TMP3	;SAVE TRAPS TO 10 VECTOR	
4374	034402	012737	034416	000010		MOV #1\$,RESVEC	;TRAPS TO 10 GO TO 1\$	
4375	034410	005237	177572			INC MMRO	;TURN ON MEMORY MANAGEMENT	
4376	034414	007000				CSMO	;CSM R0	
4377	034416	013737	001204	000010	1\$:	MOV \$TMP3,RESVEC	;RESTORE TRAPS TO 10 VECTOR	
4378	034424	005037	177572			CLR MMRO	;TURN OFF MEMORY MANAGEMENT	
4379	034430	022726	034416			CMP #1\$,(SP)+	;SEE IF IT WAS AN EXPECTED TRAP	
4380	034434	001403				BEQ 2\$;BRANCH AROUND ERROR CALL IF IT WAS	
4381	034436	022626				CMP (SP)+,(SP)+	;CORRECT STACK	
4382	034440	104041				BR +31	;ILLEGAL CSM DID NOT TRAP TO 10	
4383	034442	000401				BR TST41	;BRANCH AROUND STACK CORRECTION	
4384	034444	005726			2\$:	TST (SP)+	;CORRECT STACK	

4392

```

SUBTTL TEST # 41 - TEST CSM INSTRUCTION - I-SPACE SUPERVISOR MODE
:*****
:TEST 41 TEST CSM INSTRUCTION - I-SPACE SUPERVISOR MODE
:*****
: THIS TEST CHECKS OUT THE CSM (CALL SUPERVISOR MODE)
: INSTRUCTION TO MAKE SURE CSM IS LEGAL WHEN ENABLED
: IN SUPERVISOR MODE, AND FOR A CHECK OF THE PARAMETERS
: PUSHED ON THE STACK.
:*****
:*****

```

```

034446 000004
4393 034450 012700 052525
4394 034454 004737 002060
4395 034460 012737 000600 172260
4396 034466 012737 000032 172516
4397 034474 012737 040000 035320
4398 034502 012706 000700
4399 034506 004737 034530
4400 034512 000000
4401 034514 005037 177776
4402 034520 005037 172260
4403 034524 000137 035344

```

```

TST41: SCOPE
MOV #52525,R0 ;SET UP R0
JSR PC,APRINIT ;RESET ALL MEMORY MANAGEMENT REGISTERS
MOV #600,SDPAR0 ;IF WE GO TO D-SPACE, FLAG AS AN ERROR
MOV #32,MMR3 ;ENABLE CSM, 22-BIT, SUPERVISOR SPACE
MOV #40000,PCSMPS ;SET PRECSM PS IN LOCATION
MOV #SUPSTK,SSP ;SETUP SUPERVISOR STACK POINTER
JSR PC,CSMSUB ;TEST CSM INSTRUCTION SUBROUTINE
WORD 0 ; 0 ADDED TO ADDRESS OF TPAP VECTOR
CLR PSW ;RETURN TO KERNEL MODE
CLR SDPAR0 ;RESET SDPAR0 TO FIRST 4K
JMP TST42 ;JUMP OVER THE CSM SUBROUTINE

```

4404						.SBTTL	SUBROUTINE TO CHECK OPERATION OF AN EXECUTABLE CSM INST'N
4405	034530	012605				CSMSUB: MOV	(SP)+,R5 ;PUT RETURN ADDRESS INTO R5
4406	034532	012737	000340	177776		MOV	#340,PSW ;KERNEL MODE
4407	034540	010037	035324			MOV	R0,PCSMRO ;STORE PRECSM R0
4408	034544	012504				MOV	(R5)+,R4 ;MOVE OFFSET TO R4
4409	034546	010537	035342			MOV	R5,RETURN ;SET RETURN LOCATION ADDRESS TO LOCATION 'RETURN'
4410	034552	012737	034704	035316		MOV	#5\$,DOWELP ;MOVE ADDRESS FOR INITIAL TESTING TO DOWELP
4411	034560	012764	034622	000010		MOV	#2\$,RESVEC(R4) ;SETUP TRAPS TO 10 VECTOR TO 2\$
4412	034566	012737	034614	001110		MOV	#1\$,LPERR ;SETUP LOOP ON ERROR TO 1\$
4413	034574	053737	035320	177776		BIS	PCSMPS,PSW ;PUT USER/SUPERVISOR IN THE PSW
4414	034602	010637	07772			MOV	SP,PCSMSP ;MOVE STACK POINTER VALUE TO PCSMSP
4415	034606	162737	000006	035322		SUB	#6,PCSMSP ;SUBTRACT 6 FROM PCSMSP - EXPECT 3 PUSHES ON STACK
4416	034614	005237	177572		1\$:	INC	MMR0 ;TURN ON MEMORY MANAGEMENT
4417	034620	007000				CSMU	
4418	034622	012737	000012	000010	2\$:	MOV	#RESVEC+2,RESVEC ;RESTORE TRAPS TO 10 VECTOR
4419	034630	022716	034622			CMP	#2\$, (SP) ;SEE IF CSM ABORTED
4420	034634	001011				BNE	4\$;BRANCH IF IT DIDN'T TO EXECUTE TEST
4421	034636	012737	000340	177776	3\$:	MOV	#340,PSW ;GO BACK TO KERNEL PRIORITY 7
4422	034644	005037	177572			CLR	MMR0 ;TURN OFF MEMORY MANAGEMENT
4423	034650	022626				CMP	(SP)+,(SP)+ ;CORRECT STACK
4424	034652	104051				ERROR	+51 ;CSM ABORTED WHEN IT SHOULD NOT HAVE
4425	034654	000177	000462			JMP	@RETURN ;JUMP TO ADDRESS PRESTORED IN LOCATION RETURN
4426	034660	010637	035336		4\$:	MOV	SSP,ACSMSP ;SAVE AFTER CSM STACK POINTER
4427	034664	012637	035326			MOV	(SP)+,CSM1ST ;POP 1ST WORD OFF STACK
4428	034670	012637	035330			MOV	(SP)+,CSM2ND ;POP 2ND WORD OFF STACK
4429	034674	012637	035332			MOV	(SP)+,CSM3RD ;POP 3RD WORD OFF STACK
4430	034700	000177	000412			JMP	@DOWELP ;JUMP TO LOCATION IN DOWELP
4431	034704	013703	035320		5\$:	MOV	PCSMPS,R3 ;PUT PRE-CSM PSW IN R3
4432	034710	042703	037777			BIC	#37777,R3 ;WIPE OUT ALL BITS EXCEPT <15:14> ,
4433	034714	000241				CLC	;CLEAR THE CARRY BIT
4434	034716	006003				ROR	R3 ;MOVE <15:14> OVER TO
4435	034720	006003				ROR	R3 ;THE RIGHT TO <13:12> ,
4436	034722	052703	040000			BIS	#BIT14,R3 ;AND SET <14> , PUTTING CURRENT=SUPERVISOR IN EXPECTED LOC
4437	034726	013737	177776	035334		MOV	PSW,ACSMPS ;MOVE CURRENT PSW TO ACSMPS
4438	034734	042737	007777	035334		BIC	#7777,ACSMPS ;WIPE OUT ALL BITS BUT <15:12>
4439	034742	020337	035334			CMP	R3,ACSMPS ;SEE IF PSW STATUS BITS MATCHES CALCULATED VALUE
4440	034746	001403				BEQ	6\$;BRANCH AROUND ERROR CALL IF OK
4441	034750	005037	177572			CLR	MMR0 ;TURN OFF MEMORY MANAGEMENT
4442	034754	104042				ERROR	+42 ;NOT SUPERVISOR MODE
4443	034756	052737	000001	177572	6\$:	BIS	#BIT00,MMR0 ;MAKE SURE MEMORY MANAGEMENT IS ON
4444	034764	013737	177776	035334		MOV	PSW,ACSMPS ;MOVE CURRENT PSW TO ACSMPS
4445	034772	042737	037777	035334		BIC	#37777,ACSMPS ;CLEAR ALL BITS EXCEPT <15:14>
4446	035000	023737	035340	035334		CMP	SUPERM,ACSMPS ;SEE IF SUPERVISOR MODE
4447	035006	001414				BEQ	8\$;BRANCH AROUND ERROR CALL IF OK
4448	035010	012737	034756	035316		MOV	#6\$,DOWELP ;SET ADDRESS FOR THIS CHECK TO DOWELP
4449	035016	005037	177572			CLR	MMR0 ;TURN OFF MEMORY MANAGEMENT
4450	035022	013703	035334			MOV	ACSMPS,R3 ;MOVE RECEIVED CONTENTS TO R3
4451	035026	052703	040000			BIS	#BIT14,R3 ;SET BIT 14 AND
4452	035032	042703	100000			BIC	#BIT15,R3 ;CLEAR BIT 15
4453	035036	104042				ERROR	+42 ;NOT SUPERVISOR MODE
4454	035040	052737	000001	177572	8\$:	BIS	#BIT00,MMR0 ;MAKE SURE MEMORY MANAGEMENT IS ON
4455	035046	013704	177776			MOV	PSW,R4 ;MOVE CURRENT PSW TO R4
4456	035052	042704	147777			BIC	#147777,R4 ;CLEAR ALL BITS EXCEPT <13:12>
4457	035056	006304				ASL	R4 ;MOVE <13:12> BITS IN R4
4458	035060	006304				ASL	R4 ;TO THE <15:14> POSITION
4459	035062	013702	035320			MOV	PCSMPS,R2 ;MOVE PRECSM PSW TO R2
4460	035066	042702	037777			BIC	#37777,R2 ;CLEAR BITS 13 TO 0

4461	035072	020204				CMP	R2,R4		:SEE IF PREVIOUS MODE IS OK
4462	035074	001406				BEQ	10\$:BRANCH AROUND ERROR CALL IF OK
4463	035076	012737	035040	035316		MOV	#8\$,DOWELP		:SET ADDRESS FOR THIS CHECK TO DOWELP
4464	035104	005037	177572			CLR	MMRO		:TURN OFF MEMORY MANAGEMENT
4465	035110	104043				ERROR	+43		:WRONG PREVIOUS MODE
4466	035112	052737	000001	177572	10\$:	BIS	#BIT00,MMRO		:MAKE SURE MEMORY MANAGEMENT IS ON
4467	035120	023737	035336	035322		CMP	ACSMSP,PCSMSP		:SEE IF STACK POINTER VALUE WAS TRANSFERED
4468	035126	001406				BEQ	12\$:BRANCH AROUND ERROR CALL IF SO
4469	035130	012737	035112	035316		MOV	#10\$,DOWELP		:SET ADDRESS FOR THIS CHECK TO DOWELP
4470	035136	005037	177572			CLR	MMRO		:TURN OFF MEMORY MANAGEMENT
4471	035142	104044				ERROR	+44		:INCORRECT STACK
4472	035144	052737	000001	177572	12\$:	BIS	#BIT00,MMRO		:MAKE SURE MEMORY MANAGEMENT IS ON
4473	035152	020037	035326			CMP	RO,CSM1ST		:COMPARE RO WITH THE ARGUMENT THAT WAS ON STACK
4474	035156	001406				BEQ	14\$:IF EQUAL, BRANCH AROUND ERROR
4475	035160	012737	035144	035316		MOV	#12\$,DOWELP		:SET ADDRESS FOR THIS CHECK TO DOWELP
4476	035166	005037	177572			CLR	MMRO		:TURN OFF MEMORY MANAGEMENT
4477	035172	104045				ERROR	+45		:INCORRECT ARGUMENT
4478	035174	052737	000001	177572	14\$:	BIS	#BIT00,MMRO		:MAKE SURE MEMORY MANAGEMENT IS ON
4479	035202	022737	034622	035330		CMP	#2\$,CSM2ND		:SEE IF UPDATED PC WAS CORRECT
4480	035210	001411				BEQ	16\$:BRANCH AROUND ERROR IF OK
4481	035212	012737	035174	035316		MOV	#14\$,DOWELP		:SET ADDRESS FOR THIS CHECK TO DOWELP
4482	035220	005037	177572			CLR	MMRO		:TURN OFF MEMORY MANAGEMENT
4483	035224	012737	034622	001176		MOV	#2\$,STMPO		:MOVE EXPECTED UPDATED PC TO STMPO
4484	035232	104046				ERROR	+46		:WRONG PC
4485	035234	052737	000001	177572	16\$:	BIS	#BIT00,MMRO		:MAKE SURE MEMORY MANAGEMENT IS ON
4486	035242	032737	000017	035332		BIT	#17,CSM3RD		:SEE IF PSW <3:0> WERE CLEARED
4487	035250	001406				BEQ	18\$:BRANCH AROUND ERROR CALL IF OK
4488	035252	012737	035234	035316		MOV	#16\$,DOWELP		:SET ADDRESS FOR THIS CHECK TO DOWELP
4489	035260	005037	177572			CLR	MMRO		:TURN OFF MEMORY MANAGEMENT
4490	035264	104047				ERROR	+47		:BITS <3:0> SET IN PSW
4491	035266	022737	034704	035316	18\$:	CMP	#5\$,DOWELP		:SEE IF ANY ERRORS THIS TIME AROUND
4492	035274	001406				BEQ	19\$:BRANCH TO NORMAL RETURN JUMP IF NOT
4493	035276	032777	001000	143634		BIT	#BIT09,PSWR		:SEE IF LOOP ON ERROR IS SET
4494	035304	001402				BEQ	19\$:BRANCH IF SO
4495	035306	000137	034614			JMP	1\$:JUMP BACK FOR LOOP ON ERROR
4496	035312	000177	000024		19\$:	JMP	@RETURN		:JUMP BACK TO RETURN ADDRESS IN LOCATION RETURN
4497									
4498	035316	000000				DOWELP:	.WORD	0	:LOCATION HOLDING ADDRESS TO SHORTEN POSSIBLE ERROR LOOP
4499	035320	000000				PCSMPS:	.WORD	0	:LOCATION TO STORE PRE-CSM PSW
4500	035322	000000				PCSMSP:	.WORD	0	:LOCATION TO STORE PRE-CSM STACK POINTER
4501	035324	000000				PCSMRO:	.WORD	0	:LOCATION TO STORE PRE-CSM RO VALUE
4502	035326	000000				CSM1ST:	.WORD	0	:LOCATION TO STORE 1ST WORD POPPED AFTER CSM EXECUTION
4503	035330	000000				CSM2ND:	.WORD	0	:LOCATION TO STORE 2ND WORD POPPED AFTER CSM EXECUTION
4504	035332	000000				CSM3RD:	.WORD	0	:LOCATION TO STORE 3RD WORD POPPED AFTER CSM EXECUTION
4505	035334	000000				ACSMPS:	.WORD	0	:LOCATION TO STORE POST-CSM PSW
4506	035336	000000				ACSMSP:	.WORD	0	:LOCATION TO STORE POST-CSM STACK POINTER
4507	035340	040000				SUPERM:	.WORD	40000	:LOCATION TO STORE VALUE OF PRESENT MODE=SUPERVISOR
4508	035342	000000				RETURN:	.WORD	0	:LOCATION TO STORE RETURN ADDRESS OF THE CSMSUB

4517

```
.SBTTL TEST # 42 - TEST CSM INSTRUCTION - D-SPACE SUPERVISOR MODE
:*****
:*TEST 42 TEST CSM INSTRUCTION - D-SPACE SUPERVISOR MODE
:*****
:* THIS TEST CHECKS OUT THE CSM (CALL SUPERVISOR MODE)
:* INSTRUCTION TO MAKE SURE CSM IS LEGAL WHEN ENABLED
:* IN SUPERVISOR MODE, AND FOR A CHECK OF THE PARAMETERS
:* PUSHED ON THE STACK.
:*****
:*****
```

4518	035344	000004		
4519	035346	012737	000032	172516
4520	035354	012737	040000	035320
4521	035362	052737	040000	177776
4522	035370	012737	000600	172240
4523	035376	012706	000700	
4524	035402	004737	034530	
4525	035406	060000		
4526	035410	005037	177776	
	035414	005037	172240	

```
TST42: SCOPE
MOV #32,MMR3 ;ENABLE 22-BIT, CSM, SUPERVISOR
MOV #40000,PCSMPS ;LOAD PRECSM LOCATION
BIS #BIT14,PSW ;GO TO SUPERVISOR MODE
MOV #600,SIPARO ;IF WE GO TO I-SPACE, FLAG IT AS AN ERROR
MOV #SUPSTK,SSP ;SETUP SUPERVISOR STACK POINTER
JSR PC,CSMSUB ;TEST CSM INSTRUCTION SUBROUTINE
.WORD 60000 ; 60000 ADDED TO ADDRESS OF TRAP VECTOR
CLR PSW ;RETURN TO KERNEL MODE
CLR SIPARO ;RESET SIPARO TO FIRST 4K
```

4535

```
.SBTTL TEST # 43 - TEST CSM INSTRUCTION - I-SPACE USER MODE
;*****
;TEST 43 TEST CSM INSTRUCTION - I-SPACE USER MODE
;*****
;* THIS TEST CHECKS OUT THE CSM (CALL SUPERVISOR MODE)
;* INSTRUCTION TO MAKE SURE CSM IS LEGAL WHEN ENABLED
;* IN USER MODE, AND FOR A CHECK OF THE PARAMETERS
;* PUSHED ON THE STACK.
;*****
;*****
```

```
035420 000004
4536 035422 012737 000031 172516
4537 035430 012737 140000 035320
4538 035436 052737 140000 177776
4539 035444 012737 000600 177660
4540 035452 012706 000600
4541 035456 004737 034530
4542 035462 000000
4543 035464 005037 177776
4544 035470 005037 177660
```

```
TST43: SCOPE
MOV #31,MMR3 ;ENABLE 22-BIT, CSM USER
MOV #140000,PCSMPS ;LOAD PRECSM LOCATION
BIS #140000,PSW ;GO TO USER MODE
MOV #600,UDPAR0 ;IF WE GO TO D-SPACE, FLAG AS AN ERROR
MOV #USESTK,SSP ;SETUP USER STACK POINTER
JSR PC,CSMSUB ;TEST CSM INSTRUCTION SUBROUTINE
.WORD 0 ; 0 ADDED TO ADDRESS OF TRAP VECTOR
CLR PSW ;RETURN TO KERNEL MODE
CLR UDPAR0 ;RESET UDPAR0 TO FIRST 4K
```

4553

```
.SBTTL TEST # 44 - TEST CSM INSTRUCTION - D-SPACE USER MODE
:*****
:*TEST 44 TEST CSM INSTRUCTION - D-SPACE USER MODE
:*****
:* THIS TEST CHECKS OUT THE CSM (CALL SUPERVISOR MODE)
:* INSTRUCTION TO MAKE SURE CSM IS LEGAL WHEN ENABLED
:* IN USER MODE, AND FOR A CHECK OF THE PARAMETERS
:* PUSHED ON THE STACK.
:*****
:*****
```

```
035474 000004
4554 035476 012737 000031 172516
4555 035504 012737 140000 035320
4556 035512 012737 000600 177640
4557 035520 012706 000600
4558 035524 004737 034530
4559 035530 000000
4560 035532 005037 177776
4561 035536 005037 177640
```

```
TST44: SCOPE
MOV #31,MMR3 ;ENABLE 22-BIT, CSM USER
MOV #140000,PCSMPS ;LOAD PRECSM LOCATION
MOV #600,UIPARO ;IF WE GO TO I-SPACE, FLAG AS AN ERROR
MOV #USESTK,SSP ;SETUP USER STACK POINTER
JSR PC,CSMSUB ;TEST CSM INSTRUCTION SUBROUTINE
.WORD 0 ;0 ADDED TO ADDRESS OF TRAP VECTOR
CLR PSW ;RETURN TO KERNEL MODE
CLR UIPARO ;RESET UIPARO TO FIRST BK
```

4567

.SBTTL TEST # 45 - TEST CSM INSTRUCTION - MODE TESTS

*TEST 45 TEST CSM INSTRUCTION - MODE TESTS

* THIS TEST EXECUTES THE CSM INSTRUCTION LEGALLY IN MODES 1 THROUGH 7,
 * CHECKING FOR PROPER REGISTER INCREMENT/DECREMENT AND THAT ARGUMENT
 * CONTENTS IS PROPERLY ON THE STACK

4568	035542	000004				TST45: SCOPE	MOV	#40000,PSW	:GO TO SUPERVISOR MODE
4569	035552	012737	040000	177776			MOV	#32,MMR3	:ENABLE 22-BIT, CSM, SUPERVISOR
4570	035560	012701	000007				MOV	#7,R1	:DO 7 MODES
4571	035564	012702	035744				MOV	#CSMINS,R2	:LOAD CSM INSTRUCTION POINTER INTO R2
4572	035570	012703	035770				MOV	#REGCHG,R3	:LOAD REGISTER CHANGE TABLE POINTER TO R3
4573	035574	012704	036006				MOV	#REGDAT,R4	:LOAD ARGUMENT EXPECTED STACK POINTER TO R4
4574	035600	012737	035622	000010			MOV	#3\$,RESVEC	:SET RETURNS TO 3\$
4575	035606	011237	035616			1\$:	MOV	(R2),2\$:MOVE CSM INSTRUCTION TO TEST LOCATION
4576	035612	012700	0357				MOV	#REGLAB,R0	:RESET R0
4577	035616	000000	000000			2\$:	.WORD	0,0	:1ST WORD FOR CSM INSTRUCTION, 2ND FOR MODES 6 & 7
4578	035622	011637	001200			3\$:	MOV	(SP), \$TMP1	:MOVE ARGUMENT WORD TO \$TMP1
4579	035626	021300					CMP	(R3),R0	:SEE IF REGISTER CHANGED PROPERLY
4580	035630	001407					BEQ	4\$:BRANCH IF OK
4581	035632	062706	000006				ADD	#6,SP	:POP STACK FOR POSSIBLE ERROR LOOPING
4582	035636	011337	001176				MOV	(R3), \$TMP0	:MOVE EXPECTED DATA TO \$TMP0
4583	035642	104052					ERROR	+52	:CSM FAILED TO INCREMENT/DECREMENT REGISTER PROPERLY
4584	035644	162706	000006				SUB	#6,SP	:RESTORE STACK POINTER TO PRE-ERROR STATE
4585	035650	021437	001200			4\$:	CMP	(R4), \$TMP1	:SEE IF CORRECT ARGUMENT WAS LOADED
4586	035654	001417					BEQ	5\$:BRANCH IF OK
4587	035656	012637	001204				MOV	(SP)+, \$TMP3	:POP STACK FOR POSSIBLE ERROR LOOPING
4588	035662	012637	001206				MOV	(SP)+, \$TMP4	
4589	035666	012637	001210				MOV	(SP)+, \$TMP5	
4590	035672	011437	001202				MOV	(R4), \$TMP2	:MOVE EXPECTED DATA TO \$TMP2
4591	035676	104053					ERROR	+53	:CSM FAILED TO PUT PROPER ARGUMENT ON STACK
4592	035700	013746	001210				MOV	\$TMP5,-(SP)	:RESTORE STACK - NO ERROR LOOPING
4593	035704	013746	001206				MOV	\$TMP4,-(SP)	
4594	035710	013746	001204				MOV	\$TMP3,-(SP)	
4595	035714	022223				5\$:	CMP	(R2)+,(R3)+	:INCREMENT R2 AND R3 TO NEXT LOCATIONS
4596	035716	005724					IST	(R4)+	:INCREMENT R4 TO NEXT LOCATION
4597	035720	062706	000006				ADD	#6,SP	:POP STACK OF CSM PUSHES
4598	035724	077150					SOB	R1,1\$:SUBTRACT 1 AND BRANCH IF NOT ALL MODES CHECKED
4599	035726	005037	177572				CLR	MMR0	:TURN OFF MEMORY MANAGEMENT
4600	035732	005037	172516				CLR	MMR3	:CLEAR MMR3
4601	035736	005037	177776				CLR	PSW	:RETURN MODE BACK TO KERNEL
4602	035742	000430					BR	\$EOP	:SKIP OVER TABLES AND LOCATIONS
4603	035744	007010	007020	007030		CSMINS:	.WORD	CSM1,CSM2,CSM3,CSM4,CSM5,CSM6,CSM7	
4604	035762	035766					.WORD	REGLAB+2	
4605	035764	035762				REGLAB:	.WORD	REGLAB-2	
4606	035766	052525					.WORD	52525	
4607	035770	035764	035766	035766		REGCHG:	.WORD	REGLAB,REGLAB-2,REGLAB+2,REGLAB-2,REGLAB-2,REGLAB,REGLAB	
4608	036006	035762	035762	035766		REGDAT:	.WORD	REGLAB-2,REGLAB-2,REGLAB+2,REGLAB+2,52525,REGLAB-2,REGLAB+2	

4609

.SBTTL END OF PASS ROUTINE

```

*****
*INCREMENT THE PASS NUMBER ($PASS)
*TYPE 'END PASS #XXXXX TOTAL NUMBER OF ERRORS SINCE LAST REPORT YYYYY'
*WHERE XXXXX AND YYYYY ARE DECIMAL NUMBERS
*IF SW12=1 INHIBIT TRACE TRAP
*IF THERES A MONITOR GO TO IT
*IF THERE ISN'T JUMP TO LOOP
    
```

```

036024 $EOP:
036024 000004 SCOPE
036026 005037 001102 CLR $TSTNM ;;ZERO THE TEST NUMBER
036032 005237 001232 INC $PASS ;;INCREMENT THE PASS NUMBER
036036 042737 100000 001232 BIC #100000,$PASS ;;DON'T ALLOW A NEG. NUMBER
036044 005327 DEC (PC)+ ;;LOOP?
036046 000001 $EOPCT: .WORD 1
036050 005104 BGT $DOAGN ;;YES
036052 012737 MOV (PC)+,@(PC)+ ;;RESTORE COUNTER
036054 000001 $ENDCT: .WORD 1
036056 036046 $EOPCT
036060 032737 000077 001232 BIT #77,$PASS ;;>>ARE WE TO PRINT THIS PASS? :DPM002
036066 001403 BEQ 1000$ ;;>>BRANCH IF WE ARE :DPM002
036070 005737 001112 TST $ERTTL ;;>>TEST $ERTTL FOR ANY ERRORS THIS PASS :DPM002
036074 001453 BEQ $GET42 ;;>>BRANCH IF NO ERRORS THIS PASS :DPM002
036076 1000$:
036076 104401 036104 TYPE ,65$ ;;TYPE ASCIZ STRING
036102 000407 BR 64$ ;;GET OVER THE ASCIZ
;;65$: .ASCIZ <12><15>/END PASS #/
036122 036122 013746 001232 64$: MOV $PASS,-(SP) ;;SAVE $PASS FOR TYPEOUT
;;TYPE PASS NUMBER
TYPDS ;;GO TYPE--DECIMAL ASCII WITH SIGN
036126 104405 TST $ERTTL ;;>> Y ERRORS THIS PASS? :DPM002
036130 005737 001112 BEQ $GET42 ;;>>BRANCH OVER 'TOTAL' REPORT IF NONE :DPM002
036134 001433 TYPE ,67$ ;;TYPE ASCIZ STRING
036136 104401 036144 BR 66$ ;;GET OVER THE ASCIZ
036142 000421 ;;67$: .ASCIZ / TOTAL ERRORS SINCE LAST REPORT /
036206 036206 013746 001112 66$: MOV $ERTTL,-(SP) ;;SAVE $ERTTL FOR TYPEOUT
;;TOTAL NUMBER OF ERRORS
TYPDS ;;GO TYPE--DECIMAL ASCII WITH SIGN
036212 104405 TYPE ,SCLRF ;;TYPE CARRIAGE RETURN, LINE FEED
036214 104401 001221 CLR $ERTTL ;;CLEAR ERROR TOTAL
036220 005037 001112 $GET42: MOV @#42,R0 ;;GET MONITOR ADDRESS
036224 013700 000042 BEQ $DOAGN ;;BRANCH IF NO MONITOR
036230 001414 CLR -(SP) ;;INSURE THE 'T' BIT IS CLEAR
036232 005046 MOV #SCLR.T,-(SP) ;;SETUP FOR AN RTI OR RTT
036234 012746 036242 BR $RTRN ;;GO DO AN RTI OR RTT TO LOAD THE PSW
;;WITH A CLEARED 'T' BIT
036242 $CLR.T:
036242 013700 000042 MOV @#42,R0 ;;INSURE R0 CONTAINS THE MONITORS
036246 001405 BEQ $DOAGN ;;RETURN ADDRESS
036250 000005 RESET ;;CLEAR THE WORLD
036252 004710 $ENDAD: JSR PC,(R0) ;;GO TO MONITOR
036254 000240 NOP ;;SAVE ROOM
036256 000240 NOP ;;FOR
    
```


END OF PASS ROUTINE

```

036260 000240          NOP          ;;ACT11
036262          $DOAGN: TRAP          ;;PUSH OLD PSW AND PC ON STACK
036262 104400          BIC          #20,(SP)  ;;CLEAR THE 'T' BIT
036264 042716 000020  BIT          #BIT12,@SWR  ;;RUN WITH TRACE TRAP?
036270 032777 010000 142642  BNE          1$  ;;BR IF NO
036276 001005          COM          $TBIT  ;;IS IT TIME FOR TRACE TRAP
036300 005137 001310  BMI          1$  ;;BR IF NO
036304 100402          BIS          #20,(SP)  ;;SET TRACE TRAP
036306 052716 000020  1$: MOV          #20,(SP)  ;;JUMP TO START OF TEST
036312 012746 036320  $RTRN: RTI          ;;RETURN--THIS IS CHANGED TO
036316 000002          ;;AN 'RTT' IF 'RTT' IS A LEGAL
                                ;;INSTRUCTION

036320          $LOOP: JMP          @PC+      ;;RETURN
036320 000137          $RTNAD: .WORD  LOOP
036322 020560          $ENULL: .BYTE  -1,-1,0  ;;NULL CHARACTER STRING
036324 377 377 000  .EVEN
                                .END

4610 000001

```

ABASE = 000000	BIT00 = 000001	DH14 = 013242	DT55 = 016010	KDPAR3= 172366
ACDW1 = 000000	BIT01 = 000002	DH15 = 013322	DT57 = 016022	KDPAR4= 172370
ACDW2 = 000000	BIT02 = 000004	DH16 = 013362	EMTVEC= 000030	KDPAR5= 172372
ACPIUP= 000000	BIT03 = 000010	DH17 = 013442	EM1 = 007522	KDPAR6= 172374
ACSMPS 035334	BIT04 = 000020	DH2 = 012752	EM10 = 007631	KDPAR7= 172376
ACSMSP 035336	BIT05 = 000040	DH20 = 013522	EM11 = 007701	KDPDR0= 172320
ADDW0 = 000000	BIT06 = 000100	DH21 = 013562	EM12 = 007750	KDPDR1= 172322
ADDW1 = 000000	BIT07 = 000200	DH22 = 013677	EM13 = 010022	KDPDR2= 172324
ADDW10= 000000	BIT08 = 000400	DH24 = 013737	EM14 = 010073	KDPDR3= 172326
ADDW11= 000000	BIT09 = 001000	DH26 = 013777	EM15 = 010154	KDPDR4= 172330
ADDW12= 000000	BIT1 = 000002	DH27 = 014111	EM16 = 010237	KDPDR5= 172332
ADDW13= 000000	BIT10 = 002000	DH30 = 014306	EM2 = 007562	KDPDR6= 172334
ADDW14= 000000	BIT11 = 004000	DH32 = 014362	EM21 = 010315	KDPDR7= 172336
ADDW15= 000000	BIT12 = 010000	DH33 = 014401	EM22 = 010362	KERSTK= 001100
ADDW2 = 000000	BIT13 = 020000	DH34 = 014441	EM23 = 010431	KIPAR0= 172340
ADDW3 = 000000	BIT14 = 040000	DH36 = 014532	EM24 = 010464	KIPAR1= 172342
ADDW4 = 000000	BIT15 = 100000	DH37 = 014572	EM25 = 010523	KIPAR2= 172344
ADDW5 = 000000	BIT2 = 000004	DH40 = 014632	EM26 = 010570	KIPAR3= 172346
ADDW6 = 000000	BIT3 = 000010	DH41 = 014703	EM27 = 010636	KIPAR4= 172350
ADDW7 = 000000	BIT4 = 000020	DH42 = 015007	EM30 = 010713	KIPAR5= 172352
ADDW8 = 000000	BIT5 = 000040	DH43 = 015047	EM31 = 010756	KIPAR6= 172354
ADDW9 = 000000	BIT6 = 000100	DH44 = 015117	EM32 = 011021	KIPAR7= 172356
ADEVCT= 000000	BIT7 = 000200	DH45 = 015157	EM33 = 011057	KIPDR0= 172300
ADEVVM = 000000	BIT8 = 000400	DH55 = 015207	EM34 = 011135	KIPDR1= 172302
AENV = 000000	BIT9 = 001000	DH57 = 015246	EM35 = 011216	KIPDR2= 172304
AENVM = 000000	BPTVEC= 000014	DISPLA 001142	EM36 = 011252	KIPDR3= 172306
AFATAL= 000000	CKSWR = 104410	DISPRE 000174	EM37 = 011327	KIPDR4= 172310
AMADR1= 000000	CMG = 005361	DOWELP 035316	EM40 = 011372	KIPDR5= 172312
AMADR2= 000000	CNTRLC 005302	DSWR = 177570	EM41 = 011457	KIPDR6= 172314
AMADR3= 000000	CPSAVE 003266	DT1 = 015306	EM42 = 011523	KIPDR7= 172316
AMADR4= 000000	CPUERH= 177766	DT10 = 015344	EM43 = 011566	KSP = 000006
AMAMS1= 000000	CR = 000015	DT12 = 015356	EM44 = 011633	LF = 000012
AMAMS2= 000000	CRLF = 000200	DT13 = 015374	EM45 = 011701	LOOP = 020560
AMAMS3= 000000	CSMINS 035744	DT14 = 015412	EM46 = 011740	MFPDLD 003004
AMAMS4= 000000	CSMSUB 034530	DT15 = 015430	EM47 = 012002	MFPDLP 002770
AMSGAD= 000000	CSM0 = 007000	DT16 = 015442	EM50 = 012041	MFPDPS 002772
AMSGLG= 000000	CSM1 = 007010	DT17 = 015460	EM51 = 012070	MFPDTS 002746
AMSGTY= 000000	CSM1ST 035326	DT2 = 015324	EM52 = 012126	MFPDVC 003040
AMTYP1= 000000	CSM2 = 007020	DT20 = 015476	EM53 = 012152	MFPDV1 033564
AMTYP2= 000000	CSM2ND 035330	DT21 = 015510	EM54 = 012217	MFPILD 002532
AMTYP3= 000000	CSM3 = 007030	DT22 = 015526	EM55 = 012263	MFPILP 002516
AMTYP4= 000000	CSM3RD 035332	DT24 = 015540	EM56 = 012327	MFPIPS 002520
APASS = 000000	CSM4 = 007040	DT26 = 015552	EM57 = 012413	MFPITS 002464
APRINI 002060	CSM5 = 007050	DT27 = 015570	EM58 = 012466	MFPIVC 002622
APRIOR= 000000	CSM6 = 007060	DT30 = 015606	ERLOOP 002624	MFPIV1 027566
APTCSU= 000040	CSM7 = 007070	DT32 = 015620	ERPREP 002444	MFPIV2 030164
APTENV= 000001	DDISP = 177570	DT34 = 015626	ERROR = 104000	MFPIV3 031674
APTSIZ= 000200	DF1 = 016034	DT36 = 015642	ERRIYP 003650	MFPIV4 032300
APTSPO= 000100	DF12 = 016057	DT40 = 015654	ERRVEC= 000004	MFPIV5 032562
ASWREG= 000000	DF2 = 016041	DT41 = 015664	GTSWR = 104407	MFPIV6 034036
ATESTN= 000000	DF3 = 016050	DT42 = 015700	HT = 000011	MGMERR 016142
AUNIT = 000000	DF32 = 016065	DT43 = 015712	IBSAVE 003646	MGMFLG 016144
AUSWR = 000000	DF5 = 016054	DT45 = 015726	INIT = 020666	MMR0 = 177572
AVECT1= 000000	DH1 = 012672	DT46 = 015742	IOTVEC= 000020	MMR1 = 177574
AVECT2= 000000	DH10 = 013042	DT47 = 015754	KDPAR0= 172360	MMR2 = 177576
BADPC = 001304	DH12 = 013102	DT50 = 015766	KDPAR1= 172362	MMR3 = 172516
BIT0 = 000001	DH13 = 013162	DT52 = 016000	KDPAR2= 172364	MMVEC = 000250

SYMBOL TABLE

\$MSG LG	001242	\$QUES	001220	\$SCOPE	003042	\$TMP4	001206	\$TYPE	005432
\$MSGTY	001224	\$RDCHR	004630	\$SETUP=	000137	\$TMP5	001210	\$TYPEC	005644
\$MSWR	005260	\$RDLIN	004760	\$STUP =	177777	\$TN =	000046	\$TYPEX	005774
\$MXCNT	001306	\$RDSZ =	000010	\$SVLAD	003216	\$TPB	001152	\$TYPC	006344
\$NULL	001154	\$REGAD	001160	\$SVPC =	000204	\$TPFLG	001157	\$TYPON	006360
\$NWTST=	000001	\$REG0	001162	\$SWR =	173400	\$TPS	001150	\$TYPDS	006320
\$OCNT	006542	\$REG1	001164	\$SWREG	001246	\$TRAP	007206	\$UNIT	001236
\$OCTVL	007170	\$REG2	001166	\$SWRMK=	000000	\$TRAP2	007230	\$UNITM	000211
\$OMODE	006544	\$REG3	001170	\$TBIT	001310	\$TRP =	000015	\$USWR	001250
\$OVER	003252	\$REG4	001172	\$TESTN	001230	\$TRPAD	007242	\$XOFF =	000023
\$PASS	001232	\$REG5	001174	\$TKB	001146	\$TSTM	000210	\$XON =	000021
\$PASTM	000212	\$RESRE	007030	\$TKS	001144	\$TSTNM	001102	\$XTSTR	003054
\$PWRAD	007434	\$RTNAD	036322	\$TMP0	001176	\$TTYIN	005236	\$GET4=	000001
\$PWRDN	007274	\$RTRN	036316	\$TMP1	001200	\$TYPBN	006244	\$FILL	006543
\$PWRMG	007430	\$SAVRE	006772	\$TMP2	001202	\$TYPDS	006546	\$.X =	000204
\$PWRUP	007346	\$SAVR6	007456	\$TMP3	001204				

. ABS. 036330 000
000000 001

ERRORS DETECTED: 0

VIRTUAL MEMORY USED: 55080 WORDS (216 PAGES)

DYNAMIC MEMORY: 20034 WORDS (77 PAGES)

ELAPSED TIME: 00:10:18

CKKTBD.BIN,CKKTBD/CR/-SP/NL:TOC=CKKTBD.MLB/ML,CKKTBD.P11

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES							
ABASE	=	000000	20-1249							
ACDW1	=	000000	20-1249							
ACDW2	=	000000	20-1249							
ACPUOP	=	000000	20-1249	20-1249						
ACSMPS	=	035334	54-2027	*105-4437	*105-4438	105-4439	*105-4444	*105-4445	105-4446	105-4450 #105-4505
ACSMSP	=	035336	54-2018	*105-4426	105-4467	#105-4506				
ADDW0	=	000000	20-1249							
ADDW1	=	000000	20-1249							
ADDW10	=	000000	20-1249							
ADDW11	=	000000	20-1249							
ADDW12	=	000000	20-1249							
ADDW13	=	000000	20-1249							
ADDW14	=	000000	20-1249							
ADDW15	=	000000	20-1249							
ADDW2	=	000000	20-1249							
ADDW3	=	000000	20-1249							
ADDW4	=	000000	20-1249							
ADDW5	=	000000	20-1249							
ADDW6	=	000000	20-1249							
ADDW7	=	000000	20-1249							
ADDW8	=	000000	20-1249							
ADDW9	=	000000	20-1249							
ADEVCT	=	000000	20-1249	20-1249						
ADEVN	=	000000	20-1249							
AENV	=	000000	20-1249	20-1249						
AENVN	=	000000	20-1249	20-1249						
AFATAL	=	000000	20-1249	20-1249						
AMADR1	=	000000	20-1249							
AMADR2	=	000000	20-1249							
AMADR3	=	000000	20-1249							
AMADR4	=	000000	20-1249							
AMAMS1	=	000000	20-1249							
AMAMS2	=	000000	20-1249							
AMAMS3	=	000000	20-1249							
AMAMS4	=	000000	20-1249							
AMSGAD	=	000000	20-1249	20-1249						
AMSGLG	=	000000	20-1249	20-1249						
AMSGTY	=	000000	20-1249	20-1249						
AMTYP1	=	000000	20-1249							
AMTYP2	=	000000	20-1249							
AMTYP3	=	000000	20-1249							
AMTYP4	=	000000	20-1249							
APASS	=	000000	20-1249	20-1249						
APRINI	=	002060	#27-1532	58-2126	79-3360	104-4394				
APRIOR	=	000000	20-1249							
APTCSU	=	000040	43-1903	#44-1904						
APTENV	=	000001	37-1787	43-1903	44-1904	#44-1904				
APISIZ	=	000200	#44-1904	58-2106						
APTSP0	=	000100	43-1903	44-1904	#44-1904					
ASWREG	=	000000	20-1249	20-1249						
ATESTN	=	000000	20-1249	20-1249						
AUNIT	=	000000	20-1249	20-1249						

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES
AUSWR	=	000000	20-1249 20-1249
AVECT1	=	000000	20-1249
AVECT2	=	000000	20-1249
SADPC	=	001304	#20-1249 *28-1591 54-2023
BIT0	=	000001	#15-1197 93-4084 93-4121 98-4244 98-4277
BIT00	=	000001	#15-1197 15-1197 36-1785 36-1785 37-1787 37-1787 105-4443 105-4454 105-4466
			105-4472 105-4478 105-4485
BIT01	=	000002	#15-1197 15-1197
BIT02	=	000004	#15-1197 15-1197
BIT03	=	000010	#15-1197 15-1197
BIT04	=	000020	#15-1197 15-1197
BIT05	=	000040	#15-1197 15-1197
BIT06	=	000100	#15-1197 15-1197
BIT07	=	000200	#15-1197 15-1197
BIT08	=	000400	#15-1197 15-1197 36-1785
BIT09	=	001000	#15-1197 15-1197 36-1785 37-1787 105-4493
BIT1	::	000002	#15-1197 89-3971 89-4004 91-4034 91-4071 96-4180 96-4212
BIT10	::	002000	#15-1197 37-1787
BIT11	=	004000	#15-1197
BIT12	=	010000	#15-1197 110-4609
BIT13	=	020000	#15-1197 37-1787
BIT14	=	040000	#15-1197 36-1785 105-4436 105-4451 106-4520
BIT15	=	100000	#15-1197 105-4452
BIT2	=	000004	#15-1197 28-1582 28-1606 77-3312 77-3320
BIT3	=	000010	#15-1197 103-4370
BIT4	=	000020	#15-1197 15-1208 58-2125
BIT5	=	000040	#15-1197
BIT6	=	000100	#15-1197 15-1209
BIT7	=	000200	#15-1197
BIT8	=	000400	#15-1197
BIT9	=	001000	#15-1197
BPTVEC	=	000014	#15-1197
CKSWR	=	104410	36-1785 37-1787 37-1787 #50-1910
CMSC	=	005361	41-1888 #41-1899
ENTRLC	=	005302	40-1882 40-1882 #41-1886
CPSAVE	=	003266	*36-1785 36-1785 #36-1785 *37-1787 37-1787 39-1880
CPUERR	=	177766	#15-1210 54-2003 *56-2066
CR	=	000015	#15-1197 43-1903 43-1903
CRLF	=	000200	#15-1197 43-1903 43-1903 52-1957 52-1958 53-1973 53-1977 53-1979 53-1980
			53-1981 53-1982 53-1984 53-1992 58-2107 58-2107
CSMINS	=	035744	109-4571 #109-4603
CSMSUB	=	034530	104-4399 #105-4405
CSMO	=	007000	#15-1185 100-4306 106-4523 107-4541 108-4558
CSM1	=	007010	#15-1186 109-4603 101-4329 102-4352 103-4375 105-4417
CSM1ST	=	035326	54-2028 *105-4427 105-4473 #105-4502
CSM2	=	007020	#15-1187 109-4603
CSM2ND	=	035330	54-2029 *105-4428 105-4479 #105-4503
CSM3	=	007030	#15-1188 109-4603
CSM3RD	=	035332	54-2030 *105-4429 105-4486 #105-4504
CSM4	=	007040	#15-1189 109-4603
CSM5	=	007050	#15-1190 109-4603
CSM6	=	007060	#15-1191 109-4603

CKKTBD	CREATED BY	MACRO	ON 12-JAN-82 AT 12:24	PAGE 3	SEQUENCE 151	I 12					
SYMBOL	CROSS REFERENCE	VALUE	REFERENCES	CREF	V01						
CSM7	=	007070	#15-1192	109-4603							
DDISP	=	177570	#15-1197	20-1249	58-2106						
DF1		016034	23-1392	24-1422	24-1434	24-1447	25-1458	25-1464	25-1471	25-1478	25-1485
			#55-2035								
DF12		016057	21-1254	21-1278	21-1284	21-1290	22-1301	22-1307	22-1320	23-1350	23-1360
			#55-2039								
DF2		016041	21-1260	24-1453	#55-2036						
DF3		016050	21-1266	21-1272	22-1295	22-1313	22-1326	22-1332	22-1338	23-1367	23-1374
			23-1386	24-1403	24-1409	24-1428	24-1441	25-1491	25-1509	26-1514	26-1522
			#55-2037								
DF32		016065	23-1380	23-1398	#55-2040						
DF5		016054	23-1343	24-1415	25-1497	25-1503	#55-2038				
DH1		012672	21-1252	#53-1963							
DH10		013042	21-1264	21-1270	#53-1965						
DH12		013102	21-1276	#53-1966							
DH13		013162	21-1282	#53-1967							
DH14		013242	21-1288	#53-1968							
DH15		013322	22-1293	#53-1969							
DH16		013362	22-1299	#53-1970							
DH17		013442	22-1305	#53-1971							
DH2		012752	21-1258	#53-1964							
DH20		013522	22-1311	22-1330	23-1341	26-1520	#53-1972				
DH21		013562	22-1317	#53-1973							
DH22		013677	22-1324	#53-1975							
DH24		013737	22-1336	#53-1976							
DH26		013777	23-1347	#53-1977							
DH27		014111	23-1354	#53-1979							
DH30		014306	23-1364	23-1371	24-1438	25-1468	25-1475	25-1482	#53-1984		
DH32		014362	23-1378	23-1396	24-1451	25-1495	25-1501	#53-1986			
DH33		014401	23-1384	#53-1987							
DH34		014441	23-1390	#53-1988							
DH36		014532	24-1401	#53-1989							
DH37		014572	24-1407	#53-1990							
DH40		014632	24-1413	#53-1991							
DH41		014703	24-1419	#53-1992							
DH42		015007	24-1426	#53-1994							
DH43		015047	24-1432	24-1445	#53-1995						
DH44		015117	25-1456	25-1462	25-1489	#53-1996					
DH45		015157	#53-1997								
DH55		015207	25-1507	#53-1998							
DH57		015246	26-1512	#53-1999							
DISPLA		001142	#20-1249	36-1785	37-1787	*58-2106	*58-2106				
DISPRE		000174	#17-1246	58-2106							
DOWELP		035316	*105-4410	105-4430	*105-4446	*105-4463	*105-4469	*105-4475	*105-4481	*105-4488	105-4491
			#105-4498								
DSWR	=	177570	#15-1197	20-1249	58-2106						
DT1		015306	21-1253	#54-2003							
DT10		015344	21-1265	21-1271	#54-2005						
DT12		015356	21-1277	#54-2006							
DT13		015374	21-1283	#54-2007							
DT14		015412	21-1289	#54-2008							
DT15		015430	22-1294	#54-2009							

SYMBOL	CROSS REFERENCE VALUE	REFERENCES				
DT16	015442	22-1300	#54-2010			
DT17	015460	22-1306	#54-2011			
DT2	015324	21-1259	#54-2004			
DT20	015476	22-1312	22-1331	23-1342	26-1521	#54-2012
DT21	015510	22-1319	#54-2013			
DT22	015526	22-1325	23-1385	#54-2014		
DT24	015540	22-1337	24-1408	#54-2015		
DT26	015552	23-1349	#54-2016			
DT27	015570	23-1359	#54-2017			
DT30	015606	23-1366	23-1373	24-1440	25-1470	#54-2018
DT32	015620	23-1379	23-1397	24-1452	25-1496	25-1502 #54-2019
DT34	015626	23-1391	#54-2020			
DT36	015642	24-1402	#54-2021			
DT40	015654	24-1414	#54-2022			
DT41	015664	24-1421	#54-2023			
DT42	015700	24-1427	#54-2024			
DT43	015712	24-1433	#54-2025			
DT45	015726	24-1446	#54-2026			
DT46	015742	25-1457	25-1463	#54-2027		
DT47	015754	25-1477	#54-2028			
DT50	015766	25-1484	#54-2029			
DT52	016000	25-1490	#54-2030			
DT55	016010	25-1508	#54-2031			
DT57	016022	26-1513	#54-2032			
LMTVEC	= 000030	#15-1197	*58-2106	*58-2106		
EM1	007522	21-1251	#52-1917			
EM10	007631	21-1263	#52-1919			
EM11	007701	21-1269	#52-1920			
EM12	007750	21-1275	#52-1921			
EM13	010022	21-1281	22-1304	22-1310	#52-1922	
EM14	010073	21-1287	#52-1923			
EM15	010154	22-1292	#52-1924			
EM16	010237	22-1298	#52-1925			
EM2	007527	21-1257	#52-1918			
EM21	010315	22-1316	#52-1926			
EM22	010362	22-1323	#52-1927			
EM23	010431	22-1329	#52-1928			
EM24	010464	22-1335	#52-1929			
EM25	010523	23-1340	#52-1930			
EM26	010570	23-1346	#52-1931			
EM27	010636	23-1353	#52-1932			
EM30	010713	23-1363	#52-1933			
EM31	010753	23-1370	#52-1934			
EM32	011021	23-1377	#52-1935			
EM33	011057	23-1383	#52-1936			
EM34	011135	23-1389	#52-1937			
EM35	011216	23-1395	#52-1938			
EM36	011252	24-1400	#52-1939			
EM37	011327	24-1406	#52-1940			
EM40	011372	24-1412	#52-1941			
EM41	011457	24-1418	#52-1942			
EM42	011523	24-1425	#52-1943			

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES							
EM43		011566	24-1431	24-1444	#52-1944					
EM44		011633	24-1437	#52-1945						
EM45		011701	24-1450	#52-1946						
EM46		011740	25-1455	#52-1947						
EM47		012002	25-1461	#52-1948						
EM50		012041	25-1467	#52-1949						
EM51		012070	25-1474	#52-1950						
EM52		012126	25-1481	#52-1951						
EM53		012152	25-1488	#52-1952						
EM54		012217	25-1494	#52-1953						
EM55		012263	25-1500	#52-1954						
EM56		012327	25-1506	#52-1955						
EM57		012413	26-1511	#52-1956						
EM58		012466	26-1517	#52-1957						
ERLOOP		002624	*31-1655	*32-1676	32-1697	#32-1704	*33-1722	33-1744	*34-1765	34-1780
ERPREP		002444	#31-1654	32-1695	33-1742	34-1779				
ERROR	=	104000	#15-1197	28-1599	28-1601	56-2064	57-2093	60-2171	60-2179	60-2187
			61-2242	61-2250	61-2258	61-2265	62-2299	62-2310	62-2317	62-2321
			64-2385	64-2392	64-2406	65-2445	65-2455	65-2463	65-2477	66-2518
			67-2562	67-2586	67-2602	67-2611	68-2653	68-2679	69-2710	70-2737
			71-2822	77-3326	77-3330	79-3377	79-3380	79-3392	79-3399	79-3404
			79-3419	79-3425	79-3432	80-3443	81-3479	81-3482	81-3493	81-3500
			81-3512	81-3520	81-3526	81-3533	82-3544	83-3575	83-3591	83-3600
			83-3616	83-3626	83-3634	83-3643	83-3652	84-3670	84-3687	84-3696
			84-3712	84-3722	84-3730	84-3740	84-3749	85-3786	85-3789	85-3800
			85-3812	85-3819	85-3827	85-3833	85-3840	86-3853	87-3876	87-3879
			87-3898	87-3903	87-3910	87-3918	87-3924	87-3931	88-3943	89-3981
			89-3994	89-4001	90-4014	91-4045	91-4052	91-4061	91-4069	92-4078
			93-4102	93-4111	93-4119	94-4128	95-4148	95-4153	96-4190	96-4197
			96-4210	97-4224	98-4255	98-4262	98-4268	98-4275	99-4288	100-4313
			102-4359	103-4381	105-4424	105-4442	105-4453	105-4465	105-4471	105-4477
			105-4490	109-4585	109-4591					
ERRTYP	=	003650	57-1787	#39-1789						
ERRVEC	=	000004	#15-1197	36-1785	*36-1785	*36-1785	*36-1785	58-2106	*58-2106	*58-2106
GNS	=	*****	*58-2117							*58-2116
			17-1246	17-1246	50-1910	50-1910	50-1910	50-1910	50-1910	50-1910
			50-1910	50-1910	50-1910	50-1910	50-1910	50-1910	50-1910	50-1910
			50-1910	50-1910	50-1910	50-1910	50-1910	50-1910	50-1910	50-1910
			58-2108	110-4609	110-4609					58-2107
GTSWR	=	104407	41-1895	#50-1910	58-2107					
HT	=	000011	#15-1197	43-1903	43-1903					
IRSAVE	=	003646	*37-1787	37-1787	*37-1787	*37-1787	37-1787	37-1787	37-1787	#37-1787
INIF	=	020666	#58-2124							
IOTVFC	=	000020	#15-1197	*58-2106	*58-2106					
KDPAR0	=	172360	#15-1198	27-1548	*77-3313	*77-3318				
KDPAR1	=	172362	#15-1198							
KDPAR2	=	172364	#15-1198							
KDPAR3	=	172366	#15-1198							
KDPAR4	=	172370	#15-1198	*73-2860	*77-3311					
KDPAR5	=	172372	#15-1198							
KDPAR6	=	172374	#15-1198							
KDPAR7	=	172376	#15-1198							

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES
KDPDR0	=	172320	#15-1198
KDPDR1	=	172322	#15-1198 *73-2857 *74-3011
KDPDR2	=	172324	#15-1198 *73-2858 *74-3012
KDPDR3	=	172326	#15-1198 *73-2859 *74-3013
KDPDR4	=	172330	#15-1198 *77-3310 *89-3965 *95-4140 *96-4173
KDPDR5	=	172332	#15-1198
KDPDR6	=	172334	#15-1198
KDPDR7	=	172336	#15-1198 27-1539
KERSTK	=	001100	#15-1211 62-2305 64-2362 64-2366 64-2379 65-2433 65-2437 65-2450 66-2514 67-2570 67-2575 68-2636 68-2658 68-2684 70-2741 71-2798 74-3177 77-3319 79-3371 81-3473 85-3783 85-3844 87-3873
KIPAR0	=	172340	#15-1198 27-1547
KIPAR1	=	172342	#15-1198
KIPAR2	=	172344	#15-1198
KIPAR3	=	172346	#15-1198 *60-2152 *66-2501
KIPAR4	=	172350	#15-1198 *60-2153 *66-2502 *70-2730 *79-3362
KIPAR5	=	172352	#15-1198 *67-2545
KIPAR6	=	172354	#15-1198
KIPAR7	=	172356	#15-1198 27-1557
KIPDR0	=	172300	#15-1198 27-1535
KIPDR1	=	172302	#15-1198
KIPDR2	=	172304	#15-1198
KIPDR3	=	172306	#15-1198 *64-2355 *66-2503 *74-3014 *74-3176
KIPDR4	=	172310	#15-1198 *33-1732 *33-1736 *60-2163 *61-2234 *64-2360 *65-2431 *66-2504 *66-2528 *67-2546 *67-2615 *70-2732 *70-2762 *73-2856 *74-3010 *79-3366 *79-3434 *81-3466 *81-3535 *89-3972 *89-4003 *96-4181 *96-4214 *98-4246 *98-4279
KIPDR5	=	172312	#15-1198 *64-2356 *67-2547 *67-2616
KIPDR6	=	172314	#15-1198
KIPDR7	=	172316	#15-1198
KSP	=	X000006	#15-1205 28-1591 *28-1592 *28-1593 *28-1604 *28-1605 *33-1731 *39-1790 *39-1818 *39-1845 39-1845 *39-1846 *39-1850 *39-1851 *39-1857 39-1859 *39-1860 *39-1863 *39-1864 *39-1870 *39-1871 *56-2061 *56-2062 *56-2063 *56-2067 *56-2068 *57-2087 *57-2088 57-2089 *57-2095 *57-2096 *58-2110 *64-2362 *64-2366 *64-2379 *64-2401 *64-2402 *64-2410 *64-2411 *65-2433 *65-2437 *65-2450 *65-2472 *65-2473 *65-2481 *65-2482 *66-2514 *67-2570 *67-2575 *68-2636 *68-2658 *68-2684 *70-2741 71-2792 71-2793 *71-2798 *74-3177 *77-3306 *77-3319 79-3371 *79-3373 *80-3438 *80-3439 *80-3445 *80-3446 81-3473 *81-3475 *82-3539 *82-3540 *82-3546 *82-3547 *83-3567 *83-3572 *83-3578 *83-3647 *83-3648 *83-3654 *83-3655 *84-3662 *84-3667 *84-3673 *84-3744 *84-3745 *84-3751 *84-3752 85-3778 *85-3844 *86-3848 *86-3849 *86-3855 *86-3856 87-3868 *88-3938 *88-3939 *88-3945 *88-3946 *88-3946 *90-4012 *90-4013 *90-4016 *90-4017 *95-4143 95-4144 95-4145 95-4151 *95-4155 *97-4222 *97-4223 *97-4226 *97-4227 *99-4286 *99-4287 *99-4290 *99-4291
LF	=	000012	#15-1197 43-1903 43-1903
LOOP	=	020560	#53-2109 110-4609
MFPDL0	=	003004	*34-1767 *34-1768 #34-1774
MFPDLP	=	002770	#34-1770 34-1781 96-4183
MFPDPS	=	002772	#34-1771 *96-4184
MFPDTS	=	002746	#34-1765 96-4187 96-4194 96-4201 96-4207
MFPDVC	=	003040	34-1773 *34-1783 *96-4185
MFPDVI	=	033564	96-4185 #97-4219
MFPILD	=	002532	*32-1678 *32-1679 #32-1687
MFPILP	=	002516	#32-1683 32-1698 79-3384 81-3485 85-3792 87-3883 89-3974 98-4248

CKKTBD CREATED BY MACRO ON 12-JAN-82 AT 12:24 PAGE 7

SEQUENCE 155

SYMBOL CROSS REFERENCE

SYMBOL VALUE

REFERENCES

CREF VOI

MFPIPS	002520	#32-1684	*79-3386	*81-3486	*85-3793	*87-3084	*89-3975	*98-4249		
MFPITS	002464	#32-1676	79-3389	79-3396	79-3402	79-3408	79-3416	79-3423	79-3430	81-3490
		81-3497	81-3503	81-3509	81-3517	81-3524	81-3531	85-3797	85-3804	85-3810
		85-3816	85-3824	85-3831	85-3838	87-3888	87-3895	87-3901	87-3907	87-3915
		87-3922	87-3929	89-3978	89-3985	89-3992	89-3998	98-4252	98-4259	98-4266
		98-4272								
MFPIVC	002622	32-1686	#32-1703	*79-3388	*81-3488	*85-3794	*87-3885	*89-3976	*98-4250	
MFPIV1	027566	79-3388	#80-3438							
MFPIV2	030164	81-3470	81-3488	#82-3539						
MFPIV3	031674	85-3777	85-3794	#86-3848						
MFPIV4	032304	87-3865	87-3881	#88-3938						
MFPIV5	032562	89-3976	#90-4008							
MFPIV6	034036	98-4250	#99-4283							
MGMERR	016142	32-1688	33-1735	34-1775	#57-2079	58-2118	60-2216	61-2281	62-2301	62-2304
		64-2414	65-2485	66-2529	67-2617	70-2761	71-2831	77-3332	81-3472	83-3571
		83-3581	84-3666	84-3676	85-3779	87-3869				
MGMFLG	016144	#57-2080	*57-2094	*58-2122						
MMRO	= 177572	#15-1201	28-1594	*28-1602	*58-2124	*60-2167	*60-2198	*61-2238	*61-2269	*62-2297
		*73-2854	*73-2863	*73-2882	*73-2887	*73-2892	*73-2897	*73-2902	*73-2911	*73-2916
		*73-2922	*73-2927	*73-2932	*73-2937	*73-2942	*73-2947	*73-2952	*73-2957	*73-2963
		*73-2968	*73-2972	*73-2977	*73-2982	*73-2986	*73-2992	*73-2997	*74-3027	*74-3033
		*74-3037	*74-3043	*74-3055	*74-3081	*74-3087	*74-3093	*74-3099	*74-3103	*74-3108
		*74-3114	*74-3125	*74-3131	*74-3136	*74-3142	*74-3149	*74-3155	*74-3162	*74-3165
		*74-3172	*74-3175	*75-3191	*75-3197	*75-3203	*75-3206	*75-3211	*75-3215	*75-3221
		*75-3224	*75-3228	*75-3231	*76-3247	*76-3253	*76-3259	*76-3262	*76-3267	*76-3271
		*76-3276	*76-3279	*76-3284	*76-3287	*77-3307	77-3321	*77-3331	*79-3361	90-4003
		92-4075	94-4125	97-4219	99-4283	*100-4305	*100-4308	*101-4328	*101-4331	*102-4351
		*102-4354	*103-4374	*103-4377	*105-4416	*105-4422	*105-4441	*105-4443	*105-4449	*105-4454
		*105-4464	*105-4466	*105-4470	*105-4472	*105-4476	*105-4478	*105-4482	*105-4485	*105-4489
		*109-4599								
MMR1	= 177574	#15-1202	28-1595	77-3322	90-4009	92-4076	94-4126	97-4220	99-4284	
MMR2	= 177576	#15-1203	28-1596	77-3323	90-4010	92-4077	94-4127	97-4221	99-4285	
MMR3	= 172516	#15-1204	*28-1582	*28-1606	*58-2125	*73-2864	*75-3189	*75-3232	*76-3245	*76-3288
		*77-3312	*77-3320	*89-3971	*89-4004	90-4011	*91-4034	*91-4071	*93-4084	*93-4121
		*96-4180	*96-4212	*98-4244	*98-4277	*100-4301	*101-4324	*102-4347	*103-4370	*104-4396
		*106-4518	*107-4536	*108-4554	*109-4569	*109-4600				
MMVEC	= 000250	#15-1198	*32-1686	*32-1688	*33-1733	*33-1735	*34-1773	*34-1775	*58-2118	*58-2119
		*60-2162	*60-2216	*61-2233	*61-2281	*62-2296	*61-2301	*62-2304	*64-2359	*64-2372
		*64-2414	*65-2430	*65-2443	*65-2485	*66-2507	*66-2529	*67-2567	*67-2573	*67-2617
		*73-2861	*77-3302	*77-3303	*77-3332	*77-3333	*81-3470	*81-3472	*83-3568	*83-3571
		*83-3579	*83-3581	*84-3663	*84-3666	*84-3674	*84-3676	*85-3777	*85-3779	*87-3865
		*87-3869								
MTPILD	002676	*33-1724	*33-1725	#33-1734						
MTPILP	002654	#33-1728	33-1745	83-3583	84-3678	91-4036	93-4086			
MTPIPM	002656	#33-1729	*83-3584	*84-3679	*91-4037	*93-4087				
MTPITA	002720	*33-1726	#33-1738							
MTPITS	002626	#33-1722	83-3587	83-3596	83-3604	83-3612	83-3622	83-3631	83-3640	84-3683
		84-3692	84-3700	84-3708	84-3718	84-3727	84-3737	91-4041	91-4049	91-4057
		91-4066	93-4091	93-4099	93-4107	93-4116				
MTPIVC	002744	33-1733	#33-1747	*84-3680	*91-4038	*93-4088				
MTPIV1	030614	83-3568	83-3579	#83-3647						
MTPIV2	031260	84-3663	84-3674	84-3680	#84-3744					

SYMBOL	CROSS REFERENCE VALUE	REFERENCES	CREF	V01
		69-2697 70-2729 71-2777 73-2852 74-3008 75-3186 76-3242 77-3299 79-3359		
		81-3462 83-3563 84-3657 85-3768 87-3858 89-3962 91-4033 93-4081 95-4139		
		96-4169 98-4240 100-4300 101-4323 102-4346 103-4369 104-4392 106-4517 107-4535		
		108-4555 109-4567 110-4602		
SDPAR0	= 172260	#15-1198 27-1560 *104-4395 *104-4402		
SDPAR1	= 172262	#15-1198		
SDPAR2	= 172264	#15-1198		
SDPAR3	= 172266	#15-1198		
SDPAR4	= 172270	#15-1198 *96-4170		
SDPAR5	= 172272	#15-1198		
SDPAR6	= 172274	#15-1198		
SDPAR7	= 172276	#15-1198		
SDPDR0	= 172220	#15-1198		
SDPDR1	= 172222	#15-1198 *75-3187 *75-3198		
SDPDR2	= 172224	#15-1198		
SDPDR3	= 172226	#15-1198		
SDPDR4	= 172230	#15-1198 *89-3966 *96-4177 *98-4245		
SDPDR5	= 172232	#15-1198		
SDPDR6	= 172234	#15-1198		
SDPDR7	= 172236	#15-1198 27-1543		
SIPAR0	= 172240	#15-1198 27-1559 *68-2666 *68-2685 *106-4521 *106-4526		
SIPAR1	= 172242	#15-1198		
SIPAR2	= 172244	#15-1198		
SIPAR3	= 172246	#15-1198 *60-2154		
SIPAR4	= 172250	#15-1198 *60-2155 *79-3363		
SIPAR5	= 172252	#15-1198		
SIPAR6	= 172254	#15-1198		
SIPAR7	= 172256	#15-1198 27-1562		
SIPDR0	= 172200	#15-1198 27-1541		
SIPDR1	= 172202	#15-1198		
SIPDR2	= 172204	#15-1198		
SIPDR3	= 172206	#15-1198 *75-3199 *75-3233		
SIPDR4	= 172210	#15-1198 *60-2164 *61-2235 *83-3564 *85-3775 *85-3843 *93-4082 *96-4174		
SIPDR5	= 172212	#15-1198		
SIPDR6	= 172214	#15-1198		
SIPDR7	= 172216	#15-1198		
SR0	= 177572	#15-1198 15-1201 57-2090 *57-2092 60-2185 61-2254 62-2306 62-2309 *62-2326		
		64-2380 *64-2396 64-2403 *64-2405 65-2451 *65-2467 65-2474 *65-2476 *66-2527		
		67-2571 67-2576 67-2592 *67-2606 70-2743 *70-2759 71-2794 *71-2796 80-3441		
		*80-3442 82-3541 *82-3543 83-3649 *83-3651 84-3746 *84-3748 86-3850 *86-3852		
		88-3940 *88-3942		
SR1	= 177574	#15-1198 15-1202		
SR2	= 177576	#15-1198 15-1203 57-2091 60-2184 61-2255 62-2303 64-2381 64-2404 65-2452		
		65-2475 66-2515 67-2549 67-2558 67-2572 67-2577 67-2596 67-2607 70-2746		
		71-2795 80-3441 82-3542 83-3650 84-3747 86-3851 88-3941		
SR3	= 177516	#15-1198 15-1204		
SSP	= 0000006	#15-1206 *58-2112 *68-2670 *68-2687 79-3570 *83-3569 83-3570 *83-3580 85-3780		
		*85-3782 *104-4398 105-4426 *106-4522 *107-4540 *108-4557		
STACK	= 001100	#15-1197 15-1211 15-1212 15-1213 58-2106 58-2110 95-4142 95-4155		
START	= 020000	17-1246 51-1911 #58-2106		
STKMT	= 177774	#15-1197		
SUPERM	= 035340	105-4446 #105-4507		

SYMBOL	CROSS REFERENCE	REFERENCES	CREF	V01						
SUPSTK	= 000700	#15-1212	58-2112	68-2670	68-2687	79-3374	83-3578	85-3780	104-4398	106-4522
SWR	001140	#20-1249	36-1785	36-1785	36-1785	36-1785	37-1787	37-1787	37-1787	37-1787
		40-1882	40-1882	51-1911	51-1911	58-2106	*58-2106	58-2106	*58-2106	*58-2106
		58-2107	105-4493	110-4609						
SWREG	000176	#17-1246	40-1882	40-1882	58-2106	58-2107				
SW0	= 000001	#15-1197								
SW00	= 000001	#15-1197	15-1197							
SW01	= 000002	#15-1197	15-1197							
SW02	= 000004	#15-1197	15-1197							
SW03	= 000010	#15-1197	15-1197							
SW04	= 000020	#15-1197	15-1197							
SW05	= 000040	#15-1197	15-1197							
SW06	= 000100	#15-1197	15-1197							
SW07	= 000200	#15-1197	15-1197							
SW08	= 000400	#15-1197	15-1197							
SW09	= 001000	#15-1197	15-1197							
SW1	= 000002	#15-1197								
SW10	= 002000	#15-1197								
SW11	= 004000	#15-1197								
SW12	= 010000	#15-1197								
SW13	= 020000	#15-1197								
SW14	= 040000	#15-1197								
SW15	= 100000	#15-1197								
SW2	= 000004	#15-1197								
SW3	= 000010	#15-1197								
SW4	= 000020	#15-1197								
SW5	= 000040	#15-1197								
SW6	= 000100	#15-1197								
SW7	= 000200	#15-1197								
SW8	= 000400	#15-1197								
SW9	= 001000	#15-1197								
TBIT	= 000020	#15-1208	29-1617	29-1622	30-1634					
TBITPS	001274	#20-1249	*29-1620	30-1634	30-1636	*30-1637	*58-2123			
TBITVE	= 000014	#15-1197	*58-2106	*58-2106						
TESTNO	001254	#20-1249	*37-1787	54-2003	54-2004	54-2005	54-2006	54-2007	54-2008	54-2009
		54-2010	54-2011	54-2012	54-2013	54-2014	54-2015	54-2016	54-2017	54-2018
		54-2019	54-2020	54-2021	54-2022	54-2023	54-2024	54-2025	54-2026	54-2027
		54-2028	54-2029	54-2030	54-2031	54-2032				
		*56-2053	58-2116	68-2689	70-2760	71-2829				
		#55-2054	*56-2065	*58-2121						
TIMERR	016070	#15-1197								
TIMFLG	016072	#29-1617	68-2633	71-2778	77-3300					
TKVEC	= 000060	#30-1634	68-2690	71-2833						
TOFF	002356	#15-1197								
TON	002412	#20-1249	*28-1592	28-1605	54-2003	54-2004	*56-2061	56-2068	*57-2087	57-2096
TPVEC	= 000064	*64-2401	64-2411	*65-2472	65-2482	*80-3438	80-3446	*82-3539	82-3547	*83-3647
TRAPPC	001260	83-3655	*84-3744	84-3752	*86-3848	86-3856	*88-3938	88-3946	*90-4012	90-4017
		*97-4222	97-4227	*99-4286	99-4291					
		#20-1249	*28-1593	28-1604	54-2003	54-2004	*56-2062	56-2067	*57-2088	57-2095
TRAPPS	001262	*64-2402	64-2410	*65-2473	65-2481	*80-3439	80-3445	*82-3540	82-3546	*83-3648
		83-3654	*84-3745	84-3751	*86-3849	86-3855	*88-3939	88-3945	*90-4013	90-4016
		*97-4223	97-4226	*99-4287	99-4290					

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES
UDPAR3	=	177666	#15-1198
UDPAR4	=	177670	#15-1198 *98-4241
UDPAR5	=	177672	#15-1198
UDPAR6	=	177674	#15-1198
UDPAR7	=	177676	#15-1198
UDPDR0	=	177620	#15-1198
UDPDR1	=	177622	#15-1198 *76-3243 *76-3254
UDPDR2	=	177624	#15-1198
UDPDR3	=	177626	#15-1198
UDPDR4	=	177630	#15-1198 *89-3967 *96-4175 *96-4215
UDPDR5	=	177632	#15-1198
UDPDR6	=	177634	#15-1198
UDPDR7	=	177636	#15-1198
UIPAR0	=	177640	#15-1198 27-1565 *68-2640 *68-2659 *108-4556 *108-4561
UIPAR1	=	177642	#15-1198
UIPAR2	=	177644	#15-1198
UIPAR3	=	177646	#15-1198 *60-2156 *71-2779
UIPAR4	=	177650	#15-1198 *60-2157 *71-2780 *81-3464 *84-3659
UIPAR5	=	177652	#15-1198
UIPAR6	=	177654	#15-1198
UIPAR7	=	177656	#15-1198
UIPDR0	=	177600	#15-1198 27-1545
UIPDR1	=	177602	#15-1198
UIPDR2	=	177604	#15-1198
UIPDR3	=	177606	#15-1198 *71-2781 *71-2832 *76-3255 *76-3289
UIPDR4	=	177610	#15-1198 *60-2165 *61-2236 *71-2782 *84-3658 *87-3866 *87-3934 *89-3968 *93-4083
UIPDR5	=	177612	#15-1198
UIPDR6	=	177614	#15-1198
UIPDR7	=	177616	#15-1198
USESTK	=	000600	#15-1213 58-2114 68-2644 68-2661 71-2800 81-3476 84-3673 87-3870 107-4540
USP	=	%000006	#15-1207 *58-2114 *68-2644 *68-2661 *71-2789 *71-2800 81-3471 *84-3664 84-3665
VIRT1		001276	#20-1249
WASR6		001256	#20-1249 54-2003 54-2004 *56-2063 *57-2089
WASSRO		001264	#20-1249 *28-1594 28-1597 54-2004 54-2006 54-2008 54-2010 54-2013 54-2014
			54-2016 54-2017 54-2021 54-2023 54-2026 *57-2090 *60-2183 60-2185 *61-2254
			61-2256 *62-2309 *64-2380 64-2383 *64-2403 *65-2451 65-2454 *65-2474 *67-2576
			67-2578 *67-2592 67-2593 *70-2743 70-2746 *71-2794 71-2813 *80-3440 *82-3541
			*83-3649 *84-3746 *86-3850 *88-3940 *90-4008 *97-4219 *99-4283
WASSR1		001266	#20-1249 *28-1595 54-2023 54-2026 *90-4009 *97-4220 *99-4284
WASSR2		001270	#20-1249 *28-1596 54-2004 54-2007 54-2008 54-2011 54-2012 54-2013 54-2014
			54-2016 54-2017 54-2023 54-2026 *57-2091 *60-2184 60-2192 *61-2255 61-2263
			*62-2303 62-2312 62-2314 *64-2381 64-2390 *64-2404 *65-2452 65-2461 *65-2475
			*66-2515 66-2516 *67-2549 67-2551 *67-2558 67-2560 *67-2577 67-2581 *67-2596
			67-2597 *67-2607 67-2609 *70-2744 70-2750 *71-2795 71-2816 *80-3441 *82-3542
			*83-3650 *84-3747 *86-3851 *88-3941 *90-4010 *97-4221 *99-4285
WASSR3		001272	#20-1249 *90-4011
WBIT	=	000100	#15-1209
\$APTHD	=	000204	19-1248 #19-1248
\$ASTAT	=	*****	44-1904 44-1904

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES	CREF	V01						
\$ESCAP		001212	#20-1249	*36-1785	37-1787	37-1787	38-1787	38-1787	*58-2106		
\$ETABL		001244	#20-1249								
\$ETEND		001254	19-1248	#20-1249							
\$FATAL		001236	#20-1249	*44-1904							
\$FFLG		006242	*44-1904	*44-1904	44-1904	*44-1904	#44-1904				
\$FILLC		001156	#20-1249	43-1903	43-1903	43-1903					
\$FILLS		001155	#20-1249	43-1903	43-1903						
\$GDDAT		001124	#20-1249								
\$GET42		036224	110-4609	110-4609	#110-4609						
\$GTSWR		004356	#40-1882	50-1910	50-1910						
\$IPD	=	000000	15-1195	15-1195	15-1195						
\$HIBTS		000204	#19-1248								
\$ICNT		001104	#20-1249								
\$ILLUP		007452	51-1911	51-1911	#51-1911						
\$INTAG		001135	#20-1249	40-1882	40-1882	40-1882	40-1882				
\$ITEMB		001114	#20-1249	*37-1787	37-1787	37-1787	*37-1787	37-1787	38-1787	38-1787	39-1792
\$LF		001222	#20-1249	38-1787	38-1787	40-1882	40-1882	40-1882	43-1903	43-1903	
\$LFLG		006241	*44-1904	#44-1904							
\$LOOP		036320	110-4609	#110-4609							
\$LPADR		001106	#20-1249	*36-1785	*36-1785	36-1785	36-1785	36-1785	*58-2106		
\$LPERR		001110	#20-1249	36-1785	*36-1785	36-1785	36-1785	37-1787	*58-2106	*60-2166	*61-2237
			*62-2295	*64-2361	*64-2365	*64-2371	*65-2432	*65-2436	*65-2442	*66-2508	*67-2548
			*67-2557	*67-2566	*68-2634	*69-2699	*70-2735	*71-2787	*73-2862	*73-2886	*73-2895
			*73-2909	*73-2920	*73-2931	*73-2940	*73-2950	*73-2960	*73-2971	*73-2980	*73-2989
			*74-3022	*74-3036	*74-3047	*74-3086	*74-3098	*74-3107	*74-3124	*74-3134	*74-3148
			*74-3158	*74-3168	*75-3188	*75-3202	*75-3209	*75-3218	*75-3227	*76-3244	*76-3258
			*76-3265	*76-3274	*76-3282	*77-3501	*79-3368	*79-3384	*81-3468	*81-3485	*83-3583
			*84-3678	*85-3765	*85-3792	*87-3859	*87-3883	*89-3974	*91-4036	*93-4086	*95-4163
			*98-4248	*105-4412							
\$MAIL		001224	19-1248	19-1248	#20-1249	36-1785	37-1787	43-1903	58-2106	58-2107	
\$MHADR		000206	#19-1248								
\$MFLG		006240	*44-1904	44-1904	*44-1904	#44-1904					
\$MNEW		005271	40-1882	#40-1882							
\$MSGAD		001240	#20-1249	*44-1904	44-1904						
\$MSGLG		001242	#20-1249	*44-1904							
\$MSGTY		001224	#20-1249	44-1904	*44-1904	44-1904	*44-1904				
\$MSWR		005260	40-1882	#40-1882							
\$MXCNT		001306	#20-1249								
\$NULL		001154	#20-1249	43-1903	43-1903	43-1903					
\$NWTST	=	000001	#59-2150	59-2150	#60-2150	60-2150	#60-2226	60-2226	#61-2226	61-2226	#61-2294
			61-2294	#62-2294	62-2294	#63-2354	63-2354	#64-2354	64-2354	#64-2427	64-2427
			#65-2427	65-2427	#65-2500	65-2500	#66-2500	66-2500	#66-2544	66-2544	#67-2544
			67-2544	#67-2632	67-2632	#68-2632	68-2632	#68-2697	68-2697	#69-2697	69-2697
			#69-2729	69-2729	#70-2729	70-2729	#70-2777	70-2777	#71-2777	71-2777	#72-2852
			72-2852	#73-2852	73-2852	#73-3008	73-3008	#74-3008	74-3008	#74-3186	74-3186
			#75-3186	75-3186	#75-3242	75-3242	#76-3242	76-3242	#76-3299	76-3299	#77-3299
			77-3299	#78-3359	78-3359	#79-3359	79-3359	#80-3462	80-3462	#81-3462	81-3462
			#82-3563	82-3563	#83-3563	83-3563	#83-3657	83-3657	#84-3657	84-3657	#84-3768
			84-3768	#85-3768	85-3768	#86-3858	86-3858	#87-3858	87-3858	#88-3962	88-3962
			#89-3962	89-3962	#90-4033	90-4033	#91-4033	91-4033	#92-4081	92-4081	#93-4081
			93-4081	#94-4139	94-4139	#95-4139	95-4139	#95-4169	95-4169	#96-4169	96-4169

SYMBOL	CROSS REFERENCE VALUE	REFERENCES
\$OCNT	006542	#97-4240 97-4240 #98-4240 98-4240 #99-4300 99-4300 #100-4300 100-4300 #100-4323
\$OCTVL	007170	100-4323 #101-4323 101-4323 #101-4346 101-4346 #102-4346 102-4346 #102-4369 102-4369
\$OMODE	006544	#103-4369 103-4369 #103-4392 103-4392 #104-4392 104-4392 #105-4517 105-4517 #106-4517
\$OVR	003252	106-4517 #106-4535 106-4535 #107-4535 107-4535 #107-4553 107-4553 #108-4553 108-4553
\$PASS	001232	#108-4567 108-4567 #109-4567 109-4567
\$PASTM	000212	*46-1906 *46-1906 #46-1906
\$PWRAD	007434	49-1909 #49-1909
\$PWRDN	007274	*46-1906 *46-1906 46-1906 *46-1906 *46-1906 #46-1906
\$PWRMG	007430	36-1785 36-1785 36-1785 #36-1785
\$PWRUP	007346	#20-1249 41-1886 *58-2106 *110-4609 *110-4609 110-4609 110-4609 110-4609 110-4609
\$QUES	001220	#19-1248
\$RDCHR	004650	#51-1911
\$RDDEC	= *****	#51-1911 51-1911 58-2106
\$RDLIN	= 004760	#51-1911
\$RDOCT	= *****	51-1911 #51-1911
\$RDSZ	= 000010	#51-1911
\$REGAD	001160	#20-1249 38-1787 38-1787 40-1882 40-1882 40-1882 40-1882 43-1903 43-1903
\$REGO	001162	#40-1882 50-1910 50-1910
\$REG1	001164	50-1910
\$REG2	001166	#40-1882 40-1882
\$REG3	001170	#20-1249 *37-1787 54-2008 54-2009 54-2010 54-2011 54-2016 54-2022 54-2024
\$REG4	001172	54-2025 54-2028 54-2031
\$REG5	001174	#20-1249 *37-1787 54-2012 54-2015 54-2016 54-2017 54-2020 54-2021 54-2024
\$RESRE	007030	54-2025
\$RTNAD	036322	#20-1249 *37-1787 54-2005 54-2006 54-2007 54-2010 54-2015 54-2020 54-2025
\$RTRN	036316	40-1249 *37-1787 54-2006 54-2011 54-2017 54-2020 54-2027
\$R2A	= *****	40-1249 *37-1787 54-2007 54-2008 54-2009 54-2010 54-2011
\$SAVRF	006772	#20-1249 *37-1787 50-1910
\$SAVR6	007456	*51-1911 51-1911 *51-1911 *51-1911 #51-1911
\$SCOPE	003042	#36-1785 58-2106
\$SETUP	= 000137	#16-1245 16-1245 #16-1245 16-1245 #16-1245 16-1245 #16-1245 16-1245 #16-1245
\$STUP	= 177777	16-1245 #16-1245 16-1245 #16-1245 #16-1245 16-1245 #16-1245 16-1245 #16-1245
\$SVLAD	003216	#16-1245 #16-1245 16-1245 #16-1245 #16-1245 16-1245 #16-1245 #16-1245 16-1245
\$SVPC	= 000204	36-1785 36-1785 #36-1785
\$SWR	= 173400	#18-1247 18-1247
		#15-1183 15-1195 15-1196 15-1196 15-1196 15-1196 15-1196 15-1196 15-1196
		15-1196 20-1249 20-1249 20-1249 36-1785 36-1785 36-1785 36-1785 36-1785
		36-1785 36-1785 36-1785 36-1785 36-1785 36-1785 36-1785 36-1785 36-1785
		36-1785 36-1785 36-1785 36-1785 36-1785 36-1785 36-1785 36-1785 36-1785
		37-1787 37-1787 37-1787 37-1787 37-1787 37-1787 37-1787 37-1787 37-1787
		58-2106 58-2106 58-2106 58-2106 58-2106 58-2106 58-2106 58-2106 58-2106
		60-2150 61-2226 62-2294 64-2354

CKKTBD	CREATED BY	MACRO	ON	12-JAN-82	AT	12:24	PAGE	16	I	13	
SYMBOL	CROSS REFERENCE	VALUE	REFERENCES	SEQUENCE	164	CREF	V01				
			65-2427	66-2500	67-2544	68-2632	69-2697	70-2729	71-2777	73-2852	74-3008
			75-3186	76-3242	77-3299	79-3359	81-3462	83-3563	84-3657	85-3768	87-3858
			89-3962	91-4033	93-4081	95-4139	96-4169	98-4240	100-4300	101-4323	102-4346
			103-4369	104-4392	106-4517	107-4535	108-4553	109-4567	110-4609	110-4609	110-4609
			110-4609	110-4609							
\$SWREG		001246	#20-1249	58-2106							
\$SWRMK	=	000000	15-1196	15-1196	15-1196	15-1196	15-1196	15-1196	15-1196	15-1196	15-1196
			36-1785	36-1785	36-1785	36-1785	36-1785	36-1785	36-1785	36-1785	36-1785
			36-1785								
\$TBIT		001310	#20-1249	*51-1911	*58-2106	*110-4609	110-4609	110-4609			
\$TFSTN		001230	#20-1249	*36-1785	39-1880						
\$TKB		001146	#20-1249	40-1882	40-1882	40-1882	40-1882	40-1882	40-1882	43-1903	43-1903
			43-1903	43-1903							
\$TKS		001144	#20-1249	40-1882	40-1882	40-1882	40-1882	40-1882	40-1882	40-1882	40-1882
			43-1903	43-1903							
\$TMP0		001176	#20-1249	*32-1681	32-1693	32-1700	54-2005	54-2006	54-2007	54-2013	54-2018
			54-2029	54-2031	54-2032	*60-2169	60-2199	60-2204	*61-2240	61-2270	61-2275
			*67-2571	67-2578	*71-2802	*71-2808	*71-2812	*71-2815	*71-2819	71-2820	*105-4483
			*109-4582								
\$TMP1		001200	#20-1249	*32-1682	32-1694	32-1701	54-2032	*67-2568	*67-2580	*67-2583	67-2584
			*67-2590	*67-2595	*67-2599	67-2600	*70-2742	*70-2748	*70-2752	70-2753	*109-4578
			109-4585								
\$TMP2		001202	#20-1249	54-2013	*67-2572	67-2581	*79-3414	79-3415	*79-3428	79-3429	*81-3515
			81-3516	*81-3529	81-3530	83-3620	*83-3621	83-3625	*83-3638	83-3639	83-3642
			84-3716	*84-3717	84-3721	*84-3734	84-3736	84-3739	*85-3822	85-3823	*85-3836
			85-3837	*87-3913	87-3914	*87-3927	87-3928	*109-4590			
\$TMP3		001204	#20-1249	*100-4303	100-4307	*101-4326	101-4330	*102-4349	102-4353	*103-4372	103-4376
			*109-4587	109-4594							
\$TMP4		001206	#20-1249	*39-1855	39-1857	*109-4588	109-4593				
\$TMP5		001210	#20-1249	*39-1856	*41-1886	*41-1887	41-1893	*109-4589	109-4592		
\$TN	=	000046	#15-1184	15-1195	59-2150	60-2150	#60-2150	60-2226	61-2226	#61-2226	61-2294
			62-2294	#62-2294	63-2354	64-2354	#64-2354	64-2427	65-2427	#65-2427	65-2500
			66-2500	#66-2500	66-2544	67-2544	#67-2544	67-2632	68-2632	#68-2632	63-2697
			69-2697	#69-2697	69-2715	69-2729	70-2729	#70-2729	70-2777	71-2777	#71-2777
			72-2852	73-2852	#73-2852	73-3008	74-3008	#74-3008	74-3186	75-3186	#75-3186
			75-3242	76-3242	#76-3242	76-3299	77-3299	#77-3299	78-3359	79-3359	#79-3359
			79-3435	80-3462	81-3462	#81-3462	81-3536	82-3563	83-3563	#83-3563	83-3645
			83-3657	84-3657	#84-3657	84-3742	84-3768	85-3768	#85-3768	85-3845	86-3858
			87-3858	#87-3858	87-3935	88-3962	89-3962	#89-3962	89-4005	90-4033	91-4033
			#91-4033	91-4072	92-4081	93-4081	#93-4081	93-4122	94-4139	95-4139	#95-4139
			95-4169	96-4169	#96-4169	96-4216	97-4240	98-4240	#98-4240	98-4280	99-4300
			100-4300	#100-4300	100-4314	100-4323	101-4323	#101-4323	101-4337	101-4346	102-4346
			#102-4346	102-4360	102-4369	103-4369	#103-4369	103-4382	103-4392	104-4392	#104-4392
			105-4517	106-4517	#106-4517	106-4535	107-4535	#107-4535	107-4553	108-4553	#108-4553
			108-4567	109-4567	#109-4567						
\$TPB		001152	#20-1249	43-1903	43-1903	43-1903					
\$TPFLG		001157	#20-1249	43-1903	43-1903	43-1903					
\$TPS		001150	#20-1249	43-1903	43-1903	43-1903					
\$TRAP		007206	#50-1910	58-2106							
\$TRAP2		007230	#50-1910	50-1910							
\$TRP	=	000015	#50-1910	50-1910	50-1910	50-1910	50-1910	#50-1910	50-1910	50-1910	50-1910
			50-1910	#50-1910	50-1910	50-1910	50-1910	50-1910	#50-1910	50-1910	50-1910

SYMBOL CROSS REFERENCE
SYMBOL VALUE

REFERENCES

CREF V01

SYMBOL	CROSS REFERENCE VALUE	REFERENCES	CREF	V01
		50-1910	50-1910	50-1910
		50-1910	50-1910	50-1910
		50-1910	50-1910	50-1910
		#50-1910	50-1910	50-1910
		50-1910	#50-1910	50-1910
		50-1910	#50-1910	50-1910
\$TRPAD	007242	50-1910	50-1910	50-1910
\$STSM	000210	#19-1248	50-1910	50-1910
\$STSTM	001102	#20-1249	36-1785	*36-1785
		37-1787	38-1787	36-1785
		40-1882	40-1882	41-1889
\$TTYIN	005236	#45-1905	50-1910	*110-4609
\$TYPBN	006244	#47-1907	50-1910	40-1882
\$TYPDS	006546	#43-1903	44-1904	#40-1882
\$TYPE	005432	40-1882	43-1903	50-1910
\$TYPEC	005644	43-1903	43-1903	43-1903
\$TYPEX	005774	#46-1906	50-1910	#43-1903
\$TYPOC	006344	46-1906	#46-1906	50-1910
\$TYPON	006360	#46-1906	50-1910	50-1910
\$TYPOS	006320	#20-1249	50-1910	
\$UNIT	001236	#19-1248		
\$UNITM	000214	#20-1249		
\$USWR	001250	43-1903	43-1903	
\$XOFF	= 000023	40-1882	43-1903	43-1903
\$XON	= 000021	#36-1785		
\$XTSTR	= 003054	#110-4609	#110-4609	110-4609
\$GET4	= 000001	*46-1906	*46-1906	46-1906
\$OFILL	= 006543	36-1785	37-1787	#46-1906
\$OCAI	= *****	44-1904	44-1904	
.\$ASTA	= *****	#19-1248	19-1248	
.\$X	= 000204			

MACRO CROSS REFERENCE

MACRO NAME	REFERENCES									
COMMEN	#15-1197									
ENDCOM	#15-1197									
ESCAPE	#15-1197									
GETPRI	#15-1197	110-4609								
GETSWR	#15-1197	#58-2107	58-2107							
MES350	#99-4293	100-4300								
MES351	#100-4316	#101-4323								
MES352	#101-4339	102-4346								
MES353	#102-4362	#103-4369								
MES354	#103-4384	#104-4392								
MES355	#105-4509	106-4517								
MES356	#106-4527	#107-4535								
MES357	#107-4545	#108-4553	#108-4562	#109-4567						
MSG30	#59-2142	60-2150								
MSG31	#60-2218	#61-2226								
MSG31A	#61-2283	62-2294								
MSG32	#63-2343	#64-2354								
MSG33	#64-2416	65-2427								
MSG34	#65-2487	66-2500								
MSG35	#66-2531	#67-2544								
MSG36	#67-2619	68-2632								
MSG36A	#68-2691	69-2697								
MSG37	#69-2718	#70-2729								
MSG40	#70-2763	#71-2777								
MSG40A	#72-2837	#73-2852								
MSG40B	#73-2998	#74-3008								
MSG40C	#74-3178	#75-3186								
MSG40D	#75-3234	76-3242								
MSG40E	#78-3345	#79-3359								
MSG41	#80-3448	81-3462								
MSG41A	#82-3549	#83-3563	#84-3657							
MSG42	#84-3754	#85-3768	#87-3858							
MSG43	#88-3948	89-3962								
MSG43A	#90-4019	#91-4033	#93-4081							
MSG44	#94-4131	95-4139								
MSG45	#95-4156	#96-4169								
MSG46	#97-4229	98-4240								
MSG47	#15-1197									
MULT	#15-1178	#15-1197	#59-2150	#60-2226	#61-2294	#63-2354	#64-2427	#65-2500	#66-2544	#67-2632
NEWTST	#68-2697	#69-2729	#70-2777	#72-2852	#73-3008	#74-3186	#75-3242	#76-3299	#78-3359	#81-3462
	#82-3563	#83-3657	#84-3768	#86-3858	#88-3962	#90-4033	#92-4081	#94-4139	#95-4169	#97-4240
	#99-4300	#100-4323	#101-4346	#102-4369	#103-4392	#105-4517	#106-4535	#107-4553	#108-4567	
POP	#15-1197	#44-1904	#44-1904	#47-1907	#48-1908	#51-1911	#51-1911			
PUSH	#15-1197	44-1904	44-1904	44-1904	47-1907	48-1908	51-1911	51-1911		
REPORT	#15-1197									
SAVR	#15-1166	#37-1787								
SETPRI	#15-1197									
SETTRA	#50-1910	50-1910	50-1910	50-1910	50-1910	50-1910	50-1910	50-1910	50-1910	50-1910
	50-1910	50-1910	50-1910							
SETUP	#15-1197	58-2106								
SKIP	#15-1197	69-2715	79-3435	81-3536	83-3645	84-3742	85-3845	87-3935	89-4005	91-4072

MACRO CROSS REFERENCE	SEQUENCE	CREF	V01
MACRO NAME	95-4122	96-4216	98-4280
SLASH	#15-1197		100-4314
SPACE	#15-1163	#15-1197	101-4337
STARS	#15-1197	18-1247	102-4360
	28-1569	28-1580	103-4382
	33-1706	33-1721	
	43-1903	44-1904	
	56-2045	56-2052	
	62-2294	62-2294	
	67-2544	67-2544	
	73-2852	73-2852	
	78-3338	78-3343	
	85-3768	85-3768	
	95-4139	95-4139	
	101-4323	101-4323	
	103-4369	103-4369	
	107-4535	107-4535	
	110-4609		
SWRSU	#15-1197	#58-2106	#58-2106
TRMTRP	#50-1910		
TYPBIN	#15-1197		
TYPDEC	#15-1197	110-4609	110-4609
TYPNAM	#15-1197	#58-2107	
TYPNUM	#15-1197		
TYPOCS	#15-1197		
TYPOCT	#15-1197	40-1882	
TYPTXT	#15-1197	58-2108	110-4609
USER	#15-1223	20-1249	
\$\$\$CMRE	#19-1249	20-1249	20-1249
\$\$\$CTM	#19-1249	20-1249	20-1249
\$\$\$LSLA	#15-1197		
\$\$\$NEWT	#15-1178	#15-1197	#59-2150
	#68-2697	#69-2729	#70-2777
	#82-3553	#83-3657	#84-3768
	#99-4300	#100-4323	#101-4346
\$\$\$SET	#50-1910	#50-1910	#50-1910
	#50-1910	#50-1910	#50-1910
\$\$\$SETM	#58-2106	58-2106	
\$\$\$SETJ	#58-2106	58-2106	
\$\$\$SKIP	#15-1197	69-2715	79-3435
	93-4122	96-4216	81-3536
	#15-1178	15-1197	83-3645
.EQUAT	#15-1160	#15-1177	84-3747
.EQUIV	#15-1197	#15-1197	85-3845
	#15-1197	#15-1197	87-3935
	#15-1197	#15-1197	89-4005
	#15-1206	#15-1207	91-4072
.HEADF	#15-1178	15-1195	
.KTT1	#15-1178	15-1198	
.SETUP	#15-1178	16-1245	
.SWRHI	#15-1178	15-1196	
.SWRLO	#15-1196		
\$.ACT1	#15-1179	#17-1247	

MACRO CROSS REFERENCE

MACRO NAME	REFERENCES
.\$APT8	#20-1249 #20-1249
.\$APTH	#15-1181 #18-1248
.\$APTY	#15-1181 43-1904
.\$CATC	#15-1179 16-1246
.\$CMTA	#15-1179 19-1249
.\$DB20	#15-1182 #48-1909
.\$EOP	#15-584 110-4609
.\$ERRO	#15-771 37-1787
.\$POWE	#15-1180 50-1911
.\$READ	#15-1181 #40-1882
.\$SAVE	#15-1182 #47-1908
.\$SCOP	#15-950 #36-1785
.\$TRAP	#15-1180 49-1910
.\$TYPB	#15-1181 #44-1905
.\$TYPD	#15-1180 #46-1907
.\$TYPE	#15-1179 #42-1903
.\$TYPO	#15-1180 45-1906

