

IBM IBM 3704 and 3705
Program Reference
Handbook

GY30-3012-5
File No. S360/370-30

IBM Corporation, Publications Center, P.O. Box 12195,
Research Triangle Park, North Carolina 27709



IBM IBM 3704 and 3705
Program Reference
Handbook

GY30-3012-5
File No. S360/370-30

IBM Corporation, Publications Center, P.O. Box 12195,
Research Triangle Park, North Carolina 27709

Programs supported by this handbook:

Program Name	Handbook Reference
Network Control Program/OS, Version 1 (V1M2)	NCP1
Network Control Program/VS, Version 2 (V2M1)	NCP2
Network Control Program/VS, Version 5 (V5M0)	NCP #
Emulation Program (V3M0)	EP

Summary of Amendments for GY30-3012-5

Previous changes in this manual include:

- Support for Network Control Program/VS, Version 4.1.
(Includes NCP 3.2, NCP 4.0, and SDLC/BSC Path Function.)
- Support for Emulation Program V2M3.
- Additional Network Commands.
- NCP exception responses.
- 2848/2260 line character codes.
- EBCDIC line character codes.
- Interface addressing.
- Support for Network Control Program/VS, Version 5.
- Support for Emulation Program V3M0 (old base and new base)
- Type 4 channel adapter
- Type 3 communications scanner.

New information in this manual includes:

This is a maintenance revision and includes material previously announced or available. Airlines Line Control feature (ALC) is included for 3705 II.

Sixth Edition (September 1977)

This edition is a major revision of, and obsoletes the previous edition, GY30-3012-4. Refer to the Summary of Amendments for the changes to this edition. Vertical bars throughout the manual show where changes have been made.

Changes are periodically made to the information herein; before using this publication in connection with the operation of IBM systems, consult the IBM System/370 Bibliography, GA20-0001 and associated Technical Newsletters for the editions that are applicable and current.

Requests for copies of IBM publications should be made to your IBM representative or to the IBM branch office serving your locality.

This manual has been prepared by the IBM Systems Communications Division, Publications Center, Department E01, P.O. Box 12195, Research Triangle Park, North Carolina 27709. A form for reader's comments is provided at the back of this publication. If the form has been removed, comments may be sent to the above address. Comments become the property of IBM.

© Copyright International Business Machines Corporation 1974, 1975, 1976, 1977

Preface

This handbook provides the System Programmer and IBM Program Support Representative with reference information about the Network Control Program (NCP) and Emulation Program (EP). It is designed to provide quick access to often-used diagnostic and debug information. For a more comprehensive knowledge of a subject, refer to the publications listed under *Related Publications*.

Old base EP modules support the type 1 channel adapter, the type 1 communication scanner or up to four type 2 communication scanners.

New base EP modules support the type 4 channel adapter and the type 2/3 communication scanners. Additionally, support is provided for multiple type 4 channel adapters and multiple-subchannel access (MSLA).

This handbook consists of 20 sections. Sections 1 through 19 contain reference information. Section 20 is an *Index to NCP and EP Reference Material*. This index, in addition to providing page numbers to information in this handbook, points to other IBM publications containing reference information.

Related Publications

IBM 3705 Communications Controller, Network Control Program, PLM, Version 1, SY30-3003.

IBM 3704 and 3705 Communications Controllers, Network Control Program/VS, PLM, Version 2, SY30-3007.

IBM 3704 and 3705 Communications Controllers, Network Control Program/VS, PLM, Version 5, SY30-3013.

IBM 3704 and 3705 Communications Controllers, Emulation Program, PLM, SY30-3001. (old base)

IBM 370511 Communications Controller, Emulation Program, PLM, SY30-3031. (new base)

NCP/TCAM Network User's Guide, GC30-3009.

Guide to Using the IBM 3704 Control Panel, GA27-3086.

Guide to Using the IBM 3705 Control Panel, GA27-3087.

IBM 3704 and 3705 Communications Controllers, Network Control Program, Generation and Utilities, Guide and Reference Manual, GC30-3000.

IBM 3704 and 3705 Communications Controllers, Network Control Program/VS, Generation and Utilities, Guide and Reference Manual, GC30-3007.

IBM 3704 and 3705 Communications Controllers, Network Control Program/VS, Generation and Utilities, Guide and Reference Manual (for OS/VS and DOS/VS VTAM users), GC30-3008.

IBM 3704 and 3705 Communications Controllers, Emulation Program, Generation and Utilities, Guide and Reference Manual, GC30-3002.

IBM Systems Network Architecture Reference Summary, GA27-3136.



Contents

SECTION 1: DATA AREA RELATIONSHIPS		1-1
NCP Control Block Relationships for BSC/SS Lines		1-1
NCP# Control Block Relationships for SDLC Links		1-2
NCP Control Block Relationships for Switched BSC/SS Lines		1-3
NCP Control Block Relationships for Switched SDLC Links		1-3
NCP Pointers to the CCB		1-4
NCP Halfword Direct Addressable Pointers		1-5
Locating the NCP Address Trace Table		1-5
Control Block Relationships for NCP Line Trace		1-6
NCP Control Block Relationships for BHRs		1-6
EP Control Block Relationships - Type 2/3 Scanner		1-7
EP Control Block Relationships - Type 1 Scanner		1-7
SECTION 2: DATA AREA LAYOUTS		2-1
ACB Adapter Control Block for NCP		2-2
ACB Adapter Control Block for NCP#		2-3
ACU Auto-call Unit		2-4
ATB Address Trace Block		2-5
BCB Bit Control Block		2-6
BCU Block Control Unit		2-8
BH Buffer Prefix		2-10
BHD Block Handler Driver Table		2-11
BHR Block Handler Routine Extension to DVB		2-12
BHS Block Handler Set		2-14
BLU Basic Link Unit for NCP#		2-15
BST Block Handler Set Table		2-16
BTU Basic Transmission Unit		2-17
BUE Switched Backup Extension to DVB		2-19
CCB Character Control Block for EP, PEP		2-20
CCB Character Control Block for EP, PEP (DUMMY)		2-27
CCB Character Control Block for EP, PEP (Line Test)		2-28
CCB Character Control Block for NCP		2-30
CGP Cluster General Poll Extension to DVB		2-38
CHB Channel Control Block (NCP1, NCP2)		2-39
CHB Channel Control Block (NCP#)		2-43
CHB Channel Control Block Extension for Secondary Channel Adapter		2-46
CHCB Channel Control Block for EP, PEP		2-48
CHVT Channel Vector Table		2-50
CIE Call-In Extension to DVB		2-51
COB Channel Operation Block (NCP1, NCP2)		2-52
COB Channel Operation Block (NCP#)		2-56
COE Call-Out Extension to DVB		2-59
CRP Check Record Pool		2-60
Cmd. Tbl. Command Table		2-63
CTB Communications Line Timer and RAS Control Table		2-64
CUB Common Physical Unit Block		2-65
CYABARSW Barswap Table		2-68
DAE Device Addressing Extension to DVB		2-69
DIA Device Input Area		2-70
DRS Display/Refresh/Select Table		2-71
DVB Device Base Control Block		2-72
ECB Event Control Block		2-76

ECDDT	EBCDIC Character Decode Displacement Table	2-77
HWE	Extended Halfword Direct Addressables	2-78
ICE	ICE Routine Address Table	2-81
IDDT	Interface Disconnect Dispatcher Table	2-83
IDE	Identification List Entry	2-84
IDL	Identification List Header	2-85
IOB	Input/Output Block	2-86
LCB	Line Control Block	2-90
LCST	Line Control Selection Table	2-96
LGT	Line Group Table for PEP, EP	2-97
LGT	Line Group Table for NCP	2-98
LKB	Link Control Block	2-102
LLG	Logical Line Group Control Table	2-104
LNVT	Line Vector Table (for Type 1 Scanner)	2-105
LNVT	Line Vector Table for Type 2/3 Scanner)	2-106
Log Tbl.	Error Log Table	2-107
LTCB	Line Trace Control Block	2-109
LTS	Line Test Control Block (NCP1, NCP2)	2-114
LTS	Line Test Control Block (NCP#)	2-115
LUB	Logical Unit Block	2-117
LUV	Logical Unit Vector Table	2-120
LXB	Link XIO Control Block	2-121
L1B	Level 1 Control Block	2-126
OLLTCB	Online Line Test Control Block	2-128
OLLTLAB	Online Line Test Lookahead Buffer	2-129
OLLTCB	Online Line Test QCB Control Block for NCP#	2-131
OLTTCB	Online Terminal Test Control Block	2-132
PCB	Panel Control Block	2-133
PCF	PCF State Vector Table	2-134
PIU	Path Information Unit (FID0)	2-138
PIU	Path Information Unit (FID1)	2-141
PIU	Path Information Unit (FID2)	2-144
PIU	Path Information Unit (FID3)	2-147
Point. Tbl.	EP Pointer Table	2-150
PSB	Physical Services Block	2-151
QCB	Queue Control Block for EP	2-154
QCB	Queue Control Block for Input Queues	2-156
QCB	Queue Control Block for Work Queues	2-158
RVT	Resource Vector Table	2-159
RVT	Resource Vector Table (NCP#)	2-160
SCB	Station Control Block	2-161
SGE	Switched Line Group Entry	2-164
SGT	Switched Line Group Table	2-165
SID	Send ID	2-166
SIT	Sub-Area Index Table	2-167
SOT	Service Order Table for BSC/SS Lines	2-168
SOT	Service Order Table for SDLC	2-169
SPB	SDLC/BSC Path Control Block	2-170
SVT	Sub-area Vector Table for NCP#	2-171
TND	Time and Date Control Block	2-173
Trace Table (CA)	Channel Adapter Trace Table	2-174
Trace Table (Line)	2-176
Trace Table (EP, PEP)	2-177
Trace Control Table (EP, PEP)	2-180
TVS	Time Value Select Table	2-181

UCDDT	USASCII Character Decode Displacement Table	2-182
USCCB	Unassigned Subchannel Control Block	2-183
WU	WU Translate Table	2-184
XDA	Word Direct Addressable Storage	2-185
XDB	Byte Direct Addressable Storage	2-188
XDH	Halfword Direct Addressable Storage	2-194
SECTION 3: BTU COMMANDS AND MODIFIERS		3-1
SECTION 4: NCP CHANNEL		4-1
SECTION 5: NCP# NETWORK COMMANDS		5-1
SECTION 6: SDLC COMMANDS AND RESPONSES		6-1
SECTION 7: EP COMMAND CODES		7-1
SECTION 8: BTU RESPONSES		8-1
	System Response Byte	8-1
	Extended Response Byte	8-5
SECTION 9: NCP# EXCEPTION RESPONSES		9-1
SECTION 10: 3704 and 3705 INSTRUCTION SET		10-1
SECTION 11: INPUT/OUTPUT (EXTERNAL) REGISTER FUNCTIONS		11-1
SECTION 12: MODEM LEADS		12-1
SECTION 13: INTERFACE CONTROL WORD (ICW)		13-1
SECTION 14: NCP AND PEP ABEND AND EP HARDSTOP CODES		14-1
SECTION 15: LINE CHARACTER CODES		15-1
	ASCII Character Code (Even Parity)	15-1
	ASCII Character Code (Odd Parity)	15-2
	Baudot Character Code	15-3
	BCD Character Code 1	15-4
	BCD Character Code 2	15-5
	Correspondence Character Code 1	15-6
	Correspondence Character Code 2	15-7
	EBCD Character Code	15-8
	EBCDIC Character Code	15-9
	ITA2 Character Code	15-10
	KATAKANA Character Code	15-11
	Data Interchange (TWX) Character Code 1	15-12
	Data Interchange (TWX) Character Code 3	15-13
	ZSC3 Character Code	15-14

SECTION 16: EXAMPLES OF POLLING AND ADDRESSING	16-1
1030 Polling and Addressing	16-1
2740 Polling and Addressing	16-2
Telegraph Terminals	16-3
Models 33 and 35 Teletypewriters	16-4
BSC Terminals	16-5
SECTION 17: MDR RECORD FORMATS	17-1
SECTION 18: EP STORAGE MAP	18-1
SECTION 19: INTERFACE ADDRESSING	19-1
SECTION 20: INDEX TO NCP AND EP REFERENCE MATERIAL	20-1

Figures

1. NCP Control Block Relationships for BSC/SS Lines	1-1
2. NCP# Control Block Relationships for SDLC Links	1-2
3. NCP Control Block Relationships for Switched BSC/SS Lines	1-3
4. NCP Control Block Relationships for Switched SDLC Links	1-3
5. NCP Pointers to the CCB	1-4
6. NCP Halfword Direct Addressable Pointers	1-5
7. Locating the NCP Address Trace Table	1-5
8. Control Blocks Relationships for NCP Line Trace	1-6
9. NCP Control Block Relationships for BHRs	1-6
10. EP Control Block Relationships - Type 2/3 Scanner	1-7
11. EP Control Block Relationships - Type 1 Scanner	1-7

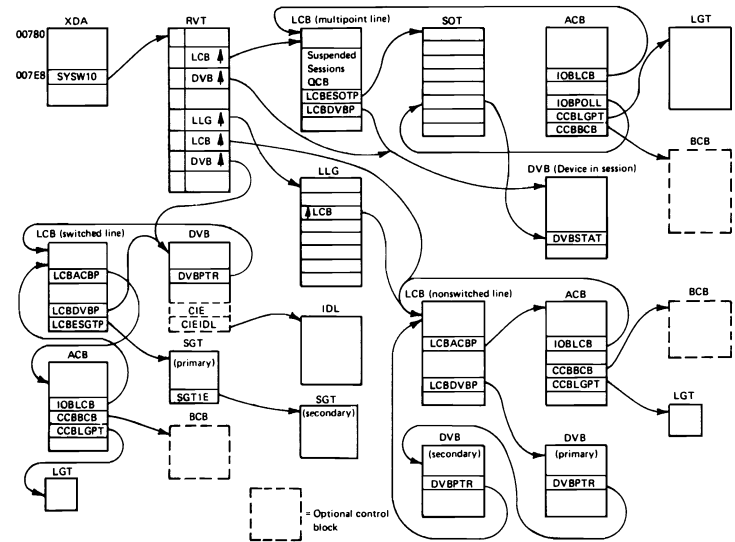


Figure 1. NCP Control Block Relationships for BSC/SS Lines.

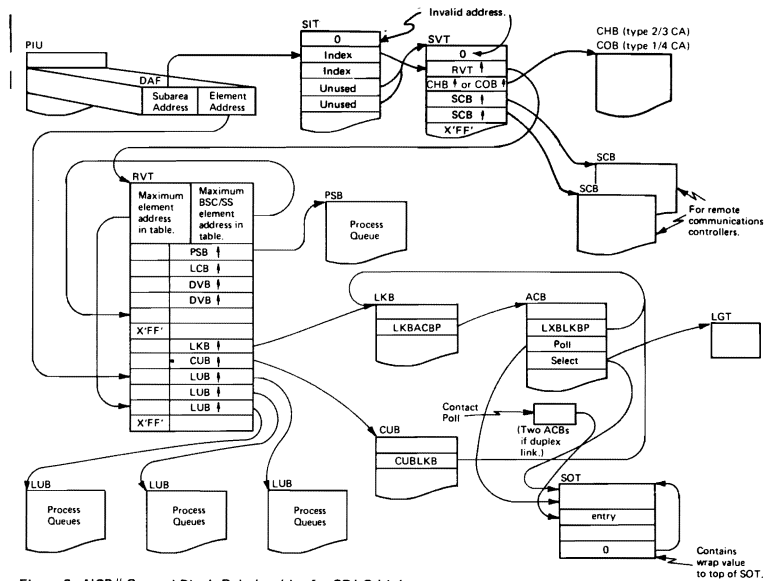


Figure 2. NCP# Control Block Relationships for SDLC Links.

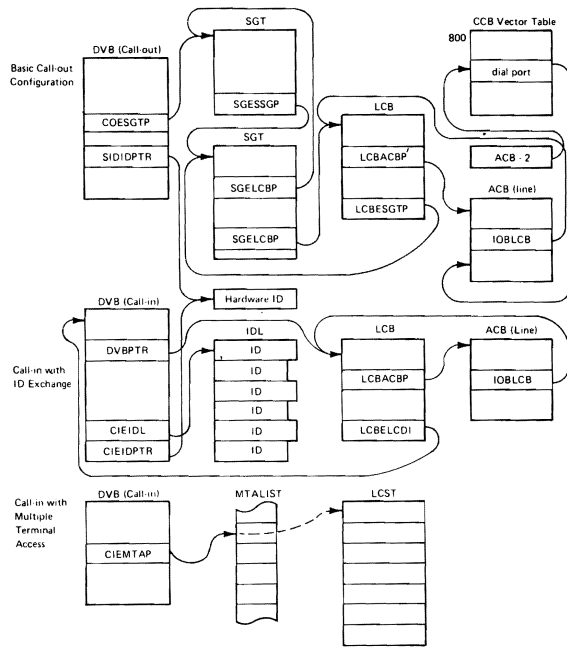


Figure 3. NCP Control Block Relationships for Switched BSC/SS Lines.

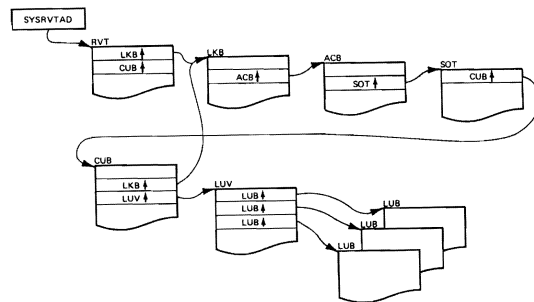


Figure 4. NCP Control Block Relationships for Switched SDLC Links

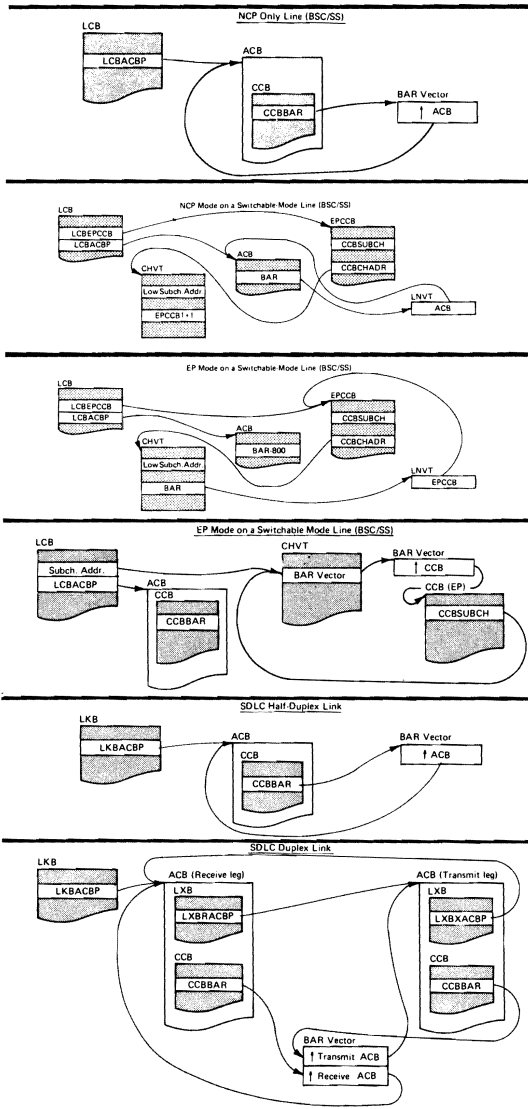


Figure 5. NCP Pointers to the CCB

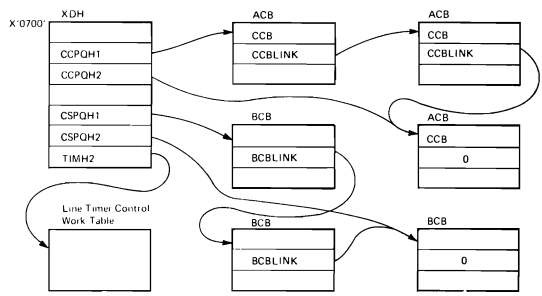


Figure 6. NCP Halfword Direct Addressable Pointers

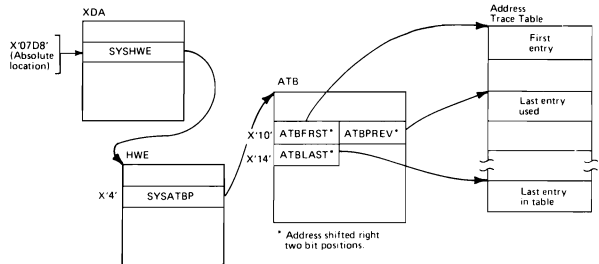


Figure 7. Locating the NCP Address Trace Table


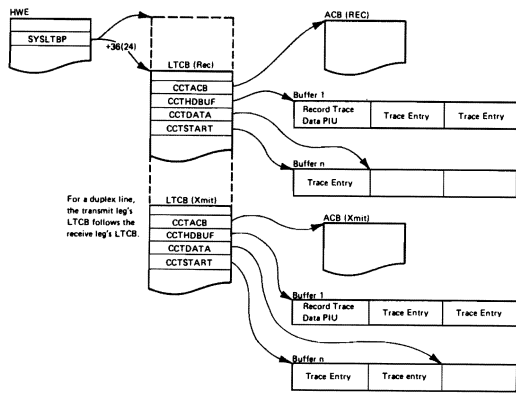


Figure 8. Control Block Relationships for NCP Line Trace

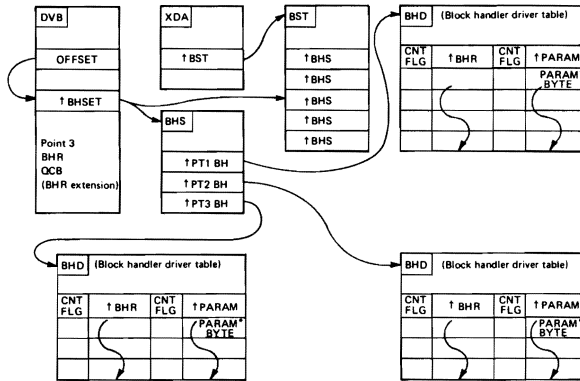

* BHRs have either a pointer to a parameter list or a byte parameter in their entry in the BHD.

Figure 9. NCP Control Block Relationships for BHRs

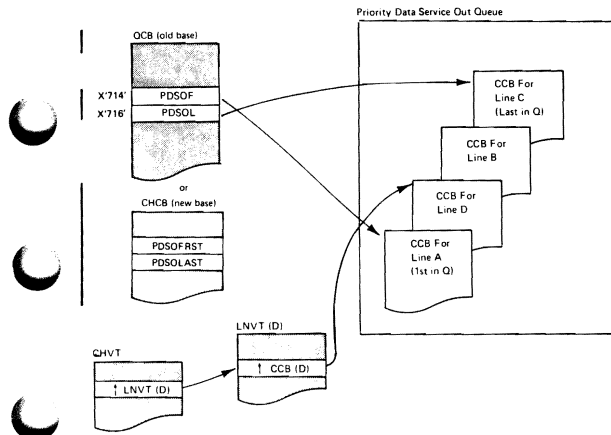


Figure 10. EP Control Block Relationships - Type 2/3 Scanner


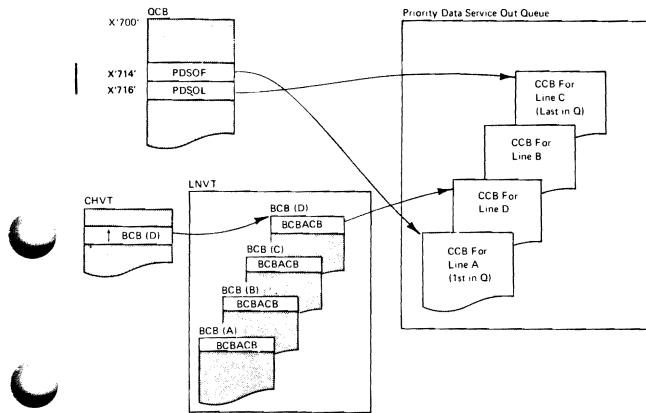


Figure 11. EP Control Block Relationships - Type 1 Scanner



Section 2: Data Area Layouts

The following conventions are used in this section:

- Various versions of the network control program are referred to in the following manner:

NCP1 — Network Control Program/OS, Version 1 (for OS/MFT and OS/MVT TCAM users)

NCP2 — Network Control Program/VS, Version 2 (for OS/VS TCAM users)

NCP# — Network Control Program/VS, (for OS/VS and DOS/VS VTAM users, latest version)

NCP — All of the above versions of the network control program.

If a field or bit is not used by all versions of the NCP, the version or versions that use it are shown in parentheses after the field or bit description. For versions not listed, the field or bit is unused.

- The displacement of each field from the beginning is given in both decimal and hexadecimal notation (hexadecimal in parentheses). The displacements in the direct addressable areas (XDA, XDB, and XDH) are given in absolute, hexadecimal notation since these are always in a fixed location of storage.
- If a single field has dual uses with different labels according to the use, the displacement is listed only once, and a broken line followed by the word "or" is inserted between the different labels.
- The contents of some fields are designated as shifted addresses. This means that in 3705 configurations larger than 64K, the storage address is shifted right two bit positions before being placed in the data area.

Shifted addresses are always in field with a defined length of two bytes. If the controller has less than 64K bytes of storage, the address is not shifted.

- Pointers or addresses contained in fields with a defined length of four bytes occupy the last 18 bits of the field. (Only the last 16 bits are significant if controller storage is less than 64K.) Often byte 0 and the first six bits of byte 1 of these fields are used for other purposes, such as for flags. In cases such as these, the four-byte field is shown as follows:

8(B)		XYZISKEP Task entry point (last 18 bits)
XYZMCBAD Major control block displacement.	9(9) XYZSCHED Task dispatching priority.	

- Labels shown in parentheses are equated in NCP and EP code to the defined label for a field. Equated labels are most frequently used in the direct addressable areas.
- One field in every queue control block (QCB) is labeled "major control block displacement". This field contains the offset to the beginning of this QCB from the beginning of the control block that contains the QCB. For example, the DVIMCBD field contains the displacement from the beginning of the device base control block (DVB) to the beginning of the device input QCB.
- Bit patterns or hex values within a field are defined in a byte expansion table following the formatted data area. The bytes within a field are numbered from zero origin. For example, if the first byte in a two-byte field has a unique definition, it is referred to as Byte 0.
- Bits in the byte expansions that are not identified are reserved.

ADAPTER CONTROL BLOCK

**ACB
(BSC/SS)**

Program: NCP

Size in bytes: 90(5A) for NCP1; 92(5C) for NCP2, NCP#.

Created by: NCP generation.

Pointer to ACB: LCBACBP field in LCB, or ACB vector. The ACB vector (or BAR vector) is located by doubling the line address, then adding X'800'.

-8(-8)	Autocall unit prefix (ACU)
0(0)	Input/Output Block (IOB)
36(24)	Character Control Block (CCB)

ADAPTER CONTROL BLOCK

**ACB
(SDLC)**

Program: NCP#

Size in bytes: 92(5C)

Created by: NCP generation.

Pointer to ACB: LKBACBP field in LKB. If it is a duplex link, LXBRACBP points to the receive leg ACB, and LXBACBP in the receive leg's ACB points to the transmit leg's ACB. The ACB vector (or BAR vector) is located by doubling the line address, then adding X'800'.

Function: Contains line control information and the status of I/O operations for SDLC links.

-8(-8)	Autocall unit prefix (ACU)
0(0)	Link XIO Block (LXB)
36(24)	Character Control Block (CCB)

AUTO-CALL UNIT

ACU

Program: NCP #

Size in bytes: 8(8)

Created by: NCP generation

Pointer to: Determined by subtracting 8 from the address of the LXB (SDLC) or IOB (BSC/SS).

Function: Contains the auto-call retry parameters.

0(0) ACURTC Timer retry count.	1(1) ACURTL1 1st level retry timer limit.	2(2) ACURC2 2nd level retry count.	3(3) ACURCL2 2nd level retry count limit.
4(4) ACURTL2 2nd level retry timer limit.	5(5) ACURCL1 1st level retry count limit.	6(6) ACUBAR Auto-call unit interface address.	

Program: NCP

Size in bytes: 32(20)

Created by: NCP generation.

Pointer to ATB: SYSATBP field in HWE.

Function: Governs the operation of the address trace function executing in level 1.

0(0)				ATBPRMS Addresses of trace variables (16 bytes).				Parameter 1																							
4(4)								Parameter 2																							
8(8)								Parameter 3																							
12(C)								Parameter 4																							
16(10)				ATBFRST Address of first entry in trace table (CXATPF). (Shifted address.)				18(12)				ATBPREV Address of last entry used in trace table (CXATPL). (Shifted address.)																			
20(14)				ATBLAST Address of last entry in trace table. (Shifted address.)				22(16)				ATBCNTR Number of interrupts processed.																			
24(18)				ATBPRCT No. of variables in each trace entry.				25(19)				ATBCTL Address trace control byte.				26(1A)				ATBLVLS* Program levels to be traced.				27(1B)				Reserved			
28(1C)				ATBIN Prototype input instruction.				30(1E)				ATBBR Prototype branch instruction.																			

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
26(1A) ATBLVLS	X'80' X'40' X'20' X'10'	Program levels to be traced. Level 2. Level 3. Level 4. Level 5.

BIT CONTROL BLOCK

BCB

Program: NCP, EP

Size in bytes: 16(10)

Created By: NCP and EP generation.

Pointer: CCBBCB field in CCB(INCP) or CYACHEND field in CHVT(EP).

Function: Contains control information for the type 1 scanner. One BCB is created for each line connected to a type 1 scanner.

0(0) BCBACB ACB address (NCP) or CCB address (EP).		2(2) BCBLINK Pointer to next BCB.	
4(4) BCBL2 Bit service routine address.		6(6) BCBSCF Sec. control field.	7(7) BCBPDF Parallel data fld.
8(8) BCBVCT High byte of PCF vector table addr.	9(9) BCBLPCF* LCD and PCF	10(A) BCBSDF Serial data field (10 bits, left justified).	
12(C) BCBMASK* Transmit/receive mask		14(E) BCBSYNC (BSC) Sync character. BCBBMASK* (SS) Transmit break mask.	15(F) BCBSHIFT Start-stop shift count.

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
9(9) BCBLPCF		LCD and PCF.
	100	LCD field (bits 0-2).
	101	Start-stop.
	110	BSC.
	111	Dial.
	011	SDLC
	111	Feedback check
	. . . x xxx .	PCF (See ICW for PCF expansion.)
 x	PCF change bit:
		1 = same PCF
		0 = new PCF

Offset/Field Name	Bit Pattern/ Hex Value	Contents
12(C) BCBMASK	X'0100' X'0100' X'0100' X'00C0' X'0080' X'0080' X'0180' X'0100' X'0300'	Transmit/receive mask. SDLC. BSC EBCDIC. BSC USASCII. Start-stop 9/6. Start-stop 8/5. Start-stop 9/7. Start-stop 10/7. Start-stop 10/8. Start-stop 11/8.
14(E) BCBBMASK	X'10' X'20' X'20' X'40' X'40' X'7E' X'80'	Transmit break mask. (SS) Start-stop 8/5. Start-stop 9/6. Start-stop 9/7. Start-stop 10/7. Start-stop 10/8. SDLC Flag mask Start-stop 11/8.
15(F) BCBSHIFT	0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 xxx x x xx	Start-stop shift count No stop-bit error. Stop-bit error encountered (SS). Character service not requested. Character service requested. No character overrun/underrun. Character overrun/underrun occurred. No modem error. Modem error encountered (DSR, CTS, TTY). Carrier detect lead not up. Carrier detect lead up (required if receiving). No frame detection. Store data character. Do not store data character. Character is not a pad. Do not send start bit (SS). SDLC stop shift count Ones counter Last line state 1 = Mark 0 = Space NRZI control 1 = NRZI 0 = Not NRZI Reserved – Character bits 00 = SDLC 8 bit

BLOCK CONTROL UNIT

BCU

Program: NCP

Size in bytes: 20(14) control bytes plus BTU

Located in: Dynamic buffers.

Created by: Built by channel IOCS when a block is received from the host (NCP1, NCP2).
Built dynamically by internal routines (NCP#).

Function: To request work.

Buffer Prefix

0(0)	BCBUFCHN Buffer prefix chain field. (Shifted address.)	2(2)	BCOFFSET Buffer prefix data offset field.	3(3)	BCDATCNT Buffer prefix data count field.
------	---	------	--	------	---

Event Control Block

4(4)	BCUSTAT* Block status flags.	5(5)	BCUESTAT* Event status flags.	6(6)	BCUECHN ECB chain pointer.
8(8)	BCUECHN (BCUBKLN) Set time interval, as specified by SETIME macro.		10(A) BC UWQCB Address of waiting task's input QCB.		
	or BCUTCNT BCU text count.				

Work Area

12(C)	BCURVTE Address of RVT entry (last 18 bits).	
	BCUREDS Record descriptor.	BCUFLAGS* Critical text flags to channel output.
16(10)	BCUTDSP Get byte/put byte displacement value.	18(12) BC USSP Subtask sequence pointer for suspended sessions.
20(14)	See "Basic Transmission Unit (BTU)" for format. (Variable in length)	

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
4(4) BCUSTAT	1 1	Block status flags. Block enqueued. Buffers in block are counted.
5(5) BCUESTAT	1 1	Event status flags. Event is satisfied. Task is to be dispatched.
13(D) BCUFLAGS	1 1 1	Critical text flags to channel output. Clear data in release blocks. Replace-session-initiation-information restart mode. Check mode for replace-session-initiation- information.

BUFFER PREFIX

BH

Program: NCP

Size in bytes: 4(4)

Located in: The beginning of each buffer.

Created by: Any routine that uses the LEASE macro to get a buffer.

Pointer to BH: Variable.

Function: Chains buffers in a BCU and points to the beginning of the text data within a single buffer.

0(0)	BHBUFCHN* Pointer to next buffer in this chain. (Shifted address).	2(2) BHOFFSET* Offset to beginning of text in this buffer.	3(3) BH DATCNT* Text data count (for this buffer only).
------	--	--	--

*See the block control unit (BCU) for labels used in the first buffer of a BCU.

Program: NCP

Size in bytes: 8(8) per entry; total size of table is variable.

Created by: NCP generation.

Pointer to BHD: BHS

Function: Defines the block handling routines that are to be executed for a particular block handler.

Entry Format

0(0)	<p style="text-align: center;">BHDRTNP Pointer to block handling routine (last 18 bits).</p>	
	<p>BHDC1* Entry ctl byte 1.</p>	
4(4)	<p style="text-align: center;">BHDPARMP Pointer to parameter list (last 18 bits).</p>	
	<p>BHDC2* Entry ctl byte 2</p>	<p>7(7) BHDPARMB* Byte parameter</p>

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) BHDC1	111	Entry control byte 1. End of table (last entry). User BHR. Receive control if command is in error.
4(4) BHDC2	11 1. 11	Entry control byte 2. Receive control for Read. Receive control for Invite. Receive control for Write. Receive control for Disconnect. Receive control in terminator-subtask for Read I/O.
7(7) BHDPARMB	11 1. 111	Byte parameter (for date/time). Date desired. Calendar form of date desired. Julian format of date desired. Gregorian format 1 of date desired. Gregorian format 2 of date desired. Time desired. Date/time stamp first block of message.

Program: NCP

Size in bytes: 24(18)

Located in: DVB

Created by: NCP generation.

Pointer to BHR: DVBBHRO field in DVB.

Function: Associates block handler routines with a device.

0(0)**	BHRBHST Pointer to BHS (last 18 bits).
BHRCTL*	BHR control flags.

Point 3 QCB (BHRBH3Q)

(See QCB for Input Queues for all bit definitions.)

4(4)**	BH3IECB Pointer to first BCU queued. (Shifted address.)	6(6)**	BH3LECB Pointer to last BCU queued. (Shifted address.)
8(8)**	BH3STAT Task and queue status.	9(9)**	BH3PRKEY Protection key.
		10(A)**	BH3LINK Pointer to next QCB in chain. (Shifted address.)
12(C)**	BH3TSKEP Task entry point (last 18 bits).		
	BH3MCBD Major control block displacement.	13(D)	BH3SCHED Task dispatching priority.
16(10)**	BH3SAVE Address of save area pushdown list. (Shifted address.)	18(12)**	BH3LUNK Pointer to previous QCB on the queue. (Shifted address.)
20(14)**	BH3BHSET BH set (or BHR) address (last 18 bits).		
	BH3BHRST BHR status bits.	21(15)	BH3BHSET BHR scheduling bits.

*Indicates a byte expansion follows.

**Actual position depends upon other extensions to DVB.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) BHRCTL	1111 1	BHR control flags. Execute BHR — If a BHR was specified as dynamic, specified initially as inactive, or deactivated by operator control, this bit will be off. Point 1 - specifies point 1 BHR execution. Point 2 - specifies point 2 BHR execution. Point 3 - specifies point 3 BHR execution. Point 3 - Block Handler Routine queue control block exists for device. This QCB is created by defining PT3EXEC=YES or BHEXEC=ALL. For dynamic block handlers that have a point 3, there must be a point 3 BHRQCB.

BLOCK HANDLER SET

BHS

Program: NCP

Size in bytes: 12(C)

Created by: NCP generation.

Pointer to BHS: BSTBHSPT field in BST.

Function: Points to the block handlers that are to be executed for the block handler set.

0(0)	BHSP1 Pointer to point 1 block handler driver table (BHD).
4(4)	BHSP2 Pointer to point 2 BHD.
8(8)	BHSP3 Pointer to point 3 BHD.

Program: NCP#

Size in bytes: PIU + 6 bytes

Function: This is the SDLC transmission block

SDLC Line Control

0(0) Flag*	1(1) Address of secondary station.	2(2) Control*
---------------	---------------------------------------	------------------

PIU

3(3) Path Information Unit (See PIU 0-1-2 for description.)

SDLC Line Control

n Block Check Character (BCC) (2 bytes)	n+2 Flag* Same as 0(0).
---	-------------------------------

*Indicates byte expansion follows.

Offset/Field Name	Bit Pattern/ Hex Value	Function
0(0) Flag	0111 1110	Indicates beginning or end of BLU.
2(2)	Control "I" Format	
	xxx	Receive count sequence.
	. . . x	Poll/final bit.
 xxx.	Send sequence count.
 0	Information transfer BLU.
	"S" Format	
	xxx	Receive sequence count.
	. . . x	Poll/final bit.
 xx..	00=Receive ready (RR) 01=Receive not ready (RNR) 10=Reject
 01	Supervisory BLU
	"NS" Format	
	xxx . xx . .	Non sequenced command or response
	. . . x	Poll/final bit
 11	Nonsequenced format

Note: See Section 6 for descriptions of SDLC commands and responses.

Program: NCP

Size in bytes: 4 bytes per entry; table can contain up to 256 entries.

Created by: NCP generation.

Pointer to BST: SYSBST field in XDA.

Function: Points to block handler sets (one entry per BHS).

0(0)	BSTBHSPT Address of BHS (last 18 bits). (For the first entry, bytes 1-3 contain zeros.)
BSTCTL*	BHR control flags. (For the first entry, this byte contains the count of BH set pointers in the table.)

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0)		BHR control flags.
BSTCTL	11 1 1	Execute. Point 1. Point 2. Point 3.

Program: NCP

Size in bytes: 14(E) control bytes + variable length text.

Located in: BCU

Created by: The host access method (NCP1, NCP2) or an internal NCP routine (NCP#).

Pointer to BTU: None. The starting byte is at displacement 20(14) into the BCU.

Function: Contains information for either a request for I/O or for a control operation; or a response for the same.

20(14)** BCUSID (BCHSID) Source name.		22(16) BCUDID (BCHDID) Destination name (resource ID).	
24(18) BCUSEQ (BCHSEQ) Request tag or sequence number identifying this BTU.		26(1A) BCUSRES (BCHSRES) System response. See Section 8 for responses.	27(1B) BCULRES (BCHLRES) Extended response. Contains status of I/O operation. See Section 8.
28(1C) BCUCMD* (BCHCMD) Command	29(1D) BCUMOD (BCHMOD) Command modifiers. See Section 3 for a list of the BTU commands and their modifiers.	30(1E) BCUSFLAG* (BCHSFLAG) Function flags.	31(1F) BCHBDF* BTU flags.
32(20) BCUTLEN (BCHTLEN) Text length.		34(22) Text field. (Variable length.)	

*Indicates a byte expansion follows.

**Displacements represent the offset into the BCU.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
28(1C) BCUCMD (BCHCMD)	X'00' X'01' X'02' X'03' X'04' X'05' X'06' X'07' X'08' X'77' Any other	Command. (See Section 3 for descriptions.) Null. Read (R). Write (W). Online test (T). Restart (Y). (NCP1, NCP2) Invite (I). Contact (C). Disconnect (D). Control (Z). Unsolicited response. Invalid.
30(1E) BCUSFLAG (BCHSFLAG)	1 1 1 1 1 1 1 1	Function flags. Checkpoint select (control commands) or start of header. Header prefix. Suppress Invite (control commands) or leading graphics. First block of message. Transparent data. Positive acknowledgement. Negative acknowledgement. Alternate acknowledgement.
31(1F) BCHBDF	1 1 1 1	BTU flags. Reset error lock. 3270 poll for status. Suppress write response. Selective text return.

Program: NCP

Size in bytes: 4(4)

Located in: DVB

Created by: NCP generation.

Pointer to BUE: DVBBUO field in DVB.

Function: Contains control information for devices that can be contacted over a separate line when the current line fails.

0(0) BUEFLAGS* Flag byte.	1(1) BUEPLCBP Primary LCB pointer.
---------------------------------	--

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) BUEFLAGS	1	Flag byte
1 . .	Service seeking skip when the device is on a multipoint line.
1 . .	Error occurred in dialing out.
1 . .	Invite pending remembrance.
1 . .	Back up in progress.

CHARACTER CONTROL BLOCK

CCB
(EP, PEP)

Program: EP, PEP

Size in bytes: 38(26) - 50(32)

Located: \$LVL5

Created by: NCP and EP generation.

Updated by: LCP, ICP.

Pointer to CCB: LNVNT

Referenced by: LCP, ICP, CHVT.

Function: Contains current information on the physical operation of a line. One CCB is generated for each line specified.

-16(-10)			
Buffer Prefix*** (type 2 scanner)			
-D(-X)*			
Buffer Prefix (type 3 scanner).			
0(0)			
CCBDATA (CCBSUB1) Data Buffer 0			
4(4)			
CCBDATA1 Data Buffer 1.			
CCBL2NCA*** Level 2 character address.		CCBL3SCA*** Level 3 character address.	
8(8)		10(A)	
CCBSVLNK Data service queue forward chain pointer.		CCBSOLNK Status out queue forward chain pointer.	
12(C)	13(D)	14(E)	15(F)
CCBSUBCH Multiplexer sub- channel address.	CCBBTLCD Type 1 LCD for set PCF line use.	CCBSTAT* Final line status byte.	CCBSENSE* Final line sense byte.
	**CCBCFLG* Configuration Flags		

*Indicates that a byte expansion follows.

**EP having a type 4 CA and NCP # with PEP.

***Type 2 scanner with extended buffer.

16(10) CCBCMD Current command for CCB. (See Section 7.)	17(11) CCBLR1* Line request information, 5 bits.	18(12)**** CCBCSTAT Current status.	19(13)**** CCBCSENS Current sense
20(14) CCBCAC* Character address counter.	21(15) CCBSVSTC* Service/status flag byte.	22(16) CCBLOCK Timer control field.	23(17) CCBTMADR Timeout routine displacement into branch table.
CCBNQCNT*** Data service count.		26(1A) CCBOPT* CCB option byte 1.	27(1B) CCBOPT2* Option byte 2.
24(18) CCBACADR Autocall address.			

- *Indicates that a byte expansion follows.
- **EP having a type 4 CA and NCP # with PEP.
- ***Type 2 scanner with extended buffer.
- **** For CCBSTAT expansion, see CCBSTAT.
- ***** For CCBCSENS expansion, see CCBCSENSE.

28(1C) CCBSTMOD* Set mode byte-- Output X'46'	29(1D) CCBLCD* Line control definition (LCD) field. (High 4 bits contain line control definer; low 4 bits contain 0.)
--	--

Start/Stop Extension

		30(1E) CCBLRC SS longitudinal redundancy check byte.	31(1F) CCBSSC* SS control flags byte.
32(20) CCBSSCX* SS control flags extension.	33(21) CCBPEPFL* PEP flags	34(22) CCBLGT SS line group table pointer.	
36(24) CCBL2 Level 2 interrupt address.		38(26) CCBCHADR (Note 1) Channel control block pointer	

Note 1: Used with EP new base.

- *Indicates that a byte expansion follows.

Binary Synchronous Extension
EP (old base)

		30(1E) CCBBCC BSC block check characters	
		CCBBCC1 BSC block check character 1.	31(1F) CCBBCC2 BSC block check character 2.
32(20) Reserved	33(21) CCBPEPFL* PEP flags.	34(22) CCBSYN BSC EBCDIC or USASCII Syn character.	35(23) CCBEOT BSC EBCDIC or USASCII EOT character.
36(24) CCBL2 Address of current level 2 character service routine.		38(26) CCBFLGB1* Flag byte 1— status.	39(27) CCBFLGB2* Flag byte 2— terminal type.
40(28) CCBL2A1 CCBL2 save area for BSC.		42(2A) CCBDLCOM Line address if dual communications feature is installed (2701 emulation only).	

*Indicates a byte expansion follows.

Station Select Feature Extension (optional)

44(2C) CCBSADR Station selection address and station poll address. These two addresses differ in bit posi- tion 2.	45(2D) CCBGADR* Group selection address.
---	---

*Indicates a byte expansion follows.

Binary Synchronous Extension (type 2 scanner)
EP (new base)

		30(1E) CCBBCC BSC block check characters	
		CCBBCC1 BSC block check character 1.	31(1F) CCBBCC2 BSC block check character 2.
32(20) Reserved	33(21) CCBPEPFL* PEP flags.	34(22) CCBSYN BSC EBCDIC or USASCII Syn character.	35(23) CCBEOT BSC EBCDIC or USASCII EOT character.

*Indicates that a byte expansion follows.

36(24) CCBL2 Address of current level 2 character service routine.		38(26) CCBCHADR Channel control block pointer
40(28) CCBFLGB1* Flag byte 1— status.	41(29) CCBFLGB2* Flag byte 2— terminal type.	42(2A) CCBL2A1 CCBL2 save area for BSC
44(2C) CCBDLCOM Line address if dual communications feature is installed (2701 emulation only).		

*Indicates a byte expansion follows.

Station Select Feature Extension (optional)
EP (new base)

46(2E) CCBSADR Poll or select address	47(2F) CCBGADR Group selection address
--	---

Binary Synchronous Extension (type 3 scanner)
EP (new base)

		30(1E) CCBTBUF First extended buffer address	
32(20) Reserved	33(21) CCBPEPFL* PEP flags.	34(22) CCBBBUF Second extended buffer address	
36(24) CCBL2 Address of current level 2 character service routine.		38(26) CCBCHADR Channel control block pointer	
40(28) CCBFLGB1* Flag byte 1— status.	41(29) CCBFLGB2* Flag byte 2— terminal type.	42(2A) CCBBCNT Second buffer count	43(2B) CCBTCNT First buffer count
44(2C) CCBDLCOM Dual communications line address.		46(2E) CCBCAB* Channel adapter flags	47(2F) CCBBUFSZ Buffer size
CCBASCR* ALC support control register.			
48(30) CCBIS Index save byte	49(31) CCBCFBSZ ALC system gen- erated buffer size.		

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents																				
-D(-X) Buffer Prefix		Length of buffer prefix is determined at NCP/EP generation with the BUFSIZE operand of the LINE macro. <table border="1"> <thead> <tr> <th>Buffer size bytes</th> <th>Length -D(-X)</th> </tr> </thead> <tbody> <tr><td>8</td><td>-8(-8)</td></tr> <tr><td>16</td><td>-24(-18)</td></tr> <tr><td>32</td><td>-56(-38)</td></tr> <tr><td>64</td><td>-120(-78)</td></tr> <tr><td>96</td><td>-184(-B8)</td></tr> <tr><td>128</td><td>-248(-F8)</td></tr> <tr><td>160</td><td>-312(-138)</td></tr> <tr><td>192</td><td>-376(-178)</td></tr> <tr><td>224</td><td>-440(-1B8)</td></tr> </tbody> </table>	Buffer size bytes	Length -D(-X)	8	-8(-8)	16	-24(-18)	32	-56(-38)	64	-120(-78)	96	-184(-B8)	128	-248(-F8)	160	-312(-138)	192	-376(-178)	224	-440(-1B8)
Buffer size bytes	Length -D(-X)																					
8	-8(-8)																					
16	-24(-18)																					
32	-56(-38)																					
64	-120(-78)																					
96	-184(-B8)																					
128	-248(-F8)																					
160	-312(-138)																					
192	-376(-178)																					
224	-440(-1B8)																					
13(D) CCBCFLG 1111 ...	Configuration flags. ALC line. Unhang active. Type 3 scanner line. MSLA USCCB.																				
14(E) CCBSTAT	X'00' X'01' X'02' X'04' X'08' X'0C' X'0D' X'0E' X'10' X'20' X'40' X'4C' X'80'	Final line status byte. Reset status byte. Set UE. Set UC. Set DE. Set CE. Set CE, DE. Set CE, DE, UE. Set CE, DE, UC. Set CU busy. Set control unit end. Set SM. Set CE, DE, SM. Set attention.																				
15(F) CCBSENSE	X'00' X'01' X'02' X'04' X'08' X'10' X'20' X'40' X'80'	Final line sense byte. Reset sense byte. Time Out. Set lost data. Set overrun. Set data check. Set equipment check. Set bus out parity check. Set intervention required. Set command reject.																				

Offset/Field Name	Bit Pattern/ Hex Value	Contents
17(11) CCBLRI	1 1 yxx	Line request information. Set interface disconnect flag. Set data end flag. y=buffer (0 or 1) xx=number of bytes requested from or presented to the channel.
20(14) CCBCAC	X'07' 1	Character address counter. Reset CAC. Set BSC inhibit store flag.
21(15) CCBSVSTC	X'88' X'48' X'00'	Service/Status flag byte. Set data service (buffer 0) + data end. Set data service (buffer 1) + data end. Set SV1 and SV0 bits.
26(1A) CCBOPT	1 1 x B=1(BSC). . . 1 1 x 1 1	CCB option byte 1. Auto call option installed. Long disable time-out. Dualcom interface A=0 B=1(BSC). Not unit exception on EOT(IBM SS). Ring option installed. Switched line installed. Duplex line installed; 0=half, 1=full. Type 2 scanner highest interrupt priority.
27(1B) CCBOPT2	1 1 1 1 1 1 1	CCB option byte 2. Channel decode IBM type 1 and type 2 EOB. Trace active for this line. Channel decode IBM type 3 ETX. 2702 or 2703. SS no DCD security monitor. World Trade telegraph. Not long line quiet time-out (25.6 seconds). IBM modem flag (option 1, SS only).
28(1C) CCBSTMOD	1 1 1 1 1 1 1 1	Set-mode byte, Output X'46'. Type one scanner low bit service priority. Diagnostic Wrap mode. Data terminal ready. Binary sync clock. External (data set) clocking. Data rate select. Oscillator select.
29(1D) CCBLCD	0000 0010 0011 0100 0101 0110 0111 1001 1100 1101 0100 0101 0110 1111	Line control definition (LCD). SS 9/6 (1 start, 6 data, and 2 stop bits). SS 8/5 (TTY 1 - 83B3, 115A). Autocall LCD. SS 9/7 (IBM type 1). or ALC transmit (type 3 scanner). SS 10/7. SS 10/8 (2848). SS 11/8 (TTY2 - TWX models 33/35). ALC receive (type 3 scanner). BSC EBCDIC. } Type 2 scanner BSC USASCII. } BSC EBCDIC. } Type 3 scanner BSC ASCII. } BSC USASCII transparency. } Feedback check.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
31(1F) CCBSSC	000 001 010 100 1101 1111	Start-stop control flags byte. TTY2 type line. 2848 type line. TTY1 type line. IBM type 1 line. IBM type 2 line. Bypass LRC (IBM type 1 and 2); not upshift (TTY 1 and 2). Not immediate end (no line quiet pad check). Lower case remember. Not text in (IBM type 1 and 2); not Figs H (TTY2). Not text out (IBM type 1 and 2); not first character (2848 and TTY).
32(20) CCBSSCX (SS)	xxxx111	Start-stop control flags extension. Stop bit error counter. Delay required. Circle "C" received. Half duplex link on which break is allowed.
33(21) CCBPEPFL	x	PEP flags. 0=NCP ACB. 1=EP CCB.
38(26) old base 40(28) new base CCBFLGB1	111111111	CCB flag byte 1-status. Channel priority. EIB mode. Not new sync. Interrupt mode. EIB data check. EIB overrun. Code B selected. ITB mode.
39(27) old base 41(29) new base CCBFLGB2	111x1111	CCB flag byte 2-terminal type. Dualcom installed. Station select installed. ASCII transparent (old base). Dual code mask (new base). Transparent mode, wait for second write. Second write accepted. Multipoint address remember flag. No trailing pad check.
44(2C) CCBASCR (ALC only)	Byte 0 x11 1xxx Byte 1 . .xx xxxx	ALC support control register. 1=Transmit 0=Receive. EOM character remember. GA character detected (receive). or EOM character detected (transmit). Remember cyclic check character. End character counter.
45(2D) CCBGADR (type 2 scanner)	. .1	Group selection address. Multipoint address difference bit.
46(2E) CCBCAB x111	Sync monitor latch 1=Syncs detected in inbound CA transfer. 0=Non-sync character detected in inbound data. DLE remember latch ASCII monitor control latch. EBCDIC monitor control latch.

Program: EP (old base), NCP2, NCP #

Size in bytes: 10 (0A)

Located: \$LVL5

Created by: NCP and EP generation.

Updated by: ICP.

Pointer to Dummy CCB: CHVT (Pointer has low order bit on).

Referenced by: ICP, CHVT.

Function: Used to handle sense, test I/O and I/O NOP to a subchannel within the high-low range of subchannel addresses, but to which no line has been assigned.

8(B) CCBSVLNK Data service queue forward chain pointer.		10(A) CCBSOLNK Status out queue forward chain pointer.	
12(C) CCBSUBCH Multiplexer sub-channel address.	13(D) CCBBTLCD Type 1 LCD for set PCF line use.	14(E) CCBSTAT Final line status byte.	15(F) CCBSENSE Final line sense byte.
16(10) CCBCMD Current command for CCB (See section 6.)	17(11) CCBLRI Line request information.		

CHARACTER CONTROL BLOCK (Line Test)

Program: EP

Size in bytes: 30(1E)

Located: \$LVL5

Created by: NCP and EP generation.

Updated by: LCP, ICP.

Pointer to CCB: LNVT

Referenced by: LCP, ICP, CHVT.

Function: Contains current information on the physical operation of a line. Shows the revised format of the CCB base while line test is active.

0(0) CCBDATA Receive Data Buffer			
4(4) CCBTLINK Return Link Address Save Area		6(6) CCBTBADR Transmit Buffer Address	
8(8) CCBSVLNK Data service queue forward chain pointer.		10(A) CCBSOLNK Status out queue forward chain pointer.	
12(C) CCBSUBCH Multiplexer sub- channel address.	13(D) CCBBTLCD Type 1 LCD for set PCF line use. or ***CCBFLG* Configuration flags.	14(E) CCBSTAT* Final line status byte.	15(F) CCBSENSE* Final line sense byte.
16(10) CCBCMD Current com- mand for CCB. (See Section 6.)	17(11) CCBLECS*** Line Error Check.	18(12)** CCBCSTAT Current status.	19(13)** CCBCSENS Current sense
20(14) CCBCAC Buffer Index.	21(15) CCBTEST Active Test Function	22(16) CCBCLOCK Timer control field.	23(17) CCBTMADR Timeout routine dis- placement into branch table.
24(18) CCBACADR Autocall address.		26(1A) CCBOPT* CCB option byte 1.	27(1B) CCBOPT2* Option byte 2.

- *Reference CCB (EP, PEP) for byte expansion.
- **For byte expansion of CCBCSTAT, refer to CCBSTAT.
- For byte expansion of CCBCSENS, refer to CCBSENSE.
- ***Indicates that a byte expansion follows.
- ****EP with a type 4 CA.

28(1C) CCBSTMOD* Set mode byte— Output X'46'	29(1D) CCBLCD* Line control defini- tion (LCD) field. (High 4 bits contain line control definer; low 4 bits contain 0.)
--	--

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
17(11) CCBLECS	11111111	Reserved for interface disconnect Data check Transmit mode Receive mode Normal compare set Swap 3 set Swap 2 set Swap 1 set

CHARACTER CONTROL BLOCK

**CCB
(NCP)**

Program: NCP

Size in bytes: 58(3A)

Created by: NCP generation.

Pointer to CCB: Follows IOB in ACB for BSC/SS lines. Follows LXB in ACB for SDLC lines.

Function: Contains line control information.

<p>36(24)</p> <p style="text-align: center;">CCBL2</p> <p>Address of current level 2 character service routine.</p>	<p>38(26)</p> <p style="text-align: center;">CCBSTATE*</p> <p>Pointer to character service state address table.</p>		
<p>40(28)</p> <p style="text-align: center;">CCBTACB or CTBACB</p> <p>Pointer to the next ACB in the timer chain.</p>	<p>42(2A)</p> <p style="text-align: center;">CCBTWORK or CTBWORK</p> <p>Timer work entry for this ACB.</p>		
<p>44(2C)</p> <p style="text-align: center;">CCBLINK</p> <p>Pointer to next ACB in level 2-3 chain.</p>	<p>46(2E)</p> <p style="text-align: center;">CCBTIME*</p> <p>Time-out interface.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; border: none;"> <p style="text-align: center;">CCBTOCMD</p> <p>Time-out command.</p> </td> <td style="width: 50%; border: none;"> <p style="text-align: center;">CCBTOREM</p> <p>Time-out remembrance.</p> </td> </tr> </table>	<p style="text-align: center;">CCBTOCMD</p> <p>Time-out command.</p>	<p style="text-align: center;">CCBTOREM</p> <p>Time-out remembrance.</p>
<p style="text-align: center;">CCBTOCMD</p> <p>Time-out command.</p>	<p style="text-align: center;">CCBTOREM</p> <p>Time-out remembrance.</p>		
<p>48(30)</p> <p style="text-align: center;">CCBBAR</p> <p>Line address, if type 2 scanner.</p> <p>or</p> <p style="text-align: center;">CCBBCB</p> <p>BCB address, if type 1 scanner.</p>	<p>50(32)</p> <p style="text-align: center;">CCBBCC</p> <p>CRC check character (BSC).</p> <p>or</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; border: none;"> <p style="text-align: center;">CCBLRC</p> <p>LR character (SS).</p> </td> <td style="width: 50%; border: none;"> <p style="text-align: center;">CCBCASE</p> <p>Case history (SS).</p> </td> </tr> </table>	<p style="text-align: center;">CCBLRC</p> <p>LR character (SS).</p>	<p style="text-align: center;">CCBCASE</p> <p>Case history (SS).</p>
<p style="text-align: center;">CCBLRC</p> <p>LR character (SS).</p>	<p style="text-align: center;">CCBCASE</p> <p>Case history (SS).</p>		

*Indicates a byte expansion follows.

52(34) CCBLGPT Pointer to line group table for group.		54(36) CCBCNTS Character count/buffer count field.	
		CCBCHAR Buffer character count.	CCBCUT Buffer maximum for a receive operation.
56(38) CCBSTAT1* Current operational status of the line.		58(3A) CCBEND1*** Line status at completion of a level 2 operation. The level 2 routine moves the status from CCBSTAT1 to CCBEND1 at the end of an operation.	
60(3C) CCBDATA** Address of the data byte being sent or received (last 18 bits).			
CCBEND2 Record descriptor flags moved from CCBSTAT2 at end of a level 2 operation.	CCBNCFL* Flags for control operations between IOB commands.		
64(40) CCBSTART Current buffer address (last 18 bits).			
CCBOFSET At start of a receive operation, set to the offset into the buffer of the first data character (SS/BSC only), after first character is received, set to zero, indicating that data was stored.	CCBFLAGS* General Flags.		
68(44) CCBRXLAT Address of receive translate decode table.		70(46) CCBTXLAT High-order byte of transmit translate decode table address. (The low-order byte of the address is the character to be translated).	71(47) CCBSTAT2 Record descriptor flags. If any bit in this field is on, it indicates that the corresponding character was scanned.
CCBCPCNT Poll cycle count (SDLC).	69(45) CCBCPRAT Contact poll rate (SDLC).	CCBPASCT Pass counter-number of BLUs sent (SDLC).	or CCBNEXT Buffer for next character to be transmitted.
			CCBRBLUC* BLU command field received for level 3 (SDLC).

*Indicates a byte expansion follows.

**Type 3 scanner receive—Address of one character beyond the last character received

***Type 3 scanner transmit—Address of the next buffer in the write chain (zero if none).

***Level 3 translates status to ending format of LXBEXTST, LXBSTAT, and LXBSTATC of the Link XIO Control Block.

72(48) CCBHDBUF Address of first buffer in a block (last 18 bits).			
CCBBUFCT Buffer maximum for a receive operation.	CCBTYP* Dial control flags.		
76(4C) CCBL3 Address of next level 3 routine to be executed.		78(4E) CCBERTY* Error retry limit.	79(4F) CCBERCNT Retry counter (BSC/SS). or CCBFSTSV Save area for current status (SDLC).
80(50) CCBMSDF* Set mode control flags.	81(51) CCBXTPCF Transmit turn around LCD/PCF.	82(52) CCBCTL* Control flags/line type.	
		CCBRSPON* Control flags.	CCBTYP* Line type.
84(54) CCBESTAT Expected ending status of the level 2 operation.		86(56) CCBL2REM Save area for CCBL2. (SDLC)	
		CCBICCCT Initial control character count.	CCBNEGPD BSC negative poll wait timeout. or CCBVTABD Vertical tab delay (number of idles sent after a vertical tab; SS only).
88(58) CCBCRTN Number of print positions carriage will return in time it takes to send one idle character (SS only). or CCBAFLD Received secondary station address (SDLC). or CCBXTICH Character position of ITB mode transparent text (BSC only).	89(59) CCBLCNT Length of print line (SS only). or CCBFCFLD Received SDLC/BTU command field. or CCBBSFCL Special flags (BSC only).	90(5A) CCBLTRP Number of data positions since last carriage return. or CCBLNRP Last N(R) processed (SDLC).	91(5B) CCBNTRP Net carriage return value. or CCBPOLLI Poll interval-maximum poll rate (SDLC)
92(5C) CCBLQCC Line quiet test character count (Start Stop).	93(5D) CCBLQTC Line quiet test interrupt counter (Start Stop).		

***Set by RETRIES=m

Offset/Field Name	Bit Pattern/ Hex Value	Contents
38(26) CCBSTATE	State bits and definitions X'20' X'10' X'04' X'02' X'01'	DLE mask. 1=DLE encountered. 0=No DLE encountered Transmit/Receive mask. 1=Transmit. 0=Receive. CTL or text out test mask. 1=SS state is receive reply. 0=SS state is receive control. Send EOA mask. 1=Send pad in place of EOA. 0=Send EOA. First flag mask. 1=First non SYN or DLE. 0=No first non SYN or DLE.
46(2E) CCBTIME	The bits in position 0 of both bytes of CCBTIME are used together for time-out control. When these bits have different values in the two bytes of CCBTIME, a new timer command is present.	Time-out interface.
56(38) CCBSTAT1	Byte 0 1 1 1 1 1 1 1 1 1	Current operational status of line. Exceptional ending flags passed between levels 2 and 3. Character overrun/underrun. Format error (abnormal line control sequence for a receive operation). Stop bit error (start-stop only). Abort frame (SDLC). Seven ones in a row have been received. Data check (VRC, LRC, or CRC error). SDLC flags received. Block overrun occurred (SDLC). End pad failure (BSC point to point) Line quiet time-out (SS only). Reset command in process. Invalid DLE sequence (BSC only). Transmit length check. (BSC/SS)
CCBCMPCD	Byte 1	Completion codes indicating how the I/O operation ended. Status masks are the same as those for IOBSTAT+1 (BSC/SS lines) or LXBSTATC (SDLC links).

Offset/Field Name	Bit Pattern/ Hex Value	Contents
61(3D) CCBNCFI	Byte 1 1 1 1 1	Flags for control operations between IOB commands. Command initialization delay required. Special ender procedure when no command is up. Send TTD bit. Send WACK. (Bits 4-7 reserved).
65(41) CCBFLAGS	1 x 1 1 1 1	General flags. Tab preceded CR/LF (SS). No time-out (BSC). Initial time-out interval (SDLC). Control mode indication. 1=control mode is response to text. 0=control mode if from polling or addressing. Post ACB to the queue after turnaround. One character of break signal received (SS). Next event is ITB (BSC). Line is in diagnostic mode. OLLT active (SDLC).
71(47) CCBRBLUC	RRRP SSSO RRRP 0001 RRRP 0101 RRRP 1001 1001 0011 0101 0011 0001 0111 0111 0011 0001 0111 0001 1111 1001 0111 P=Poll/Final RRR=N(R) SSS=N(S)	Received C Field – BLU SDLC. I format. S format RR cmd/resp. S format RNR cmd/resp. S format REJ cmd/resp. NS format SNRM cmd. NS format SDRM dmd. NS format SIM cmd. NS format NSA resp. NS format RQI resp. NS format ROL resp. NS format CMDR resp. 1=Poll (cmd) 1=Final (resp) Recv seq count. Send seq count.
73(49) CCBTYPCE	1 1 1 x x	Dial control flags. Switched line. Line has auto dial unit (switched only). Recognize ring indicator lead. Line has DC telegraph loop. 1=Generate answer tone after call-in. 0=Answer tone is automatic. Not NRZI mode (SDLC). 1=Monitor carrier on receive (SS). 0=Do not monitor carrier.
80(50) CCBSMSDF	x 1 1 x x x 1 1	Set mode control flags. Service priority (type 1 scanner). 1=low priority. 0=high priority. Diagnostic mode. Data terminal ready bit. 1=synchronous line. 0=start-stop line. 1=modem clocking. 0=3705 clocking. Data rate select bit (World Trade modems). 1=high speed. 0=low speed. Oscillator select bit 1. Oscillator select bit 2.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
82(52) CCBCTL		Control flags/Line type.
	Byte 0	Control flags.
		Control Flag Definitions for Replies
	1	Send NAK reply/delay after autodial.
	.1	Send ACK reply.
	. . x	Alternating ACK bit for BSC (valid only if bit 1 is also on). 1=send ACK1. 0=send ACK0.
	. . . 1	Last text reply was WACK (BSC). TTD received when ACK outstanding Last reply outstanding (SS).
 x . . .	Expected receive alternate ACK bit (BSC). 1=ACK1 expected reply. 0=ACK0 expected reply.
		Control Flag Definitions for Polling Operations
		SDLC poll wait 1=wait 0=no wait
	x	Service seeking skip bit. 1=Terminate if at end of service order table. 0=Continue service seeking.
	.1	SDLC transmit leg busy.
	. . 1	Service seeking polling, or single poll.
	. . . 1	Service seeking. Orderly link stop. 1=End run when both transmit and receive legs idle. (SDLC)
 x . . .	SDLC receive leg busy. 1=Cannot poll now (primary). (Always on if secondary.) 0=Can poll now.
xx .	Phase bits for SDLC operations: B'00'=No command active. B'01'=SDLC I-format sent or SDLC RR-sent. B'10'=SDLC RNR-sent. B'11'=SDLC NS-command sent.
 x	SDLC poll loop control 1=At end of list no active station found 0=Active station found in list
		Control Flag Definitions for Enable/Dial Operations
	1	Abort enable dial.
	.1	Abort when level 2 processing ends.
	. . x	Duplex enable second pass through ender (SDLC). 1=Second pass through enable end. 0=First pass through enable end.
	. . . 1	Send ENQ after ID. (Bits 4-7 reserved).
		Control Flag Definitions for Text Operations
	1	Insert data before text. (Bits 1-7 reserved).
		Control Flag Definitions for Multiple Terminal Access
	1	MTA retry in process. (Bits 1-3 reserved).
 1 . . .	MTA line enabled.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
xx. 1.1	Phase bits: B'00'=Idle. B'01'=Receive text. B'10'=Receive text reply. B'11'=Receive control. or Special phase bits for ID exchange: B'00'=No command active. B'01'=Receive ID phase. B'10'=Receive ID reply. B'11'=Connect and Command Reject. Leading graphics being sent. Sub-blocking occurred.
CCBTYPE	Byte 1 x..... .x..... ..x..... ...1.... ...x....1..	Line type 1=Line is on a type 3 scanner. 0=line is not on a type 3 scanner. Duplex adapter. 1=Line has 2 line adapter addresses. 0=1 line adapter address. Half duplex ACB or duplex transmit leg ACB. 1=Half duplex leg or duplex transmit leg ACB. 0=Duplex receive leg ACB. or Duplex adapter transmit leg ACB. 1=Transmit leg. 0=Receive leg. or SS (WTTY) strip FIGS/LTRS NCP#. 1=Strip FIGS/LTRS in received text. or SS (TWX) 1=Odd parity verification 0=Even parity verification. Use data set new sync feature (BSC/SDLC). Half duplex link on which break is allowed (SS). Line type bit. (Note) 1=BSC. 0=start-stop, SDLC (see bit 7). Remote station can receive error message (BSC). Time-out valid reply for negative poll (start-stop). SDLC secondary 1=Defined as multipoint 0=Not defined as multipoint

Note: Bits 4 and 7 may have the following combinations:

- 0..0 = Start Stop
- 1..0 = BSC
- 0..1 = SDLC

Offset/Field Name	Bit Pattern/ Hex Value	Contents
x .	Point-to-point contention bit (BSC/SDLC). 1=point-to-point contention secondary station (BSC). 0=point-to-point contention primary station. or 1=SDLC secondary station. 0=SDLC primary station. or World Trade shift bit (SS). 1=upshift on space character (WTTY only). 0=no upshift on space. or SS (TWX) 1=parity checking required 0=No parity checking required
x	SDLC link bit NCP#. (Note) 1=Line type is SDLC (Bit 4=0). 0=Line type is not SDLC. or S/S (WTTY) strip FIGS/LTRS. (NCP2) 1=Strip FIGS/LTRS in received text. 0=Leave FIGS/LTRS in received text.

Note: Bits 4 and 7 may have the following combinations:
0 . 0 = Start Stop
1 . 0 = BSC
0 . 1 = SDLC

Program: NCP

Size in bytes: 16(10)

Located in: DVB

Created by: NCP generation.

Pointer to CGP: DVBCLSO field in DVB.

Function: Contains information necessary to reinitiate suspended sessions of general polled devices.

0(0)*		
CGPRVTE Pointer to RVT entry.		
4(4)*	5(5)*	6(6)*
CGPSSC Suspended sessions count.	CGPSSS Suspended sessions serviced.	(Reserved)

Cluster Suspended Sessions QCB
(See QCB for Work Queues for all bit definitions.)

8(8)*		10(A)*	
CGP1ECB Pointer to first BCU queued. (Shifted address.)		CGPLECB Pointer to last BCU queued. (Shifted address.)	
12(C)*	13(D)*	14(E)*	
CGPSTAT Task and queue status.	CGPPRKEY Protection key.	CGPLINK Pointer to next QCB in chain. (Shifted address.)	

*Actual position depends on other extensions present.

CHANNEL CONTROL BLOCK

**CHB
(NCP1, 2)**

Program: NCP1, NCP2

Size in bytes: 128(80)

Created by: NCP Generation

Pointer to CHB: CHSVH2 field in XDH

Function: Contains the parameters and control fields used by the type 2 channel adapter I/O supervisor.

CHB Prefix

-24(-18)	CXCAWQ Channel work QCB. (For format, see Queue Control Block for Work Queues.)
-16(-10)	CXCAHQ Channel hold QCB. (For format, see Queue Control Block for Work Queues.)
-8(-8)	CXCAECB Event control block for leasing buffers. (For format, see Event Control Block.)

0(0) CHBSTATE* Channel adapter outbound state field.	1(1) CHBTRIG* Channel trigger field.	2(2) (Reserved).	3(3) CHBCASEL* CA select byte- indicates current primary CA.
4(4) CHBXR50 Save area for external register X'50'.	6(6) CHBXR51 Save area for external register X'51'.		
8(8) CHBXR52 Save area for external register X'52'.	10(A) CHBXR53 Save area for external register X'53'.		
12(C) CHBXR54 Save area for external register X'54'.	14(E) CHBXR55 Save area for external register X'55'.		

*Indicates a byte expansion follows.

16(10)	CHBXR57 Save area for external register X'57'.	18(12)	CHBXR5C Save area for external register X'5C'.
20(14)	CHBIM1SV Save area for input manager's linkage register to CXCACIM1.		
24(18)	CHBIM3SV Save area for input manager's linkage register to CXCACIM3.		
28(1C)	CHBECBAD Address of ECB for leasing buffers.		
32(20)	CHBEQSV Address of the complete BTU to be passed to the system router.		
36(24)	CHBEQSVN Address of the last buffer in the BTU to be enqueued.		
40(28)	CHBBSVS Address of the first buffer on the save chain.		
44(2C)	CHBBSVE Address of the last buffer on the save chain.		
48(30)	CHBICFB Address of the first buffer in the CW chain.		
52(34)	CHBICPS Pointer to the input CW chain (CIC).	54(36)	CHBICFE Address of the first CW on the input CW chain (CIC).
56(38)	CHBICLE Address of the last CW on the input CW chain (CIC).	58(3A)	CHBLEXCW Address of last executed CW.
60(3C)	CHBRNBS Number of data bytes in one NCP buffer (shifted left two bits).	62(3E)	CHBLBCNT Data count for last inbound buffer used.
64(40)	CHBRCNT Original data count in last CW executed.	66(42)	CHBRNBAL NCP generated buffer lease count for inbound data.
		67(43)	CHBBLC Current buffer lease count (same as CHBRNBAL except during slowdown, when this field equals one).
68(44)	CHBCOMSV Save area for linkage register for CXCACOM.		
72(48)	CHBHQBS Address of the last outbound BTU given to the channel adapter output initiator.		

76(4C) CHBWQAD Address of the channel work QCB.		
80(50) CHBHQAD Address of the channel hold QCB.		
84(54) CHBOCFB Address of the first buffer on the output CW chain (COC).		
88(58) CHBOCPS Pointer to the output CW chain (COC).	90(5A) CHBOCFE Address of the first CW on the output CW chain (COC).	
92(5C) CHBOCLE Address of the last CW on the output CW chain (COC).	94(5E) CHBWKA Save area.	
96(60) CHBHBS Host buffer size in bytes.	98(62) CHHBAL Number of host buffers allocated per read list.	99(63) CHBOCR Number of host buffers remaining for use by the output CW chain (COC).
100(64) CHBP1PT Pointer to start of access method pad 0.	102(66) CHBPAD1 Number of bytes in access method pad 0.	103(67) (Reserved).
104(68) CHBP2PT Pointer to start of access method pad 1.	106(6A) CHBPAD2 Number of bytes in access method pad 1.	107(6B) (Reserved).
108(6C) CHBDLAY NCP generated value for attention delay in tenths of a second.	110(6E) CHBATTO First attention time-out interval.	
112(70) CHBATT2 Second attention time-out interval.	114(72) CHBSSICF CA-inoperative flag for level 1 only.	115(73) (Reserved).
116(74) (Reserved).		
120(78) CHBERPSV Save area for channel error recovery procedure.		
124(7C) CHBSCBA Address of secondary channel adapter extension, if present. Zero if not present.		

Control Word Chain Area**

0(0)	CHBCOCWS Variable length area for Out CW chain (COC).
***	CHBCICWS Variable length area for In CW chain (CIC).

- ** If the secondary channel adapter extension to the CHB is present, this area (Control Word Chain Area) follows the extension.
- *** Offset depends on length of CHBCOCWS.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) CHBSTATE	1 1 x 1 1 x 1 1	Channel adapter outbound state field. Attention needs to be presented to host. Attention delay active. (Reserved). Allow attention time-out. Attention has been presented. (Reserved). COC is active. Channel work queue is active.
1(1) CHBTRIG	1 1 1 1 1 1 1	Channel trigger field. Next BTU has been rejected because of slowdown. Reject the next BTU because of slowdown. Slowdown mode indicator. Switch-in-progress flag. Terminate flag. Secondary Read pending flag. Switch Read pending flag.
3(3) CHBCASEL	X'08' X'00'	Type 2 channel adapter 1. Type 2 channel adapter 2.

CHANNEL CONTROL BLOCK

CHB
(NCP#)

Program: NCP#

Size in bytes: 128(80)

Created by: NCP Generation

Pointer to: CHSVH2 field in XDH (X'772').

Function: Contains the parameters and control fields used by the type 2 and type 3 channel adapter I/O supervisor.

-48(-30)		CXCAHQ PIU exception queue (for format, see QCB for input queues).	
-32(-20)		CXCAIQ Channel intermediate QCB (for format, see QCB for work queues).	
		First element queued.	Last element queued.
-24(-18)		CXCAHQ Channel hold QCB (for format, see QCB for work queues).	
		First element queued.	Last element queued.
-16(-10) CXCAECB Event control block for leasing buffers (for format, see Event Control Block.)			
-8(-8) XXCXTCHB Dump identifier. Characters "XXCXTCHB"			
0(0)	CHBCND* Channel condition flags.		2(2) 3(3) CHBSEL CHBCASEL Channel adapter select bit. X'0008' type 2 CA-position 1. X'0000' type 2 CA-position 2.
4(4) CHBSICF Channel adapter inoperative flag for level 1 use only.	5(5) Reserved.	6(6) CHBCND* Condition flags on entry.	
8(8) Reserved.		10(A) Reserved.	
12(C) Reserved.		14(E) CHBRX Next Read Start command expected.	15(F) CHBWSX Next Write Start command expected.
16(10) CHBXR50 Save area for external register X'50'.		18(12) CHBXR51 Save area for external register X'51'.	
20(14) CHBXR52 Save area for external register X'52'.		22(16) CHBXR53 Save area for external register X'53'.	
24(18) CHBXR54 Save area for external register X'54'.		26(1A) CHBXR55 Save area for input from external register X'55'.	

*Indicates a byte expansion follows.

28(1C)	CHBXR550 Save area for output to external register X'55'.	30(1E)	CHBXR56 Save area for external register X'56'.
32(20)	CHBXR57 Save area for external register X'57'.	34(22)	CHBXR5A Save area for external register X'5A'.
36(24)	CHBXR5C Save area for external register X'5C'.	38(26)	Reserved.
40(28)	CHBLESV Save area for CXCALEAS.		
44(2C)	CHBBCWSV Save area for CXCABCWS.		
48(30)	CHBBFXSV Save area for CXCABFIX.		
52(34)	CHBIBTUA Address of first buffer of current PIU.		
56(38)	CHBIPBF Pointer to last inbound buffer.		
60(3C)	CHBIBUF1 Address of first buffer on inbound CW chain.		
64(40)	CHBIBUFN Address of last buffer on inbound CW chain.		
68(44)	CHBCBTU1 Address of a complete PIU passed to path control.		
72(48)	CHBCBTUN Address of last buffer of PIU to be enqueued.		
76(4C)	CHBICWA Address of inbound CW area.	79(4E)	CHBICW1 Address of first CW on inbound CW chain.
80(50)	CHBICWN Address of last CW on inbound CW chain.	82(52)	CHBLEXCW Address of last executed CW.
84(54)	CHBLBCNT Data count for last inbound buffer.	86(56)	CHBRCNT Original data count in last executed CW.
88(58)	CHBMLCNT Number of buffers to lease for inbound transfer.	89(59)	CHBCLCNT Current buffer lease count.
92(5C)	CHBSKPCT Number of PIUs to skip for retry.	90(5A)	CHBBTUCT Number of PIUs enqueued.
		94(5E)	Reserved.

96(60)		CHBIQBS Address of last outbound block given to CXCAOUT.	
100(64)	CHBOFFST Temporary area for buffer data offset.	102(66)	CHBDATCT Temporary area for buffer data count.
104(68)	CHBOCW1 Address of first CW on output chain.	106(6A)	CHBOCWN Address of last CW on output chain.
108(6C)	CHBFHAC System generated host Read buffer size.	110(6E)	CHBRHAC Host Read buffer size work area.
112(70)	CHBFCCW System generated number of host Read CCWs per channel transfer unit.	114(72)	CHBRCCW Number of host Read CCWs per channel transfer unit work area.
116(74)	CHBVPAD VTAM Pad size.	118(76)	CHBDLAY NCP system generation value for attention delay in tenths of a second.
120(78)	CHBHWM Attention delay PIU counter.	122(7A)	CHBATT0 First attention time-out interval.
124(7C)		Reserved	

Control Word Chain Area**

0(0)	CXCAOCWA Variable length area for Out CW chain.
***	CXCAICWA Variable length area for In CW chain.

**If the secondary channel adapter extension to the CHB is present, this area (Control Word Chain Area) follows the extension.
***Offset depends on length of CHBOCWS.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0)	Byte 0	Channel condition flags.
CHBCND	1	Attention status required.
6(6)	. 1	Attention delay active.
CHBICND	. . . 1	Inhibit attention time-out.
 1	Attention has been presented.
	Byte 1	
	. 1	Slowdown mode BTU rejected.
	. . 1	Slowdown mode indicator.
 1	Switched in progress flag.
 1	Secondary Read pending.
 1	Switch Read pending
 1	Terminate flag.
4(4)	1	Set if more than 16 interrupts occur in 100 milliseconds on a secondary channel adapter.

**CHANNEL CONTROL BLOCK EXTENSION FOR
SECONDARY CHANNEL ADAPTER**

**CHB
Ext.
(NCP1, 2)**

Program: NCP1, NCP2

Size in bytes: 128(80)

Created by: NCP generation

Pointer to CHB extension: CHBSCBA field in CHB.

Function: Contains the parameters and control fields used by the type 2 channel adapter I/O supervisor when switching primary and secondary channel adapters.

0(0)		(Reserved)	
4(4)	CHBSXR50 Save area for external register X'50'.	6(6)	CHBSXR51 Save area for external register X'51'.
8(8)	CHBSXR53 Save area for external register X'53'.	10(A)	CHBSXR54 Save area for external register X'54'.
12(C)	CHBSXR55 Save area for external register X'55'.	14(E)	CHBSXR56 Save area for external register X'56'.
16(10)	CHBSXR57 Save area for external register X'57'.	18(12)	CHBSXR5C Save area for external register X'5C'.
20(14)	CHBSICV Value of secondary CA's INCWAR.	22(16)	CHBSOCV Value of secondary CA's OUTCWAR.
24(18)	CHBSSINA Address of an In CW for reading switch commands.	26(1A)	CHBYRPR Address of Out CW for response BTU indicating that the old secondary is now the primary.
28(1C)	CHBYRSR Address of Out CW for response BTU indicating that the old primary is now the secondary.	30(1E)	CHBSSATA Address of Out CW for response BTU indicating that attention time-out has expired on the primary CA.
32(20)		CHBSBPT Pointer to secondary channel adapter buffer.	

36(24)	(Reserved)
40(28)	CHBSINCW In CW with zero count override for switch commands.
44(2C)	Area for building CW to transfer pad before response BTU 1.
48(30)	CHBPRCW Out-stop CW with no chaining for response BTU 1.
52(34)	Area for building CW to transfer pad before response BTU 2.
56(38)	CHBSRCW Out-stop CW with no chaining for response BTU 2.
60(3C)	Area for building CW to transfer pad before response BTU 4.
64(40)	CHBSARCW Out-stop CW with no chaining for response BTU 4.
68(44)	CHBSRSP1 Response BTU 1 - indicates that the old secondary is now the primary.
	82(52)
	CHBSRSP2 Response BTU 2 - indicates that the old primary is now the secondary.
96(60)	(Reserved)
	110(6E)
	CHBSRSP4 Response BTU 4 - indicates that attention time-out has expired on the primary CA.
124(7C)	(Reserved)

CHANNEL CONTROL BLOCK

CHCB
(EP/PEP)

Program: EP/PEP

Size in bytes: 104(68) + CHVT

Created by: EP (new base)/NCP # generation

Pointer to: CHCBAD1 at X'710' for CHCB1 (first type 4 CA), CHCBAD2 at X'712' for CHCB2 (second type 4 CA).

Function: Contains the queues, CHVT and other data unique to a particular channel adapter.

		0(0)	CASEL* Channel Select Bits & PEP Flags
2(2)		4(4)	DDCCBADR Dynamic Subchan CCB Address
6(6)	7(7)	8(8)	OCBTIO Test I/O Control
6(6)	OCBFLAGS EP Flags	ACCOUNT Active Command Count	
10(A)		12(C)	
PDSOFIRST Priority Data SVC Out Queue First Pointer		PDSOLAST Priority Data SVC Out Queue Last Pointer	
14(E)		16(10)	
PEDSOFST Priority Extended Data SVC Out Queue First Pointer		PEDSOLST Priority Extended Data SVC Out Queue Last Pointer	
18(12)		20(14)	
DSOFIRST Data SVC Out Queue First Pointer		DSOLAST Data SVC Out Queue Last Pointer	
22(16)		24(18)	
EDSOFIRST Extended data SVC Out Queue First Pointer		EDSOLAST Extended data SVC Out Queue Last Pointer	
26(1A)		28(1C)	
DSIFIRST Data SVC in Queue First Pointer		DSILAST Data SVC in Queue Last Pointer	
30(1E)		32(20)	
EDSIFIRST Extended Data SVC In Queue First Pointer		EDSILAST Extended Data SVC In Queue Last Pointer	

34(22) SOFIRST Status Out Queue First Pointer		36(24) SOLAST Status Out Queue Last Pointer	
38(26) PSIFIRST Poll Data SVC In Queue First Pointer		40(28) PSILAST Poll Data SVC In Queue Last Pointer	
42(2A) SNOFRST Sense Out Queue First Pointer		44(2C) SNOLAST Sense Out Queue Last Pointer	
46(2E) SSFRST Stacked Status Queue First Pointer		48(30) SSLAST Stacked Status Queue Last Pointer	
50(32) TIOCLOCK TIO Clock	51(33) Reserved	52(34) SAVE62 Output X'62' Save Area	
54(36) SAVE63 Output X'63' Save Area		56(38) SAVETERM Terminator Address Save Area	
58(3A) Reserved		60(3C) Reserved	
62(3E) Native Subchannel CCB (42 Bytes)		104(68)	
Channel Vector Table (CHVT)			

*Byte expansion follows

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Definition
0(0) CASEL	byte 0 1 x 1 x	PEP FLAG – bit on indicates that EP is busy or a CCB is queued indicating pending EP operation. No PI flag – bit on indicates that a PI is not required to give control to the queue scanner. Select control bit – Same as bit 0.3 of Out 67. Bit is always on. CA Select bit – Same as Bit 0.7 of Out 67. Bit off indicates CA no. one. Bit on indicates CA no. two.
	byte 1 . 1	Set PI – Same as bit 1.1 of Out 67. Bit is always on.

CHANNEL VECTOR TABLE

CHVT
(EP/PEP)

Program: EP/PEP

Size in bytes: Variable, depending on the number of subchannels specified.

Located: At location X'68' in the Channel Control Block (CHCB) (type 4 CA). For EP (type 1 CA), the CHVT is located on the first doubleword boundary following the end of the LNVN. For PEP, the CHVT is pointed to by the last word (SYSCHVTP) in HWE.

Created by: EP and NCP generation.

Referenced by: Level 1 and level 3 routines.

Function: Allows the level 3 routines to find a line's CCB when only the subchannel address is known. Allows level 1 routines to initialize and reset the 3705 hardware defined during generation.

0(0) CYACHVT Subchannel addresses		2 thru n**
Lowest subchannel address.	Highest subchannel address.	Address of the associated LNVN entry for each of the line adapter interfaces (each address occupies 2 bytes.) If even, it points to an active LNVN entry. If odd, it points to a USCCB (dummy CCB).
n+1 X'0001' Delimiter		n+3 CYAWRAP* Associated LNVN entries of the WRAP lines (type 1 CA) ----- CHVTPTR Pointer to the next CHVT or the first CHVT if this is the last. (type 4 CA)
CYASCAN* Initialization data (type 1 CA)		

*Indicates a byte expansion follows.

**n=the number of line adapter interfaces multiplied by two (2), plus one (1).

Byte Expansions

Offset/Field Name	Contents
CYAWRAP (n+3) - (n+4) (n+5) - (n+6) (n+7) - (n+8) (n+9) - (n+A)	Associated LNVN entries of the WRAP lines. 1st scanner wrap line address. 2nd scanner wrap line address. 3rd scanner wrap line address. 4th scanner wrap line address
CYASCAN (n+B) (n+C) (n+D) (n+E) (n+F)	Initialization data. 1st scanner scan limit. 2nd scanner scan limit. 3rd scanner scan limit. 4th scanner scan limit. Substitution control for all scanners.

Program: NCP

Size in bytes: Variable.

Located in: DVB

Created by: NCP generation.

Pointer to CIE: DVBDIAL field in DVB.

Function: Contains optional data required for servicing calls originated by a terminal on a switched line.

0(0)***	
CIENTAP Pointer to MTA list (last 18 bits). Included only if the device type is multiple terminal access.	
or	
CIEIDL Pointer to ID list (IDL) (last 18 bits). Included only if ID verification is used on the associated line.	
CIEFLAGS* Flags. The bit definitions in this field must be identical to those in the COEFLAGS of the call-out extension (COE).	
4(4)**	5(5)**
CIEIDCT Count of send ID.	CIEIDPTR Pointer to the ID to be sent.

- * Indicates a byte expansion follows.
- ** These fields are present in the CIE only if sending of the control unit's identification is required for this device.
- *** Actual position depends on other extensions that are present. The CIE follows any polling, addressing, or input extensions to the DVB.

Byte Expansion

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0)		Flags.
CIEFLAGS	1 1 1 1 1 1 1	Send hardware ID is required. Receive hardware ID is expected. Dial digits are resident. Call-in device (This bit is always one for CIE). A dial request is pending for this device. Disconnect with end of call has been received. Set Mode is required at telephone connection with this device to set up proper physical line characteristics.

CHANNEL OPERATION BLOCK

COB
(NCP1, 2)

Program: NCP1, NCP2

Size in bytes: 128(80)

Created by: NCP generation.

Pointer to COB: CHSVH2 field in XDH (X'772').

Function: Contains the parameters and control fields used by the type 1 channel adapter I/O supervisor.

COB Prefix

-24(-18)	CXCAWQ Channel work QCB. (For format, see Queue Control Block for Work Queues.)
-16(-10)	CXCAHQ Channel hold QCB. (For format, see Queue Control Block for Work Queues.)
-8(-8)	CXCAECB Event control block for leasing buffers. (For format, see Event Control Block.)

0(0)	COBCND* Channel condition flags.	2(2)	COBICND Value of condition flags on last entry.
4(4)	COBXR77 Save area for external register X'77'.	6(6)	COBXR60 Save area for external register X'60'.
8(8)	COBXR61 Save area for external register X'61'.	10(A)	COBSR62I Save area for input from external register X'62'.
12(C)	COBXR62O Save area for output to external register X'62'.	14(E)	COBXR63 Save area for external register X'63'.

*Indicates a byte expansion follows.

16(10)	COBXR64 Save area for external register X'64'.	18(12)	COBXR65 Save area for external register X'65'.
20(14)	COBXR66 Save area for external register X'66'.	22(16)	COBXR67 Save area for external register X'67'.
24(18)	COBSENSE Sense byte to transfer for sense commands.	25(19)	(Reserved)
		26(1A)	COBCCMD Current channel command.
28(1C)	COBERPSV Error recovery procedure save area.		
32(20)	COBRELSV Release subroutine save area.		
36(24)	COBNINSV Save area for inbound BTU processor.		
40(28)	COBLESV Lease subroutine save area.		
44(2C)	COBPIB Address of first inbound buffer.		
48(30)	COBIPBF Pointer to previous inbound buffer.		
52(34)	COBCIB Pointer to current inbound buffer.		
56(38)	COBCID Current displacement in inbound buffer.		
60(3C)	COBCBLK Address of the last complete BTU given to the system router.		

64(40) COBIBCD Number of data bytes in current BTU.		66(42) COBMDO Maximum data count for current in-bound buffer.	67(43) (Reserved)
68(44) COBMLCNT NCP generated buffer lease count for in-bound data.	69(45) COBCLCNT Current buffer lease count. (Same as COBMLCNT except during slowdown, when this field equals one.)	70(46) COBECBAD Address of ECB for leasing buffer.	
72(48) COBWQAD Address of channel adapter work QCB.		74(4A) COBHQAD Address of channel adapter hold QCB.	
76(4C) COBOXSV Save area for outbound transfer routine.			
80(50) COBROTSV Refresh outbound transfer routine save area.			
84(54) COBBLKA Outbound BTU address.			
88(58) COBOBUFA Pointer to current outbound buffer.			
92(5C) COBODATA Current displacement in outbound buffer.			
96(60) COBFCCW Number of host buffers allocated per read list.		98(62) COBRCCW Number of host CCWs remaining in read list.	
100(64) COBFHAC Host buffer size in bytes.		102(66) COBRHAC Number of bytes remaining in host buffer.	
104(68) COBRDCNT Outbound buffer residual data count.		106(6A) COBOXCNT Number of bytes to be transferred on next outbound data service.	

108(6C) COBATTO Attention time-out duration.		110(6E) COBHPTR Pointer to dummy header buffer.	
112(70) Dummy header buffer.			
116(74) COBHPAD Number of bytes in access method pad 0.	117(75) (Reserved)	118(76) COBTPTR Pointer to dummy text buffer.	
120(78) Dummy text buffer.			
124(7C) COBTPAD Number of bytes in access method pad 1.	125(7D) (Reserved)	126(7E) COBDELAY Attention delay duration.	

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) COBCND	Byte 0 1111111	Channel condition flags. Attention status required. Attention delay active. Monitoring suppress out. Inhibit attention time-out. Attention has been presented. Channel end/device end status needed. Hold QCB active. Work QCB active.
	Byte 1 .111	BTU rejected. Channel in slowdown mode. Abort sent indication.

CHANNEL OPERATION BLOCK FOR NCP#

COB
(NCP#)

Program: NCP#

Size in bytes: 128(80)

Created by: NCP Generation

Pointer to COB: CHSVH2 field in XDH (X'772')

Function: Contains the parameters and control fields used by the type 1/type 4 channel adapter I/O supervisor.

-48(-30)		CXCAHQ PIU exception queue (for format, see QCB for input queues).	
-32(-20)		CXCAIQ Channel intermediate QCB (for format, see QCB for work queues).	
		First element queued.	Last element queued.
-24(-18)		CXCAHQ Channel hold QCB (for format, see QCB for work queues).	
		First element queued.	Last element queued.
-16(-10)		CXCAECB Event control block for leasing buffers (for format, see Event Control Block.)	
-8(-8)		XXCXTCOB Dump identifier. Characters "XXCXTCOB"	
0(0)	COBCND* Channel condition flags.	2(2)	CPBCASEL Type 4 channel adapter port selection mask. 0100=CA4 port 2 0000=CA4 port 1
4(4)	Reserved.	6(6)	COBICND Condition flags on entry.
8(8)	COBCCMD Current channel command.	10(A)	COBSTAT Current status byte.
12(C)	COBSENSE Sense byte to transfer for sense commands.	13(D)	Reserved.
		14(E)	COBR SX Next Read Start command expected.
		15(F)	COBWSX Next Write Start command expected.
16(10)	COBXR77 Save area for external register X'77'.	18(12)	COBXR60 Save area for external register X'60'.
20(14)	COBXR61 Save area for external register X'61'.	22(16)	COBXR621 Save area for input from external register X'62'.
24(18)	COBXR620 Save area for output from external register X'62'.	26(1A)	COBXR63 Save area for external register X'63'.

28(1C) COBXR64 Save area for external register X'64'.		30(1E) COBXR65 Save area for external register X'65'.	
32(20) COBXR66 Save area for external register X'66'.		34(22) COBXR67I Save area for input from external register X'67'.	
36(24) COBXR67O Save area for output from external register X'67'.		38(26) Reserved	
40(28) COBITUA Address of first inbound buffer.			
44(2C) COBIPBF Pointer to previous inbound buffer.			
48(30) COBIBUFA Pointer to current buffer.			
52(34) COBIDATA Current inbound DATA address.			
56(38) COBCBTU1 Address of first buffer of completed PIU			
60(3C) COBCBTUN Address of last buffer of completed PIU.			
64(40) COBBTUCT Count of PIUs passed to path control.		66(42) COBSKPCT Number of PIUs to skip for retry.	
68(44) COBMDO Maximum data count for current inbound buffer.	69(45) Reserved.	70(46) COBMLCNT Generation buffer lease count for input data.	71(47) COBCLCNT Current buffer lease count.
72(48) Reserved.			

76(4C)		COBIQBS Address of last outbound PIU given to CXCAOUT.	
80(50)		COBOXSV Save area for outbound transfer routine.	
84(54)		COBROTSV Save area for outbound transfer routine.	
88(58)		COBOBTUA Address of outbound PIU.	
92(5C)		COBOBUFA Address of outbound buffer.	
96(60)		COBODATA Address of outbound data.	
100(64)	COBFCCW Number of host CCWs.	102(66)	COBFHAC Host Read CCW byte count.
104(68)	COBRHAC Host Read CCW byte count residual out operation.	106(6A)	COBRDCNT Outbound buffer residual data count.
108(6C)	COBOXCNT Number of bytes to transfer for next outbound data service.	109(6D)	Reserved.
110(6E)		COBHWM Attention delay CCW counter.	
112(70)		114(72)	
COBPFAD Address of PEP flag in EP channel adapter control block.		COBO62RB Output 62 reset/request bucket.	
116(74)		118(76)	
COBATTO Attention time-out duration.		COBDELAY Attention delay interval.	
120(78)		122(7A)	123(7B)
COBDUMBF Dummy buffer chain field.		Offset to data.	COBV PAD Buffer data count.
124(7C)	Pad size as one byte of data.	124(7D)	Reserved.
126(7E)		Reserved.	

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) COBCND	Byte 0	Channel condition flags.
	1	Attention status required.
	.1	Attention delay active.
	. .1	Monitoring suppress out.
	. . .1	Inhibit attention time-out.
1	Attention has been presented.
1	Channel end/device end status needed.
	Byte 1	
	.1	Block rejected flag.
	. .1	Channel in slowdown mode.

Program: NCP

Size in bytes: Variable, depending on length of dial digits.

Located in: DVB

Created by: NCP generation.

Pointer to COE: DVBDIAL field in DVB.

Function: Contains optional data required to call a terminal on a switched line.

0(0)** COESGTP Address of device's switched group table (SGT) (last 18 bits).			
COEFLAGS* Flags. The bit definitions of this field must be identical to those in the CIEFLAGS field of the CIE.			
4(4)** COELCSTI Index to LCST (MTA only).	5(5)** COEMAX Maximum field length of dial digits.	6(6)** COECUR Current number of dial digits.	7(7)** COEDIAL Dial digits. (Variable length)

* Indicates a byte expansion follows.

** Actual position depends on other extensions that are present.

Byte Expansions

Offset/Field Name	Bit Pattern/Hex Value	Contents
0(0) COEFLAGS	1111111	Flags. Send hardware ID is required. Receive hardware ID is expected. Dial digits are resident. Call-in device. This bit is always zero for COE. A Dial request is pending for this device. Disconnect with End of Call has been received. Set mode is required at telephone connection with this device.

CHECK RECORD POOL

CRP

Program: NCP

Size in bytes: Variable (header=10 bytes; each entry=18-35 bytes).

Created by: NCP generation.

Pointer to CRP: SYSCSRP field in HWE.

Function: Contains check records that have not yet been processed. These records are generated by program level 1 and 3 error handling routines and are processed by a program level 5 routine (CXDIERT) that prepares buffers for transfer to the host as unsolicited MDR (miscellaneous data recorder) records.

Header

0(0)	CRPL1PTR Pointer to next record unit to be used by level 1.	2(2)	CRPT1PTR Pointer to the next level 1 unit to be serviced by CXDIERT.
4(4)	CRPL3PTR Pointer to next record unit to be used by level 3.	6(6)	CRPT3PTR Pointer to the next level 3 unit to be serviced by CXDIERT.
8(8)	CRPSTAT1* Trigger control byte.	9(9)	CRPSTAT2 (Reserved)

Entry Format

0(0)	CRPCTL CRP control bytes.
	CRPLNG* Length of the MDR data.
	CRPFLG* CRP flag byte.

Start of MDR Data (CRPDATA)
(Refer to Section 17 for Record Formats)

		2(2)	CRPABMAL Abend malfunction code.
4(4)	CRPREC* The recording mode byte. (For values, see table.)	5(5)	CRPID MDR record ID field. The 3705 MDR record is always X'05'.
		6(6)	CRPBERT* Box error record type code.
		7(7)	CRPLCRT Lost check record counter.
8(8)	Up to 29 bytes of formatted information. Remainder of MDR data. (Refer to Section 17.)		

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
8(8) (Header) CRPSTAT1	X'00' X'80'	Trigger control byte. Trigger of CXDIERT is required. Trigger of CXDIERT is not required.
0(0) CRPLNG (Entry Format)	X'04' X'12' X'12' X'12' X'12' X'12' X'12' X'12' X'12' X'14' X'14' X'14' X'14' X'14' X'14' X'18' X'18' X'19' X'19'	Length of MDR data. Invalid record. Type 1/4 channel adapter. Type 1 scanner. Type 2 scanner-1. Type 2 scanner-2. Type 2 scanner-3. Type 2 scanner-4. Invalid operation code. Input/Output instruction exception. Type 3 scanner-1. Type 3 scanner-2. Type 3 scanner-3. Type 3 scanner-4. Unresolved program level 1 interrupt. Unresolved program level 3 interrupt. Type 2 channel adapter-1. Type 2 channel adapter-2. Permanent line errors. Line statistics.
1(1) CRPFLG	111	CRP flag byte. End of check record pool. (Bits 1-5 reserved). Record is being serviced by CXDIERT. Check record unit has been used (filled), requires service.
4(4) CRPREC (MDR Data)	X'00' X'01' X'10' X'10' X'10' X'11' X'11' X'11' X'11' X'11' X'12' X'13' X'13' X'FF'	Recording mode. Permanent line errors. Line statistics. Type 1/4 channel adapter. Type 2 channel adapter-1. Type 2 channel adapter-3. Type 1 scanner. Type 2 scanner-1. Type 2 scanner-2. Type 2 scanner-3. Type 2 scanner-4. Invalid operation code. Input/Output instruction exception. Unresolved program level 1 interrupt. Unresolved program level 3 interrupt. Invalid record.
6(6) CRPBERT	X'01' X'02' X'03' X'04' X'08' X'08' X'09' X'10' X'11' X'20' X'21' X'40' X'41' X'84' X'C0'	Box error record type code. Unresolved program level 1 interrupt. Type 2 channel adapter-2. Unresolved program level 3 interrupt. Type 2 channel adapter-1. Type 2 scanner-4. Invalid operation code. Type 3 scanner-4. Type 2 scanner-3. Type 3 scanner-3. Type 2 scanner-2. Type 3 scanner-2. Type 2 scanner-1. Type 3 scanner-1. Type 1/4 channel adapter. Type 1 scanner.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
7(7) CRPLCRCT	xxxx xxxx	Lost check record counter. Number of records lost immediately preceding this record. Number of records lost while waiting for this record to be transferred to the host. Records are lost when the CRP is full and level 5 is unable to free up a unit by transferring a record to the host.

COMMAND TABLE

Program: PEP, EP

Size in bytes: 48(30)

Located in: Routine CYAIS of module CYASVC/CYESVC.

Created by: NCP & EP generation.

Updated by: N/A

Referenced by: ICP

Function: Contains the CCB command codes used for translating the 8-bit command code into the 5-bit CCB command code.

0-47(0-2F)

CMDTABLE
CCB command codes. (See Section 7.)

COMMUNICATION LINE TIMER AND RAS
CONTROL TABLE

CTB

Program: NCP

Size in bytes: 7(7)

Created by: NCP generation.

Pointer to CTB: None. See link edit map.

Function: Indicates end of timer resolution queues. This table must be located at least 25 bytes from start of a CSECT.

0(0)	CTBDCCB Dummy character control block address.	2(2)	CTBDWORK Dummy work entry.
4(4)	CTBUXREM Dummy CCBTOREM.	5(5) (Reserved).	6(6) (Reserved).

Program: NCP#

Size in bytes: 88(58)

Created by: Physical unit specification at NCP generation. One CUB is generated for each physical unit.

Pointer to CUB: In RVT and in the SOT.

Function: Contains the QCB, status information, and scheduling information for a physical unit.

Link Inbound Queue Control Block (See QCB for Input Queues for all bit definitions).

0(0)	CUB1ECB Pointer to first element queued (Shifted address).		2(2)	CUBLECB Pointer to last element queued (Shifted address).	
4(4)	CUBSTAT Task and queue status.	5(5)	CUBPRKEY QCB ID flag and task protection key.	6(6)	CUBLINK Pointer to next QCB on the queue (Shifted address).
8(8)	CUBTSKEP Task entry point (last 18 bits).				
	CUBMCBD Major control block displacement.		CUBSCHED Task dispatching priority.		
12(C)	CUBSAVE Address of save area pushdown list (Shifted address).		14(E)	CUBLUNK Pointer to previous QCB on queue (Shifted address).	
16(10)	CUBLOBH Link outbound queue head pointer (Shifted address).		18(12)	CUBLOBT Link outbound queue tail pointer (Shifted address).	
20(14)	CUBLOSH Link outstanding queue head pointer (Shifted address).		22(16)	CUBLOST Link outstanding queue tail pointer (Shifted address).	
24(18)	CUBLKB Address of link control block (last 18 bits).				
	CUBADRC SDLC addressing character.				
28(1C)	CUBRSE Network address of resource.		30(1E)	CUBSSCF* Service seeking control flags.	
				CUBSSCP* Contact poll commands.	
32(20)	CUBSTATS* Station status.	33(21)	CUBOCF* Service seeking output control flags.	34(22)	CUBTCNT Transmission counter.
36(24)	CUBAPIU Address of physical services PIU (last 18 bits).				
	CUBTYPE* Station type.				

40(28) CUBNR NR receive count.	41(29) CUBNS NS send count.	42(2A) CUBERS Error retry status. (Note 1)	
44(2C) CUBEERS Extended retry status. (Note 2)	45(2D) CUBTRTCT Total retry count.	46(2E) CUBOCL Outstanding count limit.	47(2F) CUBCOG Current outstanding count.
48(30) CUBPNS NS at time of poll.	49(31) CUBPCNT Pass limit.	50(32) CUBRTCNT 1st level ERP retry count. 2nd level ERP retry count.	
52(34) CUBSRTL Second level retry count.	53(35) CUBRCMD* Run command modifiers.	54(36) CUBLERPT 2nd level ERP time-out value.	
56(38) CUBTERR Monitor secondary error count.	57(39) CUBERPT 2nd level ERP time delay.	58(3A) CUBERPCS ERP control flags send.	59(3B) CUBOCLS Outstanding count limit savearea

Physical Unit Processing Queue (See QCB for Input Queues for bit definitions)

60(3C) CPQ1ECB Pointer to first element queued (Shifted address).		62(3E) CPQLECB Pointer to last element queued (Shifted address).	
64(40) CPQSTAT Task and queue status.	65(4) CPQPRKEY Protection key.	66(42) CPQLINK Pointer to next QCB on the queue.	
68(44) CPQTSKEP Task entry point (last 18 bits).			
CPQMCBD Major control block displacement.		CPQSCHED Task scheduling priority.	
72(48) CPQSAVE Address of save area pushdown list (Shifted address).		74(4A) CPQLUNK Pointer to previous QCB on queue (Shifted address).	
76(4C) CUBPSTAT* Physical unit primary status.	77(4D) CUBSSTAT Physical unit secondary status.	78(4E) CUBMAXN Segment size (in buffers).	79(4F) Reserved.
80(50) CUBSEGSZ Maximum segment size (in bytes).		82(52) Reserved	

*Indicates a byte expansion follows.

Note 1: Refer to the LXBSTAT and LXBSTATC fields of the Link XIO Control Block for a definition of the status bits.

Note 2: Refer to the LXBEXTST field of the Link XIO Control Block for a definition of the status bits.

Switched Extension

84(54)	
CUBLUN Maximum number of entries in LUV.	CUBLUV Pointer to LUV (Last 18 bits)

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
30(1E) CUBSSCF	Byte 0 1111	Service seeking commands: Poll skip flag. Halt service seeking. Not operational. Contact Poll command active.
CUBSSCP	Byte 1 1111 1111	Contact poll commands: Disconnect Mode. (DISC) Set Normal Response Mode. (SNRM) Poll command mask. Set Initialization Mode (SIM) Exchange Identification (XID) Contact poll command field.
32(20) CUBSTATS	. . .1	Station status: Remote power-off in progress.
33(21) CUBOCF	1111111	Service seeking output control flags: Output skip bit. Run terminator interlock. RNR received. Second level delay in progress. Duplex data. Half-duplex poll control. Half-duplex poll in progress.
36(24) CUBTYPE	x111x	Station type: 1=Duplex station. 0=Half-duplex station. Switched SDLC station. Terminal node (type 1 PU). Cluster controller (type 2 PU) 1=Intermediate node (INN). 0=Boundary node (BNN).
53(35) CUBRCMD	.11	Run command modifiers: Override 1st and 2nd level retries. Immediate retry.
76(4C) CUBSTAT	1xx	Physical unit primary status: Session established. 1=Processing session initiating request. 0=Not processing session initiating request. 1=Processing session terminating request. 0=Not processing session terminating request.
77(4D) CUBSSTAT	1	Physical Unit Secondary Status: 3270 station.

BARSWAP TABLE**CYABARSW**

Program: EP, PEP

Size in bytes: 6+4 per line to be traced

Created by: NCP generation

Referenced by: CYATRC, CYANUC, CYASVC, CYABIS, CYETRC, CYENUC, CYESVC, and CYEBIS.

Function: Provides the linkage for level 2 line trace only.

0(0) QEND Address of last entry in table.	2(2) FIRSTQ Address of first queue element.
4(4) LASTQ Address of last queue element.	6 - (4n+2) Address of level 2 trace routine.

8 - (4n+4) Address of next available queue or, if in use, the CCB address of line being traced.
--

Program: NCP

Size in bytes: Variable, depending on addressing characters.

Located in: DVB

Created by: NCP generation.

Pointer to DAE: (None.) Immediately follows polling extension; if no polling extension is present, the DAE immediately follows the DVB.

Function: Contains addressing characters for a device.

0(0)* DAEOSP Device output delay.	1(1)* DAEACUR Current number of addressing characters	2(2)* DAEADDR Addressing characters. (DVBAO field in the DVB points here.) (variable length)
---	---	--

*Actual position depends on the extensions that are present.

DEVICE INPUT AREA

Program: NCP

Size in bytes: 9(9)

Located in: DVB extension.

Created by: NCP generation.

Pointer to DIA: DVBINVO field in DVB.

Function: Contains information about input devices.

0(0)**		DIARVTE Address of RVT entry (last 18 bits).
DIASA Invite command save area.	1(1)** DIAFLAG Flags. (See BCUFLAGS for bit definitions; bits 6 and 7 are used as part of RVT entry ad- dress.)	
or DIAMOD Command modifiers.		
4(4)**	DIASEQ Command sequence number.	6(6)** DIASRC Source name field.
8(8)**	DIARD* Record definition.	

*Indicates a byte expansion follows.

**Actual position depends on other extensions that are present.

Byte Expansion

Offset/Field Name	Bit Pattern/ Hex Value	Contents
8(8) DIARD1100111	Record definition. EOB=EOT. Message. Block. Transmission.

Program: NCP

Size in bytes: 36(24)

Created by: NCP generation.

Pointer to DRS: SYSDRSP field in HWE.

Function: Contains addresses of appendage routines to be given control by CXCCPSUP.

0(0)	CTXDRS Set to zero.
4(4)	DRSICW Address of ICW display routine.
8(8)	DRSICWA Address of ICW display routine.
12(C)	(Reserved)
16(10)	(Reserved)
20(14)	(Reserved)
24(18)	DRSTBL Table of display/refresh/select control values used by individual appendage routines. (length of 12 bytes)

Program: NCP

Size in bytes: Variable, depending on extensions present.

Created by: NCP generation. One DVB is generated for each BSC/SS device.

Pointer to DVB: RVTRP field; LCBDVBP field of LCB during session.

Function: Serves as the base for all component, terminal, and device control unit representations. It includes queue control blocks plus all parameters required by a device.

Device Work QCB

(See QCB for Work Queues for all bit definitions.)

0(0) DVQ1ECB Pointer to first element queued. (Shifted address.)		2(2) DVQLECB Pointer to last element queued. (Shifted address.)	
4(4) DVQSTAT Task and queue status.	5(5) DVQPRKEY Protection key.	6(6) DVQLINK Pointer to next QCB on the queue. (Shifted address.)	

Device Input QCB

(See QCB for Input Queues for all bit definitions.)

8(8) DV11ECB Pointer to first element queued. (Shifted address.)		10(A) DVILECB Pointer to last element queued. (Shifted address.)	
12(C) DV1STAT Task and queue status.	13(D) DV1PRKEY Protection key.	14(E) DV1LINK Pointer to next QCB on the queue. (Shifted address.)	
16(10) DV1TSKEP Task entry point (last 18 bits).			
DVIMCBD Major control block displacement		17(11) DV1SCHD Task dispatching priority.	
20(14) DV1SAVE Address of save area push-down list. (Shifted address.)		22(16) DV1LUNK Pointer to previous QCB on the queue. (Shifted address.)	
24(18) DV1BHSET BH set (or BHR) address (last 18 bits).			
DV1BHRST BHR status bits.		25(19) DV1BSCH BHR scheduling bits.	
28(1C) DVBRID Device resource ID.		30(1E) DVBF1* Device features byte 1.	31(1F) DVBF2* Device features byte 2.

End of Device Input QCB

32(20) DVBPTR Auxiliary pointer (last 18 bits). If device is component, this field contains pointer to shared terminal DVB. If device is terminal, this field contains a pointer to line LCB.			
DVBTYP* Device type.			
36(24) DVBSDRT Transmission counter or pointer to OLTT control block, if in test mode.		38(26) DVBSDRE Temporary error counter.	39(27) DVBINVO Offset to device input area (DIA).
40(28) DVBBHRO Offset to BHR extension.	41(29) DVBBUO Offset to switched backup extension (BUE).	42(2A) DVBDIAL Offset to call-in or call-out extension (CIE or COE).	43(2B) DVBABNM* Abnormal mode indicators. This field is meaningful only when a reset is in progress. Bits 2-7 have the value of the command modifiers when a reset is in progress. Bits 0-1 indicate that a deactivation is in progress.

Service Seeking Control Block (SSC)

44(2C) DVBSTAT* Status byte 1.	45(2D) DVBSTAT2* Status byte 2.	46(2E) DVBDMF* Device mode flags.
48(30) DVBPCC Pending contact count.	49(31) DVBSTAT3* status byte 3	

Polling/Addressing Extension

This extension is present only if the device requires polling or addressing or both.

50(32) DVBTLM Transmission limit.	51(33) DVBTCNT Transmission counter.	52(34) DVBAO Offset from DVBSTAT to first addressing character in DAE.	53(35) DVCLSO Cluster general poll extension (CGP) offset.
--------------------------------------	---	---	---

Polling Extension

The following fields are present only if polling of device is required. (If this area is included, the device input extension (DIA) must also be included.)

54(36) DVBPUR Number of polling characters excluding ENQ.	55(37) DVBPOLL Polling characters. (Variable length.)
--	--

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
30(1E) DVBFEAT1	1 1 1 1 1 1 1 1	Device features byte 1. Block limit - BSC patch control. (NCP2, #) Conversational capability. Buffered receive. General poll. Batched message input. Carriage return delay (NCP2, #). Text time-out suppression. Break-terminal originated data; transfer can be interrupted.
31(1F) DVBFEAT2	1 1 1 x 1 1 1 1	Device features byte 2. Critical situation notification. 1050 Auto EOB feature. (NCP2, #). 1050 Receive Interrupt feature. (NCP2, #). (Reserved). Device on fan-out modem. (NCP2, #). Input extension exists (DIA). Addressing extension exists (DAE). Polling information exists.
32(20) DVBTYP	X'48' X'80' X'82' X'84' X'85' X'87' X'88' X'89' X'8A' X'8B' X'4C' X'C0' X'C1' X'C2' X'C3' X'C4' X'C5' X'C6' X'C7' X'C8' X'C9' X'CA' X'CB' X'CC' X'CD' X'CE' X'CF' X'D0' X'FF'	Device type. Components 2980 Non-BSC Terminals MTA 1050 2740, Model 1. 2741 2740, Model 2. 115A 83B3 TWX WTTY BSC Terminals. 3275, 3277, 3284, 3286 Logical connection terminals. 1130 1800 2701 2703 2715 2770 2780 2972 3705 2020 2025 3271, 3275 3780 3735 3741 (NCP2, #) 3747 (NCP2, #) Sys 3, 3125, 3135 (NCP #).
43(2B) DVBABNM	1 1 1 1 x 1 1 1	Abnormal mode indicators. Deactivate device in progress. Deactivate line orderly in progress. Reset at end of command in progress. Reset conditional in progress. (Reserved). Reset immediate in progress. Reset device queue in progress. Critical situation notification device serviced.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
44(2C) CVBSTAT	11111111	Status byte 1. Service seeking skip bit. Contact pending. Device active, accept TP commands. Disconnect received. A disconnect has been received for the last session and an initiation command may now be accepted. Any non-session initiating TP command should be refused. In session. Device in abnormal mode (reset or deactivate device in progress). Connection exists. Invite pending.
45(2D) DVBSTAT2	1111111	Status byte 2. Backup mode. I/O error lock. 3270 Device end, 2740-2 suppress MDR, 2770 delayed RVI. Inquiry mode-2770. Suppress response to host. A noncompetitive Invite exists. When the line or device was deactivated, an Invite remained for this device. Logical error lock. Selective text return
46(2E) DVBDMF	Byte 0 .1111111 Byte 1 .1111111	Device mode flags. Override write text mode ERPs. Reject leading graphic (write operations). EIB deletion (non-transparent only). Inhibit time fill/inhibit WACK limit. Embedded line control (non-transparent)/intermediate control character insertion. Critical text.
49(31) DVBSTAT3	1	Remember RVI sent.

Program: NCP

Size in bytes: 8(8)

Located in: Dynamically allocated BCU/PIU buffer or as a permanent control block in storage.

Created by: NCP generation or dynamically as part of first buffer in a BCU.

Pointer to ECB: None.

Function: To control BCU status or event status of an associated block.

0(0) ECBCSTAT ^{1*} BCU status byte; valid only for ECBs con- tained in buffers.	1(1) ECBESTAT ^{1*} Event status byte.	2(2) ECBECHN ¹ ECB chain pointer. (Shifted address.)
4(4) ECBTMINT ¹ Set time interval as specified by SETIME macros. or ECBTNCT ¹ BCU text count.		6(6) ECBWQCB ¹ Address of waiting task's input QCB. (Shifted address.)

¹See block control unit for labels used in the first buffer of a BCU.

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0): ECBCSTAT	100 00.. ..11 11..	BCU status byte. BCU enqueued. Lowest priority. Highest priority.
1(1) ECBESTAT	1111x	Event status byte. Event satisfied. Task ready to be dispatched. Supervisor link. ECB enqueued bit. 1=Stop sending after this BTU. 0=No need to stop sending.

Program: NCP, EP

Size in bytes: 64(40)

Located in: Module CYABL, CYATST/CYEBL, CYETST.

Created by: NCP and EP generation.

Updated by: N/A

Referenced By: CYATAPH0, CYARAPH0.

Function: Provides offset into branch table for proper control character processing.

0-3F(0-63)	EBCXMTBT Displacement data.
------------	--------------------------------

Program: NCP

Size in bytes: 48(30); 96(60) for NCP2 and NCP# with PEP.

Created by: NCP generation.

Pointer to HWE: SYSW6 field in XDA. (X'07D8)

Function: Contains frequently accessed system halfword control fields.

0(0)	SYSBUFACT Initial free buffer count.	2(2)	SYSBPQBC Exit slowdown threshold count.
4(4)	SYSATBP Address trace block pointer.	6(6)	SYSCKRP Check record pool pointer.
8(8)	SYSLTBP Line trace block pointer.	10(A)	SYSDRSP Display/refresh/select table pointer.
12(C)	SYSPDBP Panel control block pointer.	14(E)	SYSEBCP EBCDIC time and date control block pointer.
16(10)	SYSTVSP Time value select table pointer.	18(12)	SYSLCSP Line control select table pointer.
20(14) SYSCOOP (NCP1, NCP2) Channel work queue pointer. or SYSFQXP (NCP#) FM request transporter QCB pointer.			
24(18) SYSCRNP Channel normal data pointer.			
28(1C) SYSANSP Auto-network shutdown queue pointer.			
32(20) SYSETRP Error record transfer queue pointer.			
36(24) SYSPCBP Panel queue pointer.			
40(28) SYSTRMP Timer completion queue pointer.			
44(2C) SYSNIQP Non-device input queue pointer.			
48(30)	SYSCHVTP Pointer to EP channel vector table (NCP2, NCP#)	50(32)	(Reserved)

Communication scanner 1 control bytes

52(34) CSB1FLAG*	53(35) CSB1SCNL Scan limit	54(36) CSB1HISS High speed select	55(37) CSB1ASUB Address substitution
---------------------	----------------------------------	--	---

Communication scanner 2 control bytes

56(38) CSB2FLAG*	57(39) CSB2SCNL Scan limit	58(3A) CSB2HISS High speed select	59(3B) CSB2ASUB Address Substitution
---------------------	----------------------------------	--	---

Communication scanner 3 control bytes

60(3C) CSB3FLAG*	61(3D) CSB3SCNL Scan limit	62(3E) CSB3HISS High speed select	63(3F) CSB3ASUB Address Substitution
---------------------	----------------------------------	--	---

Communication scanner 4 control bytes

64(40) CSB4FLAG*	65(41) CSB4SCNL Scan limit	66(42) CSB4HISS High speed select	67(43) CSB4ASUB Address Substitution
68(44)	SYSPSBP Pointer to the physical services control block		
72(48)	SYSSITP Pointer to the sub-area index table		
76(4C)	SYSSVTP Pointer to the sub-area vector table		
80(50)	SYSL1BA Pointer to Level 1 Control Block (L1B).		
84(54)	SYSSV1A Pointer to level 1 save area (CXTSV1).		
88(58)	SYSSV3A Pointer to level 1 save area (CXTSV3).		
92(5C)	SYSSV4A Pointer to level 1 save area (CXTSV4).		

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Comments
52(34) CSB1FLAG	xx	1=Scanner installed 1=Scanner is a type 3
56(38) CSB2FLAG	xx	1=Scanner installed 1=Scanner is a type 3
60(3C) CSB3FLAG	xx	1=Scanner installed 1=Scanner is a type 3
64(40) CSB4FLAG	xx	1=Scanner installed 1=Scanner is a type 3

Program: EP, PEP

Size in bytes: 84(54) or 42(2A)

Located in: Routine CYAIS of module CYASVC/CYESVC.

Created by: NCP and EP generation.

Referenced by: Routine CYAIS of module CYASVC/CYESVC.

Function: Points to ICE routines for command processing.

For BSC/SS lines

0(0)		ICE address	
4(4)	Address pointer to Write. (BSC) (CYACWRIB)	6(6)	Address pointer to Write. (Start-stop) (CYACWRIS)
8(8)	Address pointer to Read. (BSC) (CYACREAB)	10(A)	Address pointer to Read. (Start-stop) (CYACREAS)
12(C) Address pointers (2) to No-op. (general) (CYACENOP)			
16(10) Address pointers (2) to Sense. (general) (ICESEN)			
20(14) Address pointers (2) to Wrap. (general) (ICEWRA)			
24(18)	Address pointer to Prepare. (BSC) (CYACPREB)	26(1A)	Address pointer to Prepare. (Start-stop) (CYACPRES)
28(1C) Address pointers (2) to invalid code. (CMDERROR)			
32(20)	Address pointer to invalid code. (CMDERROR)	34(22)	Address pointer to Write Break. (2848 Start-stop) (CYACBRES)
36(24)	Address pointer to Poll. (BSC) (CYACPOLB)	38(26)	Address pointer to Poll. (Start-stop) (CYACWRIS)
40(28)	Address pointer to invalid code. (CMDERROR)	42(2A)	Address pointer to Inhibit. (Start-stop) (CYACREAS)
44(2C)	Address pointer to invalid code. (CMDERROR)	46(2E)	Address pointer to Poll SOH. (2260 start-stop) (CYACPOLS)
52(34)	Address pointer to invalid code. (CMDERROR)	54(36)	Address pointer to Read Clear. (2848 start-stop) (CYACRDCL)
56(38)	Address pointer to invalid code. (CMDERROR)	58(3A)	Address pointer to Break or Diagnostic Poll. (Start-stop) (CYACBKPL)
60(3C)	Address pointer to Search. (BSC) (CYACSEAB)	62(3E)	Address pointer to Search. (Start-stop) (CYACSEAS)
64(40)	Address pointer to Disable. (BSC) (ICEDISAB)	66(42)	Address pointer to Disable. (Start-stop) (ICEDISAB)
68(44)	Address pointer to Enable. (BSC) (ICEENABL)	70(46)	Address pointer to Enable. (Start-stop) (ICEENABL)

72(4B) Address pointer to Dial. (BSC) (ICEDIAL)	74(4A) Address pointer to Dial. (Start-stop) (ICEDIAL)
76(4C) Address pointer to Adprep. (BSC) (CYACADPB)	78(4E) Address pointer to invalid code. (CMDERROR)
80(50) Address pointer to Set Mode. (BSC) (CYACSETB)	82(52) Address pointer to invalid code. (CMDERROR)

For ALC lines

0(0) Unused	2(2) Address pointer to Write. (CYECWRIA)
4(4) Address pointer to Read. (CYECREAA)	6(6) Address pointer to No-op. (CYACENOP)
8(8) Address pointer to Sense. (ICESEN)	10(A) Address pointer to invalid code. (CMDERROR)
12(C) Address pointers (10) to invalid code (CMDERROR).	
32(20) Address pointer to Disable. (CYEDISBA)	34(22) Address pointer to Enable. (CYENABA)
36(24) Address pointers (2) to invalid code (CMDERROR).	
40(28) Address pointer to invalid code. (CMDERROR)	

Program: EP/PEP

Size in bytes: 40(28)

Located in: Routine CYAIS of module CYASVC/CYESVC.

Created by: NCP and EP generation.

Referenced by: Routine CYAIS.

Function: Contains address pointers to IFD and CAEC routines.

0-39(0-27)	
IFDADDR IFD address table.	
0(0) No action, TIO (00) command. (CAEC180)*	2(2) Address pointer for Write (08) command. (IFDWRI)
4(4) Address pointer for Read (10) command (IFDREA)	6(6) No action, No-op (18) command. (CAEC180)*
8(8) Address pointer for sense (20) command (CAEC190)	10(A) No action, Wrap (28) command. (CAEC180)*
12(C) Address pointer for Prepare (30) command. (IFDPRE)	14(E) ERROR (38)
16(10) Address pointer for Write Break (40) command (IFDWRI).	18(12) Address pointer for Poll (48) command (IFDWRI)
20(14) Address pointer for Inhibit (50) command (IFDREA)	22(16) Address pointer for Poll SOH (58) command (IFDWRI).
24(18) Address pointer for Read Clear (60) command (IFDREA).	26(1A) Address pointer for Break (68) command (IFDWRI)
28(1C) Address pointer for Search (70) command (IFDREA)	30(1E) Address pointer for Disable (78) command (CAEC180)*.
32(20) Address pointer for Enable (80) command (IFDENA).	34(22) Address pointer for Dial (88) command (IFDIAL).
36(24) Address pointer for Address Prepare (90) command (IFDPRE).	38(26) Address pointer for Set Mode (98) command. (IFDSTMD)

*CAEC190 for EP new base.

IDENTIFICATION LIST ENTRY

IDE

Program: NCP

Size in bytes: Variable

Created by: NCP generation.

Pointer to IDE: None. Follows IDL.

Function: Contains one entry for each valid ID that can be received over a line or lines for which the list is being used.

The IDE has the following format if device association is not possible.

0(0)	1(1)	2(2)
IDELEN ID length	IDEFLAG* Entry flags.	ID characters. (Variable length.)
** IDEPADL Length of maximum number of pad characters needed for alignment.		

The IDE has the following format if device association is possible.

0(0)	IDEDVBP Pointer to DVB (last 18 bits).	
IDELEN ID length	IDEFLAG* Entry flags.	
4(4)	ID characters. (Variable in length.)	
** IDEPADL Length of maximum number of pad characters needed for alignment.		

* Indicates a byte expansion follows.
** Follows ID characters.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
1(1) IDEFLAG	1 1 1	Entry flags. Device association is possible for this entry. End of list. Notify host if no match. (Meaningful only for first and last entries of list.)

Program: NCP

Size in bytes: 4(4)

Located in: Beginning of identification list.

Created by: NCP generation.

Pointer to IDL: CIEIDL field in CIE.

Function: Precedes the first entry in an ID list for switched BSC lines whose terminals identify themselves. The list is required only if validity checking of the incoming ID is required.

0(0)	IDLSIZE Maximum number of bytes in the list	2(2) Halfword to force fullword alignment for first entry.
------	---	--

Program: NCP

Size in bytes: 36(24)

Created by: NCP generation.

Pointer to IOB: LCBACBP

Function: Contains status of BSC/SS I/O operations.

0(0) IOBIMCTL* Immediate control flags.	1(1) IOBCMAND* I/O command field.	2(2) IOBCMODS* IOB command modifiers.
4(4) IOBEXTST* Extended status field. Contains error indicators.	5(5) IOBRDESC Record descriptor byte.	6(6) IOBSTAT* Outcome of command operation.
8(8) IOBEREST First error extended status. This field is set equal to IOBEXTST when the first recoverable error occurs.	9(9) IOBRTYCT Retry count for first level ERP attempts.	10(A) IOBERST First error status. This field is set equal to IOBSTAT when the first recoverable error occurs. ----- IOBLTSM SCF mask field (when OLLT active)
12(C) IOBSTOFS Initial data offset, used to locate the starting point in the first buffer of a block.	13(D) IOBOFSET Final data offset used to locate the buffer position of the last character in the block that was stored. Zero if buffer is filled.	14(E) IOBDATAP Data pointer to first buffer in the block. (Shifted address.)
IOBTCBPT Pointer to OLLT (when OLLT active).		
16(10) IOBFNLPT Pointer to last buffer in chain (Shifted address.) ----- or IOBLTCT Transmit or Recive count (OLLT).	18(12) IOBINPUT Input control data address. Contains the address of the first buffer when buffers are needed to store a reply to text, selection, or inquiry. (Shifted address.) ----- IOBLTL2 Secondary CCBL2 (when OLLT active).	

*Indicates a byte expansion follows.

20(14)		IOBOUTPT Output control data address. Contains the address of 'inserted' data.	
IOBCTCCT Control count. Number of characters to be transmitted from field addressed by the output control data address.	21(15)	Address of the field to be transmitted.	
or IOBLTLAB Pointer to lookahead buffer (OLLTLAB)			
24(18)	IOBLCB Pointer to the line control block. (Shifted address.)	26(1A)	IOBBSIZ Received block's size (number of data characters stored).
28(1C)			
IOBPOLL Address of the entry in the service order table for the next station to be polled minus two, used when the communications controller is the master station (last 18 bits).			
IOBSSCB Service seeking control byte.	29(1D) IOBMTASA MTA 1050 station address byte.	30(1E)	IOBTRADR Station select address for the communications controller when it is a tributary station.
32(20)			
IOBSEL Address of the field that contains the selection address for the station to be selected by the communications controller (last 18 bits).			
IOBCRTN Carriage position.	33(21)	IOBPFLAG* PEP flag field. (NCP2, #)	

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) IOBIMCTL	11111	Immediate control flags. Reset immediate. Write request - conditional reset. Monitor rhode. Send interrupt. Conditional send interrupt.
1(1) IOBCMAND	X'10' X'12' X'16' X'17' X'19' X'25' X'27' X'28' X'2A' X'83' X'8D' X'8F' X'94' X'9B' X'AC'	I/O command field. Write initial. Write continue. Write recover. Write delay. (NCP2, #) Write. Read. Read delay. (NCP2, #) Read initial. Read continue. Disable. Enable. Dial. Write EOT. Write control. Read status.
2(2) IOBCMODS	Byte 0 11111111 Byte 1 1111111	IOB Command Modifiers. Suppress lost data. Override text mode ERPs. Reject received leading graphics. Inhibit text time-out (start-stop). ITB mode not transparent (BSC). Sub-blocking mode. Inhibit WACK limit (BSC). Inhibit time fill (start-stop). Enable length check. ITB mode transparent. Hold buffers. Reset. Send priority. Manual dial (Enable cmd only). ETX (Write commands). Single poll (Read commands). Offset (Write commands). First buffer assigned (Read commands). Insert (Write commands). Send leading graphics (Read commands). Send identification (Enable). Transparent text (Write commands). Send positive ACK (Read commands). Identification mode (Enable). Set negative ACK (Read commands). SOH (Write commands). Multiple terminal access mode. (Enable commands.) Set alternate ACK.
4(4) IOBEXTST	1111	Extended status field. Overrun/underrun. Line quiet time-out. DLE format exception. Sub-block error.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
6(6) IOBSTAT	Byte 0	Outcome of command operation.
		Flags
	1	Extended error status.
	.1	Format exception (bad line control sequence).
	. .1	Sync check (stop bit error start-stop only).
	. . .1	Data check (block check character error).
1	Length check.
		Read/Write Group Masks
 000.	No errors.
 001.	Receive text.
 010.	Receive text reply.
 011.	Receive control; command reject.
 100.	Status outstanding when command issued; command not executed.
 101.	Send text reply.
 110.	Send text.
 111.	Send control.
		Data Set Control Group Masks
 000.	No errors.
 001.	Receive ID.
 010.	Receive ID reply.
 011.	Connect.
 100.	Status outstanding when command issued.
 101.	Error in dialing phase.
 110.	Send ID.
 111.	Disconnect.
	Byte 1	Extended (line) response. See Section 8.
33(21) IOBPFLAG	x	PEP flag field. (NCP2, #)
		Line type:
		0=NCP
		1=EP
	.x	PEP switchable line:
		0=Not switchable.
		1=switchable.
	. .x	Line-active save bit.
		0=Line inactive at time of switch.
		1=Line active at time of switch.
x.	Part of IOBSEL address.
x	Part of IOBSEL address.

LINE CONTROL BLOCK

LCB

Program: NCP

Size in bytes: Variable, depending on line-type extensions.

Created by: NCP generation, one for each BSC/SS line.

Pointer to LCB: RVTRP field in RVT.

Function: Contains fields required for (1) scheduling line operations, (2) maintaining line-significant status information, and (3) requesting I/O operations from the communications I/O program (levels 2 and 3).

Line I/O QCB (LCBLIOQ)
(See QCB for Input Queues for all bit definitions.)

0(0) LC1IECB Pointer to first element queued. (Shifted address.)		2(2) LCILECB Pointer to last element queued. (Shifted address.)	
4(4) LC1STAT Task and queue status.	5(5) LC1PRKEY Protection key.	6(6) LC1LINK Pointer to next QCB on the queue (Shifted address.)	
8(8) LC1TSKEP Task entry point. (last 18 bits)			
LC1MCBD Major control block displacement.	9(9) LC1SCHEP Trigger scheduling priority.		
12(C) LC1SAVE Address of save area push-down list. (Shifted address.)		14(E) LC1LUNK Pointer to previous QCB on the queue. (Shifted address.)	
16(10) LC1BHSET BHR or BH set address (last 18 bits).			
LC1BHRST BHR status bits	17(11) LC1BHSCH BHR scheduling bits.		

Line Work QCB (LCBLWO)
(See QCB for Input Queues for all bit definitions.)

Note: By format, this is an Input QCB. Line Work QCB is simply the name given to this particular Input QCB.

20(14) LCW1ECB Pointer to first element queued. (Shifted address.)		22(16) LCWLECB Pointer to last element queued. (Shifted address.)	
--	--	---	--

24(18) LCWSTAT Task and queue status.	25(19) LCWPRKEY Protection key.	26(1A) LCWLINK Pointer to next QCB on the queue. (Shifted address.)
28(1C) LCWTSKEP Task entry point (last 18 bits).		
LCWMCBD Major control block displacement.	29(1D) LCWSCHED Trigger scheduling priority.	
32(20) LCWSAVE Address of save area push-down list. (Shifted address.)	34(22) LCWLUNK Pointer to previous QCB on the queue. (Shifted address.)	

36(24) or LCBPEPSC Subchannel of EP equivalent line. (NCP2, #)		LCBACBP Pointer to adapter control block.
40(28) LCBLTCTP Line type command table pointer (last 18 bits).		
LCBLSTAT* First line status byte.		
44(2C) LCBDVBP Pointer to device base for device currently connected over line (last 18 bits).		
LCBTYPPEC* Line type code.		
48(30) LCBDBCUI Pointer to the Activate or Deactivate BCU when activate line, deactivate line orderly, or deactivate group orderly is in progress (last 18 bits).		
LCBMFLAG LCB flags, or LCBLLGN LLG number.		

*Indicates a byte expansion follows.

52(34) LCBSSP Subtask sequence pointer.		54(36) LCBFEAT1* LCB features.	55(37) LCBLST2* Second line status byte.
56(38) LCBACTNS* Actions to be taken when unusual conditions arise on the line.	57(39) LCBUSER Offset to beginning of user area.	58(3A) LCBERPL Second level error recovery procedure loop limit.	59(3B) LCBERPC Second level error recovery procedure loop counter.
60(3C) LCBEDEL Duration of delay between second level ERP loops.	61(3D) LCBCOFFL Sub-block cutoff limit.	62(3E) LCBCOFFC Sub-block cutoff counter.	63(3F) LCBIOCOM* I/O communication byte.
64(40) LCBCSCNT Count of pending Invite and Contact commands for the line.		66(42) LCBRID Resource ID of the line.	

Multipoint Extension

Line Suspended Sessions QCB (LCBLSQ)
(See QCB for Work Queues for all bit definitions.)

68(44) LCS1ECB Pointer to first element queued. (Shifted address.)		70(46) LCSLECB Pointer to last element queued. (Shifted address.)
72(48) LCSSTAT Task and queue status.	73(49) LCSPRKEY Protection key	74(4A) LCSLINK Pointer to next QCB on the queue. (Shifted address.)

*Indicates a byte expansion follows.

76(4C) LCBESOTP Address of service order table (last 18 bits).			
LCBEPAS Pause between passes through service order table.			
80(50) LCBENAKL Negative poll response limit.	81(51) LCBESERL Service seeking scan limit.	82(52) LCBMS Maximum number of sessions allowed.	83(53) LCBAS Attempted sessions count.
84(54) LCBSCS Suspended connections count.	85(55) LCBWS Connections work count.	86(56) LCBENOD Number of devices on this line.	87(57) LCBEDIG Number of devices remaining when deactivating line.
88(58) LCBSTCT BSC/SS devices in buffer delay not quiesced count for multipoint lines.			

Switched Extension

68(44) LCBESGTP Address of primary switched group table (SGT) (last 18 bits).	
LCBEFLAG* Switched extension flags.	
72(48) LCBELCDI Address of logical connection device input (LCDI) DVB.	

*Indicates a byte expansion follows.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
x..x..1	Line mode bit 1=backup 0=normal Monitor reset bit (NCP2, #): 1=delay monitor reset 0=reset now Line speed change in progress. (NCP2,#)
56(38) LCBACTNS	1..... .x..... ..1..... ...1.....1...x..x..1	Actions to be taken when unusual conditions arise on the line. Shutdown of this line pending. Deactive line orderly. (DLO) Error status (when active). 1=Error-terminate DLO 0=No error-process DLO Service suspended sessions. Single service seek. Respond to current read with RV1. Negative poll response limit reached: 1=break logical connection 0=no break Negative poll response limit reached: 1=reschedule Read 0=terminate Monitor line for attention or disconnect. (NCP2, #)
63(3F) LCBIOCOM	1..... .1..... ..1..... ...1.....1...1..1	I/O communication byte. Partial block sent. Session suspension required. Send ID. Transparent text selection. End of text block (ETB) received. Conversational mode. BHR point 2 execution required after I/O is completed. Last block ended with ETX.
68(44) LCBEFLAG	1..... .1..... ..1..... ...1.....	Switched extension flags. Part of a switched group. Call-in line. Call-out line. Telephone connection exists.

Program: NCP

Size in bytes: 16(10) per entry; number of entries defined at NCP generation.

Created by: NCP generation, one for each start-stop line.

Pointer to LCST: SYSLCSP field in HWE.

Function: Used to change ACB control fields for Multiple Terminal Access (MTA).

Entry Format

0(0) LCSTSPED Line speed.		2(2) LCSTLGT Line group table address.	
4(4) LCSTRTDT Receive translate decode table address.		6(6) LCSTTDT Transmit translate decode table address (high order byte). The low-order byte is the character to be translated.	7(7) LCSTSMDE Set mode serial data (SDF) constant.
8(8) LCSTSTBL State table address.		10(A) LCSTRTRY Text error retry limit.	11(B) LCSTBCUT Buffer cutoff limit (receive).
12(C) LCSCRTN Carriage return rate factor (SS only).	13(D) LCSTLSIZ Maximum print line size (SS only).	14(E) LCSTBG Background table address.	

LINE GROUP TABLE

LGT
(EP & PEP)

Program: PEP, EP

Size in bytes: Variable (8 bytes per GROUP macro).

Created by: NCP and EP generation.

Located: Immediately following CCBs.

Updated by: CCB

Referenced by: LCP, ICP

Function: Contains information about a group of lines. It contains an entry for each GROUP macro coded by the user.

0(0) LGTREPLY Reply time-out in tenths of a second.	1(1) LGTTEOT Text time-out in tenths of a second.	2(2) LGTCHARS Ending TTY character.	3(3) (LGTEOB)**
4(4) LGTLINE* Line information byte.	5(5) LGTEOT End of transmis- sion for RPQ and WTTY (optional).	6(6) LGTENDCR* TTY end character controls	7(7) LGTQTCNT Number of character delays for SS line quiesce.

*Indicates a byte expansion follows.

**If bit 3 of byte LGTLINE is off, this byte contains the EOB character. If bit 3 of LGTLINE is on, this byte contains the second ending TTY character.

Byte Expansion

Offset/Field Name	Bit Pattern/ Hex Value	Contents
4(4) LGTLINE	...x xxxx	Line information byte. Presence of TTY ending characters: 0=present 1=not present Data character detect security 0=Security (Start-Stop lines) 1=No security (BSC) Line type: 0=switched 1=non-switched XON character control: 0=utilize 1=inhibit XOFF character control: 0=utilize 1=inhibit
6(6) LGTENDCR	111111	TTY end character controls. FIGS-X-LTRS sequence for EOT. The value of X is byte 5 (LGTEOT). Four character sequence for EOT. The value of the character is in byte 5 (LGTEOT). FIGS-Y sequence for EOB. The value of Y is in byte 3 (LGTEOB). Four character ending sequence for EOB. The value of the character is in byte 3 (LGTEOB). Five-character transmit-turnaround-delay flag. Ten-character-transmit-turnaround-delay flag.

LINE GROUP TABLE

**LGT
(NCP)**

Program: NCP

Size in bytes: Variable depending on line type.

Created by: NCP generation.

Pointer to LGT: CCBLGPT field in CCB.

Function: Contains line control parameters.

0(0) LGTTYPE* Terminal type identification.	1(1) LGTSHTAP Shoulder tap time-out state change mask.	2(2) LGTENDR1 Receive text status/ERP vector.	
4(4) LGTENDR2 Receive text reply status/ERP vector.		6(6) LGTENDR3 Receive control reply status/ERP vector.	
8(8) LGTTIMEA** Control time-out command (error time-out).	9(9) LGTTIMEB** Receive text (long) time-out command.	10(A) LGTTIMEC** Transmit time-out command (shoulder tap).	11(B) LGTTIMED** Response time-out command.
12(C) LGTXIPCF Transmit initial LCD/PCF value.	13(D) LGTRIPCF Receive initial LCD/PCF value.	14(E) LGTINST Initial level 2 state mask.	15(F) LGTCMRTY Control mode ERP retry limit.
16(10) LGT CMD Pointer to command decode table.		18(12) LGT LATO Remote activity time field. (NCP#)	
		18(12) LGT INCHR Initial control character.	19(13) LGT COUNT Write EOT command initial control character count.

Type 1 Scanner Extension

20(14) LGT MASK Character size tag mask. (See BCBMASK for bit definitions.)	22(16) LGT LCP CF LCD/PCF for type 1 scanner. (See BCBLCPCF for bit definitions.)	23(17) LGT BREAK Start-stop transmit break mask. (See BCBMASK for bit definitions.)
---	---	---

*Indicates a byte expansion follows.

**Error time-outs are expressed as X'Cx'. Go to TVS DSECT and displace into TVS by a value of X for timer values. Shoulder tap time-outs are X'8x'.

24(18)** LGTWACKL BSC received WACK limit value. or LGTSELG Start-stop selec- tion address length.	25(19)** LGTTTD BSC received TTD limit value. or LGTPOLLG Start-stop poll address length.	26(1A)** LGTSYN BSC SYN char- acter line code. or LGTPADCT Start-stop motor start pad count.	27(1B)** LGTRIST Receive initial state set after connect.
--	---	--	--

BSC Line and EBCDIC Characters

28(1C)** LGTDLLEEB DLE.	29(1D)** LGTETBE ETB EBCDIC.	30(1E)** LGTDLLEOT DLE.	31(1F)** LGTEOTE EOT EBCDIC.
32(20)** LGTDLLES DLE.	33(21)** LGTSTXE STX EBCDIC.	34(22)** LGTDLLEIB DLE.	35(23)** LGTITBE ITB EBCDIC.
36(24)** LGTDLLE0 DLE.	37(25)** LGTACK0 ACK0.	38(26)** LGTDLLE1 DLE.	39(27)** LGTACK1 ACK1.
40(28)** LGTDLER DLE.	41(29)** LGTRVIE RVI EBCDIC.	42(2A)** LGTDLLEEQ DLE.	43(2B)** LGTENQE ENQ EBCDIC.
44(2C)** LGTNAKE NAK EBCDIC.	45(2D)** LGTSOHE SOH EBCDIC.	46(2E)** LGTDLLEEX DLE.	47(2F)** LGTETXE ETX EBCDIC.
48(30)** LGTDLLEW DLE.	49(31)** LGTWACK WACK.	50(32)** LGTSOHA SOH ASCII.	51(33)** LGTSTXA STX ASCII.
52(34)** LGTETBA ETB ASCII.	53(35)** LGTETXA ETX ASCII.	54(36)** LGTEOTA EOT ASCII.	55(37)** LGTITBA ITB ASCII.
56(38)** LGTENQA ENQ ASCII.	57(39)** LGTNAKA NAK ASCII.	58(3A)** LGTDLLEA DLE ASCII.	

**Displacement will be four bytes less if type 1 scanner is not present.

Start/Stop Line and EBCDIC Control/Characters
(Label used dependent on terminal type.) *

28(1C)** LGTUPPER Upshift.	29(1D)** LGTETB2 Circle B.	30(1E)** LGTLOWER Down shift. or LGTEOT3 Letters.	31(1F)** LGTEOT2 Circle C or H. or LGTT EOT EOT
32(20)** LGTEOT1 Circle C or figs. or LGTWFIG Figs. or LGTCIRC Circle C.	33(21)** LGT CIRD Circle D. or LGTWLTR Letters. or LGTTNUL Null. or LGTSTX1 Space or carriage return.	34(22)** LGTVTAB Vertical tab. or LGTWNUL Null. or LGTTVT Vertical tab.	35(23)** LGTHTAB Horizontal tab. or LGTTHT Horizontal tab.
36(24)** LGT LF Line feed. or LGWTAB Tab. or LGTTLF Line feed	37(25)** LGT CRLF Carriage return. or LGTWCR Carriage return. or LGTTCR Carriage return. or LGTCR Carriage return or line feed.	38(26)** LGTSPACE Space.	39(27)** LGTBKSP Backspace. or LGTSTX2 Carriage return or line feed.
40(28)** LGT PAD Pad. or LGTTPAD Pad. or LGTBPAD Pad. or LGTWPAD Pad.	41(29)** LGTIDLE Idle. or LGTWE0B1 Idle. or LGTSTX3 Idle.	42(2A)** LGT SPEC (Reserved). or LGTWE0B2 EOB sequence. or LGTTSUB TWX substitution character.	43(2B)** LGT PRC Prefix. or LGTTENQ ENQ. or LGTWE0B3 ENQ.

**Displacement will be four bytes less if type 1 scanner is not present.

44(2C)** LGT CIRN NAK. or LGTWE0B4 NAK.	45(2D)** LGTRES Restore. or LGTWE0T1 EOT1.	46(2E)** LGTRSTP Reader stop or LGTTXOFF XOFF control character or LGTWE0T2 EOT2.	47(2F)** LGTETB1 Circle B. or LGTCIRB Circle B. or LGTTXON XON control character or LGTWE0T3 EOT3.
48(30)** LGT CIRY Circle Y or LGTWE0T4 EOT4.	49(31)** LGTBYB Bypass or LGTWXCH1 Ending character	50(32)** (Reserved) or LGTWXCH2 Ending character	51(33)** LGTPF Punch off. or LGTWXCH3 Ending character
52(34)** LGTPON Punch on.	53(35)** LGTDELETE Delete.	54(36)** LGTESLSH Slash. (EBCDIC)	55(37)** LGTESPCE Space (EBCDIC)

**Displacement will be four bytes less if type 1 scanner is not present.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) LGTTYPE	X'00'	Terminal type identification.
	X'02'	2741.
	X'04'	2740 Basic.
	X'06'	2740 Station Control.
	X'08'	2740 Transmit Control.
	X'0A'	2740 Station Control with checking.
	X'0C'	2740 Transmit Control with checking.
	X'0E'	2740 with checking.
	X'10'	2740 Model 2 with checking.
	X'14'	2740 Model 2 without checking.
	X'1C'	1050.
	X'1D'	MTA.
	X'20'	TTYI-B (83B3).
	X'22'	TTYII.
	X'24'	TTY World Trade.
	X'26'	TTYI-A (115A).
	X'4A'	BSC EBCDIC point-to-point station.
	X'4C'	BSC EBCDIC control station.
	X'4E'	BSC EBCDIC tributary station.
	X'6A'	BSC ASCII point-to-point station.
	X'6C'	BSC ASCII control station.
	X'6E'	BSC ASCII tributary station.
	X'8C'	SDLC Primary station.
	X'8E'	SDLC Secondary station.

LINK CONTROL BLOCK

LKB

Program: NCP#

Size in bytes: 40(28)

Created by: NCP Generation. One for each link.

Pointer to LKB: RVT

Function: Contains fields for scheduling link operation and for maintaining link status information.

Queue Control Block (See QCB for Input Queues for bit definition)

0(0)		LKWIECB Pointer to first element queued (Shifted address).		2(2)		LKWLECB Pointer to last element queued (Shifted address).	
4(4)		LKWSTAT Task and queue status.		5(5)		LKWPRKEY QCB ID flag and task protect key.	
				6(6)		LKWLINK Pointer to next QCB on the queue (Shifted address).	
8(8)							
LKWTSKEP Task Entry Point (Last 18 bits).							
LKWMCBD Major control block displacement.		LKWSCHEP Task dispatching priority.					
12(C)				14(E)			
LKWSAVE Address of save area pushdown list (Shifted address).				LKWLUNK Pointer to previous QCB on queue (Shifted address).			
16(10)				18(12)		19(13)	
LKBNWADR Network address of link.				LKBSTAT* Status of link.		LKBTYP* Link type.	
20(14)		21(15)		22(16)		23(17)	
LKBSVTD SVT displacement. (Remote only)		LKBSWST* Switched status flags.		Reserved.		LKBSNQC Stations not quiesced count. (ANS)	
24(18)							
LKBBLMST* Remote link backup monitor and status		LKBTCN LKB chain pointer. Points to an alternate link's LKB. (Last 18 bits.)					
28(1C) Reserved							
32(20) Reserved							
36(24)							
LKACBP Address of adapter control block.							

*Indicates a byte expansion follows.

Byte Expansion

Offset/Field Name	Bit Pattern/ Hex Value	Contents
18(12) LKBSTAT	1...1...1...11	Status of link. The link is active; an Activate Link command has been successfully processed. Activate Link in progress. Deactivate Link in progress. Link quiesce pending. (Auto network shutdown) OLTT in progress. OLLT in progress.
19(13) LKBTYPE	1...1...1... 1...1..	Link type. Leased. Switched. One or more clusters attached to this link. One or more remote controllers are attached to this link. One or more terminals are attached to this link. Secondary link.
21(15) LKBSWST	1...1...1...1	Switched status flags. Connection exists. Link in answer mode. Dial in progress. Switched Enable pending.
24(18) LKBBLMST	1...1...1...1	Remote backup link monitor and link status. Link to local controller. The current link to the local controller. Start or continue monitoring links to the local controller. Currently monitoring links to the local controller.

LOGICAL LINE GROUP CONTROL TABLE

LLG

Program: NCP1, NCP2

Size in bytes: 12(C) plus 4 bytes for each line in the line group.

Created by: NCP generation.

Pointer to LLG: RVTRP field in RVT.

Function: Consists of a line scan parameter area, plus one pointer to the LCB for each line in the line list.

0(0)	LLGBCUP Pointer to current group (last 18 bits).	
	LLGFLAGS* Logical line group flags.	
4(4)	LLGNOL Number of lines in group.	6(6) LLGLTG Number of lines to go.
8(8)	LLGOSET Current offset into line table.	
12(C)	LLGPTR Pointer to the LCB for the first line in this group. Pointers to subsequent lines in the group follow this field. If this is the system (LLGFLAGS, bit 0 on), this field is set to zero and no other pointers follow it.	

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) LLGFLAGS	1 1 1	Logical line group flags. This is the LLG for the system. LLG in use. At least one line requires waiting before group operation complete.

LINE VECTOR TABLE (for Type 2/3 scanner)

LNVT
(Type 2/3)

Program: NCP, EP

Size in bytes: Variable, depending on number and type of communication scanners attached and on the highest line interface address specified.

Located: Starts at storage location X'840'.

Created by: NCP and EP generation.

Referenced by: EP and NCP level 2 routines.

Function: Allows the level 2 routines to find a line's CCB when only the line address is known.

0(0) Address pointer to corresponding ACB (NCP) or CCB (EP).**	2-n Two bytes for each line interface address.
n+1 thru n+8 CYAWRAP* Associated LNVT entries of the wrap lines. (type 4 CA)	n+9 thru n+16 CYASCAN* Initialization data. (type 4 CA)

*Indicates that a byte expansion follows.

**If the low order bit is set, level 2 trace is active and this address points to CYABARSW. Add X'25' to this address for the address of the CCB pointer in CYABARSW.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
CYAWRAP (n+1)-(n+2) (n+3)-(n+4) (n+5)-(n+6) (n+7)-(n+8)		1st scanner wrap line address. 2nd scanner wrap line address. 3rd scanner wrap line address. 4th scanner wrap line address.
CYASCAN offset scanner #	Each scanner Byte 0	High speed select (type 3)
(n+9) } (n+10) } 1	Byte 1 x	1=Scanner installed 0=Scanner not installed.
(n+11) } (n+12) } 2	.x	1=Type 3 scanner. 0=Type 2 scanner.
(n+13) } (n+14) } 3	. .xx xx . .	Address substitution.
(n+15) } (n+16) } 4xx	Scan limit.

ERROR LOG TABLE (EP, PEP)

Program: EP, PEP

Size in bytes: Up to 34(22) bytes.

Created by: Level 1 interrupt handler CYANUC, CYENUC, CYPNUC, or CYQNUC.

Location: X'7DE' (old base) or pointed to by X'071C' (new base).

Function: Contains the pointer to the last error logged and up to four bytes of error information for each message, depending upon the type of error and hardware attached.

Error Log Pointer

X'07DE (Old Base) or X'071C' (New Base)
Pointer to the last log table entry (LOGPOINT) (old base) or address of that location.

Error Log Table Formats

Program Check or Channel Adapter Check

0(0)	Program or channel adapter check.*	2(2)	Lagging address register (LAR).
4(4)	Next error log message.		

Scanner (Old Base)

0(0)	Scanner check.*	2(2)	Next error log message.
------	-----------------	------	-------------------------

Scanner (New Base-type 2 scanner only)

0(0)	Scanner check.*	2(2)	Lagging address register (LAR) (CCU outbus check or ICW IN register check only) or next error log message.
4(4)	Next error log message		

Scanner (New Base-type 3 scanner only)

0(0)	Scanner check* (first halfword).	2(2)	Scanner check* (second halfword).
4(4)	Lagging address register (LAR) (CCU outbus check or ICW IN register check only) or next error log message.		Next error log message.

*Indicates that a byte expansion follows.

Program: NCP

Size in bytes: 32(20)

Created by: NCP generation.

Pointer to LTCB: CXTCT address at CXBCTRC0 in link edit map, or SYS LTB field in HWE. The pointer to the second LTCB, for duplex lines, is at CXBCTRC3 in the link edit map. The LTCB is located 36(24) bytes beyond this address.

Function: Contains the pertinent parameters for the line trace function. For duplex operation two LTCBs are required - one for transmit leg and one for the receive leg.

0(0)	CCTL2 Address of normal level 2 character service routine when trace first started on this line.		2(2)	CCTSTATE References the pseudo state address table used to invoke line trace.	
4(4)	CCTACB Pointer to the ACB for the line being traced.		6(6)	CCTCUT Buffer limit per line trace control block.	7(7) CCTMAXBF Maximum number of buffers that can be transferred across the channel with one host Read.
8(8)	Reserved		10(A)	CCTTIME Timer control field for line trace.	
				CCTTMOUT Interval timer field for line trace.	11(B) CCTTENTH Tenth second timer started when trace began.
12(C)	CCTBCB Address of vector to this line's ACB.		14(E)	CCTCHAR Count of the number of buffer locations remaining in the current buffer.	
16(10)	CCTDATA Address of next diagnostic unit to be stored (last 18 bits).				
	CCTBFSZD Number of bytes in full trace buffer.				
20(14)	CCTITIME Initial value of interval timer field for line trace.	21(15) Unused.	22(16)	CCTEPBAR BAR for EP line (NCP2)	
24(18)	CCTHDBUF Pointer to first buffer in current chain (last 18 bits).				
	CCTBFMAX Maximum number of buffers to be filled before transferring diagnostic units to host.				
28(1C)	CCTSTART Pointer to beginning of current buffer (last 18 bits).				
	CCTRTT Line type.				

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
28(1C) CCTRTT	X'00' X'80' X'C0'	Line type Half-duplex Duplex Duplex-transmit leg

Program: NCP

Size in bytes: 76(4C)

Created by: NCP generation

Pointer to LTCB: CXTCCT address at CXBCTRC0 in link edit map, or SYSLTB field in HWE. The pointer to the second LTCB, for duplex lines, is at CXBCTRC3 in the link edit map. The LTCB is located 36(24) bytes beyond this address.

Function: Contains the pertinent parameters for the line trace function. For duplex operation two LTCBs are required—one for the transmit leg and one for the receive leg.

0(0)	CCTL2 Address of normal level 2 character service routine when trace first started on this line.	2(2)	CCTACB Pointer to the ACB for the line being traced.
4(4)	Reserved	6(6)	CCTWORK Timer work entry for CCT.
8(8)	CCTLINK Pointer to the next ACB in level 2-3 chain, since the CCB is queued as the dummy ACB.	10(A)	CCTTIME Timer control field for line trace.
		CCTTMOUT Interval Timer field for line trace.	11(B) CCTTENTH Tenth second timer started when trace began.
12(C)	CCTBCB Address of vector to this line's ACB.	14(E)	CCTFLAG* CCTFLAGs field for CSB.
16(10)	CCTSCNT Field to accumulate status byte count.	18(12)	CCTCHAR Count of the number of buffer locations remaining in the current buffer.
20(14)	CCTDCNT Field to accumulate data count.	22(16)	CCTEND1 Line status for queuing.
24(18)	CCTDATA Address of the next diagnostic unit to be stored.		
	CCTBFSZD Number of bytes in full trace buffer.		
28(1C)	CCTSTART Pointer to the beginning of the current buffer.		
	CCTRTT* Line type		

32(20)	CCTITIME Initial value of interval timer field for line trace.	34(22)	CCTEPBAR BAR for EP line.
36(24) CCTHDBUF Pointer to first buffer in current chain.			
CCTBFMAX Maximum number of buffers to be filled before transferring diagnostic units to the host.			
40(28)	CCTL3 Address of level 3 copy routine	42(2A) CCTCUT Buffer limit per line trace block.	43(2B) CCTMAXBF Maximum number of buffers per BTU on channel.
44(2C)	CCTZERO	46(2E) CCTCTL Control flags. Must always equal zero.	
48(30)	CCTESTAT Expected ending status.	50(32) CCTCHR1 Number of buffer locations remaining in the buffer during copy.	
52(34) CCTDATA1 Contains the address of the next data position when control is passed to the copy routine.			
56(38) CCTSTRT1 Pointer to the current copy buffer.			
60(3C) CCTDDATA Save field for the pointer to the current data character to be copied during transfer of buffers because of buffer cutoff.			
64(40) CCTDSTRT Save field which contains the current data buffer pointer during transfer of buffers.			
68(44) CCTDSAVE Data pointer save field during transfer of buffers.			
CCTDCHR Save field which contains the residual data count during transfer.			
72(48) CCTSAVE Save link address.			

*Indicates a byte expansion follows.

Byte Expansion

Offset/Field Name	Bit Pattern/ Hex Value	Contents
14(E) CCTFLAG	x x x x x x x x x	CCTFLAGs field for a type 3 scanner during copy. 1=Receive 0=Transmit 1=BSC 0=SDLC 1=Branch and link from CXBCOPY3 0=Not 1=Currently processing insert function. 0=Not 1=Leading Graphics transmitted 0=Not 1=Buffer request for BCC store 0=No buffer store request 1=Level 3 copy active 0=Not active 1=ITB received (Adjust for BCC) 0=Not ITB
28(1C) CCTRTT	X'00' X'80' X'C0'	Line type Half-duplex Duplex Duplex-transmit leg

LINE TEST CONTROL BLOCK

**LTS
(NCP1, 2)**

Program: NCP1, NCP2

Size in bytes: 36(24)

Created by: NCP generation.

Pointer to LTS: Located at CXTLTS in CXSGMISC.

Function: Contains control information for panel test operations.

0(0) LTSTCL* Control byte.	1(1) LTSPDSYN PAD or SYN character for this line.	2(2) LTSMDSF The system gen- erated Set Mode SDF.	3(3) LTSXTPCF The system generated LCD value.
4(4) LTSLNAD The line address of the line being tested.	6(6) LTSSVL2 The saved CCBL2 for the line being tested.		
8(8) LTSDIALL Buffer for non X'FF' receive data characters or autocalldial digits. (16 bytes)			
24(18) DLIMETER Counter for non X'FF' data characters when receiving.	26(1A) DIGCNTR Counter for autocalldial digits and receive data characters.		
28(1C) LTSACLN Autocall line address.	30(1E) LTSL2 Address of entry point for level 2 interrupt.		
32(20) LTSSVL3 Saved level 3 address used in a dial operation.	34(22) ALLONES Constant of all ones.		

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) LTSTCL		Control field.
	1	Line is initialized.
	.X	1 = duplex 0 = half duplex
	. . 1	Autocall line.
	. . . 1	Monitor-ring-indicator is installed.
 X	1 = Command has not ended. 0 = Command has ended.
 1	Emulation line.

LINE TEST CONTROL BLOCK

LTS
(NCP#)

Program: NCP#

Size in bytes: 62(3E)

Created by: NCP generation.

Pointer to LTS: Located at CXTLTS in CXSGMISC.

Function: Contains control information for line test operations.

0(0) LTSCTL* Control byte 1.	1(1) LTSPDSYN PAD or SYN character for this line.	2(2) LTSSTMD The system generated Set Mode SDF.	3(3) LTSLCD The system generated LCB value.
4(4) LTSXLAD The line address of the line being tested.	6(6) LTSRLAD Duplex, receive-line address.		
8(8) LTSRDATP*** Receive buffer address.	LTSBUFSV*** Save area for buffer of received data		
LTSDIALL Buffer for receive data characters or auto-call dial digits. (16 bytes)			
24(18) LTSNFCNT** Count for non'FF' data characters when receiving.	26(1A) LTSOCNT Counter for non '00' data characters when receiving.		
28(1C) LTSERCNT SDLC receive error counter. Reserved***	30(1E) LTSDCNT Counter for auto-call dial digits and receive data characters.	31(1F) LTSTURN Transmit turn LCD/PCF.	
32(20) LTSACLN Auto-call line address.	34(22) LTSMCTL Miscellaneous control field		
36(24) LTSXL2 Transmit level 2 pointer	38(26) Reserved		
40(28) LTSRL2 Receive level 2 pointer	42(2A) Reserved		
44(2C) LTSDATAP Transmit buffer pointer	46(2E) Reserved		
48(30) LTSRCCI Rcv. compare character 1	49(31) LTSRCC2 Rcv. compare character 2	50(32) LTSRCC3 Rcv. compare character 3	51(33) LTSWAPI Transmit swap buffer 0 compare character
52(34) LTSWAP2 Transmit swap buffer 1	53(35) LTSXEND0 Buffer 0 residual transmit count	54(36) LTSXCNT0 Buffer 0 total transmit count	55(37) LTSXEND1 Buffer 1 residual transmit count
56(38) LTSXCNT1 Buffer 1 total transmit count	57(39) LTSRCVMD* Receive options	58(3A) LTSNLCHR** Next to last received character	59(3B) LTSLCHAR** Last received character
60(3C) LTSCTL2* Control byte 2	61(3D) Reserved		

*Indicates a byte expansion follows
***Type 2 communication scanner only
***Type 3 communication scanner only

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) LTSCTL	xxxxxxxxx	Control byte: 1=Initialized. 0=Not initialized. 1=Command has not ended. 0=Command has ended. 1=Auto call. 0=No auto call. 1=Monitor-ring-indicator. 0=No monitor-ring-indicator. 1=Duplex adapter. 0=Half-duplex adapter. 1=SDLC 0=Not SDLC 1=CCBL2 is set-up. 0=CCBL2 is not set-up. 1=EP line. 0=NCP line.
57(39) LTSRCVMD	xxxxx111	(Reserved). 1=Two character compare on receive. 0=One character compare. (Reserved) Modem test active. BSC BCC accumulation on RCV. SDLC BCC accumulation on RCV.
60(3C) LTSCTL2	xxxx	Control byte 2 1=Line on type 3 scanner 0=Line not on type 3 scanner 1=New sync 0=No new sync 1=NRZI mode 0=Non NRZI mode 1=Scan received data 0=No scan (Modem test, only)

Program: NCP#

Size in bytes: 64(40)

Created by: NCP generation LU macro.

Pointer to LUB: RVT (leased link), LUV (switched link)

Function: Provides QCBs, status, and control information for a logical unit.

LU/SSCP Process Queue Control Block
(See QCB for Input Queues for all bit definitions).

0(0)		LUL1ECB Pointer to first element queued (Shifted address).		2(2)		LULLECB Pointer to last element queued (Shifted address).	
4(4)		LULSTAT* Task and queue status.		5(5)		LULPRKEY* QCB ID flag and task protect key.	
				6(6)		LULLINK Pointer to next QCB on the queue (Shifted address).	
8(8)							
LULTSKEP Task entry point (Last 18 bits).							
LULMCBD Major control block displacement.				LULSCHED Task dispatching priority.			
12(C)				LULSAVE Address of save area pushdown list (Shifted address).			
				14(E)			
				LULLUNK Pointer to previous QCB on queue (Shifted address).			

APPL/LU Process Queue Control Block
(See QCB for Input Queues for all bit definitions.)

16(10)		LUA1ECB Pointer to first element queued (Shifted address).		18(12)		LUALECB Pointer to last element queued (Shifted address).	
20(14)		LUASTAT* Task and queue status.		21(15)		LUAPRKEY* QCB ID flag and task protect key.	
				22(16)		LUALINK Pointer to next QCB on the queue (Shifted address).	
24(18)							
LUATSKEP Task entry point (Last 18 bits).							
LUAMCBD Major control block displacement.				LUASCHED Task dispatching priority.			
28(1C)				LUASAVE Address of save area pushdown list (Shifted address).			
				30(1E)			
				LUALUNK Pointer to previous QCB on queue (Shifted address).			

32(20)			
LUBCUB Address of Common Physical Unit Block (CUB) (Last 18 bits)			
LUBCSTAT Reserved.			
36(24)		38(26)	
LUBNALU Network address of this logical unit.		LUBTCNT Transmission counter.	
40(28)	41(29)	42(2A)	
LUBCPSET* Session control primary status.	LUBCSSET* Session Control secondary status.	LUBNAPL Network address of application currently in session	
44(2C)	45(2D)	46(2E)	47(2F)
LUBAPSET* Application primary status.	LUBASSET* Application secondary status.	LUBM Pacing parameter M.	LUBN Pacing parameter N.
48(30)	49(31)		
LUBPC Pacing count.	LUBLALU Local address of logical unit.		

*Indicates a byte expansion follows.

Terminal Node (type 1 PU) Extension
The following seven halfwords are for terminal node
sequence number management.

	50(32)
	LUBAOSLU SSCP-LU expedited outbound identification.
52(34)	54(36)
LUBSOSLU SSCP-LU normal outbound identification.	LUBAOLLU LU-LU expedited outbound identification.
56(38)	58(3A)
LU-LU normal inbound sequence number.	LUBSOLLC LU-LU normal outbound check.
60(3C)	62(3E)
LUBSOLLS LU-LU normal outbound save.	LUBIDGN Identification number generation.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
40(28) LUBCPSET	111 1	SCP primary status: Session established. Exception condition exists. Processing Activate Logical. Processing Deactivate Logical.
41(29) LUBCSSET	1	SCP secondary status: Processing Clear.
44(2C) LUBAPSET	111 11	Application primary status: Session established. Exception condition exists. Processing Bind. Processing Unbind. SDLC/BSC path function. (LUB-4 contains the address of the SPB)
45(2D) LUBASSET	xxx1 11111	Application secondary status: 1=Processing Clear. 0=Not processing. 1=Awaiting pacing from LU. 0=not waiting. 1=Pace required by host. 0=not required. Null BB PIU pending. INB BB PIU pending. PBID pending. Bracket state management mode.

Program: NCP#


Size in bytes: One 4-byte entry for each logical unit that can be assigned to a switched SDLC link (specified at NCP generation).

Created by: NCP generation.

Pointer to LUV: CUBLUB field in CUB.

Function: Used to locate the logical unit control blocks (LUBs) that are assigned to a switched SDLC link.

LUV Entry

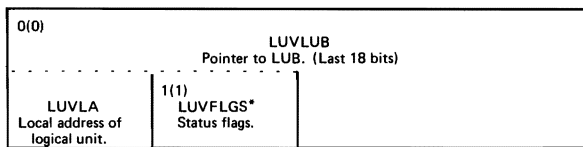

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
1(1) LUVFLGS	1 1	LUV status flags. Last entry in LUV. Entry in use.

Program: NCP#

Size in bytes: 36(24)

Created by: NCP Generation (SDLC links)

Pointer to LXB: By LKBACBP field in LKB

Function: Contains the status of SDLC link operations

0(0) LXBIMCTL* Immediate control command flags.	1(1) LXBCMAND* I/O command.	2(2) LXBCMODS* Command modifiers field.	
4(4) LXBEXTST* Extended error status.	5(5) LXBRBLUC Received BLU command field. (see CCBRLUC)	6(6) LXBSTAT* Command ending status field.	7(7) LXBSTATC* Completion code byte of status.
8(8) LXBEREST First error extended status, see LXBEXTST.	9(9) LXBRTYCT ERP retry count. Underrun Limit (127)	10(A) LXBERST First error status. Set upon first recoverable error. (see LXBSTAT)	11(B) LXBHSTAT Hold SDLC status. (see LXBSTATC)
12(C) Space for OLTIOB/XIO commands. or LXBAXP Address expected in response		14(E) LXB DATAP Pointer to first buffer of data received. (Shifted address)	
or LXBTCBPT Pointer to OLLT control block.			
16(10) LXBFNLPT Final buffer pointer. (Shifted address) or LXB POLLT Poll Cycle start time or LXBLTCT Transmit or Receive count (OLLT).	18(12) LXB INPUT Input control-data pointer to command reject (CMDR) data received. (Shifted address) or LXB TL2 Secondary CCBL2 (when OLLT active).		
20(14) LXBQOFF L2/L3 block overrun queue head pointer.	22(16) LXBQON L2/L3 block overrun queue tail pointer.		
21(15) Space for OLT IOB/XIO commands or LXB LTLAB Pointer to lookahead buffer (OLLTLAB)			
24(18) LXB LKBP Pointer to line/link control block. (shifted address).	26(1A) LXB BKSIZ Received block size (number of data characters stored).		

*Indicates a byte expansion follows.

28(1C)		LXBPOLL Pointer to current SOT entry being polled. (Half-duplex and duplex receive leg, primary stations only.)	
LXBCPCMD Contact poll command executed.		30(1E) or LXBRACBP Pointer to receive leg of a duplex link (Transmit leg only).	
32(20)		LXBSEL Output SOT pointer-pointer to current station that I format data was sent to (primary stations only).	
LXBCPOLL Contact poll offset into SOT.		34(22) or LXBXACBP Pointer to transmit leg of a duplex link (Receive leg only).	

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) LXBIMCTL	X'80' X'04' X'06' X'10' X'12' X'14' X'18' X'1A' X'05' X'07'	Immediate control command flags: Reset Immediate issued. Set Mode Commands (for idle or busy lines): Read line type. Set text error retry limit. Set receive buffer cutoff factor. Start line trace. Stop line trace. Set operation link. Reset operational link. Set Mode Commands (idle lines only): Set line adapter interface parameters. Set line control procedure.
1(1) LXBCMAND	X'00' X'83' X'8D' X'8F' X'30' X'32'	LXB command: No I/O occurred Disable. Enable. Dial. Run SDLC link. Run Initial (remote NCP)
2(2) LXBCMODS	Byte 0 xx	Command modifiers: 1=Suppress ending a new command due to outstanding status. 0=Immediate end to new command when status is outstanding. 1=No retry. 0=Retry.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
	...xx Byte 1 x....	1=Immediate retry if errors while normal polling. 0=If errors, retry at next normal poll cycle. 1=Do not release transmitted buffers. 0=Release transmitted buffers after ACK. 1=Perform command reset step first. 0=Normal command execution.
4(4) LXBEXTST	1.... 1...1.1	Overrun if LXBSTAT Bit 4=0. 1. Lost character, PDF overlaid. 2. Flag received off boundary. Underrun if LXBSTAT Bit 4=1. Character in PDF transmitted more than once. (Limit 127 retries LXBRTYCT) Block overrun occurred. Level 3 block processing in progress when another block available from Level 2. Abort received. Eight consecutive 1 bits received. Monitor count overflow. 64 temporary I-format receive errors have occurred. <ul style="list-style-type: none"> ● I-format receive data check. ● I-format receive format checks. ● I-format receive aborts.
6(6) LXBSTAT	1....1....1 000. 001. 010. 011. 100. 101. 110. 111.	Extended error status. (see LXBEXTST) Format exception— invalid SDLC format. <ul style="list-style-type: none"> ● Frame contained data (NSA, SNRM). ● Not a complete frame. ● The following is a list of LXBSTATC values and the reason for the format exception: 0E Rec REJ, line is not duplex 1C Rec RR or in NS Phase 1E Rec XID in RR or RNR Phase A2 Rec Invalid SDLC command A8 Rec SDLC DISC AC Rec RQI B2 Rec SDLC SNRM B6 Rec SDLC ROL BC Rec NSA in RR or RNR phase BD Sent SNRM did not rec NSA ...1 FCS error (data check). Run command error/exception phase field: No command active. SDLC I-format sent or SDLC RR sent. SDLC RNR sent. SDLC NS command sent. Transmit. Error while sending text I-format. Error while sending normal polling or response S-format. Error while sending NS control sequence.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
7(7) LXBSTATC	000	Completion code status byte Normal final status: Control information received in S-format.
	. . . 0 000 .	Timeout— received RR, RNR or REJ.
	. . . 0 110 .	Partial acknowledgement— sequence number change. (or) Negative acknowledgement— sequence number does not change.
	. . . 0 111 .	SDLC REJ received.
	. . . 1 110 .	SDLC RR received— positive acknowledgement (NS = NR).
	. . . 1 111 .	SDLC RNR received.
	001	Normal final status: Data received in I-format.
	. . . 0 000 .	Timeout— received address and control fields.
	. . . 0 010 .	Buffer cutoff— exceeded buffer limit.
	. . . 0 110 .	Partial acknowledgement— sequence number change. (or) Negative acknowledgement— sequence number does not change.
	. . . 1 010 .	End of Block— I-format received.
	011	Normal final status: Data received in NS-format.
	. . . 0 000 .	Timeout— flag received.
	. . . 0 001 .	SDLC CMDR received (no retry)— MDR record has reason for CMDR.
	. . . 0 010 .	Buffer Cutoff— exceeded buffer limit.
	. . . 1 010 .	SDLC NSI received.
	*100	Special 0 final status: Special status or control information received in NS-format.
	. . . 0 000 .	Timeout— nothing received.
	. . . 0 010 .	Buffer pool depleted— no more buffers available.
	. . . 0 110 .	Reset— end run command.
	. . . 0 111 .	Invalid address received from secondary.
	. . . 1 011 .	Poll stop.
	. . . 1 100 .	SDLC frame sent.
	. . . 1 110 .	Disabled.
	. . . 1 111 .	Enabled.
	101	Special 1 SDLC Final Status: Control information received in NS-format.
	. . . 0 000 .	Timeout— received flag.
	. . . 0 001 .	Received invalid SDLC command (no retry).
	. . . 0 010 .	Received invalid (incongruous) N(R) in I or S-format.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
	...0 011. ...0 100. ...0 110. ...1 000. ...1 001. ...1 011. ...1 110. ...1 111.	Link activity timeout (secondary only). Received SDLC DISC. Received SDLC RQI or SIM (no retry). Record statistics— total retry count overflow or transmission count overflow. Received SDLC SNRM. Received SDLC ROL (no retry). Received SDLC NSA. Received SDLC XID.
	111.1 100. ...1 101. ...1 000. ...1 001. ...1 010. ...1 100. ...1 110.	Hardware final status. Adapter Check— <ul style="list-style-type: none"> ● Timer has detected no level 2 interrupt when at least one was expected. ● Modem self-test failed to get a level 2 interrupt after placing the PCF in turnaround. ● Enable or dial failed to get a level 2 interrupt after setting the PCF to set mode. Adapter Feedback Check— <ul style="list-style-type: none"> ● Timer detects an LCD of X'F', which results from a hardware-detected error within the adapter. ● Improper SYSGEN about the adapter in use. Modem error—Set when the SCF modem error bit is on. <ul style="list-style-type: none"> ● Occurs when DSR drops during a transmit or receive operation. ● Can be set by the timer. ● Set if CTS drops while transmitting. Transmit clock or CTS failure— <ul style="list-style-type: none"> ● During enable or write control operation, a level 2 interrupt failed to follow line turnaround. ● During enable on a full duplex line, CTS failed to come up. ● Time-out occurs with PCF of transmit initial (8). DSR "turn on" check—DSR fails to come up during an enable or dial operation. DSR "turn off" check—DSR fails to drop during a disable operation. Auto call check— <ul style="list-style-type: none"> ● Initial dial PCF 'F' sees ACR, DLO, COS, or PND up. ● Dial PCF '4' sees ACR, COS, or PND up.
	1111 1111x	Program failure— <ul style="list-style-type: none"> ● Line I/O code completed in an impossible status, (e.g. ENQ on SDLC line). ● A negative data length was computed. Poll/final bit.

LEVEL 1 CONTROL BLOCK

**L1B
(NCP#)**

Program: NCP#

Size in bytes: 36(24)

Created by: SYSCG007 macro. One L1B for each NCP.

Pointer to: SYSL1BA in HWE.

Function: Contains the parameters necessary to control the handling of level 1 interrupts.

-8(-8) L1BCID Dump identifier. Characters "XXCXTL1B"		
0(0) L1BCRP Check record pool unit address		
4(4) L1BXR74 External register X'74' save area		
8(8) L1BXR76 External register X'76' save area		
12(C) L1BXR79 External register X'79' save area		
16(10) L1BXR7E External register X'7E' save area		
20(14) L1BILIAR Interrupted level instruction address register		
24(18) L1BABMC Abend/malfunction code save area		
28(1C) L1BBERT Box type error save area	29(1D) L1BILVL Interrupted level from external register X'79'	30(1E) L1BINST Instruction image for CCU level 1 interrupt
32(20) L1BINSTA Instruction address (L1BILIAR-2)		
36(24) L1BXR56 External register X'56' save area.	38(26) L1BXR57 External output register X'57' save area.	
40(28) L1BXR67I External input register X'67' save area.	42(2A) L1BXR67 External register X'67' save area.	
44(2C) L1BXR76A External register X'76' save area.	46(2E) L1BXR77 External register X'77' save area.	
48(30) B1BOB1* Option byte 1	49(31) L1BOB2* Option byte 2	50(32) Reserved

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
32(20) L1BOB1	xxx 1 x	Option byte 1 System type 00=NCP Core size 1=Greater than 64K. 0=Equal to or less than 64K. Auto network shutdown Channel type 1=Type 1/4 CA 0=Type 2/3 CA
33(21) L1BOP2	11x 1 1111	Option byte 2 Channel delay Channel adapter time-out. Scanner type 1=Type 1 scanner 0=Type 2 scanner Time and data stamp Line trace Address trace PEP system PEP local/remote

Program: NCP#

Size in bytes: 48(30)

Created by: Specification of OLT at NCP generation and the receipt of a test line or test line and disconnect command (block is built in a leased buffer).

Pointer to OLLTCB: QOBOLL field in OLLTQCB.

Function: Contains current information on the operation of an online line test.

0(0)	OLLTRXCT Residual transmit character count.	2(2)	OLLTRRCT Residual receive character count.
4(4)	OLLTCCT Receive character compare count.	6(6)	OLLTNCCT Receive character non-compare count.
8(8) OLLTFLGS Flag field.			
OLLTDICW Dial SDF/PDF return if error.		OLLTDRCT Dial residual count if error.	
Remainder of flag field.			15(F) OLLTCMFG* Special communications flag.
16(10)	OLLTICW1 ICW1 contents at completion of level 2 command.	18(12)	OLLTICW2 ICW2 contents at completion of level 2 command.
20(14)	OLLTICW3 ICW3 contents at completion of level 2 command.	22(16)	OLLTSYSF* OLLT System flags.
24(18)	OLLTCRA Current command relative address.	26(1A)	OLLTECRA Failing command relative address.
28(1C)	OLLTECBA Error command branch relative address.	30(1E)	OLLTCCSA Current command start address.
32(20)	OLLTFBAD OLLT first buffer address.	34(22)	OLLTQCB QCB control block address.
36(24) OLLTCCBA Current command buffer address.			
40(28) OLLTLKBA Pointer to LKB/LCB.			
44(2C)	OLLTWRK Work area for level 5.		

* Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
15(F) OLLTCMFG	X'08' X'04' X'02' X'01' X'00'	Dial command active. Set time delay active. Transmit on count active. BSC/SS line test. SDLC line test.
22(16) OLLTSYSF	<p>Byte 0</p> <p>1</p> <p>.1</p> <p>..1</p> <p>...1</p> <p>.... 1</p> <p>..... .1 . . .</p> <p>..... ..1 . . .</p> <p>..... ...1 . . .</p> <p>Byte 1</p> <p>1</p> <p>.1</p> <p>..1</p> <p>...1</p> <p>.... 1</p> <p>..... .x</p> <p>..... ..1 . . .</p> <p>..... ...1 . . .</p>	<p>OLLT system flags:</p> <p>No level 2 interrupt occurred before time-out.</p> <p>SCF mask error was detected during level 2 interrupt.</p> <p>A miscellaneous error was detected in level 2.</p> <p>Halfword compare error.</p> <p>Scanner interlock error.</p> <p>Post unsuccessful.</p> <p>Dial ACR error.</p> <p>Dial ACU error.</p> <p>Character compare halfword (OLLTCCT) has overflowed.</p> <p>Character non-compare halfword (OLLNCCT) has overflowed.</p> <p>Count went to zero on a receive SDLC command.</p> <p>Abort condition detected.</p> <p>Abort sequence in progress.</p> <p>Line/link test.</p> <p>0=SDLC link test.</p> <p>1=BSC/SS line test.</p> <p>Wait state.</p> <p>Reset command received.</p>

Program: NCP#

Size in bytes: Variable.

Created by: NCP upon receipt of a Test Line or Test Line with Disconnect command.

Pointer to OLLTLAB: LXBLTLAB field in ACB.

Function: Temporarily holds consecutive I/O interpretive commands for lookahead decode. The commands are:

- Transmit Character and Turn
- Transmit on Count
- Receive SDLC
- Receive and Compare
- Receive and Count

0(0) Buffer chain pointer. (Shifted)	2(2) Offset to next command to be executed.	3(3) Flags*
4(4) OLLT I/O interpretive commands. (3 maximum)		

*Indicates a byte expansion follows.

Byte Expansion

Offset/Field Name	Bit Pattern/ Hex Value	Contents
3(3) (No name)	1 1 1 1	Flags Transmit on Count phase 1 complete. Transmit Turn phase 1 complete. Receive phase 1 complete. Receive and compare active or no buffer available in level 3.

Program: NCP#

Size in bytes: 24(18) for half-duplex lines.
48(30) for duplex lines.

Pointer to OLLTOCB: OLLTOCBA field in OLLT control block.

Function: Contains QCBs for OLLT routines (two identical QCBs for duplex operation).

See QCB for Input Queues for all bit definitions.

0(0)		QCB1ECB Pointer to first element queued. (Shifted address)		2(2)		QCBLECB Pointer to last element queued. (Shifted address)	
4(4)		5(5)		6(6)			
QCBSTAT* Task and queue status.		QCBPRKEY* QCB ID flag and task protect key.		QCBLINK Pointer to next QCB on the queue. (Shifted address)			
8(8)							
QCBTSKEP Task entry point (last 18 bits).							
QCBMCBD Major control block displacement.		9(9)					
		QCBSCHED* Task dispatching priority.					
12(C)				14(E)			
QCBSAVE Address of save area push-down list. (Shifted address)				QCBLUNK Pointer to previous QCB on the queue. (Shifted address)			
16(10)				18(12)			
QCBACB Pointer to ACB.				Reserved.			
20(14)							
QCBOLL Pointer to OLLT.							

*Indicates a byte expansion occurs in the QCB for Input Queues.

Identical QCB for duplex operation.

Program: NCP

Size in bytes: 37(25)

Located in: Dynamically allocated buffer.

Created: When a BTU Test command is received.

Pointer to OLTT: DVBSDRT field in DVB when in online test mode.

Function: Contains status flags and counters from diagnostic I/O operations.

0(0)			OLTCTRS Counters		
8(8)					
OLTFLGS Flags. (This field can also be used for counters.)					
16(10)		18(12)		19(13)	
OLTSTAT Status field (same as IOBSTAT).		OLTEXST Extended status field (same as IOBEXTST).		(Reserved).	
20(14)	21(15)	22(16)			
OLTPHER Phase error-converted.	OLTFSTS First status - converted.	OLTFNLS Final status - converted.			
24(18)			26(1A)		
OLTCCMAD Current relative command address.			OLTTEMP Temporary halfword work area.		
28(1C)			30(1E)		
OLTFBAD Address of first BCU buffer (Shifted address)			OLTLCBAD LCB address. (Shifted address)		
32(20)					
OLTCBAD Current command buffer address (last 18 bits).					
OLTCBÖF Offset into current buffer.					
36(24)					
OLTXFER Maximum buffers in Read subblock.					

Program: NCP

Size in bytes: 24(18)

Created by: NCP generation.

Pointer to PCB: SYSPDBP field in HWE.

Function: Provides an area through which information is passed between modules supporting control panel operation.

Notes: This control block is required to be tailored for a specific machine. It requires the following information:

- Type of channel adapter installed.
- Type of communication scanner installed.

The channel adapter and communication scanner type information is used to generate the invalid external register address ranges for input. This information is used to verify external register addresses entered into the dynamic register display and address trace routines in order to avoid input/output instruction checks.

The invalid external register ranges follow the PCB in storage.

0(0)		PCBADSW Value of the ADDRESS/DATA switches (last 18 bits).	
PCBCTL Control byte: used as inter- face with level 3 panel service module.			
4(4)	PCBFNSW Value of the DISPLAY/FUNCTION SELECT switch.	6(6) PCBD1CTL Display 1 con- trol byte.	7(7) PCBD2CTL Display 2 control byte.
8(8)		PCBD1AD Display 1 address (last 18 bits).	
PCBFUNCE Function exten- sion control byte.			
12(C)		PCBD2AD Display 2 address (last 18 bits).	
PCBAPNSL Display append- age select byte.			
16(10)	PCBICPAD Panel request intercept address. (Always shifted regardless of storage size.)	18(12)	PCBICWD Current ICW address with bit 38 on.
20(14)	PCBICWN New ICW address - request for data set lead display.	22(16)	(Reserved).

PCF STATE VECTOR TABLE
(Type 1 Scanner only)

PCF

Program: PEP, EP

Size in bytes: 128(8F)

Located in: Module CYANUC (EP), \$LVL2 (NCP)

Created by: NCP and EP generation.

Pointer to PCF State Vector Table: BCBVCT field in BCB

Referenced by: CYABIT10(EP), CYABIT20(EP), CYABIT30(EP), CXBBTSV(NCP).

Function: Provides address pointers to bit service routines.

Note: Offsets are shown within each table. The actual offset will be determined by the location of the table within the link edit map.

Start/Stop

0(0) CYANOOPX(EP) CXBBTSV2(NCP) Address pointer to PCF 0 - No-op.	2(2) CYAMPCF1(EP) CXBBTSV3(NCP) Address pointer to PCF 1 - Set Mode.
4(4) CYABPCF2(EP) CXBBTSV4(NCP) Address pointer to PCF 2 - Monitor DSR.	6(6) CYAPCF3(EP) CXBBTSV5(NCP) Address pointer to PCF 3 - Monitor RI/DSR.
8(8) CYAPCF45(EP) CXBBTSV6(NCP) Address pointer to Monitor Phase.	10(A) CYAPCF45(EP) CXBBTSV6(NCP) Address pointer to Monitor Phase.
12(C) CYANOOPX(EP) CXBBTSV2(NCP) Undefined for start-stop.	14(E) CYASRCVT(EP) CXBBTSVD(NCP) Address pointer to PCF 7 - Receive.
16(10) CYASPCF8(EP) CXBBTSV7(NCP) Address pointer to PCF 8 - Transmit Initial.	18(12) CYAXSSTT(EP) CXBBTSVB(NCP) Address pointer to PCF 9 - Transmit Normal.
20(14) CYASPCFA(EP) CXBBTSVA(NCP) Address pointer to PCF A - Transmit Break.	22(16) CYASPCFB(EP) CXBBTSVB(NCP) Address pointer to PCF B - Prepare to turn.
24(18) CYASPCFC(EP) CXBBTSV9(NCP) Address pointer to PCF C - Transmit Turn, RTS Off.	26(1A) CYASPCFD(EP) CXBBTSVH(NCP) Address pointer to PCF D - Transmit Turn, RTS on.
28(1C) CYANOOPX(EP) CXBBTSV2(NCP) Undefined for start-stop.	30(1E) CYAMPCFF(EP) CXBBTSVI(NCP) Address pointer to PCF F - Disable.

SDLC

0(0)	CXBBTSV2 Address pointer to PCF 0 - No-op	2(2)	CXBBTSV3 Address pointer to PCF 1 - Set Mode
4(4)	CXBBTSV4 Address pointer to PCF 2 - Monitor DSR	6(6)	CXBBTSV5 Address pointer to PCF 3 - Monitor RI/DSR
8(8)	CXBBTSVP Address pointer to Monitor Phase - Allow DSR error (flags)	10(A)	CXBBTSVP Address pointer to Monitor Phase (flags)
12(C)	CXBBTSVQ Address pointer to Receive Flags - No interrupt	14(E)	CXBBTSVR Address pointer to Receive Data - PCF 7
16(10)	CXBBTSVS Address pointer to PCF 8 - Transmit Initial	18(12)	CXBBTSVT Address pointer to PCF 9 - Transmit Normal
20(14)	CXBBTSVU Address pointer to PCF A - Transmit new sync	22(16)	CXBBTSV2 Undefined for SDLC (No-op)
24(18)	CXBBTSV9 Address pointer to PCF C - Transmit Turn, RTS off	26(1A)	CXBBTSVV Address pointer to PCF D - Transmit data continuous- No interrupt
28(1C)	CXBBTSV2 Undefined for SDLC (No-op)	30(1E)	CXBBTSVI Address pointer to PCF F - Disable

Binary Synchronous

0(0) CYANOOPX(EP) CXBBTSV2(NCP) Address pointer to PCF 0 - No-op.	2(2) CYAMPCF1(EP) CXBBTSV3(NCP) Address pointer to PCF 1 - Set Mode.
4(4) CYABPCF2(EP) CXBBTSV4(NCP) Address pointer to PCF 2 - Monitor DSR.	6(6) CYABPCF3(EP) CXBBTSV5(NCP) Address pointer to PCF 3 - Monitor RI/DSR.
8(8) CYAPCF45(EP) CXBBTSV6(NCP) Address pointer to PCF 4 - Monitor Phase, DSR Check Off.	10(A) CYAPCF45(EP) CXBBTSV6(NCP) Address pointer to PCF 5 - Monitor Phase, DSR Check on.
12(C) CYANOOPX(EP) CXBBTSV2(NCP) Undefined.	14(E) CYARCDTA(EP) CXBBTSVC(NCP) Address pointer to PCF 7 - Receive.
16(10) CYABPCF8(EP) CXBBTSV8(NCP) Address pointer to PCF 8 - Transmit Initial.	18(12) CYAXMDTA(EP) CXBBTSVG(NCP) Address pointer to PCF 9 - Transmit Normal.
20(14) CYABPCFA(EP) CXBBTSVF(NCP) Address pointer to PCF A - Transmit New Sync.	22(16) CYANOOPX(EP) CXBBTSV2(NCP) Undefined.
24(18) CYASPCFC(EP) CXBBTSV9(NCP) Address pointer to PCF C - Transmit Turn, RTS Off.	26(1A) CYASPCFD(EP) CXBBTSVH(NCP) Address pointer to PCF D - Transmit Turn, RTS On.
28(1C) CYANOOPX(EP) CXBBTSV1(NCP) Undefined.	30(1E) CYAMPCFF(EP) CXBBTSV1(NCP) Address pointer to PCF F - Disable.

Connect Out (Dial)

0(0) CYADINOP(EP) CXBBTSVJ(NCP) Address pointer to PCF 0 - No-op.	2(2) CYANOOPX(EP) CXBBTSV2(NCP) PCF 1 undefined for Dial.
4(4) CYANOOPX(EP) CXBBTSV2(NCP) PCF 2 undefined for Dial.	6(6) CYANOOPX(EP) CXBBTSV2(NCP) PCF 3 undefined for Dial.
8(B) CYAPCFD4(EP) CXBBTSVK(NCP) Address pointer to PCF 4 - Monitor Call Unit.	10(A) CYAPCFD5(EP) CXBBTSVL(NCP) Address pointer to PCF 5 - Monitor Call Unit.
12(C) CYANOOPX(EP) CXBBTSV2 (NCP) PCF 6 undefined for Dial.	14(D) CYANOOPX(EP) CXBBTSV2(NCP) PCF 7 undefined for Dial.
16(10) CYAPCFD8(EP) CXBBTSVM(NCP) Address pointer to PCF 8 - Digit Valid.	18(12) CYANOOPX(EP) CXBBTSV2(NCP) PCF 9 undefined for Dial.
20(14) CYANOOPX(EP) CXBBTSV2(NCP) PCF A undefined for Dial.	22(16) CYANOOPX(EP) CXBBTSV(NCP) PCF B undefined for Dial.
24(18) CYANOOPX(EP) CXBBTSV2(NCP) PCF C undefined for Dial.	26(1A) CYANOOPX(EP) CXBBTSV2(NCP) PCF D undefined for Dial.
28(1C) CYANOOPX(EP) CXBBTSV2(NCP) PCF E undefined for Dial.	30(1E) CYADPCFF(EP) CXBBTSVN(NCP) Address pointer to PCF F - Disable.

Feedback Check

0-31(0-1F) CYANOOPX(EP) CXBBTSV2(NCP) Feedback check PCFs are No-op.

Program: NCP#

Size in bytes: 34(22) plus variable length text.

Function: Basic unit of transmission in the TP network. The FID0 PIU is used for requests directed to BSC and start-stop devices.

Note: This PIU layout is as it appears in an NCP buffer. The basic PIU begins with the transmission header.

Buffer Prefix

0(0)	U0BUFCHN Buffer prefix chain field. (Shifted address.)	2(2)	U0OFFSET Buffer prefix data offset field.	3(3)	U0DATCNT Buffer prefix data count field.
------	--	------	---	------	--

Event Control Block

4(4)	U0CSTAT Block status flags.	5(5)	U0ESTAT Event status flags.	6(6)	U0ECHN ECB chain pointer.
8(8)	U0TMINT Set time interval, as specified by SETIME macro. or U0TCNT PIUO text count.			10(A)	U0WQCB QCB for waiting task. or U0BLKNS Hold area for blocks N(s).
12(C)	U1B0TYPE Equal to 1st byte of destination RVT	13(D)	U1B0STAT* UIB status	or U1BLBBA (NCP#) Last buffer of PIU address	

Transmission Header

		14(E)	TH0B0* TH Byte 0	15(F)	Reserved.
16(10)	TH0DAF Destination network address.	18(12)	TH0OAF Origin network address.		
20(14)	TH0SNF Sequence number.	22(16)	TH0DCF Count (RH + RU).		

*Indicates a byte expansion follows.

Request/Response Header (RH)

24(18) RH0B0* RH Byte 0.	25(19) RH0B1* RH Byte 1.	26(1A) RH0B2* RH Byte 2.	27(1B) RH0PAD FIDO pad between RH and RU.
-----------------------------------	-----------------------------------	-----------------------------------	--

Request/Response Unit (RU)

28(1C) RU0CMD BTU command. (Refer to Section 3)	29(1D) RU0MOD BTU command modifier. (Refer to Section 3)	30(1E) RU0FLG BTU flags. (Refer to BTU)
32(20) RU0SRP BTU system response. (Refer to Section 8)	33(21) RU0LRP BTU extended response. (Refer to Section 8)	34(22) Text field. (Variable length.)

*Indicates a byte expansion follows.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
13(D) UIB0STAT	X'80' X'01' X'02' X'03' X'04' X'05' X'06' X'07'	UIB status. Recurrent PIU/sensitive data indicator. Invalid DAF. Unrecoverable path error. Unrecoverable station error. Invalid DCF. Incomplete header. Format error. Auto network shutdown in progress.
14(E) TH0B0	.00 01 10 11 00x	Transmission header byte 0. FIDO BSC/SS node. Last segment. First segment. Only segment. Middle segment. 1=Expedited flow. 0=Normal flow.
24(18) RH0B0	xxx xx11100100	Request/response byte 0. 1=Response. 0=Request. 00=Function management data 01=Network control. 10=Data flow control. 11=Session control. 1=Formatted. 0=Unformatted. 1=Sense data included. 0=No sense data included. Only element. First element. Last element. Middle element.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
25(19) RHOB1	1 1 1 1 1	Request/response byte 1. FME/DR 1 requested/sent. RRN/DR2 requested/sent. Exception response requested/sent. Reserved. Pace.
26(1A) RHOB2	1 1 1 x	RH byte 2. Begin bracket. End bracket. Change direction (HDX only). Code selection indicator 0=EBCDIC 1=ASCII

Program: NCP#

Size in bytes: 36(24) plus variable length text.

Function: Basic unit of transmission in the TP network. The FID1 PIU is used for transmission between the host, local NCP, and remote NCP.

Note: This PIU layout is as it appears in an NCP buffer. The basic PIU begins with the transmission header.

Buffer Prefix

0(0)	U1BUFCHN Buffer prefix chain field. (Shifted address.)	2(2)	U1OFFSET Buffer prefix data offset field.	3(3)	U1DATCNT Buffer prefix data count field.
------	--	------	---	------	--

Event Control Block

4(4)	U1CSTAT Block status flags.	5(5)	U1ESTAT** Event status flags.	6(6)	U1ECHN ECB chain pointer.
8(8)	U1TMINT Set time interval, as specified by SETIME macro. or U1TCNT PIU1 text count.		10(A) U1WQCB QCB for waiting task. or U1BLKNS Hold area for blocks N(s).		
12(C)	U1B1TYPE Equal to 1st byte of destination RVT or U1BLBBA (NCP#) Last buffer of PIU address	13(D)	U1B1STAT* U1B status		

**Refer to ECBESTAT field of the Event Control Block.

Transmission Header

		14(E)	TH1B0* TH byte 0.	15(F)	Reserved.
16(10)	TH1DAF Destination network address.	18(12) TH1OAF Origin network address.			
20(14)	TH1SNF Sequence number.	22(16) TH1DCF Count (RH + RU).			

Request/Response Header (RH)

24(18)	25(19)	26(1A)
RH1B0* RH Byte 0. (See Section 5)	RH1B1* RH Byte 1.	RH1B2* RH Byte 2.

*Indicates a byte expansion follows.

Request/Response Unit (RU)

		27(1B) RU1BT0 1st byte of prefix for SSCP- FM requests. (Refer to Section 5) or RU1RC0 Request code for non session control FM requests. (Refer to Section 5)	
28(1C) RU1BT1 2nd byte of prefix for SSCP- FM requests. (Refer to Section 5)	29(1D) RU1RC2 Request code for SSCP- FM requests. (Refer to Section 5)	30(1E) RU1NA Network address for SSCP- FM requests.	
32(20) RU1WT* Trace type indicator.	33(21) RU1TM Time field for active trace and record trace data.	34(22) RU1SCA Subchannel address for EP line.	35(23) RU1RTT* Type of record trace data request.

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
13(D) UIB1STAT	X'80' X'01' X'02' X'03' X'04' X'05' X'06' X'07'	UIB status. Recurrent PIU. Invalid DAF. Unrecoverable path error. Unrecoverable station error. Invalid DCF. Incomplete header. Format error. Auto network shutdown in progress.
14(E) TH1B0	.01 01 10 11 00x	Transmission header byte 0. FID1 Intermediate node. Last segment. First segment. Only segment. Middle segment. 1=Expedited flow. 0=Normal flow.
24(18) RH1B0	xxx xx11100100	Request/response byte 0. 1=Response. 0=Request. 00=Function management data 01=Network control 10=Data flow control 11=Session control 1=Formatted. 0=Unformatted. 1=Sense data included.* 0=No sense data. Only element. First element. Last element. Middle element.

*See Section 9.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
25(19) RH1B1	1 1 1 1 1	Request/response byte 1. FME/DR1 requested/sent. RRN/DR2 requested/sent. Exception response requested/sent. Reserved. Pace.
26(1A) RH1B2	1 1 1 x	RH byte 2. Begin bracket. End bracket. Change direction (HDX only). Code selection indicator. 0=EBCDIC 1=ASCII
32(20) RU1WTxx	Trace type indicator: Type 2 scanner - 01 Type 3 scanner - 11
35(23) RU1RTT	x x011011	Type of Record Trace Data requested: 1=Duplex. 0=Half-duplex . If bit 0=1, 1=Transmit leg. 0=Receive leg. This is not the last Record Trace Data request. This is the last Record Trace Data request because a Deactivate Trace has been received. This is the last Record Trace Data request because Line Trace has been terminated due to slowdown.

*See Section 9.

Program: NCP#

Size in bytes: 32(20) plus variable length text.

Function: Basic unit of transmission in the TP network. The FID2 PIU is used for transmission between the NCP and the cluster control unit.

Note: This PIU layout is as it appears in the NCP buffer. The basic PIU begins with the transmission header.

Buffer Prefix

0(0)	U2BUFCHN Buffer prefix chain field. (Shifted address.)	2(2)	U2OFFSET Buffer prefix data offset field.	3(3)	U2DATCNT Buffer prefix data count field.
------	--	------	---	------	--

Event Control Block

4(4)	U2CSTAT Block status flags.	5(5)	U2ESTAT Event status flags.	6(6)	U2ECHN ECB chain pointer.
8(8)	U2TMINT* Set time interval as specified by SETIME macro. ----- or U2TCNT PIU2 text mode.		10(A) U2WQCB QCB for waiting task. ----- or U2BLKNS Hold area for blocks N(s)		
12(C)	U1B2TYPE Unused.	13(D)	U1B2STAT* UIB status.		

14(E)	Alignment bytes.
16(10)	Alignment bytes.

Transmission Header

18(12)	TH2B0* TH byte 0.	19(13)	Reserved.
20(14)	TH2DAF Destination network address.	21(15)	TH2OAF Origin network address.
		22(16)	TH2SNF Sequence number field.

Request/Response Header (RH)

24(18)	RH2B0* RH Byte 0. (See Section 5)	25(19)	RH2B1* RH Byte 1.	26(1A)	RH2B2* RH Byte 2.
--------	--	--------	-------------------------	--------	-------------------------

*Indicates a byte expansion follows.

Request/Response Unit (RU)

27(1B) RU2BT0 1st byte of prefix for SSCP. FM requests. (Refer to Section 5) - - - or RU1RC0 - Request code for non session control FM requests. (Refer to Section 5)		
28(1C) RU2BT1 2nd byte of prefix for SSCP; FM requests. (Refer to Section 5)	29(1D) RU2RC2 Request code for SSCP-FM requests. (Refer to Section 5)	30(1E) RU2NA Network address for SSCP- FM requests.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
13(D) UIB2STAT	X'80' X'01' X'02' X'03' X'04' X'05' X'06' X'07'	UIB status. Recurrent PIU. Invalid DAF. Unrecoverable path error. Unrecoverable station error. Invalid DCF. Incomplete header. Format error. Auto network shutdown in progress.
18(12) TH2B0	...10 01 10 11 00x	Transmission header byte 0. FID2 Cluster node. Last segment. First segment. Only segment. Middle segment. 1=Expedited flow. 0=Normal flow.
24(18) RH2B0	xxx xx11100100	Request/response byte 0. 1=Response. 0=Request. 00=Function management data 01=Network control. 10=Data flow control. 11=Session control. } (See Section 5) 1=Formatted. 0=Unformatted. 1=Sense data included.* 0=No sense data. Only element. First element. Last element. Middle element.

*See Section 9.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
25(19) RH2B1	1 1 1 1 1	FME/DR1 requested/sent. RRN/DR2 requested/sent. Exception response requested/sent. Reserved. Pace.
26(1A) RH2B2	1 1 1 x	RH byte 2 Begin bracket. End bracket. Change direction (HDX only). Code selection indicator. 0=EBCDIC 1=ASCII

Program: NCP#

Size in bytes: 36(24) plus variable length text.

Function: Basic unit of transmission in the TP network. The FID3 PIU is used for transmission between the NCP and a terminal node.

Note: This PIU layout is as it appears in an NCP buffer. The basic PIU begins with the transmission header.

Buffer Prefix

0(0)	U3BUFCHN Buffer prefix chain field. (Shifted address.)	2(2)	U3OFFSET Buffer prefix data offset field.	3(3)	U3DATSNT Buffer prefix data count field.
------	--	------	---	------	--

Event Control Block

4(4)	U3CSTAT Block status flags.	5(5)	U3ESTAT Event status flags.	6(6)	U3ECHN ECB chain pointer.
8(8)	U3TMINT Set time interval, as specified by SETIME macro. or U3TCNT PIU1 text count.		10(A) U3WQCB QCB for waiting task. or U3BLKNS Hold area for blocks N(s).		
12(C)	UIB3TYPE Equal to 1st byte of destination RVT.	13(D)	UIB3STAT* UIB status.		

14(E)	Eight bytes for FID3 TH alignment.
-------	------------------------------------

Transmission Header

22(16)	TH3B0* TH byte 0.	23(17)	TH3DAOFF* Local session ID.
--------	----------------------	--------	--------------------------------

Request/Response Header (RH)

24(18)	25(19)	26(1A)
RH3B0* RH Byte 0 (See Section 5)	RH3B1* RH Byte 1	RH3B2* RH Byte 2

*Indicates a byte expansion follows.

Request/Response Unit (RU)

			27(1B) RU3BT0 1st byte of prefix for SSCP-FM requests. (Refer to Section 5) or RU1RC0 Request code for non SCP-FM requests. (Refer to Section 5)
28(1C) RU3BT1 2nd byte of prefix for SSCP-FM requests. (Refer to Section 5)	29(1D) RU3RC2 Request code for SSCP-FM requests. (Refer to Section 5)	30(1E) RU3NA Network address for SSCP-FM requests.	
32(20) RU3WT Trace type indicator.	33(21) RU3TM Time field for active trace and record trace data.	34(22) RU3SCA Subchannel address for EP line.	35(23) RU3RTT Type of record trace data request.

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
13(D) UIB3STAT	X'80' X'01' X'02' X'03' X'04' X'05' X'06' X'07'	UIB status. Recurrent PIU. Invalid DAF. Unrecoverable path error. Unrecoverable station error. Invalid DCF. Incomplete header. Format error. Auto network shutdown in progress.
22(16) TH3B0	..11 01 10 11 00x	Transmission header byte 0 FID3 terminal node. Last segment. First segment. Only segment. Middle segment. 1=Expedited flow. 0=Normal flow.
23(17) TH3DAO	xxxx xxxx	Local session ID. 1=to/from LU. 0=to/from SSCP. 1=to/from logical unit. 0=to/from physical unit. Local address of station.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
24(18) RH3B0	xxx xx11100100	Request/response byte 0. 1=Response. 0=Request. 00=Function management data 01=Network control. 10=Data flow control. 11=Session control. 1=Formatted. 0=Unformatted. 1=Sense data included.* 0=No sense data. Only element. First element. Last element. Middle element. (See Section 5)
25(19) RH3B1	11111	Request/response byte 1. FME/DR1 requested/sent. RRN/DR2 requested/sent. Exception response requested/sent. Reserved. Pace.
26(1A) RH3B2	111 x	Request/response byte 2. Begin bracket (BB) End bracket (EB) Change direction (HDX only). Code selection indicator. 0=EBCDIC 1=ASCII

*See Section 9.

EP POINTER TABLE

**POINTER TABLE
(EP, PEP)**

Program: EP, PEP

Size in bytes: 28(1C)

Created by: EP generation.

Located at: CYELOCEP in EP

Function: Provides pointers to the EP modules to enable the NCP to determine whether a level 1 interrupt occurred during execution of the EP.

0(0)	Number of fullwords in the table (6).
4(4)	Low address of EP modules located below 64K.
8(8)	High address of EP modules located below 64K.
12(C) (Note)	Low address of EP module CYEDSS or CYQTRC located above 64K.
16(10) (Note)	High address of EP module CYEDSS or CYQTRC located above 64K.
20(14) (Note)	Low address of EP module CYQTRC or CYEDSS located above 64K.
24(18) (Note)	High address of EP module CYQTRC or CYEDSS located above 64K.

Note: Modules CYEDSS and CYQTRC may be in any order within the table but their addresses must be in a high-low fullword pair.

Program: NCP#

Size in bytes: 52(34)

Created by: NCP generation. One for each NCP.

Pointer to PSB: RVT and HWE + 68(44).

Function: Contains parameters necessary to the control of the dialog between the System Services Control Point and the NCP Physical Services.

Physical Services Process Queue Control Block (Outbound)
(See QCB for Input Queues for all bit definitions.)

0(0) PSB1ECB Pointer to first element queued (Shifted address).		2(2) PSBLECB Pointer to last element queued (Shifted address).	
4(4) PSBSTAT Task and queue status.	5(5) PSBPRKEY QCB ID flag and task protect key.	6(6) PSBLINK Pointer to next QCB on the queue (Shifted address).	
8(8) PSBTSKEP Task entry point (last 18 bits).			
PSBMCBD Major control block displacement.		PSBSCHED Task dispatching priority.	
12(C) PSBSAVE Address of save area pushdown list (Shifted address).		14(E) PSBLUNK Pointer to previous QCB on queue (Shifted address).	

Intermediate Network Node (INN) Error Handler Queue Control Block (Inbound)
(See QCB for Input Queues for all bit definitions.)

16(10) IEH1ECB Pointer to first element queued (Shifted address).		18(12) IEHLECB Pointer to last element queued (Shifted address).	
20(14) IEHSTAT Task and queue status.	21(15) IEHPRKEY QCB ID flag and task protect key.	22(16) IEHLINK Pointer to next QCB on the queue (Shifted address).	
24(18) IEHTSKEP Task entry point (last 18 bits).			
IEHMCBD Major control block displacement.		IEHSCHED Task dispatching priority.	
28(1C) IEHSAVE Address of save area pushdown list (Shifted address).		30(1E) IEHLUNK Pointer to previous QCB on queue (Shifted address).	
32(20) PSBSEQI Inbound sequence number..		34(22) PSBSEQO Outbound sequence number.	

36(24) PSBDRPS Network address of NCP physical services.		38(26) PSBDRPC Network address of physical service control point.	
40(28) PSBLACNT Active link count.		42(2A) PSBPSTAT* Physical services primary status.	43(2B) PSBSSTAT* Physical services secondary status.
44(2C) PSBLDID Load ID characters.			
52(34) PSBTCHN Used by the remote NCP only. Initially, this field points to the first LKB in a chain of LKBs that can be used as the link to the local controller. After IPL, this field points to the LKB for the link that the remote NCP is currently using as the operational link to the local NCP. In a local NCP, this field is all zeros.			
56(38) PSBSITO SVT index for the channel entry. (For a remote NCP, this field is set to zero at NCP generation. After the remote NCP is initialized, this field continues the SVT index for the current path to the host.)	57(39) PBCSTAT* Configuration re- start status.	58(3A) Reserved	

Auto Network Shutdown Extension

		60(3C) PSBCANST* Auto network shut- down status.	61(3D) PABANSC* Condition causing auto network shutdown.
62(3E) PSBPLNOC BSC/SS lines not quiesced count.	64(40) PSSSLNOC SDLC links not quiesced count.		

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
42(2A) PSBPSTAT	1... .. .1...1... ..	Physical services primary status. Session established. Data flow enabled. Data flow active.
43(2B) PSBSSTAT	1... .. .1... ..	Physical services secondary status. Processing Clear command. Recovery mode.
57(39) PSBCSTAT	1... .. .1...1...1... ..	Configuration restart status. Path to host down state. Auto network shutdown state. Activate Physical required state. NCP is cold.
60(3C) PSBCANST	1... .. .1...1... ..	Auto network shutdown status. SNA network quiesce complete. BSC/SS network quiesce complete. BSC/SS RVT scan complete.
61(3D) PSBANSC	X'01' X'02' X'03' X'04' X'05' X'06'	Condition causing auto network shutdown. Auto network shutdown invoked from panel. Attention or activity timeout. Unexpected Activate Physical. DISC received from local NCP. (Remote NCP only) SNRM received from local NCP. (Remote NCP only) Unrecoverable SDLC error on link to local. (Remote NCP only)

QUEUE CONTROL BLOCK

**QCB
(EP)**

Program: EP (old base)

Size in bytes: 50(32)

Located: Starts at storage location X' 700'.

Created by: EP generation.

Updated by: LCP, ICP.

Referenced by: LCP, ICP.

Function: Provides a pointer to the first and last CCBs on all queues.

0(0)	TMRF Pointer to next CCB checked for time-out.	2(2)	IPL save registers.
4(4)			
16(10)	QCBF* QCB flags and active command.	18(12)	QCBT (QCBTIO) Save area for TIO CCB.
20(14)	PDSOF Address pointer to the first CCB in the priority data service out queue.	22(16)	PDSOL Address pointer to the last CCB in the priority data service out queue.
24(18)	DSOF Address pointer to the first CCB in the data service out queue.	26(1A)	DSOL Address pointer to the last CCB on the data service out queue.
28(1C)	DSIF Address pointer to the first CCB in the data service in queue.	30(1E)	DSIL Address pointer to the last CCB in the data service in queue.
32(20)	SOF Address pointer to the first CCB in the status out queue.	34(22)	SOL Address pointer to the last CCB in the status out queue.
36(24)	SNOF Address pointer to the first CCB in the sense out queue.	38(26)	SNOL Address pointer to the last CCB in the sense out queue.
40(28)	SSF Address pointer to the first CCB in the stacked status queue.	42(2A)	SSL Address pointer to the last CCB in the stacked status queue.
44(2C)	CSPQ1 Address pointer to the first character serviced (type 1 scanner).	46(2E)	CSPQ2 Address pointer to the last character serviced (type 1 scanner).
48(30)	SVC0	50(32)	Test I/O clock.

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
16(10) QCBF	.111 1	QCB flags. Set stacked status service. Set sense service. Set TIO sequence. Do not dequeue from stacked status queue.

QUEUE CONTROL BLOCK FOR INPUT QUEUES

**QCB
(Input)**

Program: NCP

Size in bytes: 16(10) when no BHRs are defined; 20(14) when BHRs are defined.

Created by: NCP generation.

Pointer to QCB: Variable.

Function: Controls input queues.

Note: This is the general format for all input queues. The XYZ identifier at the beginning of each label is replaced with a different three letter identifier for each particular input queue.

0(0)		XYZ1ECB Pointer to first element queued. (Shifted address)		2(2)		XYZLECB Pointer to last element queued. (Shifted address)	
4(4)		XYZSTAT* Task and queue status.		5(5)		XYZPRKEY* QCB ID flag and task protect key.	
6(6)		XYZLINK Pointer to next QCB on the queue. (Shifted address)					
8(8)							
XYZTSKEP Task entry point (last 18 bits).							
XYZMCBD Major control block displacement.		9(9)		XYZSCHED* Task dispatching priority.			
12(C)				14(E)			
XYZSAVE Address of save area push-down list. (Shifted address)				XYZLUNK Pointer to previous QCB on the queue. (Shifted address)			
16(10)							
XYZBHSET BH set (or BHR) address (last 18 bits). This field included only when BHRs are defined.							
XYZBHRST* BHR status bit.		17(11)		XYZBHSC* BHR scheduling bits.			

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
4(4) XYZSTAT	111111	Task and queue status. Task in pending state (triggered). Task in wait state. Delayed task pending bit (task is triggered while active). Task is not in ready state. Task is reentrant. BHR extension definition: task can execute BHRs. Element has been dequeued (and not returned to the queue) during execution of active task.
5(5) XYZPRKEY	1010 1xxx	QCB ID flag and task protect key. Indicates that this is a pseudo-input or input QCB. Protection key.
9(9) XYZSCHED	100 010 001 000	Task dispatching priority. Task priority is productive. Task priority is immediate. Task priority is appendage. Task priority is nonproductive.
16(10) XYZBHRST	10 01 11111	BHR status bits. Point 2 execution. Point 1 execution. Point 3 execution. First time BHR controller called. BHR sequence aborted. BHR protect key.
17(11) XYZBHSCH	1111	BHR scheduling bits. BHR scheduled for Read command. BHR scheduled for Invite command. BHR scheduled for Write command. BHR scheduled after I/O.

QUEUE CONTROL BLOCK FOR WORK QUEUES

QCB
(Work)

Program: NCP

Size in bytes: 8(8)

Created by: NCP generation.

Pointer to QCB: Variable.

Function: Control work queues.

Note: This is the general format for all work queues. The SWQ identifier at the beginning of each label is replaced with a different three letter identifier for each particular work queue.

0(0)		2(2)	
SWQ1ECB Pointer to first element queued. (Shifted address)		SWQLECB Pointer to last element queued. (Shifted address)	
4(4)	5(5)	6(6)	
SWQSTAT* Task and queue status.	SWQPRKEY* QCB ID flag and task protect key.	SWQLINK Pointer to the next QCB on the queue. (Shifted address)	

*Indicates a byte expansion follows.

Byte Expansion

Offset/Field Name	Bit Pattern/ Hex Value	Contents
4(4) SWQSTAT	1 1 1 1 1 1	Task and queue status. Task in pending state (triggered). Delayed task pending bit (task is triggered while active.) Task is not in ready state. Task is reentrant. BHR extension definition: task can execute BHRs. Element has been dequeued (and not returned to the queue) during execution of active task.
5(5) SWQPRKEY	1010 0xxx	QCB ID flag and task protect key. Indicates that this is a work QCB. Protect Key.

Program: NCP1, NCP2

Size in bytes: Variable depending upon numbers of entries.

Created by: NCP generation.

Pointer to RVT: SYSRV TAD field in word direct addressable storage (XDA), location X'07E8'. (Points to the two-byte count field preceding the first RVT entry.)

Function: Serves as the master directory to level 5 resource control blocks. Each entry contains a type field plus the address of the resource control block for that resource.

Immediately preceding the first entry is a halfword that contains the highest ID allowed. Entry 0 is reserved for this communications controller. Format of entries is as follows.

-2(-2)	Highest resource ID in table. (Number of entries -1.)
--------	---

0(0) RVTTYPER* Resource type.	1(1) RVTRP Pointer to resource control block. The resource control block can be a line control block, logical line group table, or device control block, depending upon the resource type.
-------------------------------------	--

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) RVTTYPER	0000 0000 100 010 001 1 110111	Resource type. The communications controller. Line. Device. Line group. Input. Output. Switched call-in. Switched call-out. Device-dependent.

RESOURCE VECTOR TABLE

**RVT
(NCP#)**

Program: NCP#

Size in bytes: Variable depending upon numbers of entries.

Created by: NCP generation.

Pointer to RVT: SYSRVAD field in word direct addressable storage (XDA), location X'07E8'. (Points to the two-byte field that contains the highest BSC/SS address in the table (first entry -2).)

The SVT entry representing the sub-area points to the two-byte field that contains the highest network address in the table (first entry -4).

Function: Serves as the master directory to level 5 resource control blocks. Each entry contains a type field plus the address of the resource control block for that resource.

Immediately preceding the first entry are two halfwords that contain the highest network address in the table and the highest BSC/SS ID (if any) in the table.

-4(-4) Highest element address in the table.	-2(-2) Highest BSC/SS element address (if any).
0(0) RVTTYPE	RVTRP
Address of Resource Control Block. The Resource Control Block can be a Line Control Block, Device Control Block, Link Control Block, Station Control Block, Common Physical Unit Block, Logical Unit Control Block, or Physical Services Control Block (always 1st entry in RVT).	
RVTTYPE1* Resource type.	RVTTYPE2* Resource type indicator.

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name and Bit Pattern		Contents/Description
0(0) RVTTYPE1	1(1) RVTTYPE2	
	1	SVT entry (see SVT Dsect)
	0	RVT entry
	00	Local resource
	01	Remote resource
	0.0	BSC/SS resource
1000 0	0.0	BSC/SS line
010	0.0	BSC/SS device
001	0.0	BSC/SS line group
.1	0.0	BSC/SS input
.1	0.0	BSC/SS output
.10	0.0	BSC/SS switched call-in
.11	0.0	BSC/SS switched call-out
.1	0.0	BSC/SS device dependent flag
0000 0000	0.1	SDLC resource
0000 0000	0.1	NCP physical services resource
1	0.1	SDLC link
0100	0.1	SDLC PU type 4
0110	0.1	SDLC terminal or SDLC cluster
001	0.1	SDLC logical unit
.1	0.1	SDLC switched
.	010	Invalid
1111 1111	0	End of RVT
.	0xxxx	High order bits of resource address

Program: NCP#

Size in bytes: 60(3C)

Created by: NCP generation PU macro.

Pointer to SCB: In SVT.

Function: Contains the QCB, status, and scheduling information for station control. If station is a cluster, SCB is incorporated into CUB (see CUB).

Link Inbound Queue (LIBQ) Control Block
(See QCB for Input Queues for all bit definitions).

0(0) SCB1ECB Pointer to first element queued (Shifted address).		2(2) SCBLECB Pointer to last element queued (Shifted address).	
4(4) SCBSTAT Task and queue status.	5(5) SCBPRKEY QCB ID flag and task protect key.	6(6) SCBLINK Pointer to next QCB on the queue (Shifted address).	
8(8) SCBTSKEP Task entry point (last 18 bits).			
SCBMCBD Major control block displacement.		SCBSCHED Task dispatching priority.	
12(C) SCBSAVE Address of save area pushdown list (Shifted address).		14(E) SCBLUNK Pointer to previous QCB on queue (Shifted address).	

Link Outbound Queue (LOBQ) Control Block

16(10) SCBLOBH Link outbound queue head pointer.	18(12) SCBLOBT Link outbound queue tail pointer.
---	---

Link Outstanding Queue (LOSQ) Control Block

20(14) SCBLOSH Link outstanding queue head pointer.	22(16) SCBLOST Link outstanding queue tail pointer.
--	--

24(18) SCBLKB Address of Link Control Block (18 bits).			
SCBADRC SDLC addressing character.			
28(1C) SCBRSE Network address of resource.		30(1E) SCBSSCF* Service seeking commands.	
		31(1F) SCBSSCP Contact Poll commands.	
32(20) SCBSTATS* Station status	33(21) SCBOCF* Service seeking output control flags.	34(22) SCBTCNT Transmission counter. (I-Format)	
36(24) SCBAPIU Address of Physical Service PIU (18 bits).			
SCBTYPE* Station type.			

*Indicates a byte expansion follows.

40(28) SCBNR Receive count.	41(29) SCBNS Send count.	42(2A) SCBERS (Note 1) First error encountered.	
44(2C) SCBEERS Extended retry status. (Note 2)	45(2D) SCBTRTCT Total retry count.	46(2E) SCBOCL	
		Outstanding count limit.	SCBCOC Current outstanding count.
48(30) SCBPNS NS at time of poll.	49(31) SCBPCNT Pass limit.	50(32) SCBRTCNT	
		First level ERP retry count.	SCBSLC Second level ERP retry count.
52(34) SCBSRTL ^{**} Second level retry limit.	53(35) SCBRCMD [*] Run command modifiers.		

^{*}Indicates a byte expansion follows.
^{**}Set by RETRIES=N.

Note 1: Refer to the LXBSTAT and LXBSTATC fields of the Link XIO Control Block for a definition of the status bits.
 Note 2: Refer to the LXBEXTST field of the Link XIO Control Block for a definition of the status bits.

SDLC Secondary Command Pseudo Buffer

		54(36) SCBCMDRO CMDR pseudo buffer link field.
56(38) SCBCMDRC CMDR invalid CMD, N(s), N(r).	58(3A) SCBCMDRX [*] CMDRZYXW diagnostic flags.	

^{*}Indicates a byte expansion follows.

or

SDLC Primary Second Level ERP Fields

		54(36) SCB2ERPT Hardware second level ERP time-out value.	
56(38) SCBTERR Monitor station errors count. (Limit 64) Note	57(39) SCBERPT Second level ERP pause	58(3A) SCBERPCS ERP control flags send.	59(3B) SCBOCLS Outstanding count limit save area.

Note: I-Format (receive FCS error, format check, and/or abort.)

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
30(1E) SCBSSCF	Byte 0 1111 Byte 1 1111x	Service seeking command flags. Poll skip flag. Halt service seeking. Not operational. Contact poll command active. Contact poll commands. Disconnect (DISC). Set Normal Response mode. (SNRM) Set Initialization Mode (SIM) Exchange Identification (XID) Contact poll command field.
32(20) SCBSTATS	...1	Station status. Remote power-off in progress.
33(21) SCBOCF	111111	Service seeking output control flags. Output skip bit. Run terminator interlock. RNR received. Second level ERP pause in progress. Duplex data. Half-duplex poll command. Half-duplex poll in progress.
36(24) SCBTYPE	x111x	Station type. 1=Duplex station. 0=Half-duplex station. Switched SDLC station. Terminal node (type 1 PU). Cluster controller (type 2 PU). 1=Intermediate node (INN). 0=Boundary node (BNN).
53(35) SCBRCMD	.11	Run command modifiers. Override 1st and 2nd level retries. Immediate retry.
58(3A) SCBMDRX ZYXW	Z=Invalid N(R) in received C field. Y=Ran out of buffers while trying to receive. X=Data received when not allowed. W must be on with X. W=Invalid C field or non-implemented com- mand. W may be on alone.
77(4D) CUBSSTAT	1	Physical unit secondary status. 3270 station.

Program: NCP

Size in bytes: 4(4) or 8(8)

Located in: Switched line group table (SGT), one SGE for each line in the group.


Created by: NCP generation.

Pointer to SGE: None. (See SGT.)


Function: Points to a line control block (LCB) or another SGT for chaining.

The following format is for:

- First entry if there is no secondary request group. (See SGT for secondary request group.)
- Each entry after first.
- Last entry if there is no secondary service group.



The following format is for last entry if there is a secondary service group.

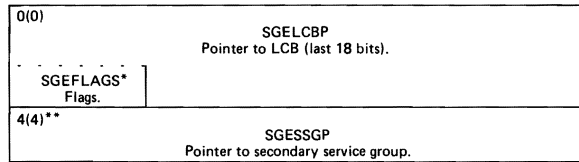

*Indicates a byte expansion follows.

**Actual position depends upon number of entries in table.

Byte Expansions

Offset/Field Name	Bit Pattern	Contents
0(0)		Flags
SGEFLAGS	1	Queue is present (always 1).
	. . 1	Not line entry.
	. . . 1	Secondary request entry.
 1	Last line entry.
 1	Secondary service group entry is next.

Program: NCP

Size: QCB, counter, and first entry for secondary request group = 20(14) bytes.

Created by: NCP generation.

Pointer to SGT: COESGTP field in COE; LCBESGTP field in LCB.

Function: The SGT is a group of similar type switched lines that can be used to call a terminal that uses that group.

Switched Group QCB (SGTORQ)
(See QCB for Work Queues for all bit definitions.)

0(0) SGT1ECB Pointer to first element queued. (Shifted address)		2(2) SGTLECB Pointer to last element queued. (Shifted address)	
4(4) SGTSTAT Task and queue status.	5(5) SGTPRKEY Protection key.	6(6) SGTLINK Pointer to next QCB in queue. (Shifted address)	
8(8) SGTWLL Work load limit.	9(9) SGTWLC Work load current size.	10(A) SGTOL Queue limit.	11(B) SGTCIL Call in limit.
12(C) SGTCIC Call in counter.	13(D) Pad		
16(10) SGT1E Address of secondary request group SGT (last 18 bits).			
SGTFLAG* Flags.			

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern	Contents
16(10) SGTFLAG	1	Flags.
	. . 1	Queue is present (always 1).
	. . . 1	Not line entry.
 1 . . .	Secondary request group.
 1 . . .	Last line entry.
 1 . .	Secondary service group entry is next.

SEND ID

SID

Program: NCP

Size in bytes: 4(4)

Located in: DVB.

Created by: NCP generation.

Pointer to SID: None; SID follows COE if send ID is required.

Function: Contains information required for sending hardware identification. Extension is included only for BSC switched terminals that require the 3705 to send its ID.

0(0)*	SIDIDPTR Pointer to the ID to be sent for this device (last 18 bits).
SIDIDCT Send ID count.	
4(4)*	SIDCOEID Pointer to call out ID list.
SIDFLGS (Reserved)	

*Note: Actual position depends on other extensions present. This extension is present only if the call-out extension (COE) is present, and always follows that extension.

Program: NCP#

Size in bytes: Dependent upon maximum sub-area in the network

Created by: NCP generation

Pointed to by: CXTSIT in the link edit map or HWE + 72(48).

Function: Contains indices into the Sub-area Vector Table (SVT). The desired SIT displacement is found by adding the sub-area address (in the DAF) to the location of the SIT (CXTSIT). The index in the SIT entry multiplied by 4 yields the actual displacement into the SVT for the associated resource.

0(0) Invalid (X'00')	1(1) Index	2(2) Index	(n)* Index
----------------------------	---------------	---------------	---------------

*n = maximum sub-area in the network.

SERVICE ORDER TABLE FOR BSC/SS LINES

SOT
(BSC/SS)

Program: NCP

Size in bytes: 4 bytes in header; 4 bytes in each entry; 4 bytes in trailer.

Created by: NCP generation.

Pointer to SOT: LCBESOTP field in LCB.

Function: Defines the order in which devices on a BSC/SS line are interrogated to see if that device requires service. Generated for multipoint lines.

Header

0(0) SOTEMAX Maximum number of entries.	1(1) SOTUSE Number of entries in use.	2(2) (Reserved).
--	--	-------------------------

Entry Format

4(4) SOTRESP Pointer to the DVBSTAT field in the device control block (DVB) for this device. More than one entry can point to the same DVB.
--

Trailer

* Negative offset to first entry in SOT.	* Set to zero.
---	-------------------

*Offset depends on the number of entries in the SOT.

SERVICE ORDER TABLE FOR SDLC

SOT
(SDLC)

Program: NCP#

Size in bytes: 4 bytes in header, 4 bytes in each entry, 4 bytes in trailer.

Created by: NCP generation.

Pointer to SOT: LXB POLL field in ACB.

Function: Defines the order in which stations on an SDLC link are interrogated to see if that station requires service.

Header

0(0) Zero.	2(2) Maximum number of entries.	3(3) Number of entries in use.
---------------	------------------------------------	-----------------------------------

Entry Format

4(4) Negative offset to 1st entry in SOT.	Pointer to SCB (CUB) (representative entry).
--	--

14 bits

Trailer

Negative offset to first entry in SOT.	Zero (end of table).
--	----------------------

Program: NCP#

Size in bytes: 16(10)

Created by: NCP generation.

Pointer: Fullword at LUB-4.

Function: Contains control parameters and work areas that supplement the LUB for the SDLC/BSC path function. An SPB is created for each LUB that is associated with an SDLC/BSC path.

0(0)	SPBDNA Network address of the BSC device.	2(2)	SPBANSIN Last sequence number in (APPL-NCP).
4(4)	SPBDVB Pointer to DVB for BSC device (during initialization only).		
	SPBANSOT Last sequence number out (APPL-NCP).	6(6)	SPBNSSIN Last sequence number in (NCP-LU).
8(8)	SPBNSSOT Last sequence number out (NCP-LU).	10(A)	SPBSVPSN New sequence number in.
12(C)	SPBSVSPN New sequence number out.	14(E) SPBQSPS*	15(F) SPBSTAT*

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
14(E) SPBQSPS	111 111	State indicators. Quiesce state (primary to secondary). Shutdown state (primary to secondary). Sequence number to be set (primary to secondary). Quiesce state (secondary to primary). Shutdown state (secondary to primary). Sequence number to be set (secondary to primary).
15(F) SPBSTAT	11xx11100100 x	Common status. Valid device or session. Some sequence number is active. (Clean bit.) Data flow reset indicator. Data flow error indicator. An error has occurred; only session control requests can flow. An error has occurred; the secondary to primary path is quiesced or shutdown. Data flow reset state. Data cannot flow until a SDT request is received. Normal data flow state. Data flow control path indicator. 1=BSC-LU. 0=APPL-LU.

Program: NCP#

Size in bytes: 4(4) for each sub-area.

Created by: NCP generation.

Pointed to: By entry in sub-area index table or HWE + 76(4C). The SVT is located between the SIT and RVT. The last entries in the SVT have an 'FF' delimiter.

Function: Contains address of RVT if sub-area is local, address of SCB if sub-area is remote, or address of CHB (type 2/3 CA) or COB (type 1/4 CA) if sub-area is host. The first entry in the table is an invalid entry.

0(0)	SVTENT
Address of RVT, SCB or CHB/COB (last 18 bits)	
SVTTYPE1*	SVTTYPE2*

*Indicates a byte expansion follows.

Byte Expansions

Offset/Field Names and Bit Patterns		Contents/Description
0(0)	1(1)	
SVTTYPE1	SVTTYPE2	
.....	0... ..	RVT entry (see RVT Dsect)
.....	1... ..	SVT entry
.....	10... ..	BNN sub-area type entry
.....	100... ..	RVT does not contain BSC/SS resources
.....	101... ..	RVT contains BSC/SS resources
0... ..	10... ..	RVT does not contain SDLC resources
0... ..	11... ..	RVT contains SDLC resources
1... ..	11... ..	Invalid
.....	110... ..	Invalid
0... ..	111... ..	SDLC sub-area entry
00... ..	111... ..	Adjacent sub-area entry
01...	Tandem sub-area entry
0... 0... ..	111... ..	Path to sub-area is link
0... 1... ..	111... ..	Path to sub-area is channel
0... ..0	111... ..	Sub-area does not contain SSCP
0... ..1	111... ..	Sub-area contains SSCP
.....	1... xxxx	High order bits of SCB or RVT address
1111 1111	1... ..	End of SVT

TIME AND DATE CONTROL BLOCK

TND


Program: NCP

Size in bytes: 21(15)

Created by: NCP generation.

Pointer to TND: SYSEBCP field in HWE.

Function: Keeps track of current time and date.

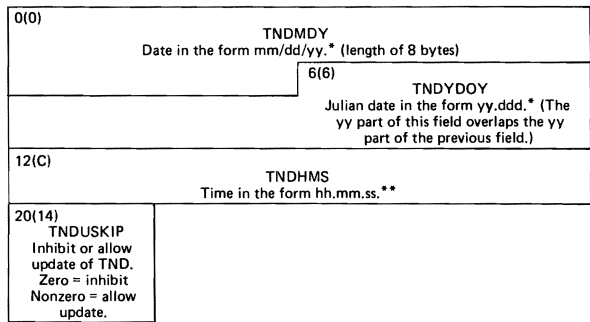

- * m = month
d = day
y = year
- ** h = hour
m = minute
s = second

Program: NCP#

Size in bytes: 24 plus 32 bytes per trace entry (number of entries is user specified).

Location: After CXCAIOS3 for type 1/4 channel adapter or after CXCAIOS4 for type 2/3 channel adapters.

Created by: SYSCG006 assembly.

Function: Traces NCP channel adapter interrupts.

Type 1/4 Channel Adapter Trace Table

0(0) CXCAIOS3 Contains the dump identifier characters "CXCAIOS3".	
8(8) Address of the beginning of the trace table. (4 bytes)	12(C) Current address of the trace table. (4 bytes)
16(10) Address of the end of the trace table. (4 bytes)	20(14) CTCR Contains the identifier characters "CTCR". (4 bytes)
24(18) Variable length table extended by 32 bytes per trace entry. See Trace Entry: Type 1/4 Channel Adapter, for format.	

Type 2/3 Channel Adapter Trace Table

0(0) CXCAIOS4 Contains the dump identifier characters "CXCAIOS4".	
8(8) Address of the beginning of the trace table. (4 bytes)	12(C) Current address of the trace table. (4 bytes)
16(10) Address of the end of the trace table. (4 bytes)	20(14) CTCR Contains the identifier characters "CTCR". (4 bytes)
24(18) Variable length table extended by 32 bytes per trace entry. See Trace Entry: Type 2/3 Channel Adapter, for format.	

Trace Entry: Type 1/4 Channel Adapter

0(0) COBICND Flags entry conditions.	2(2) COBCND Flags exit conditions.
4(4) COBXR77 Contents of input external register X'77'.	6(6) COBXR60 Contents of input external register X'60'.
8(8) COBXR61 Contents of input external register X'61'.	10(A) COBXR62I Contents of input external register X'62'.
12(C) COBXR62O Contents of output external register X'62'.	14(E) COBXR64 Contents of input/output external register X'64'.
16(10) COBXR65 Contents of input/output external register X'65'.	18(12) COBXR66 Contents of output external register X'66'.

20(14)	COBXR671 Contents of input external register X'67'.	22(16)	COBXR670 Contents of output external register X'67'.
24(18)	COBCCMD Current channel command.	26(1A)	COBSTAT Current channel status.
28(1C)	Address of caller.		

Trace Entry: Type 2/3 Channel Adapter.

0(0)	CHBICND Flags entry conditions.	2(2)	CHBCND Flags exit conditions.
4(4)	CHBXR50 Contents of input/output external register X'50'.	6(6)	CHBXR51 Contents of input/output external register X'51'.
8(8)	CHBXR52 Contents of input external register X'52'.	10(A)	CHBXR53 Contents of output external register X'53'.
12(C)	CHBXR54 Contents of output external register X'54'.	14(E)	CHBXR551 Contents of input external register X'55'.
16(10)	CHBXR550 Contents of output external register X'55'.	18(12)	CHBXR56 Contents of input/output external register X'56'.
20(14)	CHBXR57 Contents of output external register X'57'.	22(16)	CHBXR5A Contents of input external register X'5A'.
24(18)	CHBXR5C Contents of input external register X'5C'.	26(1A)	Halfword of zeros.
28(1C)	Address of caller.		

TRACE TABLE (LINE)

TRACE
TABLE
(LINE)

Program: NCP

Size in bytes: 4(4) (type 2 scanner); 8(8) (type 3 scanner)

Created by: NCP line trace routine.

Pointer: LTCB fields.

Function: The NCP line trace stores four bytes (type 1/2 scanner) or eight bytes (type 3 scanner) of diagnostic information into a trace entry whenever a level 2 interrupt occurs. Either three or five bytes of the information are obtained from the ICW (type 2 or type 3 scanner respectively) or three bytes from the BCB (type 1 scanner). The NCP stores the trace entries in dynamically allocated buffers, then transfers them to the host with a Record Trace Data PIU. Refer to "NCP Line Trace Control Block Relationships" in Section 1.

Trace Entry
(Type 1/2 scanner)

0(0) LCD/PCF*** Type 2 CSA- ICW bits 16-23. Type 1 CSA- BCBLPCPF (BCB+9)*	1(1) Timer Field**	2(2) SCF*** Type 2 CSA- ICW bits 0-7. Type 1 CSA- BCBSCF (BCB+6)	3(3) PDF*** Type 2 CSA- ICW bits 8-15. Type 1 CSA- BCBPDF (BCB+7)
---	-----------------------	---	--

Trace Entry
(Type 3 scanner)

0(0) SCF*** ICW byte 0	1(1) LCD/PCF*** ICW byte 2	2(2) EPCF*** ICW byte 16 bits 4-7	3(3) Status 1*** ICW byte 14
4(4) Status 2*** ICW byte 15	5(5) Timer Field**	6(6) SDLC address character (BSC/SS=0)	7(7) SDLC control character (BSC/SS=0)

*Indicates a byte expansion follows.

**Contains a hex value indicating, in tenths of a second, the time that elapsed between the activation of the trace and the level 2 interrupt represented by this entry. The field is reset to zero when the trace starts and wraps around to zero after 25.5 seconds.

***Section 13 describes the ICW fields.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
0(0) LCD/PCF (type 1 scanner)	xxxx xxxx	LCP/PCF for type 1 CSA. LCD bits: 0011=SDLC 0100=Start-stop 0101=BSC. 0110=Dial. 0111=Feedback. PCF bits.
2(2) EPCF (type 3 scanner)	0000 xxxx	Extended PCF (type 3 scanner) Bits 4-7 of ICW byte 16 are put into bits 0-3 of this byte.

Program: PEP, EP

Size in bytes: 8 for each entry

Created by: Trace routine (CYATRC/CYETRC) for NCP generation.

Referenced by: CYATRC and CYADSS/CYETRC and CYEDSS

Function: Provides line and channel trace for selected subchannel addresses. One single entry is made for each level 3 channel interrupt. Multiple entries are made for level 2 interrupts on the type 1/2 scanner (2) and the type 3 scanner (3 + data).

Level 1 Error Log Entry

0(0) ENTRYID X'00'	1(1) X'00'	2(2) LOGENTRY Error log entry.
4(4) EXTENTRY Error log extended entry. (Contents of the LAR for program check and channel adapter check.)	6(6) X'0000' or LAR	

Level 2 Trace Entry (Part 1)
Type 1/2 scanner

0(0) ENTRYID old base = X'10' new base = X'1x'*	1(1) Subchannel Address	2(2) CCB address of the routine entered for this level 2 interrupt (CCBL2)	
4(4) SCF of the line being traced IN44HI	5(5) PDF of the line being traced IN44LO	6(6) LCD and PCF of line being traced IN45HI	7(7) SDF of the line being traced IN45LO

*X = Channel Adapter ID

Level 2 Trace Entry (Part 2)
Type 1/2 scanner

0(0) ENTRYID old base = X'20' new base = X'2x'*	1(1) CCB current sense or'ed with final sense	2(2) Command byte for this CCB (CCBCMD)	3(3) Line request information (CCBLR1)
4(4) CCB character address counter (CCBCAC)	5(5) CCB service/ status flag (CCBSVSTC)	6(6) IN46** Contents of type 2 scanner display register. (Input X'46') Data set leads.	

**Valid only for the last subchannel that had its data interface displayed (Function 6)
(X'FFFF' if display request is off.)

Level 2 Trace Entry (Part 1)
(Type 3 scanner)

0(0) ENTRYID X'3x'*	1(1) Subchannel Address	2(2) CCB address of the routine entered for this level 2 interrupt (CCBL2)	
4(4) SCF of the line being traced	5(5) LCD and PCF of the line being traced	6(6) Scanner Status IN4F	

*x = Channel Adapter ID

Level 2 Trace Entry (Part 2)
(Type 3 scanner)

0(0) ENTRYID X'4x'*	1(1) Channel Adapter 4 Control Flags	2(2) Cycle Steal Control IN48HI	3(3) Byte Count
4(4) Cycle Steal Address IN49		6(6) CCBSVLNK Service Link Field	

*X = Channel Adapter ID

Level 2 Trace Entry (Part 3)
(Type 3 scanner)

0(0) ENTRYID X'5x'*	1(1) IN46 Data Set Interface (Input X'46' X'FF' if display request is off.	2(2) Bottom Buffer Pointer (CCBBBUF)	
4(4) Top Buffer Pointer (CCBTBUF)		6(6) Bottom Buffer Count (CCBBCNT)	7(7) Top Buffer Count (CCBTCNT)

*x = Channel Adapter ID

Level 2 Trace Entry (Part 4)
(Type 3 scanner)

0(0) ENTRYID X'Fx'*	1(1) Seven bytes of data from the data buffer.
---------------------------	---

*x = Channel Adapter ID

Level 3 Initial Select Trace Entry

0(0) ENTRYID old base = X'80' new base = X'6x'*	1(1) IN61HI Subchannel Address (Input X'61')	2(2) Command byte for this CCB (CCBCMD)	3(3) IN61LO Channel I/O command byte
4(4) IN60HI Initial Selection Control	5(5) Current Status (CCBCSTAT)	CCBADDR Address of the CCB	

*x = Channel adapter ID.

Level 3 Timer Interval Expiration

0(0) ENTRYID old base = X'70' new base = X'7x'*	1(1) Subchannel Address	2(2) SCF of the Line being traced	3(3) Timer Displacement
4(4) CCBCMD Translated EP Command Code	5(5) IN46 Data Set Interface (X'FF' if display request is off)	6(6) Line Control Definer/Parallel Data Field IN45 Hi	7(7) Serial Data Field IN45 Lo

*x=Channel adapter ID.

Level 3 Status Service Trace Entry

0(0) ENTRYID old base = X'80' new base = X'8x'*	1(1) IN63HI Subchannel Address	2(2) IN62 Contents of Type 1/4 CA data/status control register	
4(4) Command bytes for this CCB (CCBCMD)	5(5) IN63LO ESC status	6(6) If Unit Check Status: Current and final sense are are OR'ed If not Unit Check Status: QCB flags	7(7) Active command count

*x = Channel adapter ID

Level 3 Data Service Trace Entry (Part 1)

0(0) ENTRYID old base = X'90' new base = X'9x'*	1(1) IN63HI Subchannel Address	2(2) IN62 Contents of Type 1/4 CA data/status control register	
4(4) First and second data bytes (Inputs X'64' or X'6D')		6(6) CA4 Extended Buffer Mode IN6C - Extended buffer control or IN65 - Third and fourth data bytes	

*x=Channel adapter ID.

Level 3 Data Service Trace Entry (Part 2--ALC only)

0(0) ENTRYID X'Ax'*	1(1) Subchannel address	2(2) Next six bytes of data (Input X'6D')
---------------------------	-------------------------------	---

*x=Channel adapter ID.

TRACE CONTROL TABLE

Program: EP, PEP

Size in bytes: 16(10)

Created by: NCP generation

Referenced by: CYATRC and CYADDS/CYETRC and CYEDSS

Function: Provides control of the trace table.

0(0) CURRENT Address of the current trace entry			
4(4) FIRST Address of the first entry in the Trace Table			
8(8) LAST Address of the last entry in the Trace Table			
12(C) SIZE Size of each trace table entry	13(D) FLAGS* Flag byte	14(E) COUNTER Counter for Trace Table wrap.	15(F) Spare X'00'

*Indicates a byte expansion follows.

Offset/ Field Name	Bit pattern/ Hex Value	Description
13(D) FLAGS	11 111	Dump is waiting for entry. Dump is active now. Trace is active now. Level 2 trace flag. Level 3 trace flag.

Program: NCP

Size in bytes: 64(40)

Created by: NCP generation.

Pointer to TVS: SYSTVSP field in HWE.

Function: Contains fixed and optional time-out values. This table must be at a 256-byte boundary.

0(0)	TVSH10 Fixed (Idle/RAS).	2(2)	TVSH11 Fixed (0 seconds).
4(4)	TVSH12 Fixed (1 second).	6(6)	TVSH13 Fixed (2.2 seconds).
8(8)	TVSH14 Fixed (3 seconds).	10(A)	TVSH15 Fixed (23.5 seconds).
12(C)	TVSH16 Fixed (60 seconds).	14(E)	TVSH17 Variable.*
16(10)	TVSH18 Variable.*	18(12)	TVSH19 Variable.*
20(14)	TVSH1A Variable.*	22(16)	TVSH1B Variable.*
24(18)	TVSH1C Variable.*	26(1A)	TVSH1D Variable.*
28(1C)	TVSH1E Variable.*	30(1E)	TVSH1F Variable.*
32(20)	TVSLO0 Fixed (Idle/RAS).	34(22)	TVSLO1 Fixed (0 seconds).
36(24)	TVSLO2 Fixed (1 second).	38(26)	TVSLO3 Fixed (2.0 seconds).
40(28)	TVSLO4 Fixed (3 seconds).	42(2A)	TVSLO5 Fixed (23.5 seconds).
44(2C)	TVSLO6 Fixed (60 seconds)	46(2E)	TVSLO7 Variable.*
48(30)	TVSLO8 Variable.*	50(32)	TVSLO9 Variable.*
52(34)	TVSLOA Variable.*	54(36)	TVSLOB Variable.*
56(38)	TVSLOC Variable.*	58(3A)	TVSLOD Variable.*
60(3C)	TVSLOE Variable.*	62(3E)	TVSLOF Variable.*

*Values determined at NCP generation.

Program: PEP, EP

Size in bytes: 32(20)

| Located in: Module CYABL and CYATST/CYEBL and CYETST

Created by: NCP and EP generation.

| Referenced by: CYATAPH5, CYARAPH5.

Function: Provides offset in branch table for proper control character processing.

0-31(0-1F)	ASCRCVBT Displacement data.
------------	--------------------------------

Program: EP (New base)/PEP

Size in bytes: 12(C)

Created by: EP/NCP generation

Pointer to: CHVT entry if low order bit is on.

Function: Used to handle sense, TIO and IO No-op to subchannels within the Hi/Lo range that have no lines. Also used for subchannels defined in a multi-subchannel line access (MSLA) association that are not currently using the line.

8(B) CCBSVLNK Data service queue chain pointer		10(A) CCBSOLNK Status out queue chain pointer	
12(C) CCBSUBCH Subchannel Address	13(D) CCBCFLG* Configuration flags	14(E) CCBSTAT* Final line status	15(F) CCBSENSE* Final line sense
16(10) CCBCMD Current Command	17(11) CCBLRI Line request information	18(12) Note 1 CCBRADR Multi-subchannel line address CCB address	

*Reference CCB for byte expansion.

Note 1: CCBRADR is included for MSLA subchannels only.

WU TRANSLATE TABLE

WU
XLATE
TABLE
(EP, PEP)

I Program: EP, PEP

Size in bytes: 64(40)

I Located in: Module CYASL, CYATST/CYESL, CYETST

I Created by: NCP and EP generation.

Referenced by: Data service routines (for start-stop terminals only).

Function: Assists in translating WU code.

I 0-63(0-3F)

CYAXTABL
Translation data.

Program: NCP

Size in bytes: 128(80)

Located in: Controller storage beginning at location X'0780'.

Created by: NCP generation.

Pointer to XDA: None. Fixed location.

Function: Contains frequently accessed system control fields.

ROS Contained Code Save Area Sub-Block (XDAROS)

'0780'*	ROSW1 (ROSSVIAR) Save area for program levels 1/2 IAR.
'0784'*	ROSW2 (ROSSVR1) Save area for program levels 1/2 register 1.
'0788'*	ROSW3 (ROSSVR2) Save area for program levels 1/2 register 2.
'078C'*	ROSW4 (ROSSVR3) Save area for program levels 1/2 register 3.
'0790'*	ROSW5 (ROSSVR4) Save area for program levels 1/2 register 4.
'0794'*	ROSW6 (ROSSVR5) Save area for program levels 1/2 register 5.
'0798'*	ROSW7 (ROSSVR6) Save area for program levels 1/2 register 6.
'079C'*	ROSW8 (ROSSVR7) Save area for program levels 1/2 register 7.

*Absolute storage location in hex.

Router Sub-Control Block (XDARTR)

'07A0'	RTRW1 (RTRSVR1) Save area for program level 2 register 1.
'07A4'	RTRW2 (RTRSVR2) Save area for program level 2 register 2.
'07A8'	RTRW3 (RTRSVR3) Save area for program level 2 register 3.
'07AC'	RTRW4 (RTRSVR4) Save area for program level 2 register 4.
'07B0'	RTRW5 (RTRSVR5) Save area for program level 2 register 5.
'07B4'	RTRW6 (RTRSVR6) Save area for program level 2 register 6.
'07B8'	RTRW7 (RTRSVR7) Save area for program level 2 register 7.
'07BC'	RTRW8 (RTRSVLAR) Save area for lagging address register (LAR).
'07C0'	RTRW9 (RTRSVIAR) Save area for program level 2 IAR.

*Absolute storage location in hex.

Supervisor Sub-Control Block (XDASYS)

'07C4'	SYSW1 (SYBP1FB) Pointer to first free buffer.
'07C8'	SYSW2 (SYSTEMQC) Pointer to current time period's time-queue QCB.
'07CC'	SYSW3 (SYSTEMQN) Pointer to next time period's time-queue QCB.
'07D0'	SYSW4 (SYSEBPL) Remembrance of the last buffer in buffer pool.
'07D4'	SYSW5 (SYSBUFPL) Remembrance of the first buffer in buffer pool.
'07D8'	SYSW6 (SYSHWE) Pointer to HWE.
'07DC'	SYSW7 Pointer to maintenance history area
'07E0'	SYSW8 (UTILSTSZ) Address of last byte of storage.
'07E4'	SYSW9 (RTRL2GOI) Level 2 interrupted IAR.
'07E8'	SYSW10 (SYSRVAD) Pointer to resource vector table minus 2.
'07EC'	SYSW11 (Reserved).
'07F0'	SYSW12 Pointer to logical end of system free buffer pool.
'07F4'	SYSW13 (SYSBST) Pointer to BH set table.
'07F8'	SYSW14 Save area for resident dump.
'07FC'	SYSW15 Save area for resident dump.

*Hex Storage Location

Program: NCP

Size in bytes: 128(80)

Located in: Controller storage beginning at location '0680'.

Created by: NCP generation.

Pointer to XDB: None. Fixed location.

Function: Contains frequently accessed system control fields.

'0680'* Wrap-in-progress byte. If byte = 'X'00', wrap test is in progress.	'0681'* XDBFILL Pad. Wrap switch (EP)	'0682'* PEPFLG** PEP flag bits. (NCP2, #)
---	---	---

RAS Scan-Control Sub-block, XCBRST (This area is unused in NCP2 and NCP#.)

'0683'* RSTB1 (RTRBASP1) Number of lines in each scan of sub-period 1 of CXCCRAST.	'0684'* RSTB2 (RSTWORKB) Number of lines in each scan of current subperiod of CXCCRAST.
--	---

Supervisor Control Block (XDBSYS)

'0685'* SYSB1** (SYSMASK) Control byte for dispatcher flags.	'0686'* SYSB2 (SYSBFS) Offset to last byte of buffer.	'0687'* SYSB3 (SYSBFSZD) Buffer size decremented by 4 bytes.	'0688'* SYSB4 (SYSIBC) Buffer size decremented by 5; used as initial count by communications lines.
'0689'* SYSB5** (SYSSMI) Buffer pool and network status.	'068A'* SYSB6** (SYSFLG0) General communication byte.	'068B'* SYSB7** (SYSFLG1) Field used by dump to determine storage load.	'068C'* SYSB8 (SYSAVEK) Number of save areas contained in buffer.
'068D'* Unassigned	'068E'* SYSB10 (SYSDSGC) Type 1 CA data service governor count.	'068F'* SYSB11 (SYSBFSZC) Buffer size decremented by 3.	'0690'* SYSB17 (SYSBUSZ) True buffer size.

* Absolute storage location in hex.
** Indicates a byte expansion follows.

'0691'* SYSB18 (SYSBLKSZ) Maximum number of buffers in BCU.	'0692'* SYSB19** (SYFLG2) General commu- nication byte.	'0693'* SYSB20 DAF/OAF Sub-Area (SDLC)	'0694'* SYSB21 DAF/OAF not Sub-Area (SDLC)
'0695'* TIMB11 (TIMEZERO) Zero-second communications error time-out request.	'0696'* TIMB12 (TIMEOTXT) User-specified shoulder tap or default to RAS time-out override.	'0697'* SYSB12 (SYSCSB1) Communication scanner-1 scan limit control, EP Level 1 ERP counter (NCP#)	'0698'* SYSB13 (SYSCSB2) Type 2 scanner-2 scan limit control, EP IPL channel adapter (NCP#)
'0699'* SYSB14 (SYSCSB3) Type 2 scanner-3 scan limit control. ----- Reserved (NCP#)	'069A'* SYSB15 (SYSCSB4) Type 2 scanner-4 scan limit control. ----- Reserved (NCP#)	'069B'* SYSB16 (SYSCSSC) Type 2 scanner scan substitution control. ----- Reserved (NCP#)	

Timer Sub-Control Block (XDBTIM)

'069C'* TIMB1 (TIMTICNT) Count remem- brance field.	'069D'* TIMB2 (TIMSICNT) Count remem- brance field for system timer.	'069E'* TIMB3 (TIMWKREG) Work register for commu- nication line timer service routine (CXCLINT).	'069F'* TIMB4 (TIMLNCNT) Number of lines to be serviced before checking for higher priority work.
'06A0'* TIMB5 (TIMRSRES) Work register.	'06A1'* TIMB6 (TIMDSABL) Communications timer time-out to protect against failure to disconnect.	'06A2'* TIMB7 (TIMENABL) Communications timer time-out to protect against failure to connect.	'06A3'* TIMB8 (TIMDIAL) Communications timer time-out to protect against dial failure.
'06A4'* TIMB9 (TIMDIDLY) Communications timer time-out to protect against delay in dial tone.	'06A5'* TIMBA (TIMSWBID) Communications timer time-out to protect against switched line hang-up.		

*Absolute storage location in hex.

**Indicates a byte expansion follows.

Router Sub-Control Block (XDBRTR)

'06A6'* RTRB1 (RTRSPUR) Retry counter for program level 3 unre- solved interrupts.	'06A7'* RTRB2 (RTRSPUR1) Retry counter for program level 1 unre- solved interrupts.	'06A8'* RTRB3** (RTRINLVL) Zero if level 1 did not detect condition requir- ingabend. Other- wise indicates program level interrupted by level 1.	'06A9'* RTRB4 (RTRSVB) Save area for abend routine (CXAABND).
'06AA'* RTRB5 (RTRLSKEY) Level 5 protect key at time of protection exception.	'06AB'* RTRB6 (RTRC1KEY) Channel adapter-1 protect key at the time of channel adapter check in level 1 for protection exception.	'06AC'* RTRB7 (RTRC2KEY) Channel adapter-2 protect key at the time of channel adapter check in level 1 for protection exception.	'06AD'* RTRB8 (RTRCAER) Retry counter for program level 1 channel adapter checks.
'06AE'* RTRB9 (RTRIOER) Retry counter for program level 1 in/out instruction checks.	'06AF'* RTRB10 (RTRCMER) Retry counter for program level 1 communication scanner checks.	'06B0'* RTRB11** (RTRLVLIT) Program level interrupted at last program level entry.	'06B1'* RTRB12 (RTR3PUR) Reinitialize program level 3 unresolved interrupt counter.
'06B2'* RTRB13 (RTR1PUR) Reinitialize pro- gram level 1 unresolved interrupt counter.	'06B3'* RTRB14 (RTR1CAE) Reinitialize program level 1 channel adapter check counter.	'06B4'* RTRB15 (RTR1IOE) Reinitialize program level 1 in/out instruction check counter.	'06B5'* RTRB16 (RTR1CME) Communication scanner check counter.
'06B6'* RTRB17** (RTRFEESC) Field engineering hook/escape byte.	'06B7'* RTRB18 (RTR1SCTL) Communication scanner-1 mask for LIB disable functions.	'06B8'* RTRB19 (RTR1S2CTL) Type 2 scanner-2 mask for LIB disable functions.	'06B9'* RTRB20 (RTR1S3CTL) Type 2 scanner-3 mask for LIB disable functions.

*Absolute storage location in hex.

**Indicates a byte expansion follows.

'06BA'* RTRB21 (RTRS4CTL) Type 2 scanner-4 mask for LIB disable functions.	'06BB'* PADDB Excess pad area for expansion.
'06C0'* 32 halfwords of invalid op-codes.	

If the type 1 scanner is installed, the following fields are included in the last 16 bytes of the XDB:

'06F0'* CCPT1CHR Entry to type 1 communication scanner character service (CXBT RP2)	'06F2'* BCBL2 Secondary entry for type 1 communi- cation scanner character service (CXBT RP20).
---	---

*Absolute storage location in hex.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
'0682' PEPFLG	1	PEP flag bits. (NCP2, NCP#) EP currently using channel adapter.
'0685' SYSB1 (SYSMASK)	1111111	Control byte for dispatcher flags. Appendage task in progress. System task is active. Level 3 disabled. Level 3 active. BHRs in execution. Dispatcher service required. Level 4 disabled.
'0689' SYSB5 (SYSSM1)	111111	Buffer pool and network status. Quiesce in progress. Deactivate Invite command has been processed, do not poll during service seeking. Auto network shutdown initiated. Queued allocations in progress. Quiesce message required. Channel CWAR invalidated because buffer pool depleted. Waiting for a buffer.

*Indicates a byte expansion follows.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
'068A' SYSB6 (SYSFLG0)	111x 1111	General communication byte. Selective system reset. Checkpoint option selected. Auto network shutdown option selected. 1=system ≤ 64K. 0=system > 64K. Return data to host on error. Critical situation notification option selected. Online test option selected. Auto network shutdown was initiated from the panel (NCP 1,2,3,4). Reserved (NCP #).
'068B' SYSB7 (SYSFLG1)	X'0x' X'3x' X'5x' X'x1' X'x2' X'x3' X'x5' X'x6' X'x7' X'xA' X'xB' X'xE'	Field used by dump to determine storage load. (NCP2, NCP#) NCP Level NCP1 & 2 NCP3 & 4 NCP# Load module type NCP EP (Old base) PEP (Old base) NCP/LR PEP/LR (Old base) NCP/R EP (New base) PEP EP (New base) PEP/LR EP (New base)
'0692' SYSB19 (SYSFLG2)	1xxx xxxxx	General communication byte. At least one type 2 channel adapter is inoperable. Panel support (NCP2, #) 1=NCP 0=EP 1=PEP line switch in system, 0=not available. (Reserved). 1=CSB1 in diagnostic mode. 0=not. 1=CSB2 in diagnostic mode. 0=not. 1=CSB3 in diagnostic mode. 0=not. 1=CSB4 in diagnostic mode. 0=not.

Offset/Field Name	Bit Pattern/ Hex Value	Contents
'06A8' RTRB3	1 1 1 1	Program level interrupted by level 1. Program level 2 interrupted. Program level 3 interrupted. Program level 4 interrupted. Program level 5 interrupted.
'06B0' RTRB11	1 1 1 1	Last level interrupted, on entry to level 1. Program level 2 interrupted. Program level 3 interrupted. Program level 4 interrupted. Program level 5 interrupted.
'06B6' RTRB17	1 x	Field engineering hook/escape byte. Allow additional register range (AARR) 1=dump 0=no dump

Program: NCP

Located in: Controller storage beginning at location X'0700'.

Size in bytes: 128(80)

Created by: NCP generation.

Pointer to XDH: None. Fixed location.

Function: Contains frequently accessed system control fields.

ROS Contained Code Save Area Sub-Block (XDHROS)

The following fields are present in a dump.

'0700'	ROSH1 (ROSWK1) Work area for IPL phase 3 channel command word.	'0702'	ROSH2 (ROSSVADR) Program level 1 adapter interrupt requests (external register X'76').
'0704'	ROSH3 (ROSSVCCR) Program level 1 CCU checks (external register X'7D').	'0706'	ROSH4 (ROSSVCCU) Program level 1 CCU interrupt requests (external register X'7E').
'0708'	ROSH5 (ROSWK2) Work area for dual ROS and 3704 ROS standalone diagnostics.	'070A'	ROSH6 (ROSWK3) Work area for dual ROS type 1 load and 3704 ROS standalone diagnostics.
'070C'	ROSH7 (ROSWK4) Work area for standalone channel adapter diagnostics (3704 only).	'070E'	ROSH8 (ROSWK5) Work area for 3704 ROS while loading over the type 1 channel adapter.

The following fields are present during program execution.

'0700**'	TMRP (CYATMPTR) Channel vector table save area for timer.	'0702'	TIMH4 (TIMCHTD) Attention delay interval for channel adapter.
'0704'	TIMH1 (TIMCHTOS) Attention time-out field for secondary channel adapter.	'0706'	TIMH8 (TIMCHTO) Attention time-out field for primary channel adapter.

**Fields used only by PEP, EP (old base)

Bit Service Interrupt Module Control Block (8 bytes) (XDHBSBP)

'0708'	SYSH22 (BSPSAVE) Saved BCBL2 address interlock.	'070A'	SYSH23 (BSPFUNC) Function control switch for type 1 scanner panel-initiated ICW display.
'070C'	SYSH24 (BSPDISP) Scanner data set leads display.	'070E'	RTRH2 (RTRSW) Program level 3 router return entry point (XCCRTRR).
'0710'***	QCBH1 (QCBF)* (QCBFLAGS) EP flags ----- or CHCBAD1*** (CYECHCP1) CA4 CHCB pointer	'0712'***	QCBT (QCBTIO) QCB table. ----- or CHCBAD2*** (CYECHCP2) CA4 CHCB pointer
'0714'***	PDSOF (PDSOFRST) Address pointer to first CCB in the priority data service out queue. ----- or Reserved (NCP#)	'0716'***	PDSOL (PDSOLAST) Address pointer to the last CCB in the priority data service out queue. ----- or Reserved (NCP#)
'0718'***	DSOF (DSOFRST) Address pointer to the first CCB in the data service out queue. ----- or TMRF*** (CYATMPTR) Pointer to next CHVT to be checked by timer routine	'071A'***	DSOL (DSOLAST) Address pointer to the last CCB on the data service out queue. ----- or PSCA*** (CYEPSCA) Pointer to CHCB initialized for panel use
'071C'***	DSIF (DSIFRST) Address pointer to the first CCB in the data service in queue. ----- or LOGADD*** (LOGADDR) Pointer to error log	'071E'***	DSIL (DSILAST) Address pointer to the last CCB in the data service in queue. ----- or ABARSAVE*** (SAVEABAR) Contents of ABAR at level 1

<p>'0720**</p> <p>SOF (SOFIRST) Address pointer to the first CCB in the status out queue.</p> <p>----- or L1INTREQ*** (SAVELINT) Contents of Input X'79' at level 1 (Interrupted level)</p>	<p>'0722**</p> <p>SOL (SOLAST) Address pointer to the last CCB in the status out queue.</p> <p>----- or L1CAREQ*** (SAVEADRQ) Contents of Input X'76' at level 1 (Adapter request)</p>
<p>'0724**</p> <p>SNOF (SNOFIRST) Address pointer to the first CCB in the sense out queue.</p> <p>----- or LOGINDIC*** (LOGIND) Log-trace indicator: X'01'=Log entry to be stored at byte displacements 6 and 7 of the trace entry.</p>	<p>'0726**</p> <p>SNOL (SNOLAST) Address pointer to the last CCB in the sense out queue.</p> <p>----- or HNGPGMSW (CYEHUNG) Unhang subchannel switch: X'01'=Action is in progress to unhang subchannels.</p>
<p>'0728**</p> <p>SSF (SSFIRST) Address pointer to the first CCB in the stacked status queue.</p> <p>----- or Reserved (NCP#)</p>	<p>'072A**</p> <p>SSL (SSLAST) Address pointer to the last CCB in the stacked status queue.</p> <p>----- or Reserved (NCP#)</p>

*Indicates a byte expansion follows.
 **Fields used only by PEP, EP (old base)
 ***Fields used only by PEP, EP (new base).

Type 1 Scanner QCB for Character Transfer Between Character and Bit Service (XDHCSPO)

'072C'** CSPQH1 (CSPQOFF) First BCB address. BCBs are taken off the chain from this end.	'072E'*** CSPQH2 (CSPQ2) (CSPQON) Last BCB address. BCBs are added to the chain at this end.
'0730'** SVCO SVCOUT or Reserved (NCP# and EP new base)	'0732'** Test I/O clock Reserved (NCP# and EP new base)
'0734' Reserved	

**Field used only by PEP, EP (old base)

QCB for CCBs Passed to Program Level 3 from Program Level 2 (XDHCCPQ)

'0736' CCPQH1 (CCPQOFF) Address of first CCB. CCB's are taken off the chain from this end.	
'0738' CCPQH2 (CCPQON) Address of last CCB. CCB's are added to the chain at this end.	

Timer Sub-Control Block (XDHTIM)

'073A' TIMH6 Tenths of a second counter.	
'073C' TIMH2 (TIMWKTAB) Address of current line timer control/work table.	'073E' TIMH3 (TIMWKTNX) Pointer to the next low-resolution CTB subchain to be serviced.
'0740' TIMH9 (TIMCTBAD) Pointer to start of CXTCTB	'0742' TIMPADH (Reserved)

Supervisor Sub-Control Block (XDHSYS)

'0744' SYSH3 (SYSIQON) Pointer to end of system immediate queue.	'0746' SYSH4 (SYSIQOFF) Pointer to the beginning of the system immediate queue.
'0748' SYSH9 (SYSPQON) Pointer to the end of the system productive queue.	'074A' SYSH10 (SYSPQOFF) Pointer to the beginning of the system productive queue.

'074C'	SYSH18 (SYSAQON) Pointer to the end of the system appendage queue.	'074E'	SYSH19 (SYSAQOFF) Pointer to the beginning of the system appendage queue.
'0750'	SYSH20 (SYSNQON) First triggered non-productive QCB.	'0752'	SYSH21 (SYSNQOFF) Last triggered non-productive QCB.
'0754'	SYSH1 (SYSPCBC) Current free buffer count.	'0756'	SYSH2 (SYSBPTBC)* Free buffer threshold count + 1.
'0758'	SYSH5 (SYSLINES) Number of communication lines.	'075A'	SYSH8 (DCTAQCB) (SYSAQCB) System active queue control block.
'075C'	SYSH11 (DCTSPPOOL) (SYSSPOOL) Pointer to first buffer in system save area pool.	'075E'	SYSH12 (DCTSAVEK) (SYSSAVEK) System save area buffer pool allocation count.
'0760'	SYSH13 (DCTABND) (SYABND) System abend code.	'0762'	SYSH14 (SYSBINTM) System binary time of day in seconds.
'0764'	SYSH15 Second halfword of system binary time of day field	'0766'	SYSH16 (SYSCUREQ) Time value for earliest expiring current system timer request.
'0768'	SYSH17 Second halfword of SYSCUREQ	'076A'	SYSH25 (SYSSIZE)* System size
'076C'	(Reserved).	'076E'	(Reserved).

*Indicates a byte expansion follows.

Channel Adapter Interrupt Handler Save Area (XDHCHSV)

'0770'	CHSVH1 (CHSVBKSZ) Maximum byte count to host per host start I/O.	'0772'	CHSVH2 (CHSVCHB) Pointer to CHB or COB.
--------	---	--------	---

Communication Control Program Save Area (XDHCCP)

'0774'	CCPH1 (CCPSAVE) Save area for program level 3 CCP.
--------	--

Program Level 1/3 Router Sub-Control Block (XDRTR)

		'0776'	RTRH1 (RTRBARSV) Save area for scanner buffer address register.
'0778'	(Reserved).	'077A'	(Reserved).
'077C'	RTRH6 (RTRL2GOA) Level 2 interrupted IAR (16 bits)	'077E'	RTRH10 (RTRCASEL) Save area for CA selection mask.

Byte Expansions

Offset/Field Name	Bit Pattern/ Hex Value	Contents
X'0710' OCBF	.111 1	EP flags. (PEP) (Old base) Set stacked status service. Set sense service. Set TIO sequence. Do not dequeue from stacked status queue.
X'0756' SYSH2 (SYSBPTBC)	0001* 0002* 0003*	User requested slowdown threshold 50% 25% 12%
X'076A' SYSH25 (SYSSIZE)	0000 0001	System size Equal to or less than 64K. Greater than 64K.

*After NCP initialization this field contains the actual calculated number of buffers for the threshold.



Section 3: BTU Commands and Modifiers

Following is a list of the BTU commands with a brief description of each modifier and the hex value and acronyms of each.

Control Command (X'08')

Command	Modifier (Hex)	Meaning
Display line status	01	Displays current status of the line.
Replace session initiation information for a line	02	Replaces LCB information associated with the initiation.
Activate Invites	03	Allows the NCP to honor all currently resident Invite commands. (NCP1, NCP2).
Deactivate Invites	04	Negates all currently resident Invite commands to prevent terminal-initiated sessions. (NCP1, NCP2).
Copy session initiation information	05	Accesses information associated with the initiation of a session.
Request device statistics	07	Sends an MDR record to the host for every device that has had activity since the previous request. (NCP1, NCP2).
Display storage	08	Displays 32 contiguous bytes of communications controller storage specified by the user. (NCP1, NCP2).
Set time and date	09	Replaces the time and date that is resident in the communications controller. (NCP1, NCP2).
Set channel mode secondary	0A	Changes the mode of the channel adapters. This command is valid only when it is sent over the current primary channel adapter. (NCP1, NCP2).
Activate line trace	0C	A diagnostic and debugging aid. The following ICW fields are stored into buffers each time a level 2 interrupt occurs: (NCP1, NCP2), <ul style="list-style-type: none"> ● Line Control Definer (LCD) ● Primary Control Field (PCF) ● Secondary Control Field (SCF) ● Parallel Data Field (PDF)
Terminate line trace	0D	Terminates the line trace on a designated line. (NCP1, NCP2).
Change modem speed	12	Allows the user to change the speed at which the appropriate modems operate a line. (NCP2, NCP#).
Set channel mode primary	15	Changes the mode of the channel adapters. This command is valid only when it is sent over the secondary channel adapter. (NCP1, NCP2).
Copy destination mode	18	Accesses the mode information of a device from the DVB.
Modify Attention Delay	20	Replaces attention delay associated with channel control block.
Copy device session information	21	Accesses the device's polling character, addressing characters, and if the device is switched call-out, the dial digits.

Command	Modifier (Hex)	Meaning
Replace device session information	22	Replaces the device's polling characters and addressing characters in the DVB. If the device is switched call-out, it replaces the dial digits in the COE.
Physical disconnect	1C	Breaks the physical dial connection. (NCP#).
Reset error lock	:1	Clears the error lock condition on a device. The first request on the device work queue is honored at the completion of this command.
Reset device queues	12	Returns all commands for a device that were accepted but not yet honored. The response BTU of the returned commands indicates that they were reset.
Request control mode reset	43	Sends RVI on BSC lines. (NCP#).
Reset immediate	44	Ends the current operation on a device without regard to data loss.
Reset online terminal test*	48	Aborts the execution of the chain of online terminal tests, tests diagnostic mode, and clears the device queues.
Switch to backup	4A	Requests switched line backup.
Switch from backup to primary	4C	Requests that the primary line be activated.
Reset conditional	50	Tests the status of the top command for the device. If data transfer has not started, the reset takes place immediately. If data transfer has started, the reset is not done.
Reset at end of command	60	Ensures that the device input queue and device work queue are idle and empty so a new sequence of operations can begin.
Switch to EP mode	82	Switches the line mode from NCP to EP. (NCP2).
Switch to NCP mode	83	Switches the line mode from EP to NCP. (NCP2).
Change line service-seeking pause	84	Allows the user to change the length of the pause between service-seeking attempts. (NCP1, NCP2).
Change line negative poll response limit	85	Allows the user to change the number of consecutive negative responses to polling that are acceptable before termination of the Read command. (NCP1, NCP2).
Change session limit	86	Allows the user to change the maximum number of sessions permitted on a line at the same time (NCP1, NCP2).
Change device transmission limit	8C	Allows the user to change the number of EOTs that the controller sends to or receives from a device before servicing other devices on the line. (NCP1, NCP2).
Modify block handler set association	8D	Activates, deactivates, and/or changes the association of a block handler set with a device.
Activate line	98	Activates a line for data transfer. (NCP1, NCP2).

*In NCP3 the command is sent in the Request Unit of a FID1 execute test request.

Command	Modifier (Hex)	Meaning
Deactivate orderly (Line flush)	99	Causes a Deactivate Device operation for each device on the line without changing the device status. Currently resident commands are honored, but no new commands are accepted. (NCP1, NCP2).
Set destination mode	9A	Replaces the device mode flags for a particular device.
Deactivate line halt	C2	Ends the current operation on the line without regard to data loss. All outstanding requests are returned to the host. (NCP1, NCP2).

Disconnect Command (X'07')

Command	Modifier (Hex)	Meaning
Disconnect normal	D 00	No modifier.
Disconnect with Invite	Di 01	Executed as a Disconnect normal command followed by an Invite normal command.
Disconnect with end-of-call	De 02	For switched lines, this modifier results in the physical connection between the terminal and the communications controller being broken. For all other lines, this modifier is the same as normal.
Disconnect with EOC and Invite	Dei 03	Executed as a Disconnect with end-of-call followed by an Invite command.

Contact Command (X'06')

Command	Modifier (Hex)	Meaning
Contact normal	00	
Contact with return resource ID	01	Returns the resource ID of the line used to establish the dial connection.

Invite Command (X'05')

Command	Modifier (Hex)	Meaning
Invite normal	I 00	Unit of data for this command is that specified by the TERMINAL macro at NCP generation.
Invite block	Ib 01	Unit of data for this command is the block (ends with EOB).
Invite message	Im 02	Unit of data for this command is the message (ends with ETX (BSC) or EOT (SS)).
Invite transmission	It 03	Unit of data for this command is the transmission (ends with EOT).
Invite transmission with Disconnect	Id 04	Executed as an Invite transmission command followed by a Disconnect command.
Invite with auto restart	Ia 05	Executed as unbounded series of Invite with Disconnect commands. This command must be terminated with a reset request.
Invite perpetual (valid only for clusters)	Ip 06	Executed as an unbounded series of Invite transmission commands with no intervening Disconnect commands.

I Restart Command (X'04') (NCP 1 & 2)

Command	Modifier (Hex)	Meaning
Line	00	The BTU contains a checkpoint record for a line.
Device	01	The BTU contains a checkpoint record for a device.
Replace session initiation information for a line	02	The BTU contains session initiation information for a line.
Replace session initiation information for a device	22	The BTU contains session initiation information for a device.

Test Command (X'03')*

Command	Modifier (Hex)	Meaning
Test device normal	T 00	Tests a device.
Test device with Contact	Tc 01	Establishes a session with the device to be tested.
Test device with Disconnect	Td 02	Ends a session with the device to be tested.
Test device with Contact and Disconnect	Tcd 03	Establishes and ends a session with the device to be tested.
Test line normal	TI 04	Tests a line.
Test line with Contact	Tlc 05	Establishes a session with the line to be tested.
Test line with Disconnect	Tld 06	Ends a session with the line to be tested.
Test line with Contact and Disconnect	Tlcd 07	Establishes and ends a session with the line to be tested.

Write Command (X'02')

Command	Modifier (Hex)	Meaning
Write normal	W 00	Unit of data is one block.
Write with end-of-message	Wm 01	Unit of data is one block followed by the appropriate control sequence or character for an end of message.
Write with end-of-transmission	Wt 02	Unit of data is one block followed by the control sequence for end of transmission.
Write with Disconnect	Wd 03	Executed as a Write transmission command followed by a Disconnect command.
Write with Read (implied EOT)	Wr 06	Executed as a Write command followed by a Read command.

*In NCP# these commands are sent in the Request Unit of a FID1 execute test request.

Command	Modifier (Hex)	Meaning
Write with Invite	Wi 07	Executed as a Write command with end-of-transmission followed by a Disconnect command and then an Invite command.
Write with Contact**	Wc 08	Executed as a Contact command followed by a Write normal command.
Write with Contact** (implied EXT)	Wcm 09	Executed as a Contact command followed by a Write with end-of-message.
Write with Contact** (implied EOT)	Wct 0A	Executed as a Contact command followed by a Write with end-of-transmission.
Write with Contact** and Disconnect (implied ETX & EOT)	Wcd 0B	Executed as a Contact command followed by a Write with end-of-transmission followed by a Disconnect command.
Write with Contact** and Read	Wcr 0E	Executed as a Contact command followed by a Write with end-of-transmission followed by a Read normal command.

**Contact may not begin a telephone connection to a BSC call-in device.

Read Command (X'01')

Command	Modifier (Hex)	Meaning
Read normal	R 00	Unit of data for this command is that specified by the TERMINAL macro at NCP generation.
Read block	Rb 01	Unit of data for this command is the block (ends with EOB).
Read message	Rm 02	Unit of data for this command is the message (ends with ETX (BSC) or EOT (SS)).
Read transmission	Rt 03	Unit of data for this command is the transmission (ends with EOT).
Read transmission Disconnect	Rd 04	Executed as a Read transmission command followed by a disconnect command.
Read with Invite	Ri 05	Executed as a Read transmission with Disconnect followed by an Invite normal command.

Unsolicited Response (X'77') (See Section 8)



I Section 4: NCP Channel Commands

Command	Command Code	Description
No-Op	X'03'	This command is required as the last CCW in a Read or Write CCW chain.
Read	X'02'	The Read command is initiated at the NCP. Data at controller storage is transferred to CPU main storage.
Read Start 0	X'32'	This is the first command expected in the Read Channel program after IPL of the NCP. It is also expected after each successful Read Start 1 command.
Read Start 1	X'52'	This is the second command expected in the Read Channel program after IPL of the NCP. It is also expected after each successful Read Start 0 command.
Reset Restart	X'93'	This command causes the NCP to reset its switches to indicate that the last Write Start and Read Start commands were Write Start 1 and Read Start 1.
Write	X'01'	The Write command is initiated to the NCP. Data in the CPU main storage is transferred to the NCP.
Write Break	X'09'	The Write Break command is identical to the Write command except that it is used to indicate that it is the last or only Write command in a chain of Write CCWs.
Write Start 0	X'31'	This is the first command expected in the Write Channel program after IPL of the NCP. It is also expected after each successful Write Start 1 command.
Write Start 1	X'51'	This is the second command expected in the Write Channel program after IPL of the NCP. It is also expected after each successful Write Start 0 command.

Note: Data transfer does not occur on Read Start and Write Start commands.



Section 5: NCP# Network Commands (Request Codes)

Byte 0, bits 1 and 2 of the request response header of the PIU indicates the type of network command in process.


If byte 0, bits 1 and 2 are 11, see "Session Control" below for the network commands located in byte 0 of the request/response unit.

If byte 0, bits 1 and 2 are 10, see "Data Flow Control" below for the network commands located in byte 0 of the request/response.

If byte 0, bits 1 and 2 are 01, see "Network Control" below for the network commands located in byte 0 of the request/response unit.


If byte 0, bits 1 and 2 are 00, see "Function Management Data" below where byte 1 of the request/response unit contains the subcategories for (1) BSC/SS Services (2) Physical Configuration Services, and (3) Physical Maintenance Services. Byte 2 of the request/response unit contains the network commands associated with the subcategories listed.

Session Control

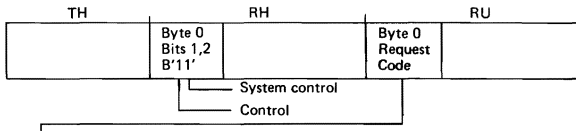


Request Code	Command	Function
X'0D'	Activate Logical	Establishes a session between the SSCP and a logical unit.
X'0E'	Deactivate Logical	Terminates the session between the SSCP and the logical unit.
X'11'	Activate Physical	Establishes a session between the SSCP and the NCP or PU physical services.
X'12'	Deactivate Physical	Terminates the session between the SSCP and the NCP or PU physical services.
X'31'	Bind	Establishes a session between a host application program and a logical unit.
X'32'	Unbind	Terminates the session between the host application program and a logical unit.
X'A0'	Start Data Traffic	Enables data flow in a session. It is the final request in a data flow initialization or recovery procedure.
X'A1'	Clear	Removes and discards all PIUs with the same OAF/DAF pair from the destination process queue.
X'A2'	Set and Test Sequence Numbers	Resynchronizes the specified sequence number.
X'A3'	Request Recovery	Initiates data traffic recovery procedures.

Data Flow Control

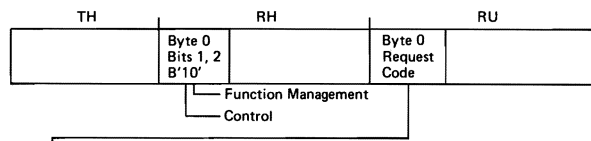


Request Code	Command	Function
X'04'	Logical Unit Status	Sends status information from a logical unit to its session partner.
X'05'	Ready to Receive	Used in bracket protocol to indicate that the bidder is now allowed to initiate a bracket.
X'80'	Quiesce at End of Chain	Directs a function manager to enter the quiesce state at the end of the chain it is currently sending.
X'81'	Quiesce Complete	Indicates that the issuer of the request has placed itself in the quiesce state.
X'82'	Release Quiesce	Releases a function manager from the quiesce state.
X'83'	Cancel	Terminates a partially sent chain of FM data requests.
X'84'	Chase	Requests the receiving function manager to return all outstanding data responses and data flow control responses.
X'C0'	Shutdown	Requests the secondary function manager to enter the highest level of quiesce.
X'C1'	Shutdown Complete	Indicates that the sender has shutdown.
X'C2'	Request Shutdown	Informs the primary function manager that the secondary function manager is at 'end of job' and to issue a Shutdown request.
X'C8'	Bid	Used in bracket protocol to request permission to begin a bracket.
X'C9'	Signal	Sends an expedited signal through the network against the normal flow of data.

Network Control

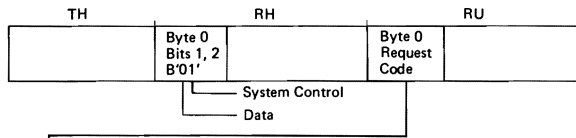

Request Code	Command	Function
X'07'	Auto Network Shutdown Complete	Informs the SSCP that the NCP auto network shutdown is complete.
X'50'	Initialization Complete	Informs the SSCP that the NCP initialization is complete.
X'51'	Switch Line to NCP Mode (BSC/SS)	Switches line from EP mode to NCP mode.
X'52'	Switch Line to EP Mode (BSC/SS)	Switches line from NCP mode to EP mode.

Function Management Data

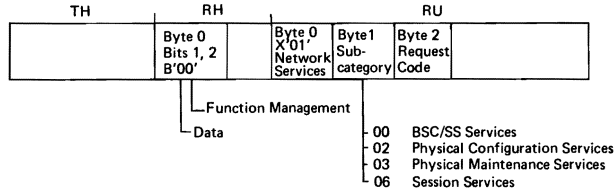

X'00' BSC/SS Services

Request Code	Command	Function
X'01'	Change Device Transmission Limit	Allows user to change the number of EOTs that the NCP sends to or receives from a device on a BSC/SS multipoint line before servicing other devices on the line.
X'02'	Change Line Negative Poll Response Limit	Allows user to change the number of consecutive negative responses to polling that are acceptable before termination of the Read command.
X'03'	Change Line Session Limit	Allows user to change the number of BSC/SS sessions that can be active on this BSC/SS line.
X'04'	Change Line Service Seeking Pause	Allows user to change the length of the pause between service seeking attempts.

X'02' Physical Configuration Services

Request Code	Command	Function
X'01'	Contact	Starts a contact poll operation to an SDLC station or remote communications controller.
X'02'	Discontact	Causes the NCP to stop polling a resource.
X'03'	Load Initial	Initiates the IPL of a remote communications controller.
X'04'	Load Data	Transfers the text of a load module to a remote communications controller.
X'05'	Load Final	Informs the remote communications controller that the load process is complete and requests it to provide the NCP entry point to be given control.
X'06'	Dump Initial	Initiates a remote communications controller storage dump.
X'07'	Dump Data	Causes the remote NCP to send a portion of its storage to the SSCP.
X'08'	Dump Final	Informs the remote communications controller that the dump procedure is complete.
X'09'	Remote Power Off	Invokes a power-off sequence in a remote communications controller.
X'0A'	Activate Link	Activates the data set associated with the SDLC link and initiates the continuous transmission of flag characters.
X'0B'	Deactivate Link	Deactivates the data set associated with the link.
X'0E'	Dial	Causes the NCP to initiate an outbound call on a switched SDLC link. For auto dial, the NCP performs the dial operation with the dial digits provided in the command. For manual dial, the NCP enables the link and the operator performs the dial operation.
X'0F'	Abandon Connection	Causes the physical unit to terminate a switched connection.
X'11'	Set Control Vector—channel attention delay	RU, byte 5 = X'05' Allows the SSCP to change the channel attention delay value in the COB (type 1/4 CA) or CHB (type 2/3 CA). <i>Note:</i> The SSCP is not allowed to change attention delay in a remote NCP.
	Set Control Vector—LU	RU, byte 5 = X'04' Changes dynamic fields in the logical unit control block (LUB) and completes initialization of the logical unit vector table (LUV).
	Set Control Vector—PU	RU, byte 5 = X'03' Changes dynamic fields in the common physical unit block (CUB) that are associated with the specified physical unit.
	Set Control Vector—NCP Subarea	RU, byte 5 = X'02' Associates a remote NCP's subarea with a particular SDLC link.
	Set Control Vector—time and date	RU, byte 5 = X'01' Allows the SSCP to replace the time and date in the NCP. The time is maintained in 24 hour continental time. <i>Note:</i> The SSCP is not allowed to retrieve the time and date with a Sense State Vector request.

X'02' Physical Configuration Services (Cont.)

Request Code	Command	Function
X'14'	Entering Slowdown	Informs the SSCP that the normal flow of data in the NCP is impeded due to limited available buffers.
X'15'	Exiting Slowdown	Informs the SSCP that the limitation on NCP buffers is lifted. Normal data flow to the NCP may resume.
X'16'	Answer	Causes the NCP to put the specified link in answer mode. This enables the link to answer incoming calls.
X'17'	Abandon Answer Mode	Causes the NCP to discontinue answer mode on the specified link.
X'18'	Abandon Dial	Causes the NCP to halt the dialing operation over the specified link.
X'19'	Assign Network Addresses	Assigns a set of network addresses to a specified physical unit. (SDLC switched link only)
X'1A'	Free Network Addresses	Causes the NCP to free the network addresses that were assigned to a physical unit.
X'80'	Contacted	Informs the SSCP of conditions presently existing in the resource.
X'81'	Inoperative	Reports a loss of contact to the SSCP.
X'84'	Off Hook	Informs the SSCP that a physical connection has been established between the NCP and a physical unit. (Contains the station ID)

X'03' Physical Maintenance Services

Request Code	Command	Function
X'01'	Execute Test	Causes the NCP to execute an online terminal test (OLTT) or online link test (OLLT) for the resource specified by the network address.
X'02'	Activate Line Trace	Causes ICW fields to be stored into buffers each time a level 2 interrupt occurs. See Line Trace Control Block. This is a diagnostic and debugging aid.
X'03'	Deactivate Line Trace	Terminates line trace.
X'81'	Record Maintenance Statistics	Sent to SSCP whenever certain error conditions exist.
X'82'	Record Test Data	Informs the SSCP of the current status of an online terminal test (OLTT) or online line test (OLLT).
X'83'	Record Trace Data	Sends line trace information to the SSCP.

X'06' Session Services

Request Code	Command	Function
X'04'	NS Procedure Error	Informs the issuer of a non-sequenced request that an error occurred after the request was accepted but before the procedure completed.
X'81'	Initiate Self	Allows a logical unit to request a session with the SSCP.
X'83'	Terminate Self	Allows a logical unit to request the termination of a session with the SSCP.

The following command sequence is followed for bring-up and session initiation for switched SDLC. The non-switched SDLC sequence is provided by skipping those entries identified as being required for switched. The following command sequence is found on a PIU trace (VTAM trace).

Command	Description
Activate Physical	From SSCP to NCP physical services
Initialization Complete	From NCP physical services to SSCP
Start Data Traffic	From SSCP to NCP physical services
Set State Vector	From SSCP to NCP physical services
Set Control Vector	From SSCP to NCP physical services
Activate Link	From SSCP to NCP physical services
Answer or Dial (Switched)	SSCP to physical services CPM-OUT
Off-Hook (Switched)	Physical services to SSCP
Set Control Vector PU (Switched)	SSCP to physical services
Contact	From SSCP NCP physical services
Contacted	NCP physical services to SSCP
Activate Physical	SSCP to PU physical unit process queue
Assign Network Addresses (Switched)	SSCP to physical services
Set Control Vector LU (Switched)	SSCP to physical services
Activate Logical	SSCP to LU/SSCP process queue
Initiate Self (Logical Unit initiated logon only)	From LU to SSCP
Bind Command	Host application to LU
Start Data Traffic	From host application to LU
Inoperative*	From NCP physical services to SSCP

*May be required at any point in the command sequences after the Activate Link command.



Section 6: SDLC Commands and Responses (NCP#)


Non-sequenced Format: (Bits 6, 7 = 11)

Commands	Control Field	Function
Set Initialization Mode Command (SIM).	0001 0111	Initiates system-specified procedures at the receiving secondary station for the purpose of initializing link-level functions.
Disconnect Command (DISC).	0101 0011	Terminates other modes and places the receiving secondary station effectively offline.
Set Normal Response Mode Command (SNRM).	1001 0011	Subordinates the receiving secondary station to the transmitting primary station.
Exchange Identification (XID)	1011 1111	Used by the NCP to solicit the station identification from a secondary station.
Test	1111 0011	SDLC Test command.
Responses		
Request Initialization Response (RQI).	0001 0111	Notifies the primary station that the secondary station has a need for a SIM command.
Request Online Response (ROL)	0001 1111	Indicates that the transmitting secondary station is disconnected.
Nonsequenced Acknowledgment Response (NSA).	0111 0011	Affirms a response to a SNRM or SIM command.
Command Reject Response (CMDR).	1001 0111	Rejects a non-valid command.

Supervisory Format: (Bits 6, 7 = 01)

Commands	Control Field	Function
Receive Ready (RR)	xxxx 0001	Indicates the originating station is ready to receive.
Receive Not Ready (RNR)	xxxx 0101	Indicates a temporary busy condition in which no frames requiring buffer space can be accepted.
Reject (REJ)	xxxx 1001	Requests transmission or retransmission of sequenced information.
	xxxx 1101	Reserved
	xxxx	<p> Poll/final bit. Receive sequence count. </p>

Control "I" Format: (Bit 7 = 0)

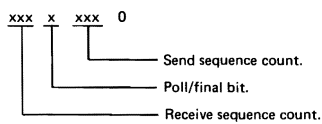



I Section 7: EP Command Codes

Operation Code		Command
EP**	S/360 and S/370	
0000 0...	00	Test I/O
0000 1...	01	Write
0001 0...	02	Read
0001 1...	03	I/O No-op
0001 1...	12	Diagnostic Read*
0001 1...	06	Diagnostic Write*
0001 1...	13	Set Address Zero*
0001 1...	17	Set Address One*
0001 1...	1B	Set Address Two*
0001 1...	1F	Set Address Three*
0001 1...	1D	Diagnostic Poll*
0010 0...	04	Sense
0010 1...	15	Wrap
0011 0...	06	Prepare
0100 0...	41	Write Break
0100 1...	09	Poll
0101 0...	0A	Inhibit
0101 1...	19	Poll SOH
0110 0...	42	Read Clear
0110 1...	0D	Break
0111 0...	0E	Search
0111 1...	2F	Disable
1000 0...	27	Enable
1000 1...	29	Dial
1001 0...	1E	Address Prepare
1001 1...	23	Set Mode
Flags used during initial command execution (ICE)		
....1..		End with intervention required instead of command reject.
....1.		Sense command
....1		Line must be enabled before this is accepted.
Flags used after ICE		
....1..		Command end
....1.		Pseudo read
....1		Pseudo read end

*Treated by the emulation program as a no-op.

**The EP command is located in the CCBCMD field of the EP CCB.



Section 8: BTU Responses

This appendix lists the responses that are returned to the host in the BTU. The response comprises two bytes: system response (BCUSRES) and extended response (BCULRES). The extended response is also referred to as the line response.

System Response Byte

0 0 0 0 0 0 0 0

System response code

Phase to which the response applies

Phase 0 - Validation of BTU. There is no normal response returned to the host if the command is valid. However, unsolicited responses are sometimes sent to the host in phase 0 that are not related to the command.

Phase 1 - I/O to a communications line.

Phase 2 - Additional I/O to a communications line when multiple I/O operations take place. For example, Write with Read, Write with Disconnect, etc.

Phase 3 - Usually the final normal response to a command. However, if the command has an Invite modifier (for example, Write with Invite), a phase 3 normal response may be returned for the write portion of the command and a phase 0 error response returned later for the Invite portion of the command.

1=error response

0=normal response

Command & Modifier	Phase 0* Error	Phase 1		Phase 2		Phase 3** Normal
		Error	Normal	Error	Normal	
I	Any part	I	I			I(final)
Ib	Any part	I				Ib
Im	Any part	I	I			Im
It	Any part	I	I			It
Id	Any part	I	I	D		Id
Ia	Any part	I	I	D		Ia
Ip	Any part	I	I or R			It or Rt
D	Any part	D				D
De	Any part	D				De
Di	Any part	D/I	I			D/I(final)
Dei	Any part	D/I	I			{final}
W	Any part	W				W
Wm	Any part	W				Wm
Wt	Any part	W		Wt		Wt
Wd	Any part	W		D		Wd
Wi	Any part	W/I	I	D		Wd/I(final)
Wr	Any part	W		Wt/R	Wt/R	R (final)
Wc	Any part	C/W				Wc
Wcm	Any part	C/W				Wcm
Wct	Any part	C/W		Wt		Wct
Wcd	Any part	C/W		D		Wcd
Wcr	Any part	C/W		Wt/R	Wc/R	R(final)
R	Any part	R	R			R(final)
Rb	Any part	R				R(final)
Rm	Any part	R	R			Rm
Rt	Any part	R	R			Rt
Rd	Any part	R	R	D		Rd
Ri	Any part	R/I	R/I	D		Rd/I(final)
C	Any part	C				C

*Phase 0 error responses can be returned for any portion of a BTU on which there is a validity error.

**There are no phase 3 error responses for TP commands.

Phase 0 Error Responses

Response (hex)	Meaning
81	Invalid resource ID.
82	Invalid command.
83	Invalid modifier.
84	Reset or Deactivate in progress.
85	Device inactive.
86	Line inactive.
87	Command not valid for resource.
88	Command syntax error.
89	Command rejected, did not conform to BSC specifications.
8A	Invalid control data length.
8B	Reset not performed.
8C	Data not resident in storage.
8D	Dial set queue limit reached.
8E	Line and device incompatibility on switched call-out.
8F	Invalid text length.
91	Invalid control data.
92	Incomplete BTU.
93	Deactivate Line Orderly or Deactivate Device command rejected because of error on one or more of the devices.
94	Data in use.
95	Invalid Control command modifier or Control command not valid for resource.
96	OLTT command rejected, queue not empty.
97	OLT active. Non-OLT command rejected.
98	Multiple Dial requests.
99	Mode inconsistency (Request was made to alter the mode of a resource, but the resource was already in that mode.)
9A	Buffers required to complete the operation are not available; system in slowdown mode.
9B	Command rejected, system in auto network shutdown.
9C	Command rejected, error lock set.
9D	Command rejected, secondary channel adapter not operative.
9E	Command rejected, line deactivated or command reset.
9F	Refer to conditional extended responses

Phase 0 Unsolicited Responses

Response (hex)	Meaning
00	Invalid bit configuration.
01	Attention time-out or unrecoverable error on current primary channel adapter.
03	Device association completed.
04	MTA device identified.
05	Channel adapter set to primary mode.
06	Channel adapter set to secondary mode.
07	Entering system slowdown.
08	Leaving system slowdown.
09	Initialization complete.
0A	MDR records accompany the BTU.
1B	Auto network shutdown initiated via channel time-out or channel adapter failure.
1C	Auto network shutdown initiated via panel.
1D	Network shut down via auto network shutdown.
1E	Serviceability aid—host logging.

Phase 1, 2, and 3 Error Responses

Response (hex)			Meaning
Phase 1	Phase 2	Phase 3	
A0	C0	E0	Data check.
A1	C1	E1	Possible intervention required.
A2	C2	E2	Intervention required.
A3	C3	E3	Negative poll limit reached—WAIT option.
A4	C4	E4	Yielded to contention.
A5	C5	E5	Device error—BSC status pending.
A6	C6	E6	ID error.
A7	C7	E7	Line trace terminated due to error.
A8	C8	E8	OLTT command or Reset OLTT Control command processing terminated.
A9	C9	E9	Session not started due to hardware error.
AA	CA	EA	BSC error status message.
AB	CB	EB	General poll operation aborted due to error.
AC	CC	EC	Fanout backup limit exceeded
AD	CD	ED	Disconnected
AE	CE	EE	Break received on this block.
AF	CF	EF	Contact rejected—session started.
B0	D0	F0	Dial data inconsistency.
B1	D1	F1	Buffers required to complete operation are not available.
B2	D2	F2	Command rejected, line deactivated or command reset.

Phase 1, 2, and 3 Normal Responses


Response (hex)			Meaning
Phase 1	Phase 2	Phase 3	
20	40	60	Command executed OK this far. (Pertains to all commands not represented by 22, 42, or 62.)
21	41	61	Leading graphics received.
22	42	62	One of the following commands executed OK this far: <ul style="list-style-type: none"> • Read or Invite • Write (in conversational mode). • WR or WCR commands in the read phase.
23	43	63	Negative poll limit reached—QUEUE option.
24	44	64	OLTT request message.
25	45	65	BSC status message.
26	46	66	Negative poll limit reached—NOWAIT option.
27	47	67	Line trace output.

The following responses occur when the line is in monitor mode:

Response (Hex)	Meaning
EC	Disconnect received
ED	IPL required
EE	Permanent trunk error
EF	Block from queue caused an abnormal condition.

Extended Response Byte

The extended response byte contains either a normal extended response or a conditional extended response. The normal extended response appears in both BCULRES and the second byte of IOBSTAT. It has the following format.



A conditional extended response applies to one specific system response and does not have a fixed format. It appears only in BCULRES.

Extended Responses

	Initial Status
000	Control mode.
001	Text mode.
010	Transparent text mode (BSC only).
011	Heading mode (BSC only).
100	Special.
111	Hardware/user error.

Normal Final Status when Initial Status = Control, Text, Transparent Text, or Heading

. . . 0 000 .	Time-out — Some character(s) have been received, but may not be stored (Control mode).
. . . 0 010 .	Cutoff — This bit indicates that a controlled length field (for example, an ID field) was too long and was cut off at the end of the correct length.
. . . 0 011 .	Reply to transmitted data was an ENQ — transmission is aborted.
. . . 0 100 .	An EOT was received on a block that began without an STX, SOH, or $\text{\textcircled{D}}$, i.e., text received in control mode.
. . . 0 101 .	End of DLE control (BSC only).
. . . 0 110 .	Wrong ACK — ACK1 received when ACK0 was expected, or ACK0 was received when ACK1 was expected.
. . . 0 111 .	For start-stop, NAK returned in response to a selection, poll, write, or NAK reply to text. For BSC, an EOT returned in response to a selection, poll, or write.
. . . 1 000 .	Received sub-block.
. . . 1 001 .	End of text.
. . . 1 010 .	End of block.
. . . 1 011 .	Data or leading graphics received with an ENQ, or ENQ by itself.
. . . 1 100 .	EOT received with no errors.
. . . 1 101 .	Reverse interrupt.
. . . 1 110 .	Positive ACK returned and no errors indicated on a write operation.
. . . 1 111 .	WACK received (could be an error condition).

Final Status when Initial Status = Special

...0 000 .	Time-out with nothing received.
...0 001 .	Command reject – should not occur error – set by the communications scanner code.
...0 010 .	Level 2 and level 3 buffer pools depleted – level 5 may still have buffers left. When this bit is on, data is lost.
...0 011 .	Selected (BSC tributary only).
...0 100 .	Received disconnect signal on TWX or DLE/EOT on BSC.
...0 101 .	Data was received when it was not expected.
...0 110 .	A reset occurred.
...0 111 .	The device has been polled.
...1 000 .	Transmitted sub-block (NCP2, NCP#).
...1 001 .	An EOT was sent after a specified number of WACKs were received in response to a request or operation.
...1 010 .	Received break in text (two consecutive stop-bit errors). The last two characters stored are invalid. They may be incorrect length control characters or all spaces.
...1 011 .	Polling stop – Device was polled to the polling limit and responded negatively, or a Read Initial with a single polling modifier was directed to a polled line.
...1 100 .	EOT transmitted.
...1 101 .	Received a break signal while transmitting.
...1 110 .	Disconnected.
...1 111 .	Connected.

Final Status when Initial Status = Hardware/User Error

...0 000 .	User error (MTA support), normally indicates an incorrect NCP generation.
...0 010 .	Level 1 communication scanner check.
...0 100 .	Communications line adapter check—Occurs whenever a level 2 interrupt (not dependent on an external source) is expected and not received. For example, after starting to transmit, a level 2 interrupt is expected. If none is returned, the internal clock should be suspected of not working properly.
...0 101 .	Communications scanner adapter feedback check. (Signaled when LCP goes to 'F')
...0 110 .	Equipment check.
...1 000 .	Modem error – Comes on with the modem check bit in the SCF field of the ICW. Not used for single current telegraph.
...1 001 .	Modem transmit clock or clear-to-send error – Comes on when in the transmit mode and the first character cannot be transmitted. Indicates an external clock error.
...1 010 .	DSR-on check – For leased lines, comes on if data-set-ready doesn't come up within three seconds after data-terminal-ready.
...1 100 .	DSR-off check – For switched lines, comes on if data-set-ready doesn't drop within three seconds of data-terminal-ready.
...1 110 .	ACU check – No response was received from an ACU when one was expected. If this bit is on, check that the NCP generation parameter that sets the autocal timeout contains a greater value than the timeout duration in the ACU.
...1 111 .	Program failure.

Leading Graphics Flag

.... .1	Leading graphics received.
---------	----------------------------

Conditional Extended Responses

Extended Response when System Response = X'9F'

- X'82' Change-speed command is invalid for the line.
- X'83' Specified line is unavailable.
- X'84' Error lock.
- X'E0' Switch-line-mode command was received but line not generated as mode-switchable.
- X'E1' Switch-line-mode command was received but a command is already executing on the line or line trace is active on the line.



Section 9: NCP# Exception Responses*

Exception responses are identified by RH byte 0, bit 5. If this bit is on, the RU is displaced four bytes to make room for sense data. The first two bytes (bytes 0 and 1) contain the exception response code. The second two bytes (bytes 2 and 3) contain user-specified sense information.

Exception Response Code	Meaning
X'0064' X'0065'	User sense data: invalid BSC device. User sense data: inactive BSC device.
X'0801' X'0805' X'0806' X'0809' X'080A' X'080C' X'0812' X'0813' X'0814' X'0815' X'0816' X'0817' X'0818' X'081A' X'081C' X'0820' X'0821' X'0822'	Request reject: resource not available. Request reject: session limit exceeded. Request reject: resource unknown. Request reject: mode inconsistency. Request reject: permission rejected. Request reject: function not supported. Request reject: insufficient resource. Request reject: bracket bid reject. Request reject: physical unit not active. Request reject: function active. Request reject: function inactive. Request reject: link inactive. Request reject: link procedure in progress. Request reject: sequence error. Request reject: function not executable. Request reject: control vector error. Request reject: invalid session parameters. Request reject: link procedure failure.
X'1001' X'1002' X'1003' X'1007'	Request error: RU data error. Request error: RU length error. Request error: function not supported. Request error: category not supported.
X'2001' X'2003' X'2005'	State error: sequence number. State error: bracket. State error: data traffic not started.
X'4006' X'4008'	RH error: exception not allowed. RH error: pacing not supported.
X'8002' X'8004' X'8005' X'8006' X'8007' X'800C' X'800D'	Path error: link failure. Path error: unrecognized DAF. Path error: no session. Path error: invalid FID. Path error: segmentation not supported. Path error: DCF error. Path error: lost contact.

*Refer to *Systems Network Architecture Reference Summary* for non-NCP Exception Responses.



Section 10: 3704 and 3705 Instruction Set

Instruction	Format Code	Mnemonic	Operand Field Format
Add Character Register	RR	ACR	R1(N1),R2(N2)
Add Halfword Register	RR	AHR	R1,R2
Add Register	RR	AR	R1,R2
Add Register Immediate	RI	ARI	R(N),1
And Character Register	RR	NCR	R1(N),R2(N2)
And Halfword Register	RR	NHR	R1,R2
And Register	RR	NR	R1,R2
And Register Immediate	RI	NRI	R(N),1
Branch	RT	B	T
Branch and Link	RA	BAL	R,A
Branch and Link Register	RR	BALR	R1,R2
Branch on Bit	RT	BB	R(N),M,T
Branch on Count	RT	BCT	R(N),T
Branch on C Latch	RT	BCL	T
Branch on Z Latch	RT	BZL	T
Compare Character Register	RR	CCR	R1(N1),R2(N2)
Compare Halfword Register	RR	CHR	R1,R2
Compare Register	RR	CR	R1,R2
Compare Register Immediate	RI	CRI	R(N),1
Exclusive Or Character Register	RR	XCR	R1(N1),R2(N2)
Exclusive Or Halfword Register	RR	XHR	R1,R2
Exclusive Or Register	RR	XR	R1,R2
Exclusive Or Register Immediate	RI	XRI	R(N),1
Exit	EXIT	EXIT	
Input	RE	IN	R,E
Insert Character	RS	IC	R(N),D(B)
Insert Character and Count	RSA	ICT	R(N),B
Load	RS	L	R,D(B)
Load Address	RA	LA	R,A
Load Character Register	RR	LCR	R1(N1),R2(N2)
Load Character with Offset Reg.	RR	LCOR	R1(N1),R2(N2)
Load Halfword	RS	LH	R,D(B)
Load Halfword Register	RR	LHR	R1,R2
Load Halfword with Offset Reg.	RR	LHOR	R1,R2
Load Register	RR	LR	R1,R2
Load Register Immediate	RI	LRI	R(N),1
Load with Offset Register	RR	LOR	R1,R2
Or Character Register	RR	OCR	R1(N1),R2(N2)
Or Halfword Register	RR	OHR	R1,R2
Or Register	RR	OR	R1,R2
Or Register Immediate	RI	ORI	R(N),1
Output	RE	OUT	R,E
Store	RS	ST	R,D(B)
Store Character	RS	STC	R(N),D(B)
Store Character and Count	RSA	STCT	R(N),B
Store Halfword	RS	STH	R,D(B)
Subtract Character Register	RR	SCR	R1(N1),R2(N2)
Subtract Halfword Register	RR	SHR	R1,R2
Subtract Register	RR	SR	R1,R2
Subtract Register Immediate	RI	SRI	R(N),1
Test Register Under Mask	RI	TRM	R(N),1

3704 and 3705 Instruction Decode

These charts may be used to decode the four digit hexadecimal representation of a 3704 and 3705 machine instruction.

Use the chart as follows:

- (1) Locate the first digit (D₁) of the instruction in hex in the column of numbers on the left side of Table I.
- (2) Locate the second digit of the instruction in the row of numbers at the top of Table I.
- (3) Go to the intersection of the column and row represented by the two numbers. You will find either the mnemonic or a reference to Table II, Table III, or Table IV.

Tables II and IV require that you locate digit three (D₃) only of the instruction in the row of digits at the top of each chart. Follow the instructions for Table I to use Table III, substituting digit three (D₃) and digit four (D₄).

Table I

		(D ₂)															
		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
(D ₁)	0	Table III								Table II							
	1																
	2																
	3																
	4																
	5																
	6																
	7																
	8	LRI								BZL							
	9	ARI								BCL							
	A	SRI								B							
	B	CRI								Table IV							
	C	XRI								BB							
	D	ORI															
	E	NRI															
	F	TRM															

Table II

		(D ₃)															
		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
		IC								STC							

(D4) Table III

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
(D3) 0	*								LCR							
1	ICT								AQR							
2	*								SCR							
3	STCT	LH	L	LH		LH	L	LH	CCR	LH	L	LH		LH	L	LH
4	BALR								XCR							
5	*								OCR							
6	*								NCR							
7					OUT				LCOR				IN			
8	LHR								LR							
9	AHR								AR							
A	SHR	STH	ST	STH		STH	ST	STH	SR	STH	ST	STH		STH	ST	STH
B	CHR								CR							
C	XHR								XR							
D	OHR								OR							
E	NHR								NR							
F	LHOR								LOR							

(D3) Table IV

0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
BAL	*	LA	*	EXIT		*		BCT							

Four Bytes *Denotes invalid operation.



I Section 11: Input/Output (External) Register Functions

INPUT REGISTERS

Register (Hex)	Function	
	Type 1 Scanner	Type 2 Scanner
40	Unused.	Interface address.
41	Interface address.	Unused.
42	Control A.	Unused.
43	Control B, C.	Check register.
44	Status.	ICW input register 0-15.
45	Unused.	ICW input register 16-31.
46	Unused.	Display register.
47	Unused.	ICW input register 32-45.
	Type 3 Scanner	
X'40'	Interface address	
X'41'	High speed select	
X'42'	DBAR/Check register0	
X'43'	Check register	
X'44'	ICW byte 0 and PDF array	
X'45'	ICW bytes 2 and 3-LCD/PCF/SDF	
X'46'	Display register	
X'47'	ICW bytes 4 and 5	
X'48'	ICW bytes 6 and 7-Cycle steal control	
X'49'	ICW bytes 8 and 9-Cycle steal address	
X'4A'	ICW bytes 10 and 11-BCC	
X'4B'	ICW byte 16-Extended PCF	
X'4C'	PDF array bits 0-10	
X'4E'	ICW bytes 12 and 13-PDF array control	
X'4F'	Status bytes	
	Type 2/3 CA	
50	INCWAR	
51	OUTCWAR	
52	Control word byte count.	
53	Sense register.	
54	Status register.	
55	Control register.	
56	Check register.	
57	Unused.	
58	Channel bus out diagnostic register.	
59	Cycle steal address register.	
5A	Channel adapter data buffer.	
5B	Channel tag diagnostic register.	
5C	Command register.	
5D	Unused.	
5E	Unused.	
	Type 1/4 CA	
60	Initial selection control.	
61	Initial selection address and command.	
62	Data/status control.	
63	Address and ESC status.	
64	Data buffer bytes 1 and 2.	
65	Data buffer bytes 3 and 4.	
66	NSC status byte.	
67	Control.	
6C	Control (type 4 CA).	
6D	EB mode data register (type 4 CA).	

INPUT REGISTERS (cont)

Register (Hex)	Function
	Diskette
68	Level 1 status.
69	Level 3 status.
6A	Parallel data register placed on INBUS.
6B	IPL information.
	CCU
70	Storage size installed.
71	Panel A address/data bits.
72	Panel display function select switch controls.
73	Insert storage protection key.
74	Logging address register (LAR).
76	Adapter level 1 interrupt request.
77	Adapter level 2 or 3 interrupt request.
79	Utility.
7B	BSC CRC register.
7C	SDLC CRC register.
7D	CCU check register.
7E	CCU level 1 interrupt request.
7F	CCU level 2,3, or 4 interrupt request.

OUTPUT REGISTERS

Register (Hex)	Function	
	Type 1 Scanner	Type 2 Scanner
40	Set Mode bit override and override remember.	Interface address.
41	Start scanner and reset L2 bit service request.	Address substitution control.
42	Control A.	Upper scan limit control.
43	Control B.	Control.
44	General control.	ICW 0-15.
45	Scanner control.	ICW 16-23.
46	Set character service pending, start scanner, reset L2 bit request.	ICW 24-33,44.
47	Force bit service L2 request.	ICW 34-43.
	Type 3 Scanner	
40	ABAR loader	
41	Substitution control loader	
42	DBAR/Scan limits	
43	Control	
44	SCF/PDF	
45	LCD/PCF/EPCF	
46	SDF	
47	Miscellaneous ICW bits	
48	Cycle steal control and byte count	
49	Cycle steal address register	
4A	Block check character (BCC)	
4C	PDF array	
4D	ICW cycle steal PDFs (SDLC)	
4E	Cycle steal/PDF pointers-ICW control	
4F	Status bytes	
	Type 2/3 CA	
50	INCCWAR.	
51	OUTCCWAR	
53	Sense register.	
54	Status register.	
55	Control register.	
56	Reset control register bits.	
57	Channel adapter mode register.	
58	Channel bus out diagnostic register.	
5A	Channel adapter data buffer.	
5B	Channel tag diagnostic register.	
	Type 1/4 CA	
60	Reset initial selection.	
62	Data status control.	
63	Address and ESC status.	
64	Data buffer bytes 1 and 2.	
65	Data buffer bytes 3 and 4.	
66	NSC status byte.	
67	Control.	
6C	Control (type 4 CA).	
6D	EB mode data register (type 4 CA).	

OUTPUT REGISTERS (cont)

Register (Hex)	Function
	Diskette
68	Control-arm.
69	Control-Read/Write.
6A	Parallel data register placed on OUTBUS.
6B	IPL Information.
	CCU
70	Hard stop.
71	Display register 1.
72	Display register 2.
73	Set key.
77	Miscellaneous Control.
78	Force CCU checks.
79	Utility.
7C	Set PCI L3.
7D	Set PCI L4.
7E	Set mask bits.
7F	Reset mask bits.

Section 12: Modem Leads

INPUT REGISTER X'46' contains the modem leads.

Emulator Program

	Data Line	Autocall
Byte 0, Bit 0	Clear to Send	Abandon Call and Retry
Bit 1	Ring Indicator	Present Next Digit
Bit 2	Data Set Ready	Data Line Occupied
Bit 3	Receive Line Signal	Power Indicator
Bit 4	Receive Data Bit Buffer	Zero (reserved)
Bit 5	Diagnostic Wrap Mode	Call Originating Status
Bit 6	Bit Service Request	Bit Service Request
Bit 7	Zero (reserved)	Zero (reserved)
Byte 1, Bit 0	0	0
Bit 1	0	0
Bit 2	0	0
Bit 3	0	0
Bit 4	0	0
Bit 5	0	0
Bit 6	0	0
Bit 7	0	0

NCP

	Data Line	Autocall
Byte 0, Bit 0	Clear to Send	Abandon Call and Retry
Bit 1	Ring Indicator	Present Next Digit
Bit 2	Data Set Ready	Data Line Occupied
Bit 3	Receive Line Signal	Digit Present
Bit 4	Receive Data Bit Buffer	Call Request
Bit 5	Diagnostic Wrap Mode	Call Originating Status
Bit 6	Bit Service Request*	Bit Service Request
Bit 7	Zero (Reserved)	Interrupt Remember
Byte 1, Bit 0	0	0
Bit 1	0	0
Bit 2	0	0
Bit 3	0	0
Bit 4	0	0
Bit 5	0	0
Bit 6	0	0
Bit 7	0	0

*Not applicable for type 3 scanner.



Section 13. Interface Control Word (ICW)

Type 2 Scanner

OUTPUT X'44'				OUTPUT X'45'				OUTPUT X'46**				OUTPUT X'47'			
0		15	16		23	24		33	34		43				
INPUT X'44'				INPUT X'45'				INPUT X'47'							
0		15	16					31	32				45		
0	7	8		15	16	19	20	23	24		33	34		47	
SCF Secondary Control Field	PDF Parallel Data Field		LCD Line Control Definer		PCF* Primary Control Field		SDF Serial Data Field		Flags						

*All bits in the PCF are reset to zero with power-on reset.

**Also sets bit 44.

ICW Field Definitions

SCF

Bit

- 0 Stop bit check/receive break/abort (SDLC)
- 1 Service request
- 2 Character overrun/underrun
- 3 Modem check
- 4 Receive line signal detector
- 5 Flag detection/disable zero-insert remembrance (SDLC)
- 6 Program flag
- 7 Pad flag/disable zero-insert control (SDLC)

PDF Autocall Interface

Bit

- 4 Digit NBR 8
- 5 Digit NBR 4
- 6 Digit NBR 2
- 7 Digit NBR 1


LCD

Hex


- 0 SS 9/6
- 1 Reserved
- 2 SS 8/5
- 3 Autocall
- 4 SS 9/7
- 5 SS 10/7
- 6 SS 10/8
- 7 SS 11/8
- 8 SDLC monitor for flag
- 9 SDLC 8-bit byte-length
- A Reserved
- B Reserved
- C BSC EBCDIC
- D BSC ASCII
- E Reserved
- F Feedback check

ICW Field Definitions (Con't.)


PCF Start/Stop Line Interface

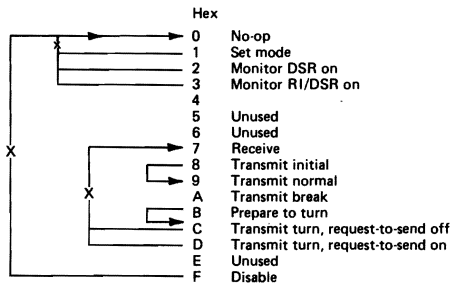

PCF BSC Line Interface

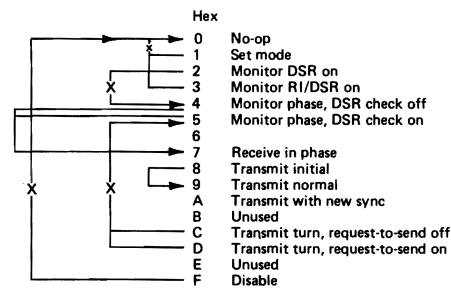

PCF Autocall Interface




SDF Autocall Interface

- Bit
- 24 Interrupt remember
 - 25 Power indicator (PWI)
 - 26 Call request (CRQ)
 - 27 Data Line occupied (DLO)
 - 28 Present next digit (PND)
 - 29 Digit present (DPR)
 - 30 Call originate status (COS)/Data set status (DSS)
 - 31 Abandon call and retry (ACR)
 - 32 Unused
 - 33 Unused

ICW Field Definitions (Con't.)

PCF Synchronous Data Link Control Interface

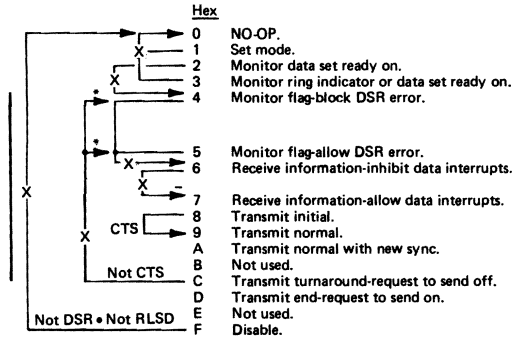

X = Level 2 interrupt.

*EBCDIC or USASCII SYNC character received.
(LCD-9 only).
**Tag nonflag character.

ICW Field Definitions (Con't.)

SDF Set Mode Line Interface


Bit	
24	Unused
25	Unused
26	Unused
27	Diagnostic wrap mode.
28	Set/reset data terminal ready.
29	Sync bit clock.
30	External clock.
31	Data rate select.
32	Oscillator select bit 1.
33	Oscillator select bit 2.

Flags

Bit	
*34-36	Ones counter (SDLC)
*37	Last line state (SDLC)
*38	Display request.
39-40	Reserved.
*41	Level 2 interrupt pending.
42	Priority 1.
43	Priority 2.
44	NRZI flag.
45-47	Parity

*These bits are reset to zero with power-on reset.

Type 3 Scanner

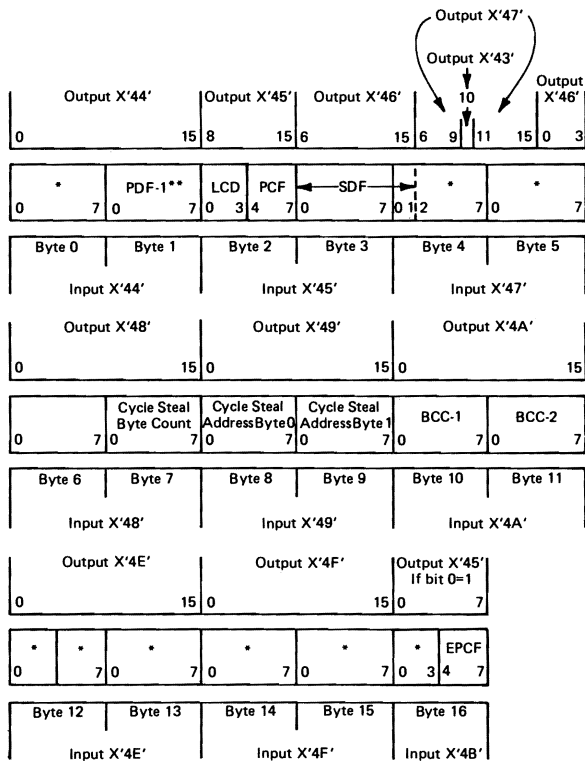

*See field definitions

**Part of PDF array

ICW Field Definitions


Byte 0
SCF (Secondary Control Field)

Byte 1
PDF-Dial

- Bit
- 0 Abort detect (SDLC)
 - 1 Service request
 - 2 Character overrun/underrun
 - 3 Modem check
 - 4 Not level 2 bid
 - 5 End of message
 - 6 Program flag
 - 7 Trace


- Bit
- 4 Digit lead 8
 - 5 Digit lead 4
 - 6 Digit lead 2
 - 7 Digit lead 1

PCF/EPCF (BSC)

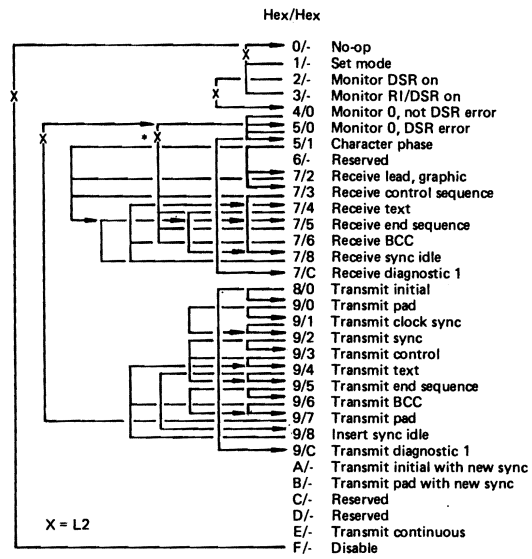

*Conditional interrupt

PCF-Dial



Byte 3-Byte 4
SDF Set Mode

- Byte/Bit
- 3/0 NRZI control-Set ICW 5/4
 - 3/1 Diagnostic 0-Set ICW 5/5
 - 3/2 Diagnostic 1-Set ICW 5/6
 - 3/3 Line address diagnostic wrap
 - 3/4 Data terminal ready
 - 3/5 Synchronous clock
 - 3/6 External clock set-Set ICW 5/7
 - 3/7 Data rate select
 - 4/0 Oscillator select 1
 - 4/1 Oscillator select 2

SDF Dial

Byte/Bit
3/0 Interrupt remember
3/1 Power indicator (PWI)
3/2 Call request (CRQ)
3/3 Data Line occupied (DLO)
3/4 Present next digit (PND)
3/5 Digit Present (DPR)
3/6 Call originate status (COS)
3/7 Abandon call and retry (ACR)

Byte 4 (continued)
Bit

2 Ones count-4
3 Ones count-2
4 Ones count-1
5 Last line state (SDLC)
6 Time-out control (BSC)
7 Display request
8 Ones count-8

Byte 5

Bit
0 Ones count-16
1 Level 2 interrupt pending
2 Priority bit 1
3 Priority bit 2
4 NRZI control (Set by SDF Set Mode)
5 Diagnostic 0 (Set by SDF Set Mode)
6 Diagnostic 1 (Set by SDF Set Mode)
7 External Clock (Set by SDF Set Mode)

Byte 6

Bit
0-3 Cycle steal address byte
4 ETB, ETX, or ENQ in data
5 Cycle steal valid
6 Data chain flag
7 Reserved

Byte 7 Cycle steal byte count

Byte 8 Cycle steal Address byte 0

Byte 9 Cycle steal address byte 1

Byte 10 Byte Count Character (BCC) 1

Byte 11 Byte Count Character (BCC) 2

Byte 12

Bit
0-3 Cycle steal-PDF array address
4-7 PDF-1 - array address

Byte 13

- Bit
- 0 Sequence 0
- 1 Sequence 1
- 2 RTS turn control
- 3 Sequence 2
- 4 Reserved
- 5 Reserved
- 6 Cycle steal message count field
- 7 Cycle steal message count field

Byte 14 (BSC)

- Bit
- 0 Received line signal detect
- 1 Format exception
- 2 Inhibit store of data in PDF-1
- 3 Data check
- 4 Bad pad flag
- 5 ACR expected
- 6 Leading DLE error
- 7 Length check

Byte 14 (SDLC)

- Bit
- 0 Received line signal detect
- 1 Idle detect
- 3 Data check
- 4 Flag off boundary
- 5 Reserved
- 6 Leading DLE error
- 7 Length check

Byte 15 (BSC) Control Sequence—Transmit

Initial Status	Bits						Final Status
	0	1	2	3	4	5	
(none)	0	0	0	0	1	1	Transmit ENQ, then turn line around
							Transmit ACK-0, then turn line around
							Transmit NAK, then turn line around
							Transmit RVI, then turn line around
							Transmit ACK-1, then turn line around
							Transmit WACK, then turn line around
STX	0	0	1	0	0	1	Transmit STX ENQ (TTD), then turn line around; set byte count to 0
							Transmit STX data ETX, then turn line around; do not skip byte for ITB in data
							Transmit STX data ETB, then turn line around; do not skip byte for ITB in data
							Transmit STX data ETX, then turn line around; skip byte if ITB occurs in data
							Transmit STX data ETB, then turn line around; skip byte if ITB occurs in data
							Transmit DLE STX data DLE ENQ, then turn line around
DLE STX	0	1	0	1	0	1	Transmit DLE STX data DLE ITB (no line turnaround)
							Transmit DLE STX data DLE ETX, then turn line around
							Transmit DLE STX data DLE ETB, then turn line around
							Transmit data DLE ETX, then turn line around (ITB sent previously via 010 0100 status byte)
							Transmit data DLE ETB, then turn line around (ITB sent previously via 010 0100 status byte)
							Transmit SOH data ENQ, then turn line around
SOH	0	1	1	0	1	1	Transmit SOH data ETX, then turn line around; do not skip byte for ITB in data
							Transmit SOH data ETB, then turn line around; do not skip byte for ITB in data
							Transmit SOH data ETX, then turn line around; skip byte if ITB occurs in data (Note: If DLE STX appears in data, scanner ends data with DLE ETX.)
							Transmit SOH data ETB, then turn line around; skip byte if ITB occurs in data (Note: If DLE STX appears in data, scanner ends data with DLE ETB.)
							Transmit EOT, then turn line around
							Transmit DLE EOT, then turn line around
Special	1	0	0	1	1	0	Transmit EOT, then turn line around
							Transmit DLE EOT, then turn line around

Byte 15 (BSC) Control Sequences—Receive

Initial Status—Bits 0-2		Final Status—Bits 3-6	
0 0 0	Control mode status (no text was received)	0 0 0 0	(Timeout occurred)
0 0 0 1	Text Mode status (first control character is STX)	0 0 0 1	ITB received
0 0 1 0	Transparent text mode status (DLE STX first control characters)	0 0 1 0	(reserved)
0 0 1 1	Heading status (first control character is SOH)	0 0 1 1	ENQ received
1 0 0 0	Special status (DLE EOT (Disconnect first control characters))	0 1 0 0	EOT received
1 0 0 1	(reserved)	0 1 0 1	DLE x received (x=second character of any valid DLE sequence)
1 0 1 0	(reserved)	0 1 1 0	Wrong ACK received
1 0 1 1	(reserved)	0 1 1 1	NAK received
1 1 0 0	(reserved)	1 0 0 0	(reserved)
1 1 0 1	(reserved)	1 0 0 1	ETX received
1 1 1 0	(reserved)	1 0 1 0	ETB received
1 1 1 1	(reserved)	1 0 1 1	(reserved)
		1 1 0 0	(reserved)
		1 1 0 1	RV1 received
		1 1 1 0	Positive ACK (ACK-0 or ACK-1) received
		1 1 1 1	WACK received

Leading Graphics bit (bit 7): Bit 7 is set on a BSC receive operation if the first character of the received message is not a control character.

Byte 15 (SDLC)

- Bit
- 0 Control exception-received non-information frame
 - 1 Reserved
 - 2 Reserved
 - 3 Program requested interrupt on line idle detect or flag
 - 4 Reserved
 - 5 After transmission, if no turn:
 - 1=Transmit flag
 - 0=Transmit idle
 - 6 Transmit pad before line turn
 - 7 Line turn after transmission

Byte 16

- Bit
- 0 New sync
 - 1 Data terminal ready (Set by SDF Set Mode)
 - 2 OLTT Diagnostic
 - 4-7 Extended PCF



Section 14: NCP and PEP Abend and EP Hardstop Codes

When an error that causes an abend (abnormal termination) occurs, the supervisor's abend processor (CXAABND) posts an abend code in halfword direct addressable storage location X'760'. Locating the abend code in the dump gives some insight into the reason for the abnormal termination. The abend code appears in Display A on the panel if it is set to Function 6.

If the condition causing the abend is detected in level 1, the contents of external register X'74' (LAR) are stored at location X'7BC' and the contents of external register X'79' are stored at location X'6A8'. These two registers indicate the address of the failing instruction and the program level that was executing when level 1 was entered.

X'0000' Indicates a possible CCU check that was not processed by NCP level 1.

The first byte of the abend code indicates which portion of the NCP detected the error. The second byte indicates the specific error that was detected.

Errors Detected by I/O Initiation Request, SVC Decoding, or a Level 1 Interrupt Handling Routine (Byte 0 = X'00')

X'0001' An invalid SVC code was executed.

X'0002' A protection exception occurred.

X'0003' An XIO macro to a communication line specified an invalid QCB address.

X'0004' An XIO macro to the channel specified a BCU containing invalid chain pointers.

X'0005' An XIO macro to the channel specified a BCU containing too much text (more than can ever be transferred with a single host read operation).

X'0006' An XIO macro to the channel specified a BCU enqueued to a system queue.

X'0007' An XIO macro to the channel was used while a task was still waiting on the ECB in the first buffer of the BCU.

X'0008' An XIO macro to the channel specified a BCU in which at least one buffer had too large a text count field in the buffer prefix.

X'0009' An addressing exception occurred.

X'000A' An input/output instruction exception occurred, and retry was not possible.

X'000D' An instruction attempted to branch to storage location X'0000'.

X'000E' A program check occurred in level 1.

X'000F' An XIO macro to the link specified an invalid address. (NCP#).

X'0010' A level 3 channel adapter interrupt occurred while the channel adapter was active, but the command register did not indicate a Read, Write, or Write Break command (type 2 CA only for NCP# or type 2/1 CA for NCP2).

X'0011' A level 3 channel adapter interrupt for a host Write or Write Break occurred, and neither zero count override nor channel stop was indicated. One of these conditions should be present for every host Write operation.

X'0012' An initial selection sequence on a type 1/4 channel adapter was undefined.

X'0013' An outbound BTU had an invalid chain field.

X'0014' A data/status sequence on a type 1/4 channel adapter was undefined.

X'0015' An XIO to the channel specified a BCU address outside the buffer pool.

X'0016' An XPORT macro specified an invalid buffer address. (NCP#).

X'0017' A level 1 channel adapter error occurred with a type 1 CA (NCP1, 2).

A level 1 channel adapter error occurred and the channel save chain was active with a type 2 CA (NCP1, 2).

An unrecoverable level 1 channel adapter check has occurred in a type 2 or type 3 CA. (NCP#).

X'0018' Zero count override was detected on a host read operation.

X'0019' An initial IN CW did not have the zero count override flag set for channel I/O.
 X'001A' The retry limit for an input or output instruction was exceeded.
 X'001B' The program attempted to execute an invalid operation code.
 X'001C' The program attempted to switch channel adapters via an XIO macro when the logic is not generated into the NCP.
 X'001D' The program attempted to use an XIO macro for a busy communication line.
 X'001E' More than one XIO macro was outstanding for the same BCU.
 X'001F' An XIO macro to the channel specified an invalid BTU text count.
 X'0020' The INCWAR in a type 2/3 channel adapter was incorrect (hardware error).
 X'0021' The access method pad size is larger than the host buffer unit size.
 X'0022' Outbound data pointers incorrect, program error. (NCP#).
 X'0023' Invalid PIU address issued to channel. (NCP#).
 X'0024' Out CW execution failure, hardware error. (NCP#).
 X'0025' Level 3 is not in initial selection or data status for type 1/4 channel adapter.
 X'0026' Attention delay PIU counter overflow or under flow.
 X'0028' UIBLBBA is equal to zero. (Program error).
 X'0029' Channel interface is disabled while the NCP is active.
 X'002A' During initialization a level 3 was not pending on the channel adapter that is being loaded across.
 X'002B' During initialization, a level 3 is pending on a channel adapter which SYSGENd inactive.
 X'002C' During initialization, a channel adapter which has been SYSGENd inactive can not be interface disabled within a reasonable time. Manual intervention may be required.

EP Hardstop/PEP Abend Codes (Located in group 0 register 1)

X'0030' Scanner address exception. (EP only).
 X'0032' L1 scanner ERP - Unable to recover from CCU outbus check. Unable to locate the failing output X'4x' instruction.
 X'0033' L1 CA ERP - Unable to select the failing channel adapter.
 X'0034' L1 CA ERP - I/O exception check. (EP only).
 X'0035' L1 CA ERP - Channel Adapter error occurred during ERP.
 X'0036' L1 CA ERP - Unable to recover from CCU outbus check. Unable to locate the failing output X'6x' instruction.
 X'0037' L1 CA ERP - CCU outbus check did not occur on L2 or L3.
 X'0038' Initialization - CCU interrupt request detected.
 X'0039' L1 CCU ERP - L5 issued an in or out instruction.
 X'003A' Initialization - Adapter check detected.
 X'003B' L1 CCU ERP - Unable to recover from inbus parity check. Unable to locate retry point for input X'6C'.
 X'003C' L1 CA ERP - Unable to recover from CCU outbus check. Unable to locate retry point for output X'6C'.
 X'003D' L1 ERP - L1 error rate threshold exceeded.
 X'003E' L1 CCU ERP - Program check. (EP only).
 X'003F' L1 ERP - Unable to determine interrupted level.
 X'0040' L3 interrupt from PEP and CA not system generated.
 X'0041' L1 ALC ERP - Unable to recover from ALC support L1 error. Unable to locate the failing input X'78' instruction.
 X'0042' L1 ALC ERP - Unable to recover from ALC support L1 error. Unable to locate retry point.

Errors Detected by Task Management (Byte 0 = X'01')

X'0102' A TRIGGER macro specified an invalid QCB.
X'0104' A reentrant CALL macro specified a non-reentrant subroutine, or a level 5 task issued a reentrant CALL macro to code that is not a subroutine.
X'0105' A level 5 task used a non-reentrant CALL macro when either the calling task or the called subroutine was reentrant.
X'0107' A BHR attempted to use a QPOST macro.
X'0108' A SETIME macro specified an interval greater than 43,200 seconds.
X'0109' A BHR attempted to use the QPOST operand on a SYSXIT macro.
X'010C' A task attempted to use a SYSXIT macro while save area(s) were still allocated to its queue control block.
X'010D' A COPYPIU macro specified an RU count too high. (NCP#).
X'010E' A QPOST macro specified an invalid QCB address.
X'010F' A TPPOST macro specified a BCU with an invalid resource ID.
X'0111' A TPPOST macro specified an invalid BCU address (address low).
X'0112' A TPPOST macro specified an invalid BCU address (address high).
X'0113' A COPYPIU macro specified an invalid old buffer address (address low). (NCP3).
X'0114' A COPYBCU macro specified an invalid old buffer address.
X'0115' A COPYPIU macro specified an invalid new buffer address (address low). (NCP3).
X'0116' A COPYBCU macro specified an invalid new buffer address (address high).
X'0117' A task attempted to use an EXECBHR macro when the point 3 BHR queue was empty.
X'0118' A user BHR dequeued a BCU and failed to return it to the queue (via an INSERT macro) prior to the execution of an IBM BHR.
X'0119' A BHR attempted to use an EXECBHR macro.
X'0120' A dynamic save area pool was incorrectly structured.
X'0121' A SETIME macro specified an ECB address outside the buffer pool.
X'0122' A SETIME macro specified an invalid QCB address.
X'0129' A CHAP macro specified an invalid QCB address.
X'012D' A task attempted a reentrant return when no save area was currently allocated to the task.
X'0130' A POST macro specified an ECB whose status was already "event complete".
X'0131' A task attempted to change the dispatching priority of a waiting QCB to APPNDG.

Errors Detected by Queue Management (Byte 0 = X'02')

X'0201' An ENQUE macro specified an element that was already enqueued.
X'0202' An INSERT macro specified an element that was already enqueued.
X'0203' An EXTRACT macro specified the same address for the QCB and the positional element.
X'0204' Unassigned.
X'0205' An INSERT macro specified an element at the end of a queue.
X'0206' An INSERT macro specified the same address for the element to be inserted and the element after which it was to be inserted.
X'0207' An INSERT macro specified the same address for the element to be inserted and the QCB governing the queue.
X'0208' An ENQUEUE macro specified the same address for the element to be enqueued and the QCB governing the queue.
X'0209' A BHR attempted to use an ENQUE macro specifying an active queue control block.

X'0210' An ENQUE macro specified an element outside the buffer pool.
X'0211' An INSERT macro specified an element outside the buffer pool (positional element).
X'0212' An INSERT macro specified an element outside the buffer pool (insertion element).
X'0213' An EXTRACT macro specified an element outside the buffer pool (positional element).
X'0214' Unassigned.
X'0215' An ADVAN macro specified an element outside the buffer pool (positional element).
X'0216' A DEQUE macro specified an invalid QCB address.
X'0217' An ENQUE macro specified an invalid QCB address.
X'0218' A POINT macro specified an invalid QCB address.
X'0219' An INSERT macro specified an invalid QCB address.
X'021A' An INSERT macro specified the active QCB.
X'021B' An ENQUE macro attempted to enqueue the active QCB.

Errors Detected by Buffer Management (Byte 0 = X'03')

X'0301' A CHAIN macro specified a buffer that was already chained.
X'0302' A CHAIN macro specified the same address for the buffer to be chained and the buffer to which it was to be chained.
X'0304' A RELEASE macro specified a BCU containing more buffers than the system limit on buffers per BCU.
X'0306' A RELEASE macro specified a BCU enqueued to a system queue.
X'0307' The BCU specified in a RELEASE macro had a task still waiting on its event control block.
X'030A' A LEASE macro specified a buffer count too high.
X'030F' A RELEASE macro specified a buffer outside the buffer pool (buffer address low).
X'0310' A CHAIN macro specified a positional buffer outside the buffer pool.
X'0311' A CHAIN macro specified that a buffer outside the buffer pool be chained.
X'0312' An UNCHAIN macro specified a positional buffer outside the buffer pool.
X'0314' A SCAN macro specified a buffer outside the buffer pool (positional buffer address).
X'0315' A RELEASE macro specified a buffer outside the buffer pool (buffer address high).
X'0316' Initialization routines were unable to allocate buffers.
X'0318' A LEASE macro specified an ECB address outside the buffer pool.
X'0319' A LEASE macro specified a buffer count of 0.
X'0320' The buffer pool size and the buffer availability count were in conflict.
X'0321' Less than 20 buffers were formatted during initialization of the NCP.
X'0322' A RELEASE macro specified a buffer already in the tree buffer pool.

Errors Detected by Supervisory Services (Byte 0 = X'04')

X'0401' A GETBYTE macro specified a BCU address outside the buffer pool.
X'0403' A PUTBYTE macro specified a BCU address outside the buffer pool.
X'0405' A GETBYTE macro specified a BCU with an incorrect text length.
X'0406' A PUTBYTE macro specified a BCU with an incorrect text offset (in one or more of the buffer prefix fields), or a PUTBYTE macro with the operand UPDATE = YES specified a BCU with an incorrect text length.
X'0407' A GETIME macro specified invalid options.

Hardware Related and Miscellaneous Errors (Bytes X'05', X'07', X'08')

- X'0501' The retry limit for unresolved level 1 interrupts was exceeded.
- X'0502' The retry limit for unresolved level 3 channel adapter interrupts was exceeded.
- X'0503' A nonrecoverable channel adapter check occurred.
- X'0504' A nonrecoverable communication scanner check occurred.
- X'0505' A type 2 channel adapter cycle steal protection exception occurred.
- X'0506' A type 2 channel adapter cycle steal addressing exception occurred.
- X'0507' The retry limit for recoverable channel adapter checks was exceeded.
- X'0508' The retry limit for recoverable communication scanner checks was exceeded.
- X'050A' A channel adapter check could not be resolved.
- X'050B' A communication scanner check could not be resolved.
- X'050C' A program level 1 interrupt could not be resolved.
- X'050D' A machine check or IPL request was not serviced by hardware.
- X'050E' A program level 3 interrupt could not be resolved.
- X'050F' A program level 4 timer interrupt request expired and the timer interval was not scheduled.
- X'0510' NCP generation conflict—the NCP was not configured for the type of communication scanner installed.
- X'0521' NCP generation conflict—program level 1 was not configured for the type of channel adapter installed.
- X'0522' NCP generation conflict—an interrupt occurred from an inactive or undefined channel adapter. The channel adapter, if installed, should have been switched offline by the operator at the 3705 and should have remained disabled.
- X'0523' Type 3 scanner addressing exception.
- X'0524' Type 3 scanner storage protection exception.
- X'0525' Load module is too large. Code and/or blocks that must reside below 64K are above 64K.

- X'0701' ANS initiated by the remote NCP.
- X'0702' ANS initiated at the remote controller's panel.
- X'0703' SIM received by the remote NCP.
- X'0800' The link used by load program 2 was not defined at NCP generation.

Errors Detected in Level 5 (Byte 0 = X'10, X'30)

- X'1001' A BCU with a Restart command contained an error in the text length field.
- X'1002' The line control block (LCB) contained an invalid resource ID.
- X'1003' The subtask sequence pointer in the LCB was not initialized.
- X'1004' The BTU contained an invalid command modifier.
- X'1005' After BHR execution, the device input queue was empty (point 1).
- X'1006' After BHR execution, the line I/O queue was empty (point 2).
- X'1007' After BHR execution, the point 3 BHR queue was empty.
- X'1008' A task associated with the point 3 BHR queue was dispatched.
- X'1009' The backspace BHR was dispatched, but the queue was empty.
- X'100A' A data manipulation error occurred in the backspace BHR.
- X'100B' The date/time BHR was dispatched, but the queue was empty.
- X'100C' All 'skip' flags were set in the service order table (SOT).
- X'100D' The number of dial digits passed from the host was not equal to the BTU text length.

X'100E' No Reset command was found at the end of an operation that was being reset.
 X'100F' The device base (DVB) contained an invalid resource ID.
 X'1010' An invalid system resource ID was specified in the BCU.
 X'1011' An invalid checkpoint data length was specified in the BCU.
 X'1012' The BH set pointer (DVIBHSET) in the DVB did not match any entry in the system BH set table (BST).
 X'10EE' IOBPOLL points outside SOT.
 X'10FF' Pending sessions count is negative.
 X'3000' A task was dispatched with an empty QCB. (NCP#).
 X'3001' Invalid UIB status in PIU. (NCP#).
 X'3002' Invalid XIO return code. (NCP#).
 X'3003' Invalid XPORT return code. (NCP#).
 X'3004' Module CXDESSA entered when Deactivate Line halt is in progress. (NCP#).
 X'3005' CXDCPSI unable to route PIU to SSCP. (NCP#).
 X'3006' Reset Immediate XIO failed. (NCP#).
 X'3007' Invalid PIU Format. (NCP#).
 X'3008' Segmentation parameter N = zero. (NCP#).
 X'3009' Segmentation parameters conflict. (NCP#).
 X'300A' Run Terminator triggered with invalid status. (NCP#).
 X'300B' Invalid Network Address in LKB. (NCP#).
 X'300C' Invalid input passed to routine. (NCP#).
 X'300D' LCB contains no PIU. (NCP#).
 X'300E' CXDKFMR passed a request code to a routine which does not handle that request code. (NCP#).
 X'300F' XIO Link failed on validated PIU. (NCP#).
 X'3010' XPORT failed on validated PIU. (NCP#).
 X'3011' XIO SETMODE failed. (NCP#).
 X'3012' Invalid UIB type field. (NCP#).
 X'3013' Invalid network address in CCU. (NCP#).
 X'3014' Remote NCP received SNRM from local NCP. (NCP#).
 X'3015' Remote NCP received DISC from local NCP. (NCP#).
 X'3016' Remote detected permanent error in path to local and ANS is not in system. (NCP#).
 X'3017' Inbound flow in SSCP-PU session of a type 1 PU.
 X'3018' Begin bracket PIU not on queue.
SDLC/BSC Path Function Abend Codes
 X'3019' A DEQUE macro was issued by SPF CPM-in and there was no error PIU on the APPL process QCB.
 X'301A' An ADVAN macro was issued by SPF CPM-in and there was no error PIU on the APPL process QCB.
 X'301B' An XPORT macro, issued by SPF CPM-in, failed for unknown reason.
 X'301C' An XPORT macro, issued by SPF CPM-in, failed for an unknown reason during FID1-to-FIDO conversion.
 X'301D' An XPORT macro, issued by SPF CPM-in, failed for an unknown reason during the export of a FID1 PIU.

X'301E' An XPORT macro was issued by an IBM point 3 BHR before the PIU was converted.

X'301F' A DEQUE macro was issued by SPF CPM-out and there was no error PIU on the APPL process QCB.

X'3020' An XPORT macro, issued by the build error module (CXDSERR), failed for an unknown reason.

X'3021' A POINT macro was issued by the build error module (CXDSERR) and there was no PIU on the APPL process QCB.

X'3025' Lines or links not quiesced count went negative.

X'3026' Auto network shutdown RVT scan error. (SNA)

X'3027' An undefined Contact Poll command was detected during SNA auto network shutdown.

X'3028' The remote NCP detected a condition on the active link to the local NCP which requires backup link monitoring. Although there are backup links to the local controller, there is no backup monitor code.

Load Program 2 (LPG2) Error Codes (conditions causing an unconditional hardstop).

X'30F0' No local/remote communication link defined as active in the remote ILP configuration data set (CDS).

X'30F1' Type 1 Scanner failed to enable, hardware error or CDS definition error.

X'30F2' CDS invalid.

Load Program 2 (LPG2) Abend Codes (conditions causing a conditional hardstop).

X'3F01' No local/remote communication link active (enable failed or transmit initial failed).

X'3F02' DISC (disconnect) received while monitoring one line. LPG2 re-IPLs to monitor all CDS lines.

X'3F03' SNRM (set normal response mode) received while monitoring one line and load final not yet received. LPG2 re-IPLs to monitor all lines.

X'3F04' Timer expiration. User-specified inactive interval has expired.

X'3F05' Level 1 error.

X'3F10' SIM (set initialization mode) received during the load or dump state.



Section 15: Line Character Codes

ASCII Character Code (even parity, 2B48/2260)

PDF Code	S/360 S/370 Code	ASCII			PDF Code	S/360 S/370 Code	ASCII		
		Line Code	Control Character	Graphics Character			Line Code	Control Character	Graphics Character
03	03	60	ETX		81	01	CO		
06	2E	30	ACK		82	02	A0	SOH	
0A	37	21	LF	(Note 1)	84	37	90	STX	
18	18	0C	LF		95	3D	D4	EOT	
21	18	42	CAN	(Note 2)	A0	40	82	NAK	
22	18	22		(Note 3)	A3	78	E2	SP	
24	5B	12		\$	A5	6C	D2	#	
27	7D	72		(A6	50	B2	%	
28	4D	0A		(A9	5D	CA)	
2B	4E	6A		+	AA	5C	AA	*	
2D	60	5A		-	AC	6B	9A	.	
2E	4B	3A		.	AF	61	FA	/	
30	F0	06		0	B1	F1	C6	1	
33	F3	66		3	B2	F2	A6	2	
35	F5	56		5	B4	F4	96	4	
36	F6	36		6	B7	F7	F6	7	
39	F9	4E		9	B8	F8	8E	8	
3A	5E	2E		:	BB	5E	EE	:	
3C	4C	1E		<	BD	7E	DE	>	
3F	6F	7E		>	BE	6E	BE	>	
41	C1	41	A	A	C3	83	E1	c	
42	C2	21	B	B	C5	85	D1	e	
44	C4	11	D	D	C6	86	B1	f	
47	C7	71	G	G	C9	89	C9	i	
48	C8	09	H	H	CA	91	A9	j	
4B	D2	69	K	K	CC	93	99	l	
4D	D4	59	M	M	CF	96	F9	o	
4E	D5	39	N	N	D1	98	C5	q	
50	D7	05	P	P	D2	99	A5	r	
53	E2	65	S	S	D4	A3	95	t	
55	E4	55	U	U	D7	A6	F5	w	
56	E5	35	V	V	D8	A7	8D	x	
59	E8	4D	Y	Y	DD	A7	DD	(Note 4)	
5A	E9	2D	Z	Z	E1	81	C3	a	
5F	6D	7D			E2	82	A3	b	
60	7C	03			E4	84	93	d	
63	C3	63	C	C	E7	87	F3	g	
65	C5	56	E	E	E8	88	8B	h	
66	C6	33	F	F	EB	92	EB	k	
69	C9	48	I	I	ED	94	DB	m	
6A	D1	28	J	J	EE	95	BB	n	
6C	D3	18	L	L	F0	97	87	p	
6F	D6	7B	O	O	F3	A2	E7	s	
71	D8	47	Q	Q	F5	A4	D7	u	
72	D9	27	R	R	F6	A5	87	v	
74	E3	17	T	T	F9	A8	CF	y	
77	E6	77	W	W	FA	A9	AF	z	
78	E7	0F	X	X	FC	5F		~	
7E	4F	3F	I	I					

- Notes:
1. Displayed on the 2260 as the New Line (^) symbol. Causes a carriage return and line feed on the 1050 Model 4 Printer.
 2. Displayed on the 2260 as the EOM (=) symbol. Prints on the 1050 Model 4 Printer as the exclamation mark (!).
 3. Displayed on the 2260 as the Check (#) symbol. Prints on the 1050 Model 4 Printer as the quote (").
 4. Displayed on the 2260 as the Start MI (») symbol. Prints on the 1050 Model 4 Printer as the cent sign (¢).

ASCII Character Code (odd parity)

ASCII					ASCII				
PDF Code	S/360 S/370 Code	Line Code	Control Character	Graphics Character	PDF Code	S/360 S/370 Code	Line Code	Control Character	Graphics Character
00*	00	00*	NUL		3E	6E	3E		>
00*	17	(00)*	NUL		BF	BF	BF		? @
01	01	01	SOH		40	7C	40		A
02	02	02	STX		C1	C1	C1		B
03*	03	03*	ETX		C2	C2	C2		C
04	37	04	EOT		43	C3	43		D
05*	2D	05*	ENQ		C4	C4	C4		E
86	2E	86	ACK		45	C5	45		F
07	2F	07	BEL		46	C6	46		G
08	16	08	BS		C7	C7	C7		H
89	06	89	HT		C8	C8	C8		I
8A	15	(8A)	LF		49	C9	49		J
8A	25	8A	LF		4A	D1	4A		K
0B	08	0B	VT		CB	D2	CB		L
8C	0C	8C	FF		4C	D3	4C		M
0D	0D	0D	CR		CD	D4	CD		N
0E	0E	0E	SO		CE	D6	CE		O
8F	0F	8F	SI		4F	D6	4F		P
10	10	10	DLE		D0	D7	D0		Q
91	11	91	DC1		51	D8	51		R
92	12	92	DC2		52	D9	52		S
13	13	13	DC3		D3	E2	D3		T
94	3C	94	DC4		54	E3	54		U
15	3D	15	NAK		D5	E4	D5		V
16	32	16	SYN		D6	E5	D6		W
17*	26	17*	ETB		57	E6	57		X
98	18	98	CAN		58	E7	58		Y
19	19	19	EM		D9	E8	D9		Z
1A	3F	1A	SUB		DA	E9	DA		[\]
1A	CF	1A	SUB		5B	4A	5B		
1A	E0	(1A)	SUB		DC	E1	DC		^
9B	27	9B	ESC		5D	5A	5D		_
1C	1C	1C	FS		5E	5F	5E		`
9D	1D	9D	GS		DF	6D	DF		a
9E	1E	9E	RS		E0	79	E0		b
1F	1F	1F	US		61	81	61		c
20	40	20	SP		62	82	62		d
A1	4F	A1		!	E3	83	E3		e
A2	7F	A2		"	64	84	64		f
23	7B	23		#	E5	85	E5		g
A4	58	A4		\$	E6	86	E6		h
25	6C	25		%	67	87	67		i
26	50	26		&	68	88	68		j
A7	7D	A7		'	E9	89	E9		k
A8	4D	A8		(EA	91	EA		l
29	5D	29)	6B	92	6B		m
2A	5C	2A		*	EC	93	EC		n
AB	4E	AB		+	6D	94	6D		o
2C	6B	2C		,	6E	95	6E		p
4D	6D	4D		-	EF	96	EF		q
AE	4B	AE		.	70	97	70		r
2F	61	2F		/	F1	98	F1		s
B0	F0	B0		0	F2	99	F2		t
31	F1	31		1	73	A2	73		u
32	F2	32		2	F4	A3	F4		v
B3	F3	B3		3	75	A4	75		w
34	F4	34		4	76	A5	76		x
B5	F5	B5		5	F7	A6	F7		y
B6	F6	B6		6	F8	A7	F8		z
37	F7	37		7	79	A8	79		{
38	F8	38		8	7A	A9	7A		
B9	F9	B9		9	FB	C0	FB		~
BA	7A	BA		:	7C	6A	7C		
3B	5E	3B		;	FD	D0	FD		
BC	4C	BC		<	FE	A1	FE		
3D	7E	3D		=	7F	07	7F		DEL

[] = In only.
 () = Out only.
 *Control characters without parity bit.

Baudot Character Codes

PDF Code	S/360 S/370 Code	Baudot			PDF Code	S/360 S/370 Code	Baudot		
		Line Code	Control Character	Graphics Character			Line Code	Control Character	Graphics Character
01	C5	10		E	18	96	(03)	Q	
01	85	(10)		E	18	D6	03	Q	
02	15	08	LF		19	82	(13)	8	
02	15	(88)	LF		19	C2	13	B	
02	25	(08)	LF		1A	87	(08)	G	
03	81	(18)		A	1A	C7	0B	G	
03	C1	18		A	1B	36	1B		
04	40	04	SP		1C	94	(07)	M	
05	A2	(14)		S	1C	D4	07	M	
05	E2	14		S	1D	A7	(17)	X	
06	89	(0C)		I	1D	E7	17	X	
06	C9	0C		I	1E	A5	(0F)	V	
07	A4	(1C)		U	1E	E5	0F	V	
07	E4	1C		U	1F	06	1F		
08	03	(02)	CR		1F	07	(1F)	LTRS	
08	0D	(82)	CR		1F	17	(1F)	LTRS	
08	26	(62)	CR		1F	32	(1F)	LTRS	
09	84	(12)		D	1F	37	(1F)	LTRS	
09	C4	12		D	1F	38	(1F)	LTRS	
0A	98	(0A)		R	81	F3	90	3	
0A	D9	0A		R	83	60	98	-	
0B	2F	9A	BELL		84	40	[84]		
0B	79	94	BELL		85	7A	8E	1/8	
0B	91	(1A)		J	86	F8	8C	8	
0B	D1	1A		J	87	F7	9C	7	
0C	95	(06)		N	89	5B	92	\$	
0C	D5	06		N	89	64	(8B)	\$	
0D	86	(16)		F	8A	F4	8A	4	
0D	C6	16		F	8C	6B	86	7/8	
0E	83	(0E)		C	8F	4D	9E	1/2	
0E	C3	0E		C	90	F5	81	5	
0F	92	(1E)		K	91	7F	91	"	
0F	D2	1E		K	92	5D	89	3/4	
10	A3	(01)		T	93	5A	96	1/4	
10	E3	01		T	93	F2	99	2	
11	A9	(11)		Z	94	7B	85	#	
11	E9	11		Z	95	F6	95	6	
12	93	(09)		L	96	F0	8D	0	
12	D3	09		L	97	F1	9D	1	
13	A6	(19)		W	98	F9	83	9	
13	E6	19		W	99	6F	93	5/8	
14	88	(05)		H	9A	50	8B	&	
14	C8	05		H	9B	36	[9B]		
15	A8	(15)		Y	9C	4B	87	FIGS	
15	E8	15		Y	9D	3F	(97)	SP	
16	97	(0D)		P	9D	61	97	LTRS	
16	D7	0D		P	9D	E1	(97)	/	
17	98	(1D)		Q	9E	5E	8F	/	
17	D8	1D		Q	9F	06	[9F]	3/8	
							LTRS		

] = In only.
() = Out only.

BCD Character Code 1

PDF Code	S/360 S/370 Code	BCD			PDF Code	S/360 S/370 Code	BCD		
		Line Code	Control Character	Graphics Character			Line Code	Control Character	Graphics Character
01	60	40	(N)	-	79	97	4F	p	
02	7C	20		@	7A	A7	2F	x	
04	F8	10		8	7C	37	1F		
07	88	70		h	7F	07	[7F]		
08	F4	08		4	81	6D	C0		
0B	84	68		d	82	4A	A0	-	
0D	0F	(58)	RES		94	5C	90	*	
0D	14	(58)	RES		87	C8	F0	H	
0E	0E	(38)	BYP		88	3F	(88)	:	
0E	24	38	BYP		88	7A	88	:	
10	F2	04		2	8B	C4	E8	D	
13	52	64		b	8D	14	[D8]		
15	00	54	MZ		8E	24	(88)		
16	E0	34	RM	#	90	5F	84	.	
19	96	4C		o	93	C2	E4	B	
1A	A6	2C		w	99	D6	CC	O	
1C	36	1C	UC		9A	E5	AC	W	
1F	06	7C	LC		9C	36	9C		
20	F1	02		1	9F	06	[FC]		
23	81	62		a	A0	7E	82	=	
25	99	52		r	A3	C1	E2	A	
26	A9	32		z	A5	D9	D2	R	
29	95	4A		n	A6	E9	B2	Z	
2A	A5	2A		v	A9	D5	CA	N	
2C	35	[1A]	RS		AA	E5	AA	N	
2F	05	7A	HT		AC	35	[9A]	V	
31	93	46		i	AF	06	[9A]		
32	A3	26		t	B1	D3	C6	L	
34	02	16	EOA (N)	#	B2	E3	A6	T	
34	7B	16	EOA (N)		B4	4F	96		
37	4B	76	(Y)	.	B7	4B	[F6]	:	
38	F7	0E		7	88	7F	8E	.	
3B	87	6E		w	8B	C7	EE	G	
3D	17	5E	IL		8D	17	[DE]		
3D	32	(5E)	IL		BE	27	[BE]		
3E	27	3E	PRE		CO	40	[81]		
40	40	01	SP		C3	4E	E1	+	
43	50	61		&	C5	D8	D1	Q	
45	98	51		q	C6	E8	B1	Y	
46	A8	31		y	C9	D4	C9	M	
49	94	49		m	CA	E4	A9	U	
4A	A4	29		u	CC	34	[99]		
4C	34	19	PN		CF	04	[F9]		
4F	04	79	PF		D1	D2	C5	K	
51	92	45		k	D2	E2	A5	S	
52	A2	25		s	D4	5D	95)	
54	F0	15		0	D8	7D	8D	F	
57	C0	75	PZ		DB	C6	ED		
58	F6	0D		6	DD	16	[DD]		
58	86	6D		f	DE	26	[BD]		
5D	16	5D	BS		E1	D1	C3	J	
5E	03	[3D]	EOB (N)		E2	0F	A3	?	
5E	26	[3D]	EOB (N)		E4	4D	93	(
61	91	43		j	E7	C9	F3		
62	61	23		/	E8	C6	8B	%	
64	F9	13		9	EB	C5	EB	E	
67	89	73		i	ED	15	[DB]		
68	F5	08		s	EE	25	[8B]		
68	85	68		e	F0	5E	87	:	
6D	0D	(5B)	LF-CR		F3	C3	E7	C	
6D	15	5B	LF-CR		F5	5A	D7	I	
6E	25	3B	Index		F6	6B	[B7]	'	
70	F3	07		3	F9	D7	CF	P	
73	83	67		c	FA	E7	AF	X	
75	5B	57		\$	FC	37	9F		
76	6B	37	(S)	.	FF	07	[FF]		

[] = In only.
 () = Out only.

BCD Character Code 2 (NCP # Only)

PDF Code	S/360 S/370 Code	BCD			PDF Code	S/360 S/370 Code	BCD		
		Line Code	Control Character	Graphics Character			Line Code	Control Character	Graphics Character
01	60	40	(N)	-	79	97	4F	P	
02	7C	20		@	7A	A7	2F	x	
04	F8	10		8	7C	37	:F	:	
07	88	70		h	7F	07	[7F]	:	
08	F4	08		4	81	6D	C0	:	
08	84	68		d	82	4A	A0	¢	
0D	0F	(58)	RES		84	84	5C	90	
0D	14	(58)	RES		87	C8	F0	H	
0E	0E	(38)	BYP		88	3F	(88)	:	
0E	24	38	BYP		88	7A	88	:	
10	F2	04		2	88	C4	E8	D	
13	82	64		b	8D	14	[D8]	:	
15	D0	54	MZ		8E	24	[88]	:	
16	E0	34	RM	±	90	5F	B4	°	
19	96	4C		o	93	C2	E4	:	
1A	A6	2C		w	99	D6	CC	O	
1C	36	1C	UC		9A	E6	AC	W	
1F	06	7C	LC		9C	36	9C	:	
20	F1	02		1	9F	06	[FC]	:	
23	81	62		a	AD	0E	B2	:	
25	99	52		r	A3	C1	E2	:	
26	A9	32		z	A5	D9	D2	A	
29	95	4A		n	A6	E9	B2	R	
2A	A5	2A		v	A9	D5	CA	Z	
2C	35	[1A]	RS		AA	E5	AA	N	
2F	05	7A	HT		AC	35	[9A]	V	
31	93	46		i	AF	05	[FA]	:	
32	A3	26		t	B1	D3	C6	L	
34	02	16	EOA (D)		B2	E3	A6	T	
34	78	16	EQA (Y)	#	B4	4F	96	:	
37	48	76		.	B7	13	F6	:	
38	F7	0E		7	BB	7F	BE	G	
38	87	6E		g	BB	C7	EE	:	
3D	17	5E	IL		BD	17	[DE]	:	
3D	32	(5E)	IL		BE	27	[BE]	+	
3E	27	3E	PRE		CD	40	[81]	Q	
40	40	01	SP		C3	4E	E1	Y	
43	50	61		&	C5	D8	D1	M	
45	98	51		q	C6	E8	B1	U	
46	A8	31		y	C9	D4	C9	:	
49	94	49		m	CA	E4	A9	:	
4A	A4	29		u	CC	34	[99]	:	
4C	34	19	PN		CF	04	[F9]	K	
4F	04	79	PF		D1	D2	C5	S	
51	92	45		k	D2	E2	A5]	
52	A2	25		0	D4	5D	95	:	
54	F0	15			D8	7D	8D	:	
57	C0	75	PZ		DB	C6	ED	F	
58	F6	0D		6	DD	16	[DD]	:	
58	86	6D		f	DE	26	[BD]	BS (B)	
5D	16	5D	BS		E1	D1	C3	J	
5E	03	[3D]	EOB (B)		E2	6F	A3	?	
5E	26	[3D]	EOB (B)		E4	4D	93	{	
61	91	43		j	E7	C9	F3	i	
62	61	23		/	E8	C6	88	%	
64	F9	13		9	EB	C6	EB	E	
67	89	73		i	ED	15	[DB]	:	
68	F5	08		5	EE	25	[88]	:	
68	85	68		e	F0	5E	87	:	
6D	0D	(58)	LF-CR		F3	C3	E7	C	
6D	15	58	LF-CR		F6	5A	D7	!	
6E	25	38	Index		F6	12	B7	:	
70	F3	07		3	F9	D7	CF	P	
73	83	67		c	FA	E7	AF	X	
75	58	57		\$	FC	37	9F	:	
76	68	37	(S)	.	FF	07	[FF]	DEL (C)	

] = In only.
() = Out only.

Correspondence Character Code 1

PDF Code	S/370 Code	Correspondence		PDF Code	S/370 Code	Correspondence	
		Line Code	Graphics Character			Line Code	Graphics Character
01	5A	40	(N)	7C	37	1F	EOT (C)
02	A3	20		7F	07	[7F]	LC
04	F4	10		81	6E	C0	(N)
07	61	70		82	E3	A0	
08	F5	08		84	58	90	T
08	97	68		88	6C	88	S
0D	14	58	RES	88	D7	E8	%
0E	24	38	BYP	8E	24	[88]	P
10	F2	04		90	7C	84	@
13	7E	64		93	4E	F4	+
19	89	4C		99	C9	CC	i
1A	92	2C		9A	D2	AC	K
1C	36	1C	UC	9C	36	[9C]	
1F	06	7C	LC	9F	06	[FC]	
20	F1	02		A0	4F	82	[
23	87	62		A3	C7	E2	G
25	A2	52		A5	E2	D2	S
26	88	32		A6	CB	B2	H
29	99	4A		A9	D9	CA	R
2A	84	2A		AA	C4	AA	D
2C	35	1A	RS	AF	05	[FA]	Tab
2F	05	7A	Tab	B1	E5	C6	V
31	A5	46		B2	E4	A6	U
32	A4	26		B4	4D	96	(
34	F9	16		B7	6D	F6	-
37	60	76	EQA (Y) (D)	B8	5C	8E	.
38	F8	0E		BB	6B	[EE]	
38	68	6E		BE	27	[BE]	PRE
3D	17	5E	IL	C0	40	[81]	SP
3D	32	(5E)	PRE	C3	D1	E1	
3E	27	3E	PRE	C5	D6	D1	J
40	40	01	SP	C6	D3	B1	O
43	91	61		C9	7F	C9	L
45	96	51		CA	C5	A9	"
46	93	31		D1	4B	[C5]	E
49	7D	49		D2	D5	A5	.
4A	85	29		D4	E9	95	N
4C	34	19	PN	D8	4C	8D	Z
4F	04	(79)	PF	DB	D8	ED	#
51	48	45		DD	16	[DD]	Q
52	95	25		E1	D4	C3	BS
54	A9	15		E4	5D	93	M
58	F6	0D		E2	E7	A3]
58	98	6D		E7	E8	F3	X
5D	16	5D	BS	E8	50	88	Y
5E	26	(3D)	EOB (D)	EB	3F	(EB)	&
61	94	43		EB	79	EB	:
62	A7	23		ED	14	[DB]	
64	F0	13		ED	15	[DB]	RES
67	A8	73		EE	25	[BB]	LF-CR
68	F7	0B		F0	7A	87	Attn
68	5E	68		F3	6F	F0	
6D	0D	(5B)	LF-CR	F5	E6	E7	#
6D	15	58	LF-CR	F6	C2	B7	F
6E	25	3B	Index	F9	C1	CF	W
70	F3	07		FA	C3	AF	B
73	86	67		FC	37	[9F]	A
75	A6	57	(S)				C
76	82	37					
79	81	4F					
7A	83	2F					

[] = In only.
 () = Out only.

Correspondence Character Code 2 (NCP # Only)

PDF Code	S/360 S/370 Code	Correspondence		PDF Code	S/360 S/370 Code	Correspondence	
		Line Code	Control Character			Line Code	Control Character
01	5A	40	(N)	7C	37	1F	EOT (C)
02	A3	20		7F	07	[7F]	LC
04	F4	10		81	6E	CO	(N)
07	61	70		82	E3	AD	
08	F5	08		84	58	90	
08	97	68		88	6C	88	
0D	14	58	RES	88	D7	E8	
0E	24	38	BYP	8E	24	[88]	BYP
10	F2	04		90	7C	84	
13	7E	64		93	4E	E4	
19	89	4C		99	C9	CC	
1A	92	2C		9A	D2	AC	
1C	36	1C	UC	9C	36	[9C]	
1F	06	7C	LC	9F	06	[FC]	UC
20	F1	02		A0	4F	B2	
23	87	62		A3	C7	E2	
25	A2	52		A5	E2	D2	
26	88	32		A6	CB	B2	
29	99	4A		A9	D9	CA	
2A	84	2A		AA	CA	AA	
2C	35	1A	RS	AF	05	[FA]	Tab
2F	05	7A	Tab	B1	E5	C6	
31	A5	46		B2	E4	A6	
32	A4	26		B4	4D	96	EOA (D)
34	F9	16	EQA (D)	B7	8D	F6	
37	60	76	(Y)	88	5C	8E	
38	F8	0E		88	12	EE	
3B	6B	6E		BE	27	[BE]	PRE
3D	17	5E	IL	CD	40	[81]	SP
3D	32	(5E)	PRE	C3	D1	E1	
3E	27	3E	PRE	C5	D6	D1	
40	40	01	SP	C6	D3	B1	
43	91	61		C9	7F	C9	
45	96	51		CA	C5	A9	
46	93	31		D1	13	C5	
49	7D	49		D2	D5	A5	
4A	85	29		D4	E9	95	
4C	34	19	PN	D8	4C	8D	
4F	04	(79)	PF	DB	DB	ED	
51	48	45		DD	16	[DD]	BS
52	95	25		E1	D4	C3	
54	A9	15		E4	5D	93	
58	F6	0D		E2	E7	A3	
5B	98	6D		E7	E8	F3	
5D	16	5D	BS	E8	50	8B	
5E	26	[3D]	EOB (B)	EB	3F	[EB]	EOT (C)
61	94	43		EB	79	EB	
62	A7	23		ED	14	[DB]	RES
64	F0	13		ED	15	[DB]	LF-CR
67	A8	73		EE	25	[8B]	Attn
68	F7	08		F0	7A	87	
6B	5E	6B		87	6F	F0	
6D	0D	(5B)	LF-CR	F3	C6	E7	
6D	15	5B	LF-CR	F5	E6	D7	
6E	25	3B	Index	F6	C2	B7	
70	F3	07		F9	C1	CF	
73	86	67		FA	C3	AF	
75	A6	57		FC	37	[9F]	EOT (C)
76	82	37	(S)				
79	81	4F					
7A	83	2F					

() = In only.
() = Out only.

EBCD Character Code

EBCD				EBCD					
PDF Code	S/360 S/370 Code	Line Code	Control Character	Graphics Character	PDF Code	S/360 S/370 Code	Line Code	Control Character	Graphics Character
01	60	40	(N)	-	76	6B	37	(S)	p
02	7C	20		8	79	97	4F		x
04	F8	10		h	7A	A7	2F		
07	88	70		4	7C	37	1F	EOT (C)	
08	F4	08		d	7F	07	[7F]	DEL	
08	84	58			81	6D	C0	(N)	
0D	0F	(58)	RES		82	4A	A0		*
0D	14	58	RES		84	5C	90		H
0E	0E	(38)	BYP		87	C8	F0		:
0E	24	38	BYP		88	7A	88		D
10	F2	04		2	8B	C4	E8		
13	82	64		b	8D	14	[D8]	RES	
15	DO	54	MZ		8E	24	[88]	BYP	
16	E0	34	RM	#	90	4C	84		<
19	96	4C		o	93	C2	E4		B
1A	A6	2C		w	99	D6	CC		O
1C	36	1C	UC		9A	E6	AC		W
1F	06	7C	LC		9C	36	[9C]	UC	
20	F1	02		1	9F	06	[FC]	LC	
23	81	62		a	A0	7E	B2		=
25	98	52		r	A3	C1	E2		A
26	AD	32		z	A5	D9	D2		A
29	95	4A		n	A6	E9	B2		R
2A	A5	2A		v	A9	D5	CA		R
2C	35	[1A]	RS		AA	E5	AA		N
2F	05	7A	HT		AC	35	[9A]	RS	
31	93	46		i	AF	05	[FA]	HT	
32	A3	26		t	B1	D3	C6		L
34	02	(16)	EOA (D)	#	B2	E3	A6		T
34	7B	16	EOA (D)	.	B4	7F	96	EOA (D)	"
37	4B	76	(Y)	7	B7	5F	F6	(Y)	>
38	F7	0E		g	88	6E	8E		G
3B	87	6E			8B	C7	EE		
3D	00	(5E)	IL		BD	17	[DE]	IL	
3D	17	5E	IL		BE	27	[BE]	PRE	
3D	32	(5E)	IL		CD	40	[81]	SP	
3E	27	3E	PRE		C3	4E	E1		
40	40	01	SP		C5	D8	D1		+
43	50	61		&	C6	E8	B1		Q
45	98	51		q	C9	D4	C9		Y
46	A8	31		y	CA	E4	A9		M
49	84	49		m	CA	34	CC	PN	U
4A	A4	29		u	CF	04	[99]	PF	
4C	34	[19]	PN		D1	D2	C5		K
4F	04	79	PF		D2	E2	A5		S
51	92	45		k	D4	5D	95)
52	A2	25		0	D8	7D	8D		'
54	F0	15			DB	C6	ED		F
57	C0	75	PZ		DD	16	[DD]	BS	
58	F6	0D		6	DE	26	[8D]	EOB (B)	J
58	86	6D		f	E1	D1	C3		7
5D	16	5D			E2	6F	A3		(
5E	03	(3D)	BS		E4	4D	93		%
5E	26	(3D)	EOB (B)		E7	C9	F3		E
61	91	43		i	E8	6C	8B		
62	81	23		/	EB	C5	EB		
64	F9	13		9	ED	15	[DB]	NL	
67	89	73		i	EE	25	[BB]	LF	
68	F5	08		5	FO	5E	87		:
68	85	68		e	F3	C3	E7		C
6D	0D	(58)	NL		F5	5A	D7		I
6D	15	58	NL		F6	4F	B7		I
6E	25	38	LF		F9	D7	CF		P
70	F3	07		3	FA	E7	AF		X
73	83	67		c	FC	37	[9F]	EOT (C)	
75	58	57		\$	FF	07	[FF]	DEL	
76	01	(37)	(S)						

[] = In only.
 () = Out only.

EBCDIC Character Code

PDF Code	S/360 S/370 Code	EBCDIC		PDF Code	S/360 S/370 Code	EBCDIC	
		Line Code	Control Character			Line Code	Control Character
00		00	NUL	7A		7A	:
01		01	SOH	7B		7B	#
02		02	STX	7C		7C	@
03		03	ETX	7D		7D	'
04		04	PF	7E		7E	"
05		05	HT	7F		7F	~
06		06	LC	81		81	a
07		07	DEL	82		82	b
0A		0A	SMM	83		83	c
08		08	VT	84		84	d
0C		0C	FF	85		85	e
0D		0D	CR	86		86	f
0E		0E	SO	87		87	g
0F		0F	SI	88		88	h
10		10	DLE	89		89	i
11		11	DC1	91		91	j
12		12	DC2	92		92	k
13		13	DC3	93		93	l
14		14	RES	94		94	m
15		15	NL	95		95	n
16		16	BS	96		96	o
17		17	IL	97		97	p
18		18	CAN	98		98	q
19		19	EM	99		99	r
1A		1A	CC	A2		A2	s
1C	S	1C	IFS	A3	S	A3	t
1D	A	1D	IGS	A4	A	A4	u
1E	M	1E	IRS	A5	M	A5	v
1F	E	1F	IUS (IT8)	A6	E	A6	w
20		20	DS	A7		A7	x
21	A	21	SOS	A8	A	A8	y
22	S	22	FS	A9	S	A9	z
24		24	BYP	C1		C1	A
25	P	25	LF	C2	P	C2	B
26	D	26	EOB/ETB	C3	D	C3	C
27	F	27	PRE/ESC	C4	F	C4	D
2A		2A	SM	C5		C5	E
2D	C	2D	END	C6	C	C6	F
2F	O	2F	BEL	C7	O	C7	G
32	D	32	SYN	C8	D	C8	H
34	E	34	PN	C9	E	C9	I
35		35	RS	D1		D1	J
36		36	UC	D2		D2	K
37		37	EOT	D3		D3	L
3C		3C	DC4	D4		D4	M
3D		3D	NAK	D5		D5	N
3F		3F	SUB	D6		D6	O
40		40	SP	D7		D7	P
4A		4A		D8		D8	Q
48		48		D9		D9	R
4C		4C		E2		E2	S
4D		4D		E3		E3	T
4E		4E		E4		E4	U
4F		4F		E5		E5	V
50		50		E6		E6	W
5A		5A		E7		E7	X
58		58		E8		E8	Y
5C		5C		E9		E9	Z
5D		5D		F0		F0	0
5E		5E		F1		F1	1
5F		5F		F2		F2	2
60		60		F3		F3	3
61		61		F4		F4	4
68		68		F5		F5	5
6C		6C		F6		F6	6
6D		6D		F7		F7	7
6E		6E		F8		F8	8
6F		6F		F9		F9	9

ITA2 Character Code

PDF Code	S/390 S/370 Code	ITA2		PDF Code	S/390 S/370 Code	ITA2	
		Line Code	Control Character			Line Code	Control Character
01	85	(10)		18	96	(03)	O
01	C5	10		18	D6	03	O
02	25	08	LF	19	82	(13)	B
02	25	(88)	LF	19	C2	13	B
03	81	(18)		1A	87	(08)	G
03	C1	18		1A	C7	08	G
04	40	04	SP	1B	26	(18)	
04	40	(84)	SP	1B	36	18	
05	A2	(14)		1C	94	(07)	M
05	E2	14		1C	D4	07	M
06	89	(0C)		1D	A7	(17)	X
06	C9	0C		1D	E7	17	X
07	A4	(1C)		1E	A5	(0F)	V
07	E4	1C		1E	E5	0F	V
08	03	(02)	CR	1F	00	(1F)	LTRS
08	0D	02	CR	1F	06	1F	LTRS
08	0D	(82)	CR	1F	07	(1F)	LTRS
08	15	(02)	CR	1F	17	(1F)	LTRS
09	84	(12)		1F	32	(1F)	LTRS
09	C4	12		1F	37	(1F)	LTRS
0A	99	(0A)		1F	38	(1F)	LTRS
0A	D9	0A		1F	3F	(1F)	LTRS
0B	91	(1A)		81	F3	90	3
0B	D1	1A		83	60	98	-
0C	95	(06)		85	7D	94	8
0C	D5	06		86	F8	8C	7
0D	86	(16)		87	F7	9C	
0D	C6	16		89	2D	92	
0E	83	(0E)		8A	F4	8A	4
0E	C3	0E		8B	2A	(1A)	
0F	92	(1E)		8B	2F	(8A)	
0F	D2	1E		8C	6B	86	
10	A3	(01)		8E	7A	8E	:
10	E3	01		8F	4D	9E	(
11	A9	(11)		90	F5	81	5
11	E9	11		91	4E	91	+
12	93	(09)		92	5D	89	1
12	D3	09		93	F2	99	2
13	A6	(19)		95	F6	95	6
13	E6	19		96	F0	8D	0
14	88	(05)		97	F1	9D	9
14	C8	05		98	F9	83	?
15	A8	(15)		99	6F	93	
15	E8	15		9B	36	(9B)	
16	97	(0D)		9C	4B	(87)	
16	D7	0D		9D	61	97	/
17	98	(1D)		9E	7E	8F	=
17	D8	1D		9F	06	(9F)	

[] = In only.
 () = Out only.

KATAKANA Character Code

KATAKANA					KATAKANA				
PDF Code	S/390 S/370 Code	Line Code	Control Character	Graphics Character	PDF Code	S/390 S/370 Code	Line Code	Control Character	Graphics Character
01	A3	40		キ	7A	8C	2F		リ
02	BE	20		ク	7C	37	1F		
04	AA	10		コ	7F	07	7F	EOT	
07	88	70		ク	7F	DF	(7F)	DEL	
08	83	08		ク	81	80	C0	PAD	
08	8D	68		ク	82	8F	A0		;
0D	14	58	RES		84	F8	90		8
0E	24	38	BYP		87	C8	F0		H
10	9F	04		コ	88	F4	88		4
13	8A	64		コ	88	C4	E8		D
19	AD	4C		コ	8D	14	[D8]		
1A	94	2C		コ	8E	24	[88]		
1C	36	1C	UC		90	F2	84		2
1F	06	7C	LC		93	C2	E4		B
20	98	02		ク	99	D6	CC		O
23	92	62		ク	9A	E6	AC		W
25	8E	52		ク	9C	38	[9C]		
26	93	32		ク	9F	06	[FC]		
29	A5	4A		ク	A0	F1	82		1
2A	9E	2A		ク	A3	C1	E2		A
2C	35	1A	RSTP		A5	D9	D2		R
2F	05	7A	HT		A6	E9	B2		Z
31	AE	46		ク	A9	D5	CA		N
32	86	26		ク	AA	E5	AA		V
34	89	16		ク	AA	E5	AA		
37	AF	76		ク	AC	35	[9A]		
38	A9	0E		ク	AF	06	[FA]		
38	87	6E		ク	B1	D3	C6		L
3D	17	5E	IDLE		B2	E3	A6		T
3D	32	(5E)	IDLE		B4	8B	96		0
3E	08	(3E)	VT*		B7	4B	F6		.
3E	27	3E	PRE		B8	F7	8E		7
40	08	(01)	VT*		8A	E7	AE		X
40	40	01	SP		8B	C7	EE		G
43	A2	61		ク	8D	17	[DE]		
45	91	51		ク	8D	26	[BD]		
46	BD	31		ク	8E	27	[BE]		
49	A8	49		ク	C0	40	[81]		
4A	96	29		ク	C3	5C	E1		*
4C	34	(19)	PN		C5	D8	D1		Q
4F	1A	(79)	PF		C6	E8	B1		Y
51	9A	45		ク	C9	D4	C9		M
52	95	25		ク	CA	E4	A9		U
54	8C	15		ク	D1	D2	C5		K
58	85	0D		ク	D2	E2	A5		S
58	9D	6D		ク	D4	F0	95		0
5D	16	5D	BKSP		D8	F6	8D		6
5E	03	(3D)	EOB		D8	C6	ED		F
5E	26	3D	EOB		DD	16	[DD]		
61	A4	43		ク	E1	D1	C3		J
62	A7	23		ク	E2	58	A3		¥
64	AC	13		ク	E4	F9	93		9
67	97	73		ク	E7	C9	F3		i
68	84	0B		ク	E8	F5	88		5
68	82	6B		ク	EB	C5	EB		E
6D	0D	(6B)	CR/LF		ED	15	[DB]		
6D	15	5B	CR/LF		EE	25	[BB]		
6E	25	3B	LF		F0	F3	87		
70	81	07		ク	F3	C3	E7		C
73	90	67		ク	F5	A6	D7		L
75	8A	57		ク	F6	8B	B7		,
76	01	(37)	SOA		F9	D7	CF		P
76	99	37		ク	FC	37	[9F]		
79	8F	4F		ク	FF	07	[FF]		

[] = In only, () = Out only.
Two character sequence.

Data Interchange (TWX) Character Code 1

PDF Code	S/380 S/370 Code	TWX			PDF Code	S/380 S/370 Code	TWX		
		Line Code	Control Character	Graphics Character			Line Code	Control Character	Graphics Character
80	38	(01)	NULL		C2	C2	43		B
80	38	(01)	NULL		C3	83	(C2)		C
84	24	(1C)	EOT		C3	C3	C2		C
84	37	[20]	EOT		C4	84	(23)		D
85	2D	A1	WRU		C4	C4	23		D
87	2F	E0	BELL		C5	85	(A2)		E
89	06	91	HT		C5	C5	A2		E
8A	15	(51)	LF		C6	86	(62)		F
8A	25	51	LF		C6	C6	62		F
88	08	D1	VT		C7	87	(E3)		G
8C	0C	31	FF		C7	C7	E3		G
8D	03	(B1)	CR		C8	88	(13)		H
8D	0D	B1	CR		C8	C8	13		H
8D	26	(B1)	CR		C9	89	(92)		I
8E	0E	70	SO		C9	C9	92		I
8F	0F	F1	SI		CA	91	(52)		J
91	11	89	X-on		CA	D1	52		J
92	34	49	TP Aux On		CB	92	(D3)		K
94	04	29	TP Aux Off		CB	D2	D3		K
'13'	3C	C8	X-off		CC	93	(32)		L
A0	40	04	SP		CC	D3	32		L
A1	5A	85		!	CD	94	(B3)		M
A2	7F	44		"	CD	D4	B3		M
A3	75	C4		#	CE	95	(73)		N
A4	5B	25		\$	CE	D5	73		N
A5	6C	A4		%	CF	96	(F2)		O
A6	5D	64		&	CF	D6	F2		O
A7	7D	E5		'	D0	97	(0B)		P
A8	4D	15		(D0	D7	0B		P
A9	5D	94)	D1	98	(8B)		Q
AA	5C	54		*	D1	D8	8B		Q
AB	4E	D5		+	D2	99	(4B)		R
AC	8B	34		,	D2	D9	4B		R
AD	6D	B5		-	D3	A2	(CB)		S
AE	4B	75		.	D3	E2	CB		S
AF	61	F4		/	D4	A3	(2A)		T
AF	E1	[3A]		/	D4	E3	2A		T
B0	F0	0D		0	D5	A4	(AB)		U
B1	F1	0C		1	D5	E4	AB		U
B2	F2	4C		2	D6	A5	(6B)		V
B3	F3	CC		3	D6	E5	6B		V
B4	F4	2C		4	D7	A6	(EA)		W
B5	F5	AD		5	D7	E6	EA		W
B6	F6	6D		6	D8	A7	(1A)		X
B7	F7	EC		7	D8	E7	1A		X
B8	F8	1C		8	D9	A8	(9B)		Y
B9	F9	9D		9	D9	E8	9B		Y
BA	7A	5D		:	DA	A9	(5B)		Z
BB	5E	DC		.	DA	E9	5B		Z
BC	4C	3D		<	DB	79	DA		[
BD	7E	8D		=	DE	4F	7A		↑
BE	6E	7C		>	DF	6D	FB		←
BF	6F	FD		?	FC	49	BA]
CD	7C	02		@	FF	00	(FE)		
C1	81	(83)		A	FF	07	(FE)		
C1	C1	83		A	FF	17	(FE)		
C2	82	(43)		B	FF	32	(FE)		

[] = In only.
 () = Out only.

Data Interchange (TWX) Character Code 3 (NCP # Only)





PDF Code	S/360 S/370 Code	TWX			PDF Code	S/360 S/370 Code	TWX		
		Line Code	Control Character	Graphics Character			Line Code	Control Character	Graphics Character
B0	36	(01)	NULL		C2	82	(43)	B	
B0	38	(01)	NULL		C2	C2	43	B	
B4	24	(1C)	EOT		C3	83	(C2)	C	
B4	37	[20]	EOT		C3	C3	C2	C	
B5	2D	A1	WRU		C4	84	(23)	D	
B7	2F	E0	BELL		C4	C4	23	D	
B9	05	S1	HT		C5	85	(A2)	E	
8A	15	(51)	LF		C5	C5	A2	E	
8A	25	51	LF		C6	86	(62)	F	
8B	0B	D1	VT		C6	C6	62	F	
8C	0C	31	FF		C7	87	(E3)	G	
8D	03	(B1)	CR		C7	C7	E3	G	
8D	0D	(B1)	CR		C8	88	(13)	H	
8D	0D	[B1]	CR/EOT		C8	C8	13	H	
8D	26	(B1)	CR		C9	89	(92)	I	
8E	0E	70	SO		C9	C9	92	I	
8F	0F	F1	SI		CA	91	(52)	J	
91	11	80	X-on		CA	D1	52	J	
92	34	49	TP Aux On		CB	92	(D3)	K	
94	04	29	TP Aux Off		CB	D2	D3	K	
94	3C	CB	X-off		CC	93	(32)	L	
98	18	[03]	CTL R X/ EOT SP		CC	D3	32	L	
A0	40	04		!	CD	94	(B3)	M	
A1	5A	85		"	CD	D4	B3	M	
A2	7F	44		#	CE	95	(73)	N	
A3	7B	C4		\$	CE	D5	73	N	
A4	5B	25		%	CF	96	(F2)	O	
A5	6C	A4		&	CF	D6	F2	O	
A6	50	64		'	DD	97	(0B)	P	
A7	7D	E5		(DD	D7	0B	P	
A8	4D	15)	D1	98	(8B)	Q	
A9	5D	94		*	D1	D8	8B	Q	
AA	5C	54		+	D2	99	(4B)	R	
AB	4E	D5		,	D2	D9	4B	R	
AC	6B	34		.	D3	A2	(CB)	S	
AD	60	B5		-	D3	E2	CB	S	
AE	4B	75		:	D4	A3	(2A)	T	
AF	E1	F4		;	D4	E3	2A	T	
AF	E1	[3A]		/	D5	A4	(AB)	U	
B0	F0	0D		0	D5	E4	AB	U	
B1	F1	8C		1	D6	A5	(6B)	V	
B2	F2	4C		2	D6	E5	6B	V	
B3	F3	CC		3	D7	A6	(EA)	W	
B4	F4	2C		4	D7	E6	EA	W	
B5	F5	AD		5	D8	A7	(1A)	X	
B6	F6	6D		6	D8	E7	1A	X	
B7	F7	EC		7	D9	A8	(9B)	Y	
B8	F8	1C		8	D9	E8	9B	Y	
B9	F9	9D		9	DA	A9	(5B)	Z	
BA	7A	5D		:	DA	E9	5B	Z	
BB	5E	0C		;	DB	79	DA	[
BC	4C	3D		<	DE	4F	7A	↑	
BD	7E	8D		>	DF	16	[FB]	←	
BE	6E	7C		?	DF	6D	(FB)	←	
BF	6F	FD		@	FC	49	8A]	
CO	7C	02		A	FF	00	(FE)		
C1	81	(83)		A	FF	07	(FE)	Rubout	
C1	C1	83		A	FF	17	(FE)	Rubout	
						32	(FE)	Rubout	

[] = In only.
() = Out only.



ZSC3 Character Code

PDF Code	S/360 S/370 Code	ZSC3			PDF Code	S/360 S/370 Code	ZSC3		
		Line Code	Control Character	Graphics Character			Line Code	Control Character	Graphics Character
01	85	(10)		E	18	96	(03)	O	
01	C5	10		E	18	D6	03	O	
02	25	(08)	LF		19	92	(13)	B	
02	25	[88]	LF		19	C2	13	B	
02	37	(1F)	LF		1A	87	(08)	G	
03	81	(18)		A	1A	C7	08	G	
03	C1	18		A	1B	26	18		
04	40	04	SP		1B	36	18		
05	A2	(14)		S	1C	94	(07)	M	
05	E2	14		S	1C	D4	07	M	
06	89	(0C)		I	1D	A7	(17)	X	
06	C9	0C		I	1D	E7	17	X	
07	A4	(1C)		U	1E	A5	(0F)	V	
07	E4	1C		U	1E	E5	0F	V	
08	03	(02)	CR		1F	00	(1F)	LTRS	
08	0D	02	CR		1F	06	1F	LTRS	
08	0D	[82]	CR		1F	07	(1F)	LTRS	
08	15	(02)	CR		1F	17	(1F)	LTRS	
09	84	(12)		D	1F	32	(1F)	LTRS	
09	C4	12		D	1F	38	(1F)	LTRS	
0A	99	(0A)		R	1F	3F	(1F)	LTRS	
0A	D9	0A		R	81	60	90	-	
0B	91	(1A)		J	83	4E	98	+	
0B	D1	1A		J	84	40	[84]	SP	
0C	95	(06)		N	85	7D	94	.	
0C	D5	06		N	86	2A	(86)	BELL	
0D	86	(16)		F	86	2F	8C	BELL	
0D	C6	16		F	87	F1	9C		
0E	83	(0E)		C	89	2D	92	1	
0E	C3	0E		C	8A	61	8A	/	
0F	92	(1E)		K	8B	F2	9A	2	
0F	D2	1E		K	8C	68	86	,	
10	A3	(01)		T	8D	F4	96	4	
10	E3	01		T	8E	F8	8E	8	
11	A9	(11)		Z	8F	4D	9E	(
11	E9	11		Z	90	4B	81	.	
12	93	(09)		L	92	5D	89)	
12	D3	09		L	93	F3	99	3	
13	A6	(19)		W	94	6F	85	?	
13	E6	19		W	95	F5	95	5	
14	88	(05)		H	96	F9	8D	9	
14	C8	05		H	98	7A	83	:	
15	A8	(15)		Y	99	F6	93	6	
15	E8	15		Y	9A	F0	88	0	
16	97	(0D)		P	9B	36	[9B]	FIGS	
16	D7	0D		P	9C	F7	87	7	
17	98	(1D)		Q	9E	7E	8F	=	
17	D8	1D		Q	9F	06	[9F]	LTRS	

[] = In only.
 () = Out only.

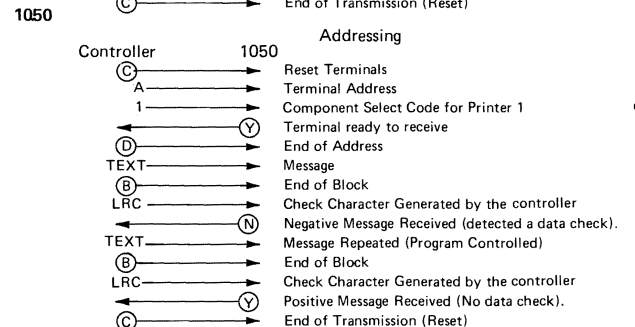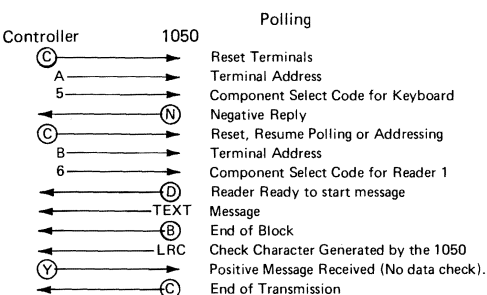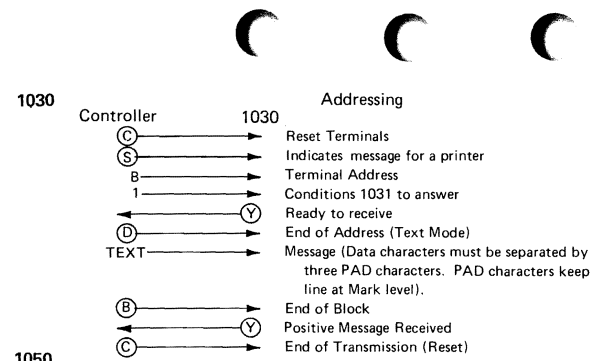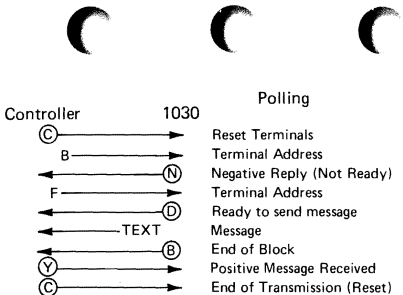



Examples of Polling and Addressing 16-1

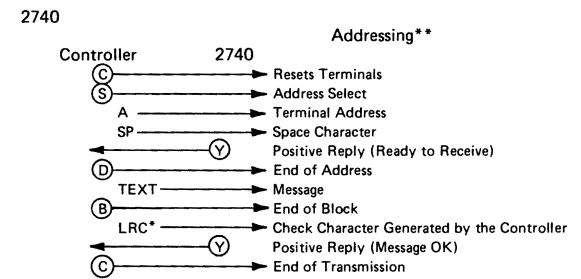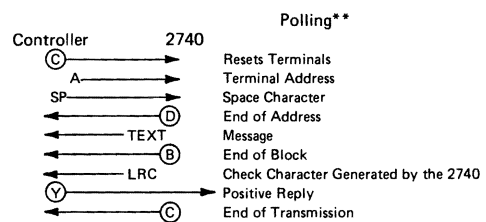

*Used only on 2740 equipped with VRC/LRC checking feature.
 **Assumes 2740, Station Control, and Record Checking.


2741 Transmit/Receive Sequence


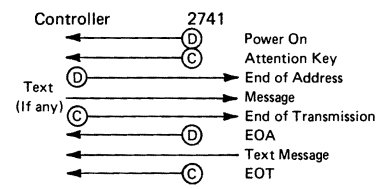


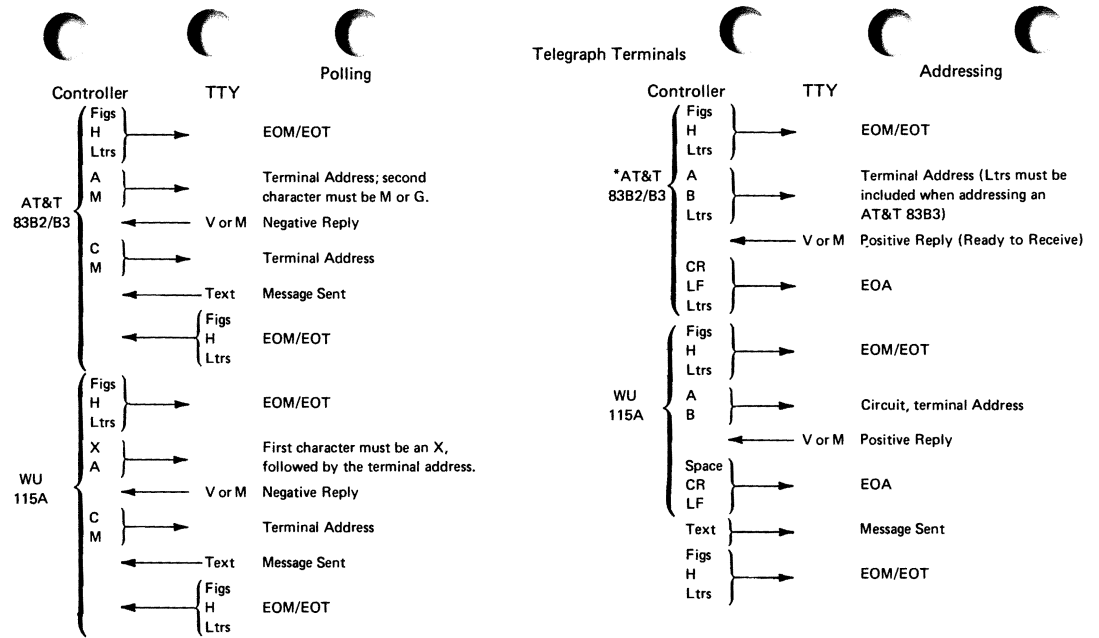

*T, O, M, V, H, or Y cannot be used when addressing the AT&T 83B2/B3.

Models 33 and 35 Teletypewriters
(Assume point-to-point, dial-up (switched network))

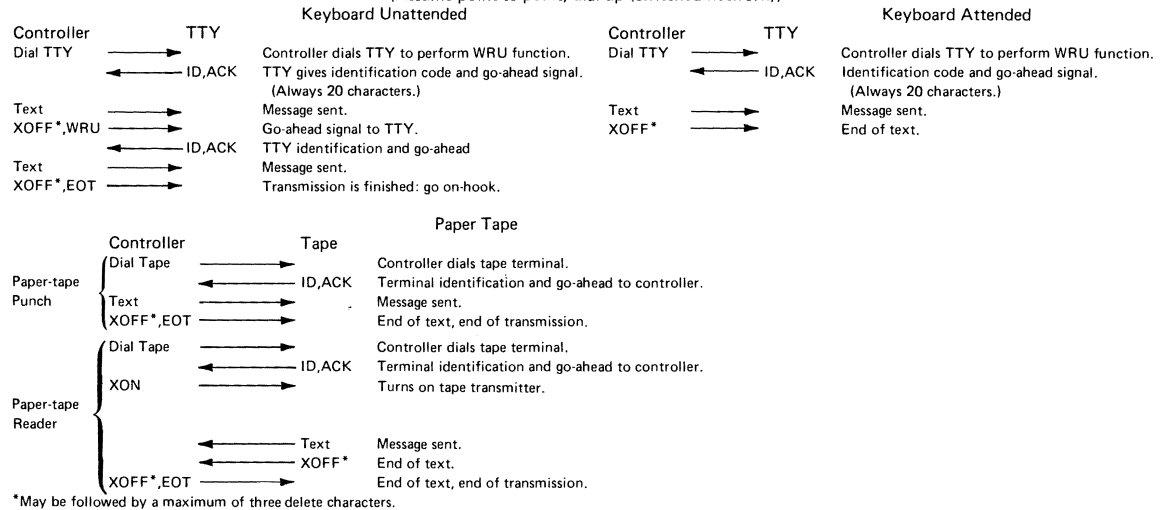

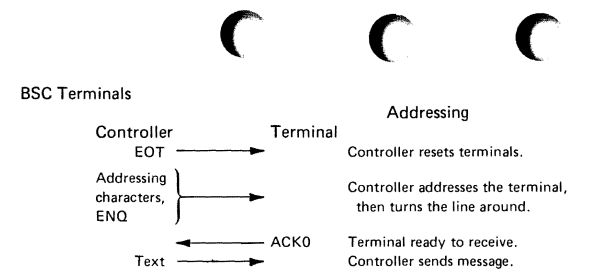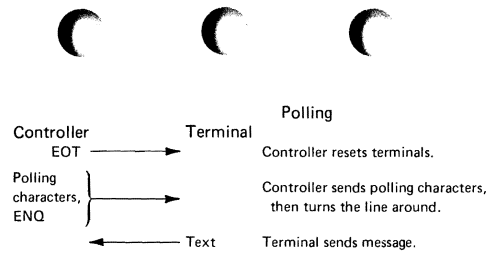



Section 17: MDR Record Formats

The network control program (NCP) and the host access method provide records as input to the Miscellaneous Data Recorder (MDR).

The access method recognizes NCP1 and NCP2 MDR records by the system response (X'0A') in the BTU.

NCP# MDR records are identified by the second two bytes of the request/response unit (RU) in the FID1.PIU. For MDR records, RU byte 1 = X'03' and RU byte 2 = X'81'. Bytes 3 and 4 of the RU contain the network address of the failing unit, and byte 5 is the beginning of the MDR record.

The text portion of the MDR records consists of a field of up to 35 bytes. The third byte of the field is the recording mode byte, which is used to differentiate among the types of NCP MDR records. The fourth byte, the record ID byte, is always set to X'05', indicating to the host that this is a 3704 or 3705 MDR record.

In some of the records there is a field labeled Abend/Malfunction Code. If the record represents an error that caused the NCP to abend, this field contains the appropriate abend code. In this instance the MDR record never reaches the host, but remains in the check record pool (CRP). If, however, the error condition was one that might have caused an abend but was recovered from, the record is transferred to the host, and the abend code is treated as a malfunction code. When the error condition is one that could not cause an abend, this field is set to zero.

When the MDR record is in the CRP, two CRP control bytes precede each record. Refer to the data area layout for more information about the CRP.

The records for permanent line errors and line statistics are created by the line error recorder routine (CXDILER).

Record Format for Permanent Line Errors


				0(0) Line Interface Address	2(2) Recording *** Mode=X'00'	3(3) Record ID=X'05'
4(4) BTU Command (BCHCMD)*	5(5) BTU Modifier (BCHMOD)*	6(6) BTU Flags (BCHSFLAG)*		8(8) IOB Command (IOBCMAND)*	9(9) IOB Modifiers (IOBCMODS)*	
12(C) IOB Status (IOBSTAT)*			14(E) IOB Extended Status (IOBEXTST)*	15(F) IOB Initial Error Status (IOBERST)*		17(11) IOB Initial Error Extended Status (IOBEREST)*
18(12) I/O Counter (DVBSDRT)*		20(14) Temporary Error Counter (DVBSDRE)*		21(15) 2740 Graphic Response Byte**	22(16) Device Features (DVBFAT1)* (DVBFAT2)*	
				24(18) Device Type (DVBTYP)*		

*Indicates the control block field from which this MDR record field is loaded. (See "Data Area Layouts" section for field definitions.)

**2740 graphic response byte is zeroed if not applicable.

***Applies to BSC/SS devices as well as lines.

Record Format for Station Statistics

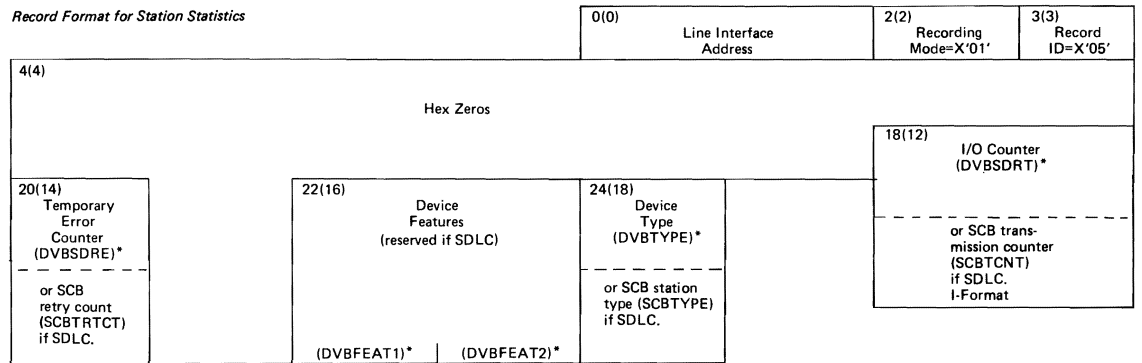

*Indicates the control block field from which the MDR record field is loaded. (See "Data Area Layouts" section for field definitions).

Record Format for Type 2/3 Channel Adapter Errors

			0(0) Abend/Malfunction Code	2(2) Recording Mode=X'10'	3(3) Record ID=X'05'
4(4) Error Record Type*	5(5) Lost Check Record Count (CRPLCRCT)	6(6) External Register X'50' INCWAR	8(8) External Register X'51' OUTCWAR	10(A) External Register X'52' Control Word Byte Count	
12(C) External Register X'55' Control Register		14(E) External Register X'56' Check Register	16(10) External Register X'58' Bus Out Diagnostic Register	18(12) External Register X'59' Cycle Steal Address Register**	
20(14) Hex Zeros		22(16) External Register X'5C' Command Register			

*Type 2 CA 1=X'04'
Type 2 CA 2=X'02'

**With a 3705 over 64K, the first two bits of the address are the low-order two bits of the previous field.

Record Format for Type 1 Communication Scanner Errors

			0(0) Abend/Malfunction Code	2(2) Recording Mode=X'11'	3(3) Record ID=X'05'
4(4) Error Record Type = X'CO' (Type 1 Scanner)	5(5) Lost Check Record Count (CRPLCRCT)	6(6) External Register X'44' Status Register	8(8) External Register X'74' Lagging Address Register		
12(C) Interrupted Program Level's Instruction Address Register (Register 0)			16(10) External Register X'79' Program Level Interrupted		

Record Format for Type 2 Communication Scanner Errors

			0(0) Abend/Malfunction Code	2(2) Recording Mode=X'11'	3(3) Record ID=X'05'
4(4) Error Record Type*	5(5) Lost Check Record Count (CRPLCRCT)	6(6) External Register X'43' Check Register 1	8(8) External Register X'74' Lagging Address Register		
12(C) Interrupted Program Level's Instruction Address Register (Register 0)			16(10) External Register X'79' Program Level Interrupted		

*Type 2 Scanner-1=X'40'
 Type 2 Scanner-2=X'20'
 Type 2 Scanner-3=X'10'
 Type 2 Scanner-4=X'08'



Record Format for Type 3 Communication Scanner Errors

			0(0) Abend/Malfunction Code	2(2) Recording Mode=X'11'	3(3) Record ID=X'05'
4(4) Error Record Type*	5(5) Lost Check Record Count (CRPLCRCT)	6(6) External Register X'43' Check Register 1	8(8) External Register X'74' Lagging Address Register		
12(C) Interrupted Program Level's Instruction Address Register (Register 0)			16(10) External Register X'79' Program Level Interrupted	18(12) External Register X'42' Check Register 0	

*Type 3 Scanner-1=X'41'
 Type 3 Scanner-2=X'21'
 Type 3 Scanner-3=X'11'
 Type 3 Scanner-4=X'09'

Record Format for Input/Output Instruction Exceptions

			0(0)	2(2)	3(3)
			Abend/Malfunction Code	Recording Mode=X'12'	Record ID=X'05'
4(4)	5(5)	6(6)	8(8)		
Error Record Type=X'20'	Lost Check Record Count (CRPLCRCT)	Instruction on which the error occurred.	External Register X'74' Lagging Address Register		
12(C)			16(10)		
Interrupted Program Level's Instruction Address Register (Register 0)			External Register X'79' Program Level Interrupted		

Record Format for Unresolved Program Level 1 Interrupt Requests (Type 2/3 scanner)

			0(0)	2(2)	3(3)
			Abend/Malfunction Code	Recording Mode=X'13'	Record ID=X'05'
4(4)	5(5)	6(6)	8(8)		
Error Record Type=*	Lost Check Record Count (CRPLCRCT)	External Register X'76' Adapter Interrupt Requests Group 1	External Register X'74' Lagging Address Register		
12(C)			16(10)		18(12)
Interrupted Program Level's Instruction Address Register (Register 0)			External Register X'79' Program Level Interrupted		External Register X'7E' CCU Interrupt Requests Group 1

*Type 2 scanner=X'01'
Type 3 scanner=X'03'

Record Format for:

- Invalid Instruction Operation Code Check. (Abend=X'001B')
- Address Exception. (Abend=X'0009')
- Protection Check. (Abend=X'0002')
- Branch to zero by Level 5. (Abend=X'000D')

			0(0)	Abend/Malfunction Code	2(2)	Recording Mode=X'12'	3(3)	Record ID=X'05'
4(4)	5(5)	6(6)	8(8)					
Error Record Type=X'08'	Lost Check Record Count (CRPLCRCT)	Halfword from interrupted program levels IAR-2 or zero.	External Register X'74' Lagging Address Register					
12(C)			16(10)					
Interrupted Program Level's Instruction Address Register (IAR) (Register 0)			External Register X'79' Program Level Interrupted					

Record Format for Unresolved Program Level 3 Interrupt Requests
This record is created by the level 3 router (CXCCRTR).

			0(0)	Abend/Malfunction Code	2(2)	Recording Mode=X'13'	3(3)	Record ID=X'05'
4(4)	5(5)	6(6)	8(8)					
Error Record Type=X'03'	Lost Check Record Count (CRPLCRCT)	External Register X'77' Adapter Interrupt Requests Group 2	Hex Zeros					
			18(12)			External Register X'7F' CCU Interrupt Requests Group 2		

Record Format for Permanent SDLC Errors

				0(0) Line interface address		2(2) Recording mode. X'03'=Station error X'02'=Link error		3(3) Record ID. X'05'	
4(4) SCB service seeking command flags (SCBSSCF)		6(6) Output control flag. (SCBOCF)	7(7) Reserved		8(8) LXB command. (LXBCMAND)	9(9) LXB modifiers (LXBCMODS)			11(B) LXB Immediate control cmd. (LXBIMCTL)
12(C) LXB final error status. (LXBSTAT)		14(E) LXB final error extended status. (LXBEXTST)	15(F) LXB initial error status. (LXBERST)		17(11) LXB initial error extended status. (LXBEREST)	18(12) SCB transmission counter. (SCBTCNT) I-Format			
LXBSTAT	LXBSTATC	LXBEXTST	LXBERST	LXBHSTAT	LXBEREST	SCBTCNT			
20(14) SCB retry (SCBTRTCT)	21(15) Received BLU command field. (LXBRBLUC)	22(16) Reserved.		24(18) SCB station type. (SCBTYP)	25(19) Transmit BLU command field (CCBCFLD)	26(1A) SCB current outstanding count. (SCBCOC)	27(1B) SCP pass count. (SCBPCNT)		
SCBTRTCT	LXBRBLUC			SCBTYP	CCBCFLD	SCBCOC	SCBPCNT		
28(1C) SCB receive count. (SCBNR) (Bits 4,5,6)	29(1D) SCB send count. (SCBNS) (Bits 4,5,6)	30(1E) CCB control flags and line type (CCBCTL)		32(20) Command field received from secondary station. SECCFR	33(21) N(R) and N(S) received from secondary station.	34(22) Command reject reason: X'08'=Invalid N(R). X'04'=Frame too long. X'02'=Data received in S or NS format. X'01'=Invalid command.			
SCBNR	SCBNS	CCBRSPON Control flags	CCBTYP Line type	SECCFR					

*This field is present only if this record is for a station (for a link, field contains all zeros).

**This field stored only for duplex links.

***This field stored only if Command Reject was the cause of the MDR record being formatted.

Section 18: EP Storage Maps


EP (old base)


Address (hex)	Description
000-500	Destroyed by dump.
680	Direct addressables for IC and STC instructions.
68B	ID for EP (old base).
6F0	Pseudo BCB. (Type 1 scanner only)
6F6	Character service routine address. (Type 1 scanner only)
700	Direct addressables for LH and STH instructions.
700	Pointer to channel vector table. (The contents of this location are destroyed if a dump is taken on a 3705 with dual ROS.)
702	IPL register save area.
710	Queue control flags: X'40' - Stacked status service. X'20' - Sense service. X'10' - TIO sequence. X'08' - Do not dequeue TIO.
711	Active command count. (Equals the number of lines active.)
712	QCB table. (Address of last CCB using TIO.)
714	Priority-data-service-out queue (PDSOQ).
718	Data-service-out queue (DSOQ).
71C	Data-service-in queue (DSIQ).
720	Status-out queue (SOQ).
724	Sense-out queue (SNOQ).
728	Stacked-status queue (SSQ).
72C	Address pointer to the first character serviced (CSPQ1).
72E	Address pointer to last character serviced (CSPQ2).
730	SVCO
732	TIO clock.
780	Group 0 register save area for ROS.
780	Direct addressables for L and ST instructions.
7A0	Group 0 register save area for level 1.
7DE	Pointer to last entry in error log.
7E0	Error log.
800	Line vector table (Type 1 scanner)
840	Line vector table. (Type 2 scanner)
---	Channel vector table. (Begins on the first doubleword boundary following the line vector table.)
---	Character control block. (Begins on the first doubleword boundary following the channel vector table.)
---	Line Group Table. (Begins on the first doubleword boundary following the last character control block.)
---	Trace table pointers. (Immediately follows the EP load module.)
---	Trace table. (Immediately follows the trace table pointers.)

EP (new base)

Address (hex)	Description
000-500	Destroyed by dump.
680	Direct addressables for IC and STC instructions.
68B	ID for EP (new base).
697	Channel adapter select flag of IPL channel.
698	Level 1 ERP count.
69A	Module ID (CYENUC).
6A2	Version and modification level.
700	Direct addressables for LH and STH instructions.
702	IPL register save area.
710	Pointer to CHCB for the first channel adapter 4.
712	Pointer to CHCB for the second channel adapter 4.
718	Pointer to the next CHVT to be checked by the timer routine.
71A	Address of the CHCB initialized for panel use.
71C	Address of the error log.
71E	Contents of ABAR when a level 1 interrupt occurs.
720	Contents of Input X'79' when a level 1 interrupt occurs. (Indicates an interrupted level.)
722	Contents of Input X'76' when a level 1 interrupt occurs. (Indicates an adapter request.)
724	Log-trace indicator: X'01' = Store log entry at byte displacements 6 and 7 of the trace entry.
726	Unhang subchannel switch.
780	Group 0 register save area for ROS.
780	Direct addressables for L and ST instructions.
7A0	Group 0 register save area for level 1.
840	Line vector table (Type 2/3 scanner).
...	Channel Control Block (CHCB). (Begins on the first doubleword boundary following the line vector table.)
...	Character control block. (Begins on the first doubleword boundary following the channel control block.)
...	Line Group Table. (Begins on the first doubleword boundary following the last character control block.)
...	Trace table pointers. (Immediately follows the EP load module.)
...	Trace table. (Immediately follows the trace table pointers.)

Section 19. Interface Addressing

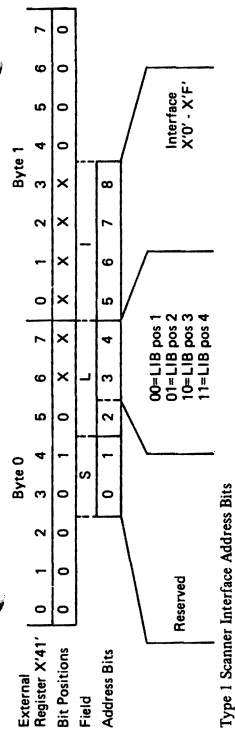

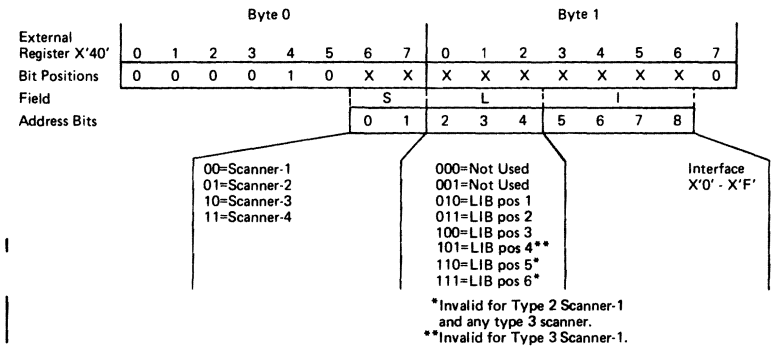

Note: Interface addressing in the 3704 with a Type 2 Scanner follows the same addressing scheme as a 3705 Type 2 Scanner-1, LIB position 1. Interface address bits 4, 5, 6, 7, and 8 specify lines 0-F in LIB Type A1. However, addresses 1, 3, C, D, E, and F are reserved. If the scanner supports two LIBs (LIB positions 1 and 2), all interface addresses are used.

Type 2/3 Scanner Interface Address Bits

		INTERFACE ADDRESS ASSIGNMENTS (HEX)																	
		S/L (HEX)	1 →	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
		↓																	
Type 1 Scanner	LIB position 1	00	-	800	810	820	830	840	850	860	870	880	890	8A0	8B0	8C0	8D0	8E0	8F0
	2	01	-	900	910	920	930	940	950	960	970	980	990	9A0	9B0	9C0	9D0	9E0	9F0
	3	02	-	A00	A10	A20	A30	A40	A50	A60	A70	A80	A90	AA0	AB0	AC0	AD0	AE0	AF0
	4	03	-	B00	B10	B20	B30	B40	B50	B60	B70	B80	B90	BA0	BB0	BC0	BD0	BE0	BF0
Type 2/3 Scanner-1	LIB position 1	02	-	840	842	844	846	848	84A	84C	84E	850	852	854	856	858	85A	85C	85E
	2	03	-	860	862	864	866	868	86A	86C	86E	870	872	874	876	878	87A	87C	87E
	3	04	-	880	882	884	886	888	88A	88C	88E	890	892	894	896	898	89A	89C	89E
	4*	05	-	8A0	8A2	8A4	8A6	8A8	8AA	8AC	8AE	8B0	8B2	8B4	8B6	8B8	8BA	8BC	8BE
Type 2/3 Scanner-2	3705 EXPANSION MODULE 1	0A	-	940	942	944	946	948	94A	94C	94E	950	952	954	956	958	95A	95C	95E
	LIB position 1	0B	-	960	962	964	966	968	96A	96C	96E	970	972	974	976	978	97A	97C	97E
	2	0C	-	980	982	984	986	988	98A	98C	98E	990	992	994	996	998	99A	99C	99E
	3	0D	-	9A0	9A2	9A4	9A6	9A8	9AA	9AC	9AE	9B0	9B2	9B4	9B6	9B8	9BA	9BC	9BE
	4	0E	-	9C0	9C2	9C4	9C6	9C8	9CA	9CC	9CE	9D0	9D2	9D4	9D6	9D8	9DA	9DC	9DE
	5*	0F	-	9E0	9E2	9E4	9E6	9E8	9EA	9EC	9EE	9F0	9F2	9F4	9F6	9F8	9FA	9FC	9FE
	6*																		

Storage Address Assignments (Part 1 of 2)

		INTERFACE ADDRESS ASSIGNMENTS (HEX)																	
		S/L (HEX)	I →	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
		↓																	
Type 2/3 Scanner-3	3705 EXPANSION MODULE 2			STORAGE ADDRESSES (HEX)															
	LIB position 1	12	-	A40	A42	A44	A46	A48	A4A	A4C	A4E	A50	A52	A54	A56	A58	A5A	A5C	A5E
	2	13	-	A60	A62	A64	A66	A68	A6A	A6C	A6E	A70	A72	A74	A76	A78	A7A	A7C	A7E
	3	14	-	A80	A82	A84	A86	A88	A8A	A8C	A8E	A90	A92	A94	A96	A98	A9A	A9C	A9E
	4	15	-	AA0	AA2	AA4	AA6	AA8	AAA	AAC	AAE	AB0	AB2	AB4	AB6	AB8	ABA	ABC	ABE
	5*	16	-	AC0	AC2	AC4	AC6	AC8	ACA	ACC	ACE	AD0	AD2	AD4	AD6	AD8	ADA	ADC	ADE
	6*	17	-	AE0	AE2	AE4	AE6	AE8	AEA	AEC	AEE	AF0	AF2	AF4	AF6	AF8	AFA	AFC	AFE
Type 2/3 Scanner-4	3705 EXPANSION MODULE 3			STORAGE ADDRESSES (HEX)															
	LIB position 1	1A	-	B40	B42	B44	B46	B48	B4A	B4C	B4E	B50	B52	B54	B56	B58	B5A	B5C	B5E
	2	1B	-	B60	B62	B64	B66	B68	B6A	B6C	B6E	B70	B72	B74	B76	B78	B7A	B7C	B7E
	3	1C	-	B80	B82	B84	B86	B88	B8A	B8C	B8E	B90	B92	B94	B96	B98	B9A	B9C	B9E
	4	1D	-	BA0	BA2	BA4	BA6	BA8	BAA	BAC	BAE	BB0	BB2	BB4	BB6	BB8	BBA	BBC	BBE
	5*	1E	-	BC0	BC2	BC4	BC6	BC8	BCA	BCC	BCE	BD0	BD2	BD4	BD6	BD8	BDA	BDC	BDE
	6*	1F	-	BE0	BE2	BE4	BE6	BE8	BEA	BEE	BEE	BF0	BF2	BF4	BF6	BF8	BFA	BFC	BFE

*Not used for type 3 scanner

**Storage address X'6F0' is used for character service

Storage Address Assignments (Part 2 of 2)

I Section 20: Index to NCP and EP Reference Material

This index provides a pointer to NCP and EP reference material such as service aids, diagnostic aids, debug information, etc. Items that are in this handbook have a page number listed with their entry. If an item is located in another publication, an (X) appears under that particular publication's key.

<u>Key</u>	<u>Publication</u>
A	<i>IBM 3705 Communications Controller, Network Control Program, Version 1, PLM, SY30-3003.</i> <i>IBM 3704 and 3705 Communications Controllers, Network Control Program/VS, Version 2, PLM, SY30-3007.</i>
B	<i>IBM 3704 and 3705 Communications Controllers, Network Control Program/VS, Version 4, PLM, SY30-3013.</i>
C	<i>IBM 3705 Communications Controller, Emulation Program, PLM (for 3705 with type 1 channel adapter), SY30-3001.</i> <i>IBM 3705 Communications Controller, Emulation Program, PLM (for 3705 with type 4 channel adapter), SY30-3031.</i>
D	<i>NCP/TCAM Network User's Guide, GC30-3009.</i>
E	<i>Guide to Using the IBM 3704 Communications Controller Control Panel, GA27-3086.</i> <i>Guide to Using the IBM 3705 Communications Controller Control Panel, GA27-3087.</i>
F	<i>IBM 3704 and 3705 Communications Controllers, Network Control Program, Generation and Utilities, Guide and Reference Manual, GC30-3000.</i> <i>IBM 3704 and 3705, Control Program, Generation and Utilities, Guide and Reference Manual, GC30-3007.</i> <i>IBM 3704 and 3705, Control Program, Generation and Utilities, Guide and Reference Manual, GC30-3008.</i>
G	<i>IBM 3704 and 3705 Communications Controllers, Emulation Program, Generation and Utilities, Guide and Reference Manual, GC30-3002.</i>
H	<i>IBM 3704 and 3705 Communications Controller, Principles of Operation, GC30-3004.</i>

		KEY							
		A	B	C	D	E	F	G	H
	abend codes 14-1								
	addressing 19-1								
	interface								X
	line/LIB								X
	protect key								X
	storage								X
	address trace (NCP)								
	description	X	X						
	implementation				X	X			
	pointers to trace table 1-5								
	BHR								
	definition	X	X		X		X		
	macros	X	X		X		X		
	bring-up test (see initial test)								
	BTU commands 3-1								
	BTU responses 8-1								
	BTU trace				X				
	channel adapter trace codes		X						
	abend 14-1								
	EP generation							X	
	NCP generation							X	
	request 5-2								
	response								
	BTU 8-1								
	system 8-1								
	commands								
	BTU 3-1								
	channel 4-1	X	X						X
	control	X	X	X					
	network (NCP#) 5-1	X	X	X					
	SDLC (NCP#) 6-1								
	teleprocessing		X						
	EP 7-1								
	NCP 3-1								
	control blocks (see data area)								
	data area								
	layouts (see table of contents)								
	location					X			
	relationships 1-1								
	diagnostic wrap (EP)				X				
	displays						X		
	dump								
	EP				X				
	NCP							X	
	dynamic display								
	EP				X				
	NCP	X	X		X		X	X	
	error log (EP) 2-107								
	error records								
	MDR 17-1	X	X						
	sense/status								
	EP				X				
	NCP	X	X						
	error recovery								
	EP				X				
	NCP	X	X		X				
	exception responses 9-1								
	external registers								
	labels	X	X						
	usage 11-1								
	format of storage								
	EP				X				
	NCP	X	X						
	ICW 13-1								X
	initial test								
	EP					X		X	
	NCP					X		X	

		KEY							
		A	B	C	D	E	F	G	H
	instructions 10-1								X
	interpretive command (see OLTT or OLLT)								
	line test (take-a-line)						X		
	line trace								
	functions								
	EP								
	NCP				X				
	format								
	EP	X	X						
	NCP				X				
	implementation								
	EP	X	X		X		X		
	NCP						X		
	macro								
	block handler (NCP)							X	X
	EP generation								
	instructions	X	X						
	NCP generation						X		
	supervisor (NCP)	X	X						
	MDR 17-1	X	X						
	messages and codes								
	abend 14-1								
	EP generation							X	
	NCP generation						X		
	response (BTU) 8-1								
	system (BTU) 8-1								
	modem leads 12-1								
	module identification								
	EP					X			
	NCP	X	X						
	network commands (NCP #) 5-1								
	OLLT (NCP #) 5-1								
	execution						X		
	interpretive commands						X		
	OLLT								
	EP execution					X			
	interpretive commands (NCP)	X	X						
	NCP execution	X	X						
	panel								
	displays						X		
	functions						X		X
	operation						X		
	protect keys								X
	registers								
	input/output 11-1								X
	general								X
	request codes 5-2								
	responses								
	BTU 8-1	X	X		X				
	exception 9-1				X				
	SDLC commands (NCP #) 6-1								
	sense bit settings								
	EP					X			
	NCP	X	X						
	service aids								
	abend codes 14-1								
	address trace (NCP)	X	X						
	BTU trace				X				
	channel adapter trace				X				
	dump					X			
	EP								
	NCP							X	
	initial test (bring-up test)								
	EP						X		X
	NCP						X	X	
	line trace								
	EP					X			
	NCP	X	X			X			

		KEY							
		A	B	C	D	E	F	G	H
	MDR 17-1	X	X						
	OLLT (NCP #)	X	X						
	OLTT								
	EP			X					
	NCP	X	X	X					
	take-a-line (see line test)								
	status bit settings								
	EP			X					
	NCP	X	X	X					
	storage keys							X	
	storage map (EP)								X
	switches, panel					X			
	take-a-line (see line test)								X
	trace								
	address								
	description								
	implementation	X	X						
	pointers 1-5				X	X			
	channel adapter								
	description		X						
	table 2-174								
	EP and PEP								
	description				X				
	table 2-177								
	line (NCP)								
	description	X	X						
	table 2-176								
	pointers 1-6								
	translate tables 15-1								
	units of transfer (general data flow)								
	EP	X	X						
	NCP	X	X						





Name	Instruction	C, Z	3704 Cycles	3705 Cycles	FORMAT															
					0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
B	Branch		2	1	1	0	1	0	1	0	1									
BCL	Branch on C Latch		2	1	1	0	0	1	1	T							±			
BZL	Branch on Z Latch		2	1	1	0	0	0	1								±			
BCT	Branch on Count		3	1	1	0	1	1	1		1	T					±			
BB	Branch on Bit		3	1	1	1	M	M	1		M	T					±			
LRI	Load Register Immediate	*	3	1	1	0	0	0	0											
ARI	Add Register Immediate	*	3	1	1	0	0	1	0											
SRI	Subtract Register Immediate	*	3	1	1	0	1	0	0											
CR1	Compare Register Immediate	*	3	1	1	0	1	1	0	R	N	I								
XRI	Exclusive Or Register Immediate	*	3	1	1	1	0	0	0											
ORI	Or Register Immediate	*	3	1	1	1	0	1	0											
NRI	And Register Immediate	*	3	1	1	1	1	0	0											
TRM	Test Register under Mask	*	3	1	1	1	1	1	0											
LCR	Load Character Register	*	3	1	0			0			0	0	0	0	1	0	0	0		
ACR	Add Character Register	*	3	1	0			0			0	0	0	1	1	0	0	0		
SCR	Subtract Character Register	*	3	1	0			0			0	0	1	0	1	0	0	0		
CCR	Compare Character Register	*	3	1	0	R ₂	N ₂	0	R ₁	N ₁	0	0	1	1	1	0	0	0		
XCR	Exclusive Or Character Register	*	3	1	0			0			0	1	0	0	1	0	0	0		
OCR	OR Character Register	*	3	1	0			0			0	1	0	1	1	0	0	0		
NCR	And Character Register	*	3	1	0			0			0	1	1	0	1	0	0	0		
LCOR	Load Character with Offset Register	*	3	1	0			0			0	1	1	1	1	0	0	0		
ICT	Insert Character and Count		5	2	0			0			0	0	0	1	0	0	0	0		
STCT	Store Character and Count		5	2	0			0	R	N	0	0	1	1	0	0	0	0		
IC	Insert Character	*	4	2	0			1			0	D								
STC	Store Character	*	4	2	0	B			1			1	D							
LH	Load Halfword	*	4	2	0			0			0	D								
STH	Store Halfword	*	4	2	0			0	R			1	D							
L	Load	*	5	2 [#]	0			0			0	D								
ST	Store	*	5	2 [#]	0			0			1	D								
LHR	Load Halfword Register	*	3	1	0			0			1	0	0	0	0	0	0	0		
AHR	Add Halfword Register	*	3	1	0			0			1	0	0	1	0	0	0	0		
SHR	Subtract Halfword Register	*	3	1	0			0			1	0	1	0	0	0	0	0		
CHR	Compare Halfword Register	*	3	1	0			0			1	0	1	1	0	0	0	0		
XHR	Exclusive Or Halfword Register	*	3	1	0			0			1	1	0	0	0	0	0	0		
OHR	OR Halfword Register	*	3	1	0			0			1	1	0	1	0	0	0	0		
NHR	And Halfword Register	*	3	1	0	R ₂			R ₁			1	1	1	0	0	0	0		
LHOR	Load Halfword with Offset Register	*	3	1	0			0	R ₁			1	1	1	1	0	0	0		
LR	Load Register	*	3	1	0			0			1	0	0	0	1	0	0	0		
AR	Add Register	*	3	1	0			0			1	0	0	1	1	0	0	0		
SR	Subtract Register	*	3	1	0			0			1	0	1	0	1	0	0	0		
CR	Compare Register	*	3	1	0			0			1	0	1	1	1	0	0	0		
XR	Exclusive Or Register	*	3	1	0			0			1	1	0	0	1	0	0	0		
OR	OR Register	*	3	1	0			0			1	1	0	1	1	0	0	0		
NR	And Register	*	3	1	0			0			1	1	1	0	1	0	0	0		
LOR	Load with Offset Register	*	3	1	0			0			1	1	1	1	1	0	0	0		
BALR	Branch & Link Register		4	2	0			0			0	1	0	0	0	0	0	0		
IN	Input		2	1	0	E			R			E			1	1	0	0		
OUT	Output		2	1	0			0			0			0	1	0	0	0		
BAL	Branch & Link		3	2	1	0	1	1	1			0	0	0	0	0	0	0		
LA	Load Address		3	2	1	0	1	1	1			0	0	1	0	0	0	0		
EXIT	Exit		2	1	1	0	1	1	1	0	0	0	1	0	0	0	0	0		

* = Instructions that can alter condition latches.
 ± = -
 0 = +
 # = 3 Cycles with Extended Addressing

Instruction Bit Structure



Order No. **GY30-3012-5**


Your views about this publication will help improve its usefulness; this form will be sent to the author for appropriate action. All comments and suggestions become the property of IBM. Using this form to request system assistance or additional publications will delay response, however. For direct handling of such request, please contact your IBM representative or the IBM Branch Office serving your locality.

Possible topics for comments are:

Usefulness Clarity Accuracy Completeness
Convenience Organization Legibility Durability


Please indicate in the space below if you wish a reply.

Thank you for your cooperation.
No postage stamp necessary if mailed in the U.S.A.



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 40 ARMONK, N.Y.

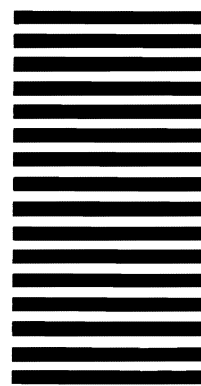

POSTAGE WILL BE PAID BY ADDRESSEE:

IBM Corporation
P. O. Box 12195
Research Triangle Park
North Carolina 27709

Attention:
Publications Center, Dept. E01

GY30-3012-5

IBM

**International Business Machines Corporation
Data Processing Division
1133 Westchester Avenue, White Plains, New York 10604
(U.S.A. only)**

**IBM World Trade Corporation
821 United Nations Plaza, New York, New York 10017
(International)**

Printed in U.S.A.

